



TECHNICAL MANUAL

INVERTER PACKAGED AIR-CONDITIONERS (Split system, air to air heat pump type)

HYPER INVERTER

CEILING CASSETTE - 4WAY TYPE

Single type	Twin type
FDT40ZSXVG	FDT71VNXPVG
50ZSXVG	100VNXPVG
60ZSXVG	100VSXPVG
71VNXPVG	125VNXPVG
100VNXPVG	125VSXPVG
100VSXVG	140VNXPVG
125VNXPVG	140VSXPVG
125VSXVG	Triple Type
140VNXPVG	FDT140VNXTVG
140VSXVG	140VSXTVG

V Multi system

(OUTDOOR UNIT)	(INDOOR UNIT)
FDC71VNX	FDT40VG
100VNX	50VG
100VSX	60VG
125VNX	71VG
125VSX	
140VNX	
140VSX	

MICRO INVERTER

CEILING CASSETTE - 4WAY TYPE

Single type	Twin type	Triple type
FDT100VNVG	FDT100VNPVG	FDT140VNTVG
100VSVG	100VSPVG	140VSTVG
125VNVG	125VNPVG	200VSATVG
125VSVG	125VSPVG	
140VNVG	140VNPVG	Double twin type
140VSVG	140VSPVG	FDT200VSADVG
	200VSAPVG	250VSADVG
	250VSAPVG	

STANDARD INVERTER

CEILING CASSETTE - 4WAY TYPE

Single type
FDT71VNPVG
90VNPVG
100VNP1VG

V Multi system

(OUTDOOR UNIT)	(INDOOR UNIT)
FDC100VN	FDT50VG
100VS	60VG
125VN	71VG
125VS	100VG
140VN	125VG
140VS	
200VSA	
250VSA	

TABLE OF CONTENTS

1. HYPER INVERTER PACKAGED AIR-CONDITIONERS	2
2. MICRO INVERTER PACKAGED AIR-CONDITIONERS	276
3. STANDARD INVERTER PACKAGED AIR-CONDITIONERS	375
4. V MULTI SYSTEM	438
5. OPTION PARTS	474

1. HYPER INVERTER PACKAGED AIR-CONDITIONERS

CONTENTS


1.1 SPECIFICATIONS	5
1.2 EXTERIOR DIMENSIONS	24
(1) Indoor units	24
(2) Outdoor units	26
(3) Remote control (Option parts)	29
1.3 ELECTRICAL WIRING	32
(1) Indoor units	32
(2) Outdoor units	33
1.4 NOISE LEVEL	37
1.5 TEMPERATURE AND VELOCITY DISTRIBUTION	40
1.6 PIPING SYSTEM	43
1.7 RANGE OF USAGE & LIMITATIONS	46
1.8 SELECTION CHART	50
1.8.1 Capacity tables	50
1.8.2 Correction of cooling and heating capacity in relation to air flow rate control (fan speed)	63
1.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping	63
1.8.4 Height difference between the indoor unit and outdoor unit	63
1.9 APPLICATION DATA	65
1.9.1 Installation of indoor unit	65
1.9.2 Electric wiring work installation	71
1.9.3 Installation of wired remote control (Option)	75
1.9.4 Installation of outdoor unit	88
(1) Models SRC40 – 60ZSX-S	88
(2) Model FDC71VNX	92
(3) Models FDC100 – 140VNX, 100 – 140VSX	100
1.9.5 Instructions for branching pipe set (DIS-WA1,WB1,TA1,TB1)	108
1.10 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER	111
1.10.1 Remote control	111
1.10.2 Operation control function by the wired remote control	114
1.10.3 Operation control function by the indoor control	117
(1) Auto operation	117
(2) Operations of functional items during cooling/heating	118
(3) Dehumidifying (DRY) operation	118
(4) Timer operation	119
(5) Hot start (Cold draft prevention at heating)	120
(6) Hot keep	120
(7) Auto swing control	121
(8) Thermostat operation	122
(9) Filter sign	123

(10)	Compressor inching prevention control.....	123
(11)	Drain pump control	124
(12)	Drain pump abnormalities detection	124
(13)	Operation check/drain pump test run operation mode	124
(14)	Cooling, dehumidifying frost protection	125
(15)	Heating overload protection	125
(16)	Anomalous fan motor	125
(17)	Plural unit control - Control of 16 units group by one remote control	126
(18)	High ceiling control	126
(19)	Abnormal temperature thermistor (return air/indoor heat exchanger) wire/short-circuit detection	127
(20)	External input/output control (CnT or CnTA)	127
(21)	Operation permission/prohibition	129
(22)	Temporary stop input	131
(23)	Selection of cooling/heating external input function	131
(24)	Fan control at heating startup	132
(25)	Room temperature detection temperature compensation during heating	132
(26)	Return air temperature compensation	132
(27)	High power operation (RC-EX3 only)	132
(28)	Energy-saving operation (RC-EX3 only)	132
(29)	Warm-up control (RC-EX3 only)	132
(30)	Home leave mode (RC-EX3 only)	132
(31)	Auto temperature setting (RC-EX3 only)	132
(32)	Fan circulator operation (RC-EX3 only)	133
(33)	The operation judgment is executed every 5 minutes (RC-EX3 only) ...	133
(34)	Auto fan speed control (RC-EX3 only)	133
(35)	Indoor unit overload alarm (RC-EX3 only).....	133
(36)	Peak-cut time (RC-EX3 only)	133
(37)	Motion sensor control (RC-E3 only)	133
1.10.4	Operation control function by the outdoor control	134
(I)	Models SRC40—60	134
(1)	Defrost operation	134
(2)	Cooling overload protective control	134
(3)	Cooling high pressure control	135
(4)	Cooling low outdoor temperature protective control	135
(5)	Heating high pressure control	136
(6)	Heating overload protective control	136
(7)	Heating low outdoor temperature protective control	136
(8)	Compressor overheat protection	137
(9)	Current safe	137
(10)	Current cut	137
(11)	Outdoor unit failure	137
(12)	Serial signal transmission error protection	137
(13)	Rotor lock	137


(14) Outdoor fan motor protection	137
(15) Outdoor fan control at low outdoor temperature	138
(16) Refrigeration cycle system protection	138
(II) Models FDC71 – 140	139
(1) Determination of compressor speed (Frequency)	139
(2) Compressor start control	139
(3) Compressor soft start control	140
(4) Outdoor fan control	141
(5) Defrost operation	143
(6) Protective control/anomalous stop control by compressor's number of revolutions	144
(7) Silent mode	148
(8) Test run	148
(9) Pump-down control	148
(10) Base heater ON/OFF output control (Option)	149
1.11 MAINTENANCE DATA	150
1.11.1 Diagnosing of microcomputer circuit	150
(1) Selfdiagnosis function	150
(2) Troubleshooting procedure	155
(3) Troubleshooting at the indoor unit	155
(4) Troubleshooting at the outdoor unit	158
(5) Check of anomalous operation data with the remote control	174
(6) Power transistor module (including the driver PCB) inspection procedure	177
(7) Inverter checker for diagnosis of inverter output	179
(8) Outdoor unit control failure diagnosis circuit diagram	181
1.11.2 Troubleshooting flow	192
(1) List of troubles	192
(2) Troubleshooting	193
1.12 TECHNICAL INFORMATION	267

■ How to read the model name

Example: FDT 40 Z SXVG

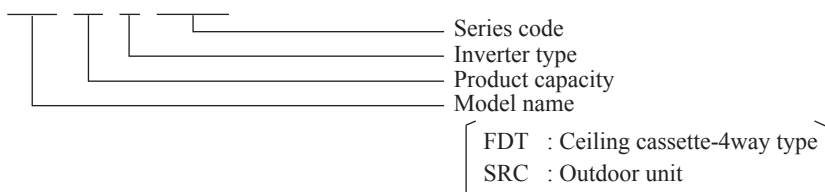


Example: FDT 100 VNX P VG

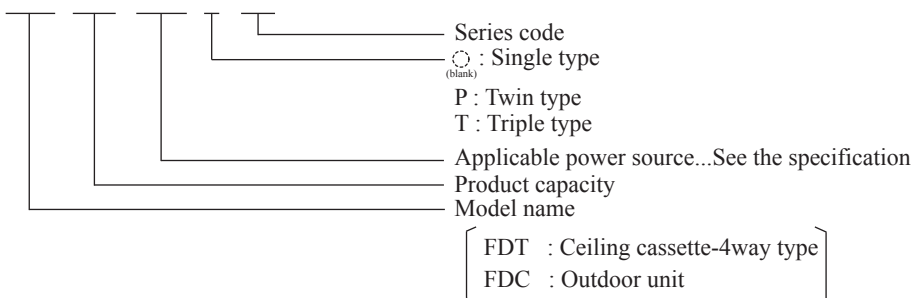


1.1 SPECIFICATIONS

(1) Single type


		Model	FDT40ZSXVG				
Item			Indoor unit	FDT40VG	Outdoor unit	SRC40ZSX-S	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	4.0 [1.1(Min.) - 4.7(Max.)]				
	Nominal heating capacity (range)	kW	4.5 [0.6(Min.) - 5.4(Max.)]				
	Power consumption	Cooling	kW	0.93			
		Heating		1.03			
	Max power consumption		2.60				
	Running current	Cooling	A	4.3 / 4.5			
		Heating		4.8 / 5.0			
	Inrush current, max current		5.12				
	Power factor	Cooling	%	94			
		Heating		93 / 94			
	EER	Cooling		4.30			
	COP	Heating		4.37			
	Sound power level	Cooling	dB(A)	53		63	
Heating		P-Hi:36 Hi:33 Me:30 Lo:27		49			
Sound pressure level	Cooling		—				
Sound pressure level	Heating		Cooling : 42 / Heating : 43				
Sound pressure level	Heating		—				
Exterior dimensions (Height x Width x Depth)	mm		Unit 236 × 840 × 840 Panel 35 × 950 × 950		640×800(+71)×290		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		Unit 19 Panel 5		45		
Compressor type & Q'ty			—		RMT5113MCE2 (Twin rotary type)×1		
Compressor motor (Starting method)	kW		—		Direct line start		
Refrigerant oil (Amount, type)	ℓ		—		0.45 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 1.5kg in outdoor unit (incl. the amount for the piping of : 15m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)	W		50 < Direct line start >		34 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi: 19 Hi:16 Me:13 Lo:10		36		
	Heating				33		
Available external static pressure	Pa		0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater	W		—		—		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ 6.35 (1/4") Pipe φ 6.35(1/4")×0.8 O.U. φ 6.35 (1/4") Gas line: φ 12.7 (1/2") φ 12.7(1/2")×0.8 φ 12.7 (1/2")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.30m				
	Vertical height diff. between O.U. and I.U.	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ 20 x 5pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850					
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	4.8					
Interconnecting wires	Size x Core number	1.5mm ² × 4 cores (Including earth cable)/Terminal block (Screw fixing type)					
IP number		IPX0		IPX4			
Standard accessories		Mounting kit, Drain hose		Drain elbow, Drain hole grommet			
Option parts		—					
Notes		(1) The data are measured at the following conditions.		The pipe length is 7.5m.			
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							

PJF000Z425 


Item		Model	FDT50ZSXVG				
			Indoor unit		Outdoor unit		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	5.0 [1.1(Min.) - 5.6(Max.)]				
	Nominal heating capacity (range)	kW	5.4 [0.6(Min.) - 6.3(Max.)]				
	Power consumption	Cooling	kW	1.29			
		Heating		1.29			
	Max power consumption		2.90				
	Running current	Cooling	A	5.9 / 6.2			
		Heating		5.9 / 6.2			
	Inrush current, max current		5, 15				
	Power factor	Cooling	%	95			
		Heating		95			
	EER	Cooling		3.88			
	COP	Heating		4.19			
	Sound power level	Cooling	dB(A)	54		63	
		Heating		P-Hi:38 Hi:33 Me:30 Lo:27		50	
Sound pressure level	Cooling	dB(A)	—		49		
	Heating		—		Cooling : 42/ Heating : 43		
Silent mode sound pressure level			—				
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		640×800(+71)×290		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 19 Panel 5		45		
Compressor type & Q'ty			—		RMT5113MCE2 (Twin rotary type)×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.45 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 1.5kg in outdoor unit (incl. the amount for the piping of : 15m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >		34 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi:20 Hi:16 Me:13 Lo:10		40		
	Heating		—		33		
Available external static pressure		Pa	0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		—		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ6.35 (1/4") Pipe φ6.35(1/4")x0.8 O.U. φ6.35 (1/4") Gas line: φ12.7 (1/2") φ12.7(1/2")x0.8 φ12.7 (1/2")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.30m				
	Vertical height diff. between O.U. and I.U.	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 5pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850		—			
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size x Core number	1.5mm² × 4 cores (Including earth cable)/Terminal block (Screw fixing type)					
IP number		IPX0		IPX4			
Standard accessories		Mounting kit, Drain hose		Drain elbow, Drain hole grommet			
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							




Item		Model	FDT60ZSXVG				
			Indoor unit		Outdoor unit		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	5.6 [1.1(Min.) - 6.3(Max.)]				
	Nominal heating capacity (range)	kW	6.7 [0.6(Min.) - 7.1(Max.)]				
	Power consumption	Cooling	kW	1.52			
		Heating		1.56			
	Max power consumption		2.90				
	Running current	Cooling	A	6.9 / 7.2			
		Heating		7.1 / 7.4			
	Inrush current, max current		5, 15				
	Power factor	Cooling	%	96			
		Heating		96			
	EER	Cooling		3.68			
	COP	Heating		4.29			
	Sound power level	Cooling	dB(A)	60		65	
		Heating				64	
Sound pressure level	Cooling	dB(A)	P-Hi:44 Hi:34 Me:32 Lo:28			52	
	Heating						
Silent mode sound pressure level			Cooling : 42 / Heating : 43				
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		640×800(+71)×290		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5		45		
Compressor type & Q'ty			—		RMT5113MCE2 (Twin rotary type)×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.45 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 1.5kg in outdoor unit (incl. the amount for the piping of : 15m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >		34 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi:26 Hi:17 Me:14 Lo:11			41.5	
	Heating					39	
Available external static pressure		Pa	0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		—		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ6.35 (1/4") Pipe φ6.35(1/4")x0.8 O.U. φ6.35 (1/4") Gas line: φ 12.7 (1/2") φ 12.7(1/2")x0.8 φ 12.7 (1/2")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.30m				
	Vertical height diff. between O.U. and I.U.	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ 20 x 5pcs			
Drain pump, max lift height		mm	Built-in drain pump , 850		—		
Recommended breaker size		A	—				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	1.5mm ² × 4 cores (Including earth cable)/Terminal block (Screw fixing type)				
IP number			IPX0		IPX4		
Standard accessories			Mounting kit, Drain hose		Drain elbow, Drain hole grommet		
Option parts			—				
Notes						(1) The data are measured at the following conditions. The pipe length is 7.5m.	
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							




Item		Model	FDT71VNXVG			
			Indoor unit	Outdoor unit		
Power source			FDT71VG	FDC71VNX		
			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	7.1 [3.2(Min.) - 8.0(Max.)]			
	Nominal heating capacity (range)	kW	8.0 [3.6(Min.) - 9.0(Max.)]			
	Power consumption	Cooling	kW	1.94		
		Heating		1.91		
	Max power consumption		3.26			
	Running current	Cooling	A	8.6 / 9.0		
		Heating		8.5 / 8.9		
	Inrush current, max current		5, 17			
	Power factor	Cooling	%	98		
		Heating		98		
	EER	Cooling		3.66		
	COP	Heating		4.19		
	Sound power level	Cooling	dB(A)	62	66	
Heating						
Sound pressure level	Cooling	dB(A)	P-Hi:46 Hi:35 Me:34 Lo:29			
	Heating					
Silent mode sound pressure level			—			
Exterior dimensions (Height x Width x Depth)	mm		Unit 236 × 840 × 840 Panel 35 × 950 × 950	750×880(+88)×340		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		Unit 21 Panel 5	60		
Compressor type & Q'ty			—	RMT5118MDE2×1		
Compressor motor (Starting method)	kW		—	Direct line start		
Refrigerant oil (Amount, type)	ℓ		—	0.675 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 2.95kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1		
Fan motor (Starting method)	W		50 < Direct line start >	86 <Direct line start>		
Air flow	Cooling	m ³ /min	P-Hi:28 Hi:18 Me:15 Lo:12			
	Heating					
Available external static pressure	Pa		0	—		
Outside air intake			Possible	—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)	—		
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve (for compressor)		
Electric heater	W		—	20 (Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ9.52 (3/8") Pipe φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")			
	Connecting method		Flare piping	Flare piping		
	Attached length of piping	m	—	—		
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable VP25(O.D.32)	Holes size φ 20 x 3pcs		
Drain pump, max lift height	mm		Built-in drain pump , 850	—		
Recommended breaker size	A		—			
L.R.A. (Locked rotor ampere)	A		5.0			
Interconnecting wires	Size x Core number		φ 1.6mmx3 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0	IP24		
Standard accessories			Mounting kit, Drain hose	—		
Option parts			—			
Notes	(1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
Cooling		27°C	19°C	35°C	24°C	
Heating		20°C	—	7°C	6°C	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						




Item		Model	FDT100VNXVG				
			Indoor unit		Outdoor unit		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]				
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 12.5(Max.)]				
	Power consumption	Cooling	kW	2.50			
		Heating		2.58			
	Max power consumption		4.13				
	Running current	Cooling	A	11.1 / 11.6			
		Heating		11.4 / 12.0			
	Inrush current, max current		5, 24				
	Power factor	Cooling	%	98			
		Heating		98			
	EER	Cooling		4			
	COP	Heating		4.34			
	Sound power level	Cooling	dB(A)	63		70	
Heating		P-Hi:48 Hi:39 Me:37 Lo:31		48			
Sound pressure level	Cooling	dB(A)	—		50		
	Heating		—		—		
Silent mode sound pressure level			—				
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE2×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	140 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi:37 Hi:26 Me:23 Lo:17		100		
	Heating						
Available external static pressure		Pa	0		—		
Outside air intake			Possible				
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ9.52 (3/8") Pipe φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850				
Recommended breaker size		A	—				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes			(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							




Item		Model	FDT100VSXVG					
			Indoor unit		Outdoor unit			
Power source			FDT100VG FDC100VSX					
			3 Phase 380-415V 50Hz / 380V 60Hz					
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]					
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 16.0(Max.)]					
	Power consumption	Cooling	kW	2.5				
		Heating		2.58				
	Max power consumption		5.16					
	Running current	Cooling	A	3.7 / 3.9				
		Heating		3.8 / 4.0				
	Inrush current, max current		5, 15					
	Power factor	Cooling	%	98 / 97				
		Heating		98				
	EER	Cooling		4				
	COP	Heating		4.34				
	Sound power level	Cooling	dB(A)	63		70		
Heating		P-Hi:48 Hi:39 Me:37 Lo:31		48				
Sound pressure level	Cooling	dB(A)			50			
	Heating							
Silent mode sound pressure level			-					
Exterior dimensions (Height x Width x Depth)	mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950		1300×970×370			
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight	kg		Unit 25 Panel 5		105			
Compressor type & Q'ty			-		RMT5134MDE3×1			
Compressor motor (Starting method)	kW		-		Direct line start			
Refrigerant oil (Amount, type)	ℓ		-		0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)	kg		R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)					
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve					
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2			
Fan motor (Starting method)	W		140 < Direct line start >		86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	P-Hi:37 Hi:26 Me:23 Lo:17			100		
	Heating							
Available external static pressure	Pa		0			-		
Outside air intake			Possible				-	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			-		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)			
Electric heater	W		-		20(Crank case heater)			
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2					
	Room temperature control		Thermostat by electronics					
	Operation display		-					
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.					
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ9.52 (3/8") Pipe φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")					
	Connecting method		Flare piping		Flare piping			
	Attached length of piping	m	-					
	Insulation for piping		Necessary (both Liquid & Gas lines)					
	Refrigerant line (one way) length	m	Max.100m					
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)			Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)			Holes size φ 20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850						
Recommended breaker size	A	-						
L.R.A. (Locked rotor ampere)	A	5.0						
Interconnecting wires	Size x Core number	φ 1.6mm×3 cores (Including earth cable) / Terminal block (Screw fixing type)						
IP number		IPX0			IP24			
Standard accessories		Mounting kit, Drain hose			Edging			
Option parts		-						
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.						
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards		
		DB	WB	DB	WB			
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1		
Heating	20°C	-	7°C	6°C				
(2) This air-conditioner is manufactured and tested in conformity with the ISO.								
(3) Sound level indicate the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.								
(4) Select the breaker size according to the own national standard.								
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.								




Item		Model	FDT125VNXVG				
			Indoor unit		Outdoor unit		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]				
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 17.0(Max.)]				
	Power consumption	Cooling	kW	3.42			
		Heating		3.43			
	Max power consumption		5.49				
	Running current	Cooling	A	15.0 / 15.7			
		Heating		15.2 / 15.9			
	Inrush current, max current		5, 26				
	Power factor	Cooling	%	99			
		Heating		98			
	EER	Cooling		3.65			
	COP	Heating		4.08			
	Sound power level	Cooling	dB(A)	64		70	
Heating							
Sound pressure level	Cooling		P-Hi:49 Hi:41 Me:39 Lo:32			48	
	Heating					50	
Silent mode sound pressure level			—			—	
Exterior dimensions (Height x Width x Depth)	mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		Unit 25 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE2×1		
Compressor motor (Starting method)	kW		—		Direct line start		
Refrigerant oil (Amount, type)	ℓ		—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)	W		140 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi:38 Hi:28 Me:25 Lo:18			100	
	Heating						
Available external static pressure	Pa		0			—	
Outside air intake			Possible			—	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			—	
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater	W		—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O.U. φ 9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ 20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850				—	
Recommended breaker size	A	—				—	
L.R.A. (Locked rotor ampere)	A	5.0				—	
Interconnecting wires	Size x Core number		φ 1.6mmx3 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes	(1) The data are measured at the following conditions.					The pipe length is 7.5m.	
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
		Cooling	27°C	19°C	35°C		24°C
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							




Item		Model	FDT125VSVXG				
			Indoor unit		Outdoor unit		
Power source			3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]				
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 18.0(Max.)]				
	Power consumption	Cooling	kW	3.42			
		Heating		3.43			
	Max power consumption		6.86				
	Running current	Cooling	A	5.0 / 5.3			
		Heating		5.1 / 5.3			
	Inrush current, max current		5, 15				
	Power factor	Cooling	%	99 / 98			
		Heating		97 / 98			
	EER	Cooling		3.65			
	COP	Heating		4.08			
	Sound power level	Cooling	dB(A)	64		70	
Heating		P-Hi:49 Hi:41 Me:39 Lo:32		48			
Sound pressure level	Cooling	dB(A)	—		50		
	Heating		—		—		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE3×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	140 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi:38 Hi:28 Me:25 Lo:18			100	
	Heating						
Available external static pressure		Pa	0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ9.52 (3/8") Pipe φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850				
Recommended breaker size		A	—				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes			(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.							



Item		Model	FDT140VNXVG				
			Indoor unit		Outdoor unit		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 16.0(Max.)]				
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 18.0(Max.)]				
	Power consumption	Cooling	kW	4.26			
		Heating		4.2			
	Max power consumption		5.96				
	Running current	Cooling	A	18.9 / 19.8			
		Heating		18.6 / 19.5			
	Inrush current, max current		5.26				
	Power factor	Cooling	%	98			
		Heating		98			
	EER	Cooling		3.29			
	COP	Heating		3.81			
	Sound power level	Cooling	dB(A)	64		72	
Heating							
Sound pressure level	Cooling		P-Hi:49 Hi:42 Me:39 Lo:33		49		
	Heating				52		
Silent mode sound pressure level			—		—		
Exterior dimensions (Height x Width x Depth)	mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		Unit 25 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE2×1		
Compressor motor (Starting method)	kW		—		Direct line start		
Refrigerant oil (Amount, type)	ℓ		—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)	W		140 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi:38 Hi:29 Me:26 Lo:19		100		
	Heating				100		
Available external static pressure	Pa		0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater	W		—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ9.52 (3/8") Pipe φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height	mm		Built-in drain pump , 850		—		
Recommended breaker size	A		—				
L.R.A. (Locked rotor ampere)	A		5.0				
Interconnecting wires	Size x Core number		φ 1.6mmx3 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes	(1) The data are measured at the following conditions.		The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards	
Operation		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		
	Heating	20°C	—	7°C	6°C	ISO5151-T1	
	(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
	(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
	(4) Select the breaker size according to the own national standard.						
	(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						




Item		Model	FDT140VSXVG				
			Indoor unit		Outdoor unit		
Power source			FDT140VG FDC140VSX 3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 16.0(Max.)]				
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 20.0(Max.)]				
	Power consumption	Cooling	kW	4.26			
		Heating		4.2			
	Max power consumption		7.46				
	Running current	Cooling	A	6.3 / 6.6			
		Heating		6.2 / 6.5			
	Inrush current, max current		5 , 15				
	Power factor	Cooling	%	98			
		Heating		98			
	EER	Cooling		3.29			
	COP	Heating		3.81			
	Sound power level	Cooling	dB(A)	64		72	
Heating		P-Hi:49 Hi:42 Me:39 Lo:33		49			
Sound pressure level	Cooling	dB(A)	—		52		
	Heating		—		—		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE3×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	140 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi:38 Hi:29 Me:26 Lo:19		100		
	Heating						
Available external static pressure		Pa	0		—		
Outside air intake			Possible				
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ9.52 (3/8") Pipe φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850				
Recommended breaker size		A	—				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mmx3 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.							




(2) Twin type


Item		Model	FDT71VNXPVG			
			Indoor unit	Outdoor unit		
Power source			FDT40VG (2 units)	FDC71VNX		
			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	7.1 [3.2(Min.) - 8.0(Max.)]			
	Nominal heating capacity (range)	kW	8.0 [3.6(Min.) - 9.0(Max.)]			
	Power consumption	Cooling	kW	1.85		
		Heating		1.99		
	Max power consumption		3.18			
	Running current	Cooling	A	8.2 / 8.6		
		Heating		8.8 / 9.2		
	Inrush current, max current		5, 17			
	Power factor	Cooling	%	98		
		Heating		98		
	EER	Cooling		3.84		
	COP	Heating		4.02		
	Sound power level	Cooling	dB(A)	53	66	
Heating						
Sound pressure level	Cooling	dB(A)	P-Hi:36 Hi:33 Me:30 Lo:27			
	Heating					
Silent mode sound pressure level			-			
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950	750×880(+88)×340		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 19 Panel 5	60		
Compressor type & Q'ty			-	RMT5118MDE2×1		
Compressor motor (Starting method)		kW	-	Direct line start		
Refrigerant oil (Amount, type)		ℓ	-	0.675 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 2.95kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >	86 <Direct line start>		
Air flow	Cooling	m ³ /min	P-Hi:19 Hi:16 Me:13 Lo:10			
	Heating					
Available external static pressure		Pa	0	-		
Outside air intake			Possible	-		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)	-		
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve (for compressor)		
Electric heater		W	-	20 (Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		-			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ6.35 (1/4") ② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: I/U φ12.7 (1/2") ② φ12.7(1/2")x0.8 ① φ15.88(5/8")x1.0 O/U φ15.88 (5/8")			
	Connecting method		Flare piping	Flare piping		
	Attached length of piping	m	-			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 3pcs		
Drain pump, max lift height	mm	Built-in drain pump , 850		-		
Recommended breaker size	A	-		-		
L.R.A. (Locked rotor ampere)	A	-		5.0		
Interconnecting wires	Size x Core number	φ1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number		IPX0		IP24		
Standard accessories		Mounting kit, Drain hose		-		
Option parts			-			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	-	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.						
(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O.U.- Branch, ② : Pipe of Branch - I.U.						

PJF000Z425 


Item		Model	FDT100VNXPVG				
			Indoor unit	FDT50VG (2 units)	Outdoor unit	FDC100VNX	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]				
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 12.5(Max.)]				
	Power consumption	Cooling	kW	2.56			
		Heating		2.67			
	Max power consumption		4.27				
	Running current	Cooling	A	11.4 / 11.9			
		Heating		11.8 / 12.4			
	Inrush current, max current		5, 24				
	Power factor	Cooling	%	98			
		Heating		98			
	EER	Cooling		3.91			
	COP	Heating		4.19			
	Sound power level	Cooling	dB(A)	54		70	
		Heating		P-Hi:38 Hi:33 Me:30 Lo:27		48	
Sound pressure level	Cooling	dB(A)	—		50		
	Heating		—		—		
Silent mode sound pressure level	Cooling	dB(A)	—		—		
	Heating		—		—		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 19 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE2×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	50 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi:20 Hi:16 Me:13 Lo:10		100		
	Heating		—		—		
Available external static pressure		Pa	0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3, RC-E5, RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ6.35 (1/4") ② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: I/U φ12.7 (1/2") ② φ12.7(1/2")x0.8 ① φ15.88(5/8")x1.0 O/U φ15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850		—			
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size x Core number		φ 1.6mmx3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O.U. - Branch, ② : Pipe of Branch - I.U.							




Item		Model	FDT100VSPVPG				
			Indoor unit	FDT50VG (2 units)	Outdoor unit	FDC100VSX	
Power source			3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]				
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 16.0(Max.)]				
	Power consumption	Cooling	kW	2.56			
		Heating		2.67			
	Max power consumption		5.34				
	Running current	Cooling	A	3.8 / 4.0			
		Heating		3.9 / 4.1			
	Inrush current, max current		5, 15				
	Power factor	Cooling	%	97			
		Heating		99			
	EER	Cooling		3.91			
	COP	Heating		4.19			
	Sound power level	Cooling	dB(A)	54		70	
Heating		P-Hi:38 Hi:33 Me:30 Lo:27		48			
Sound pressure level	Cooling	dB(A)	—		50		
	Heating		—		—		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 19 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE3×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	50 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi:20 Hi:16 Me:13 Lo:10		100		
	Heating						
Available external static pressure		Pa	0		—		
Outside air intake			Possible				
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)				
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ6.35 (1/4") ② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: I/U φ12.7 (1/2") ② φ12.7(1/2")x0.8 ① φ15.88(5/8")x1.0 O/U φ15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850		—			
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)					
IP number		IPX0		IP24			
Standard accessories		Mounting kit, Drain hose		Edging			
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1 (option). ① : Pipe of O.U. - Branch, ② : Pipe of Branch - I.U.							




Item		Model	FDT125VNXPVG				
			Indoor unit FDT60VG (2 units)		Outdoor unit FDC125VNX		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]				
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 17.0(Max.)]				
	Power consumption	Cooling	kW	3.26			
		Heating		3.22			
	Max power consumption		5.22				
	Running current	Cooling	A	14.5 / 15.1			
		Heating		14.3 / 14.9			
	Inrush current, max current			5, 26			
	Power factor	Cooling	%	98			
		Heating		98			
	EER	Cooling		3.83			
	COP	Heating		4.35			
	Sound power level	Cooling	dB(A)	60		70	
Heating		P-Hi: 44 Hi: 34 Me: 32 Lo: 28		48			
Sound pressure level	Cooling	dB(A)	—		50		
	Heating		—		—		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE2×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	50 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi: 26 Hi: 17 Me: 14 Lo: 11		100		
	Heating						
Available external static pressure		Pa	0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ6.35 (1/4") ② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: I/U φ12.7 (1/2") ② φ12.7(1/2")x0.8 ① φ15.88(5/8")x1.0 O/U φ15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850		—			
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)					
IP number		IPX0		IP24			
Standard accessories		Mounting kit, Drain hose		Edging			
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O.U. - Branch, ② : Pipe of Branch - I.U.							




Item		Model	FDT125VSPVPG				
			Indoor unit FDT60VG (2 units)		Outdoor unit FDC125VSX		
Power source			3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]				
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 18.0(Max.)]				
	Power consumption	Cooling	kW	3.26			
		Heating		3.22			
	Max power consumption		6.52				
	Running current	Cooling	A	4.8 / 5.0			
		Heating		4.7 / 5.0			
	Inrush current, max current			5, 15			
	Power factor	Cooling	%	98 / 99			
		Heating		99 / 98			
	EER	Cooling		3.83			
	COP	Heating		4.35			
	Sound power level	Cooling	dB(A)	60		70	
Heating		P-Hi:44 Hi:34 Me:32 Lo:28		48			
Sound pressure level	Cooling		—		50		
	Heating		—		—		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE3×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	50 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi:26 Hi:17 Me:14 Lo:11		100		
	Heating						
Available external static pressure		Pa	0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ6.35 (1/4") ② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: I/U φ12.7 (1/2") ② φ12.7(1/2")x0.8 ① φ15.88(5/8")x1.0 O/U φ15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850		—			
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size x Core number	φ 1.6mmx3 cores (Including earth cable)/ Terminal block (Screw fixing type)					
IP number		IPX0		IP24			
Standard accessories		Mounting kit, Drain hose		Edging			
Option parts			—				
Notes							
(1) The data are measured at the following conditions. The pipe length is 7.5m.							
Operation	Item	Indoor air temperature		Indoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1 (option). ① : Pipe of O.U. - Branch, ② : Pipe of Branch - I.U.							



Item		Model	FDT140VNXVPG				
			Indoor unit	FDT71VG (2 units)	Outdoor unit	FDC140VNX	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 16.0(Max.)]				
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 18.0(Max.)]				
	Power consumption	Cooling	kW	3.88			
		Heating		3.74			
	Max power consumption		5.43				
	Running current	Cooling	A	17.2 / 18.0			
		Heating		16.6 / 17.3			
	Inrush current, max current		5, 26				
	Power factor	Cooling	%	98			
		Heating		98			
	EER	Cooling		3.61			
	COP	Heating		4.28			
	Sound power level	Cooling	dB(A)	62		72	
Heating		P-Hi:46 Hi:35 Me:34 Lo:29		49			
Sound pressure level	Cooling	dB(A)	—		52		
	Heating		—		—		
Silent mode sound pressure level			—				
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5		105		
Compressor type & Q'ty			—		RMT5134MDE2×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	50 < Direct line start >		86 x 2 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi:28 Hi:18 Me:15 Lo:12		100		
	Heating						
Available external static pressure		Pa	0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ9.52 (3/8") ② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: I/U φ15.88 (5/8") ② φ15.88(5/8")x1.0 ① φ15.88(5/8")x1.0 O/U φ15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850					
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size x Core number		φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes			(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O.U. - Branch, ② : Pipe of Branch - I.U.							




Item		Model	FDT140VSPXVG				
			Indoor unit FDT71VG (2 units)		Outdoor unit FDC140VSX		
Power source			3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 16.0(Max.)]				
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 20.0(Max.)]				
	Power consumption	Cooling	kW	3.88			
		Heating		3.74			
	Max power consumption		6.79				
	Running current	Cooling	A	5.7 / 6.0			
		Heating		5.5 / 5.8			
	Inrush current, max current		5, 15				
	Power factor	Cooling	%	98			
		Heating		98			
	EER	Cooling		3.61			
	COP	Heating		4.28			
Sound power level	Cooling	dB(A)	62		72		
	Heating		P-Hi:46 Hi:35 Me:34 Lo:29		49		
Sound pressure level	Cooling				52		
	Heating						
Silent mode sound pressure level			-				
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5		105		
Compressor type & Q'ty			-		RMT5134MDE3×1		
Compressor motor (Starting method)		kW	-		Direct line start		
Refrigerant oil (Amount, type)		ℓ	-		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	50 < Direct line start >		86 × 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi:28 Hi:18 Me:15 Lo:12		100		
	Heating						
Available external static pressure		Pa	0		-		
Outside air intake			Possible				
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)				
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	-		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		-				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ9.52 (3/8") ② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: I/U φ15.88 (5/8") ② φ15.88(5/8")x1.0 ① φ15.88(5/8")x1.0 O/U φ15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	-				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850					
Recommended breaker size	A	-					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)					
IP number		IPX0		IP24			
Standard accessories		Mounting kit, Drain hose		Edging			
Option parts			-				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	-	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1 (option). ① : Pipe of O.U. - Branch, ② : Pipe of Branch - I.U.							




(3) Triple type

Item		Model	FDT140VNXTVG				
			Indoor unit	FDT50VG (3 units)	Outdoor unit	FDC140VNX	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 16.0(Max.)]				
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 18.0(Max.)]				
	Power consumption	Cooling	kW	3.93			
		Heating		4.00			
	Max power consumption		5.60				
	Running current	Cooling	A	17.4 / 18.2			
		Heating		17.7 / 18.6			
	Inrush current, max current		5, 26				
	Power factor	Cooling	%	98			
		Heating		98			
	EER	Cooling		3.56			
	COP	Heating		4.00			
	Sound power level	Cooling	dB(A)	54		72	
Heating		P-Hi:38 Hi:33 Me:30 Lo:27		49			
Sound pressure level	Cooling	dB(A)	—		52		
	Heating		—		—		
Silent mode sound pressure level		—					
Exterior dimensions (Height x Width x Depth)	mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1300×970×370			
Exterior appearance (Munsell color)		Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight	kg	Unit 19 Panel 5		105			
Compressor type & Q'ty		—		RMT5134MDE2×1			
Compressor motor (Starting method)	kW	—		Direct line start			
Refrigerant oil (Amount, type)	ℓ	—		0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)	kg	R410A 4.5kg(Pre-charged up to the piping length of 30m)Outdoor unit					
Heat exchanger		Louver fin & inner grooved tubing		M shape fin & inner grooved tubing			
Refrigerant control		Electronic expansion valve					
Fan type & Q'ty		Turbo fan ×1		Propeller fan ×2			
Fan motor (Starting method)	W	50 < Direct line start >		86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	P-Hi:20 Hi:16 Me:13 Lo:10		100		
	Heating						
Available external static pressure	Pa	0		—			
Outside air intake		Possible					
Air filter, Quality / Quantity		Pocket plastic net ×1(Washable)		—			
Shock & vibration absorber		Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)			
Electric heater	W	—		20(Crank case heater)			
Operation control	Remote control	(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2					
	Room temperature control	Thermostat by electronics					
	Operation display	—					
Safety equipments		Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.					
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ6.35 (1/4") ② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 O.U. φ9.52 (3/8")				
			Gas line: I/U φ12.7 (1/2") ② φ12.7(1/2")x0.8 ① φ15.88(5/8")x1.0 O/U φ15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m				
Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)			
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850		—			
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size x Core number	φ 1.6mmx3 cores (Including earth cable)/ Terminal block (Screw fixing type)					
IP number		IPX0		IP24			
Standard accessories		Mounting kit, Drain hose		Edging			
Option parts		—					
Notes	(1) The data are measured at the following conditions. The pipe length is 7.5m.						
	Item	Indoor air temperature		Outdoor air temperature		Standards	
Operation		DB	WB	DB	WB		
Cooling		27°C	19°C	35°C	24°C		
Heating		20°C	—	7°C	6°C	ISO5151-T1	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.							
(7) Branching pipe set "DIS-TA1G"×1(option). ① : Pipe of O.U. - Branch. ② : Pipe of Branch - I.U.							




Item		Model	FDT140VSXTVG			
			Indoor unit FDT50VG (3 units)		Outdoor unit FDC140VSX	
Power source		3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 16.0(Max.)]			
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 20.0(Max.)]			
	Power consumption	Cooling	kW	3.93		
		Heating		4.00		
	Max power consumption		7.00			
	Running current	Cooling	A	5.8 / 6.1		
		Heating		5.9 / 6.2		
	Inrush current, max current		5, 15			
	Power factor	Cooling	%	98		
		Heating		98		
	EER	Cooling		3.56		
	COP	Heating		4.00		
	Sound power level	Cooling	dB(A)	54		72
Heating		P-Hi:38 Hi:33 Me:30 Lo:27		49		
Sound pressure level	Cooling		—		52	
	Heating		—		—	
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 19 Panel 5		105	
Compressor type & Q'ty			—		RMT5134MDE3×1	
Compressor motor (Starting method)		kW	—		Direct line start	
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg(Pre-charged up to the piping length of 30m)Outdoor unit			
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2	
Fan motor (Starting method)		W	50 < Direct line start >		86 x 2 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi:20 Hi:16 Me:13 Lo:10		100	
	Heating					
Available external static pressure		Pa	0		—	
Outside air intake			Possible		—	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—	
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)	
Electric heater		W	—		20(Crank case heater)	
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I.U. φ6.35 (1/4") ② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 O.U. φ9.52 (3/8") Gas line: I/U φ12.7 (1/2") ② φ12.7(1/2")x0.8 ① φ15.88(5/8")x1.0 O/U φ15.88 (5/8")			
	Connecting method		Flare piping		Flare piping	
	Attached length of piping	m	—		—	
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.100m			
Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)		Holes size φ20 x 3pcs		
Drain pump, max lift height	mm	Built-in drain pump , 850		—		
Recommended breaker size	A	—				
L.R.A. (Locked rotor ampere)	A	5.0				
Interconnecting wires	Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number		IPX0		IP24		
Standard accessories		Mounting kit, Drain hose		Edging		
Option parts		—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	—	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						
(6) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.						
(7) Branching pipe set "DIS-TA1G"×1(option). ① : Pipe of O.U. - Branch. ② : Pipe of Branch - I.U.						






1.2 EXTERIOR DIMENSIONS

(1) Indoor units Models FDT40VG, 50VG, 60VG, 71VG



Symbol	Model	Content
A	Gas piping φ 12.71 (1/2") (Flare) φ 15.885 (5/8") (Flare)	40, 50, 60, 71
B	Liquid piping φ 6.35 (1/4") (Flare) φ 9.523 (3/8") (Flare)	
C	Drain piping VP25 (O.D.32)	
D	Hole for wiring	
F	Suspension bolts (M10 or M8)	
G	Outside air opening for ducting (Knock out)	
H1	Air outlet opening for ducting φ 125 (Knock out)	
H2	Air outlet opening for ducting φ 200 (Knock out)	

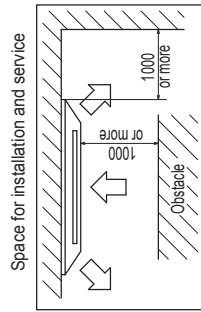

Make a space of 5000 or more between the units when installing more than one.

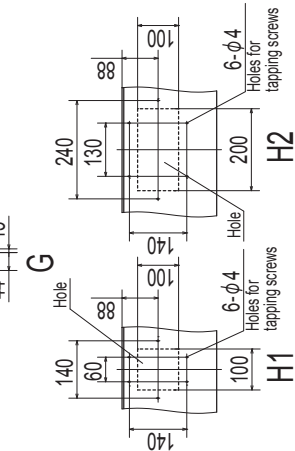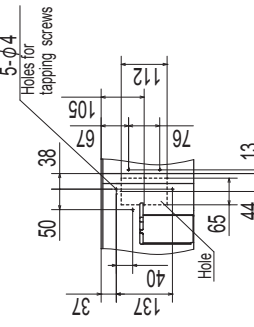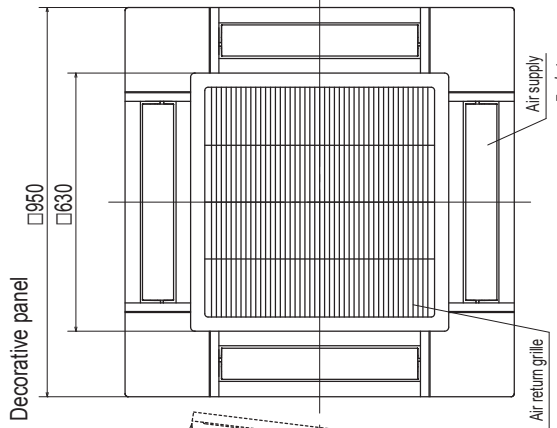

Unit: mm

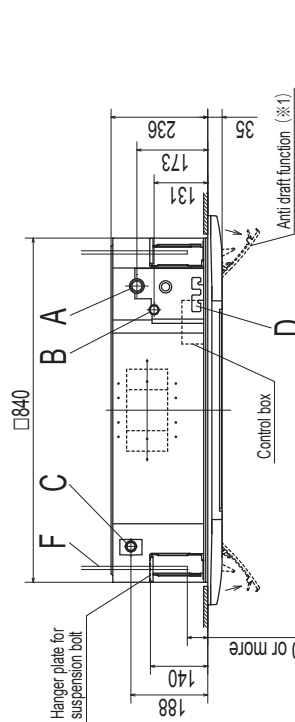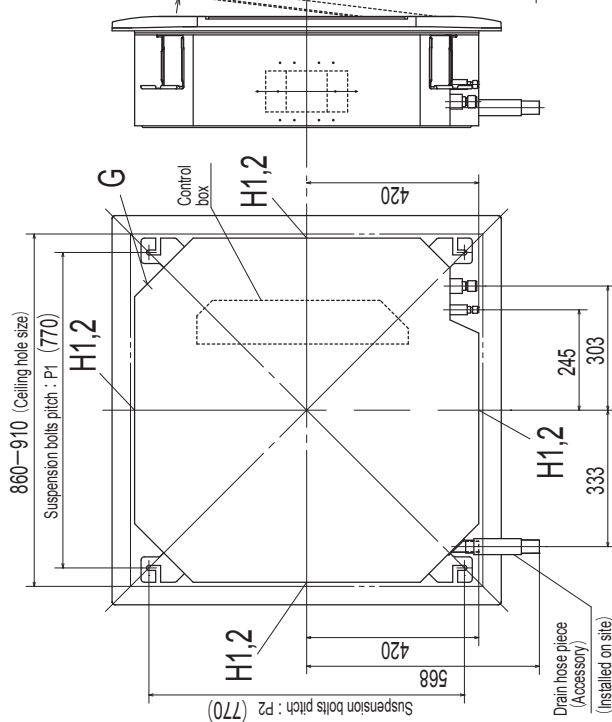




Symbol	P1	P2
Pattern	770	725-770
	770-800	725

- Notes (1) The model name label is attached to the control box lid.
 (2) Suspension bolt pitch P1, P2 is adjustable by a pattern of the right table.
 (3) Section 1 (*1) is provided on the panel T-PSAE-5AW-E only.

PJF000Z426

Models FDT100VG, 125VG, 140VG




Symbol	Content
A	Gas piping φ 15.88 (5/8") (Flare)
B	Liquid piping φ 9.52 (3/8") (Flare)
C	Drain piping VP25 (O.D.32)
D	Hole for wiring
F	Suspension bolts (M10 or M8)
G	Outside air opening for ducting (Knock out)
H1	Air outlet opening for ducting φ 125 (Knock out)
H2	Air outlet opening for ducting φ 200 (Knock out)

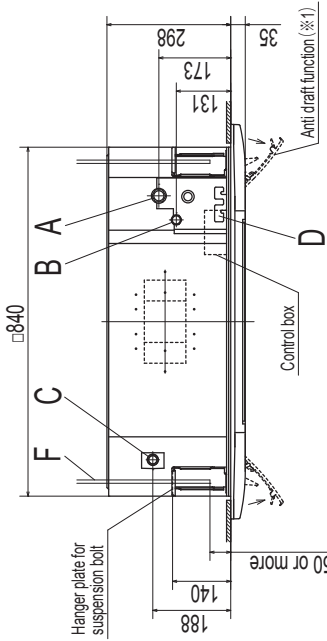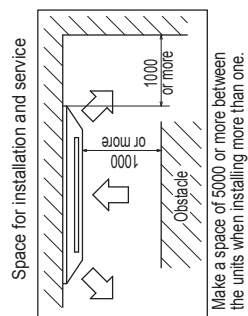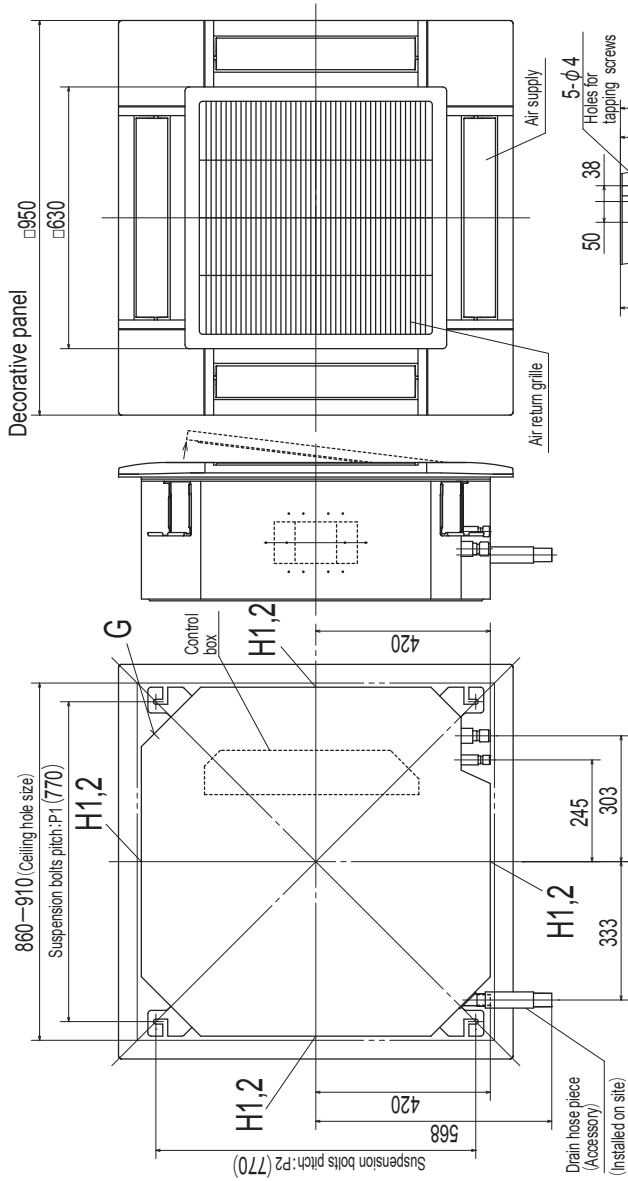

Suspension bolt pitch range

Symbol	P1	P2
1	770	725-770
2	770-800	725

- Notes (1) The model name label is attached to the control box lid.
 (2) Suspension bolt pitch P1, P2 is adjustable by a pattern of the right table.
 (3) Section 1 (※1) is provided on the panel T-PSAE-5AW-E only.

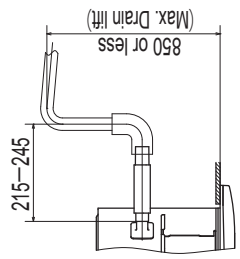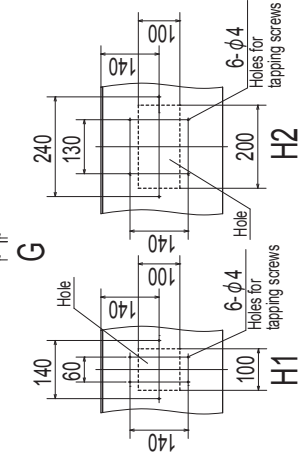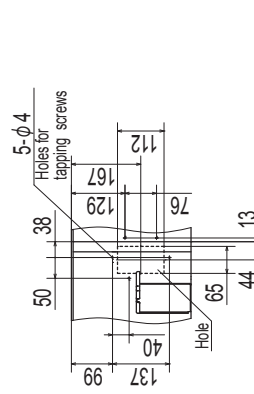


Unit: mm

PJF000Z427



(2) Outdoor units
Models SRC40ZSX-S, 50ZSX-S, 60ZSX-S

Symbol	Content
A	Service valve connection (Gas side) $\phi 12.7(1/2")(\text{Flare})$
B	Service valve connection (Liquid side) $\phi 6.35(1/4")(\text{Flare})$
C	Pipe/cable draw-out hole
D	Drain discharge hole
E	Anchor bolt hole

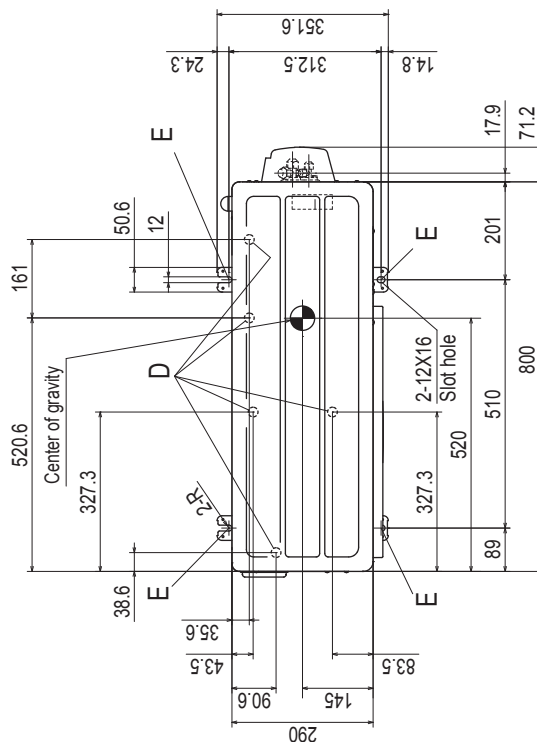

Notes

- (1) The unit must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) If the unit is installed in the location where there is a possibility of strong winds, place the unit such that the direction of air from the outlet gets perpendicular to the wind direction.
- (4) Leave 200mm or more space above the unit.
- (5) The wall height on the outlet side should be 1200mm or less.
- (6) The model name label is attached on the front side of the unit.

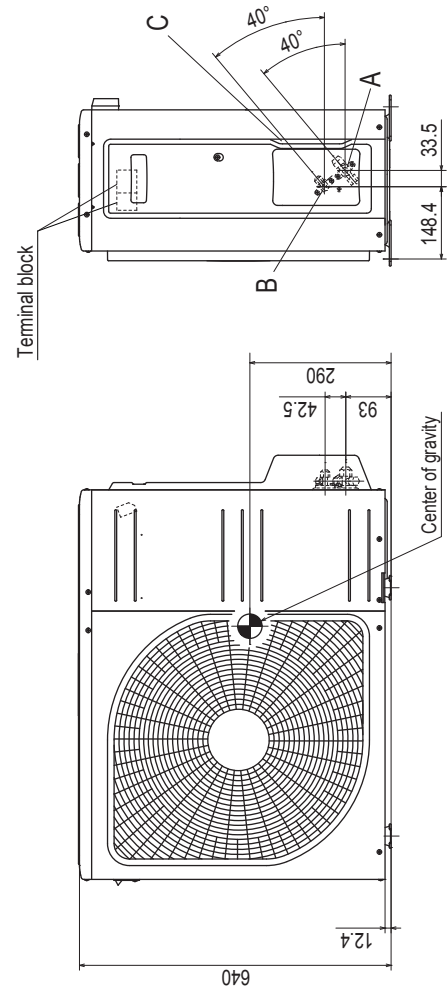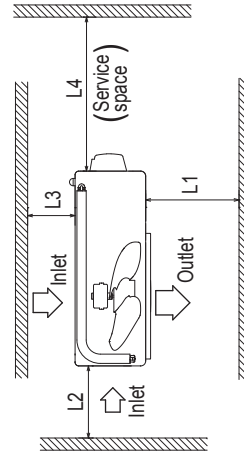

Minimum installation space

Examples installation Size	I	II	III	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

Unit:mm





RCT000Z020

Model FDC71VNX

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subjected to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the unit's height.
- (6) The model name label is attached on the lower right corner of the front panel.

Symbol	Content
A	Service valve connection (gas side) $\phi 15.88$ (5/8") (Flare)
B	Service valve connection (liquid side) $\phi 9.52$ (3/8") (Flare)
C	Pipe/cable draw-out hole
D	Drain discharge hole
E	Anchor bolt hole

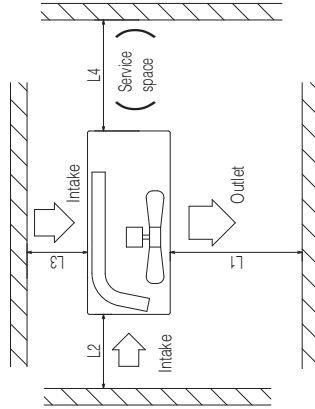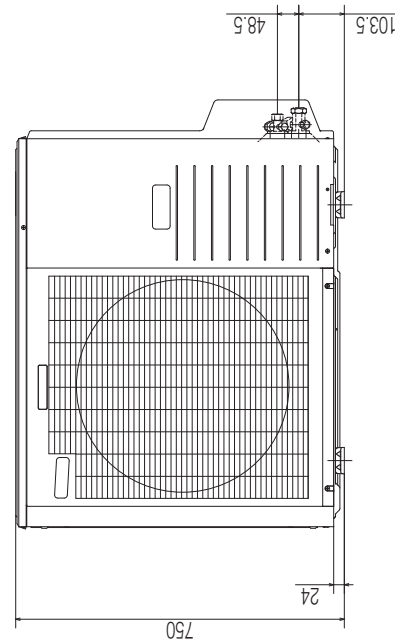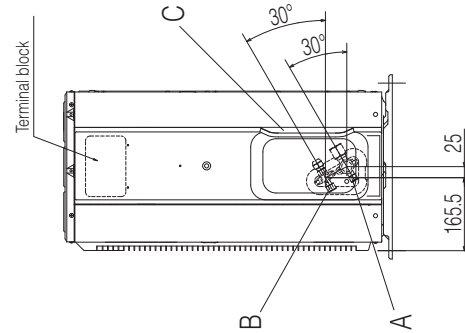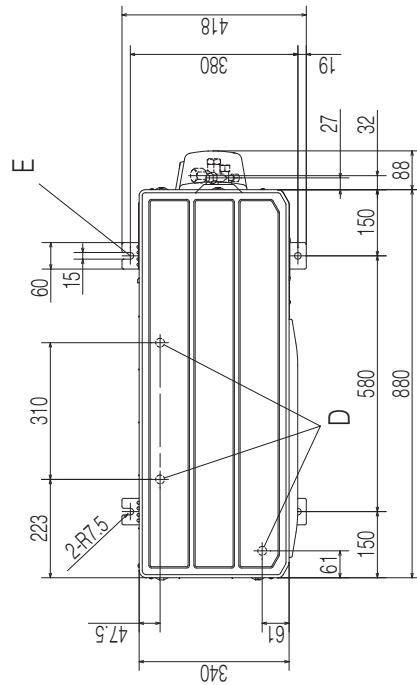

Minimum installation space

Examples of installation Dimensions	I	II	III
L1	Open	Open	500
L2	300	250	Open
L3	100	150	100
L4	250	250	250


Unit:mm

**Models FDC100VNX, 125VNX, 140VNX
100VSX, 125VSX, 140VSX**

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the lower right corner of the front panel.
- (7) Connect the Service valve with local pipe by using the pipe of the attachment. (Gas side only)

Symbol	Content
A	Service valve connection of the attached connecting pipe (gas side) $\phi 15.88$ (5/8") (Flare)
B	Service valve connection (liquid side) $\phi 9.52$ (3/8") (Flare)
C	Pipe/cable draw-out hole $\phi 20 \times 3$ places M10 \times 4places
D	Drain discharge hole $\phi 50$ (front) $\phi 45$ (side) $\phi 50$ (back)
E	Anchor bolt hole
F	Cable draw-out hole

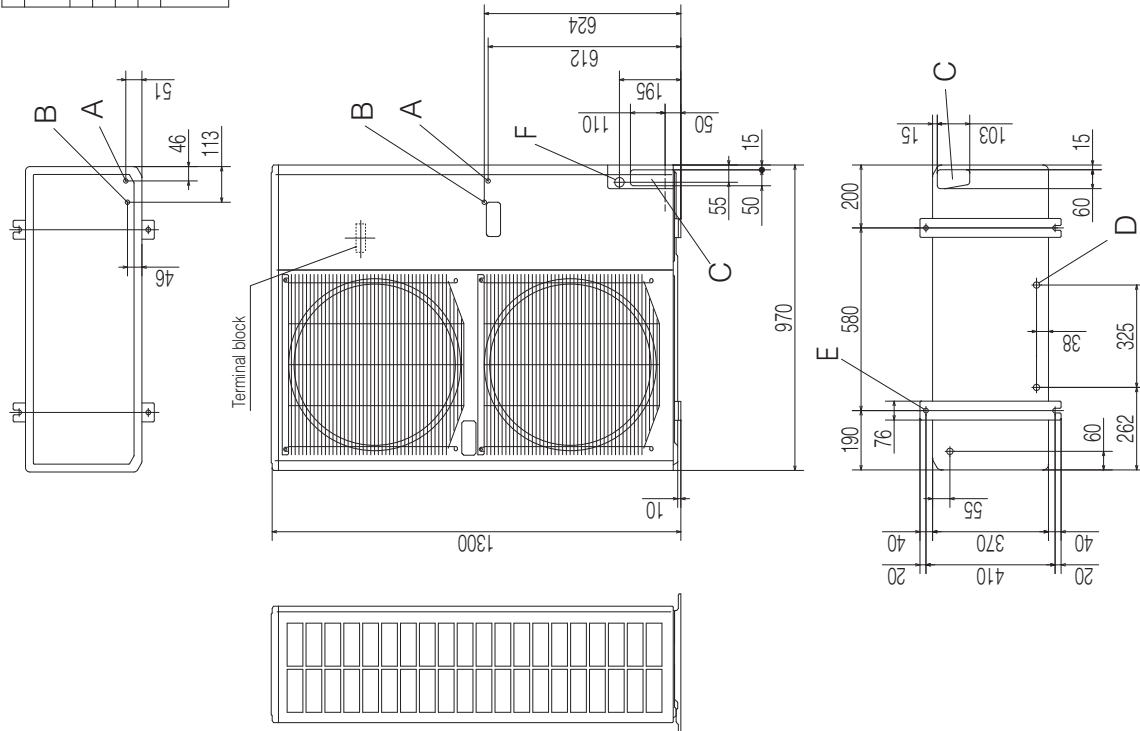

Examples of installation Dimensions	I	II	III
L1	Open	Open	500
L2	300	5	Open
L3	150	300	150
L4	5	5	5


Unit:mm

(3) Remote control (Option parts)

(a) Wired remote control


Model RC-EX3

Dimensions (Viewed from front)

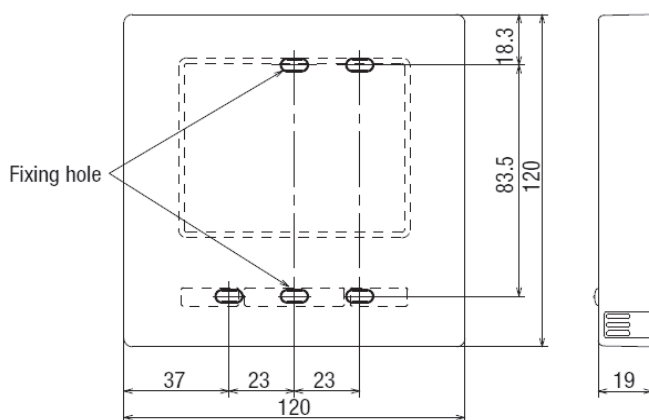

Exterior appearance (Munsell color)	Pearl white (N8.5) near equivalent
-------------------------------------	------------------------------------

Installation space

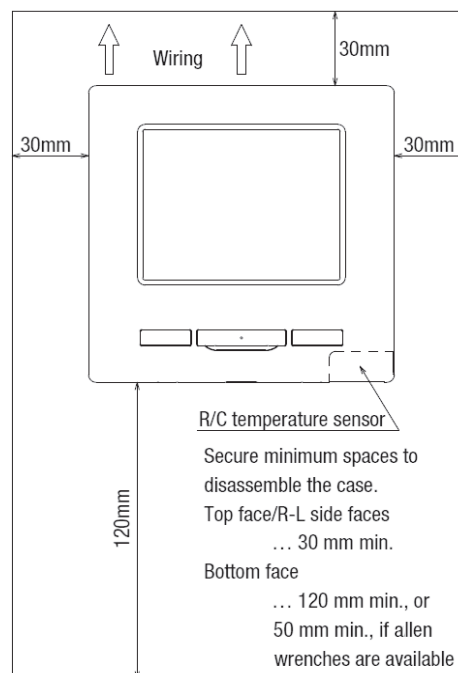

Cautions for selecting installation place

- (1) Installation surface must be flat and sufficiently strong. R/C case must not be deformed.
- (2) Where the R/C can detect room temperatures accurately. This is a must when detecting room temperatures with the temperature sensor of R/C.
 - Install the R/C where it can detect the average temperature in the room.
 - Install the R/C sufficiently separated from a heat source.
 - Install the R/C where it will not be influenced by the turbulence of air when the door is opened or closed.
 Select a place where the R/C is not exposed to direct sunlight or blown by winds from the air-conditioner or temperatures on the wall surface will not deviate largely from indoor air temperatures.
- (3) When using the panel provided with the automatic filter elevating function, select a place where the movement of grill can be seen easily.

R/C cable: 0.3mm² × 2 cores

When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.


< 200 m	0.5 mm ² x 2 cores
< 300 m	0.75 mm ² x 2 cores
< 400 m	1.25 mm ² x 2 cores
< 600 m	2.0 mm ² x 2 cores

Adapted to **RoHS** directive

PJZ000Z321


Model RC-E5

Exposed mounting

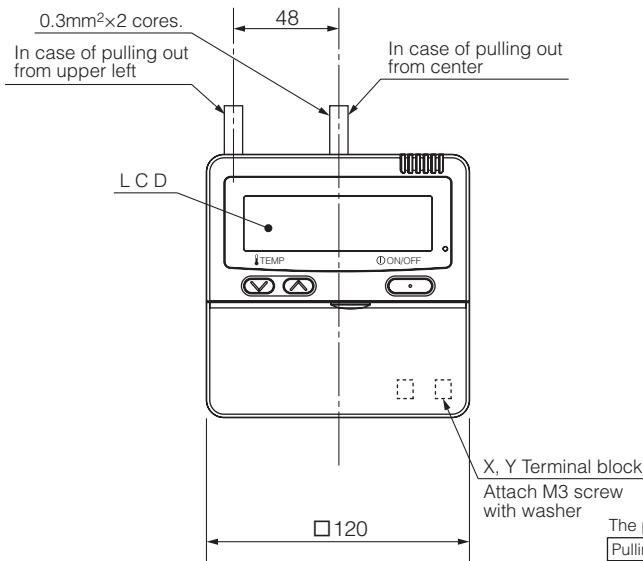


Exterior appearance (Munsell color)	Pearl white (N8.5) near equivalent
-------------------------------------	------------------------------------


Embedded mounting

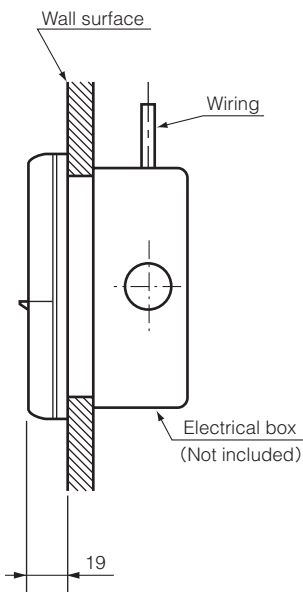


Wiring outlet
Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.

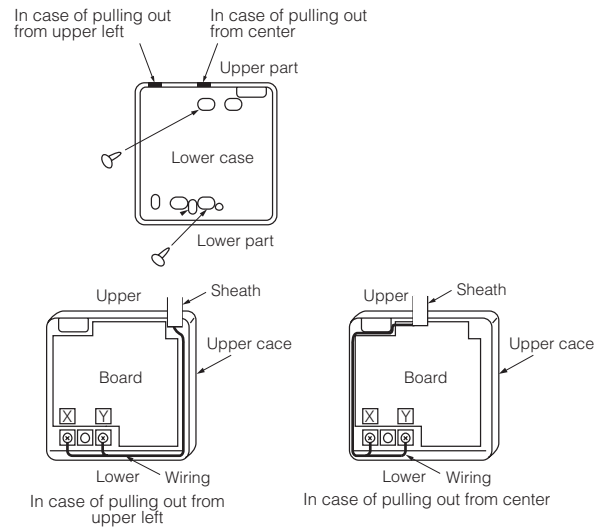

The peeling-off length of sheath	
Pulling out from upper left	Pulling out from center
X wiring : 215mm	X wiring : 170mm
Y wiring : 195mm	Y wiring : 190mm



Remote control installation dimensions

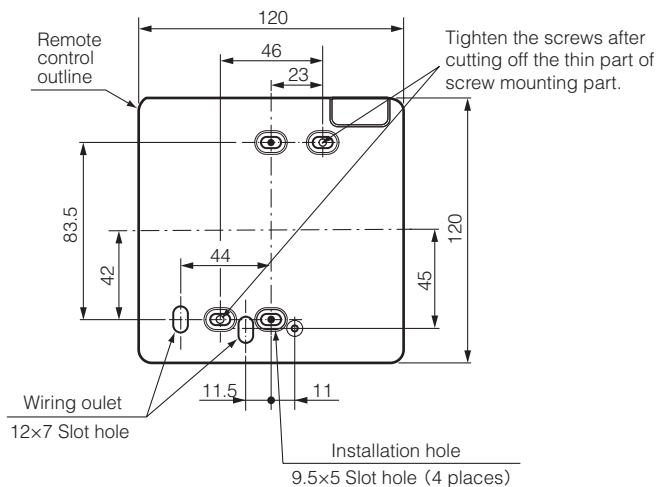

(1) Installation screw for remote control
M4 screw (2 pieces)

Unit:mm

Wiring specifications


(1) If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Length	Wiring thickness
100 to 200m	0.5mm ² x2 cores
Under 300m	0.75mm ² x2 cores
Under 400m	1.25mm ² x2 cores
Under 600m	2.0mm ² x2 cores

PJZ000Z295

(b) Wireless remote control (RCN-E2)

Unit: mm

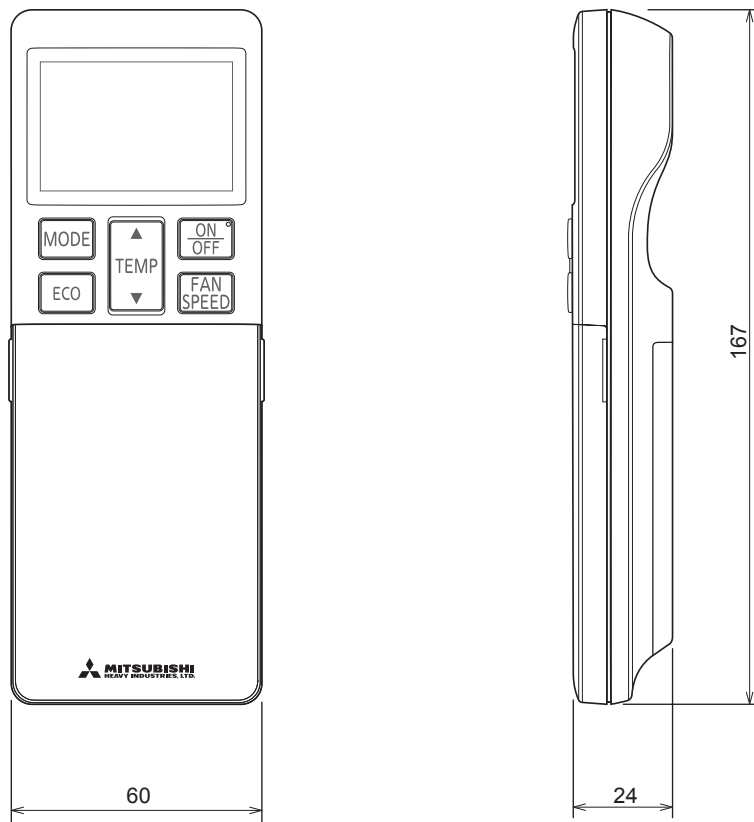

1.3 ELECTRICAL WIRING

(1) Indoor units


Models FDT 40VG, 50VG, 60VG, 71VG, 100VG, 125VG, 140VG

Meaning of marks

Item	Description
AM1-4	Anti draft motor
CNB-Z	Connector
DM	Drain motor
F1,2	Fuse
FMI	Fan motor
FS	Float switch
HS	Humidity sensor
L	Reactor
LED • 2	Indication lamp (Green-Normal operation)
LED • 3	Indication lamp (Red-Inspection)
LM1-4	Louver motor
PIS	Motion sensor
SW2	Remote control communication address
SW5	Plural units Master / Slave setting
SW6	Model capacity setting
SW7-1	Operation check, drain motor test run
TB1	Terminal block (Power source) (□ mark)
TB2	Terminal block (Signal line) (□ mark)
Thc	Thermistor (Remote control)
Thi-A	Thermistor (Return air)
Thi-R1,2,3	Thermistor (Heat exchanger)

Color marks


Mark	Color	Mark	Color
BK	Black	WH	White
BL	Blue	YE	Yellow
BR	Brown	GY	Gray
OR	Orange	YE/GN	Yellow / Green
RD	Red		

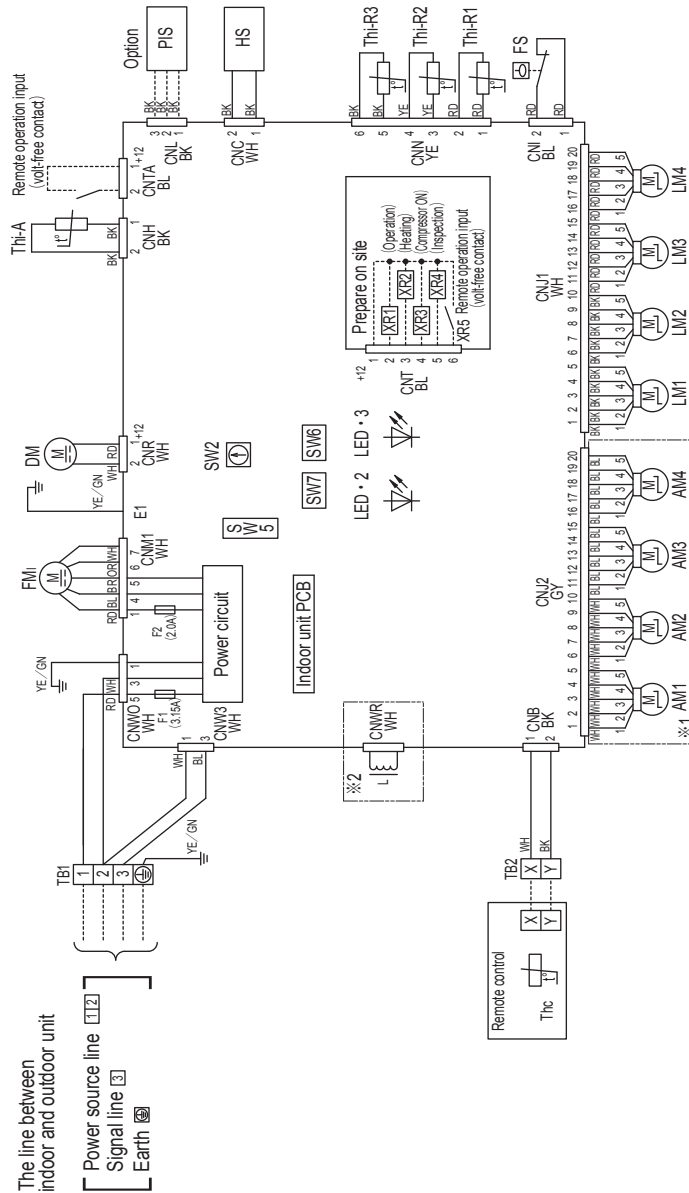

- Notes
1. indicates wiring on site.
 2. See the wiring diagram of outside unit about the line between inside unit and outside unit.
 3. Use twin core cord (0.3mm²) at remote control line. See spec sheet of remote control in case that the total length is more than 100m.
 4. Do not put remote control line alongside power source line.
 5. Section 1 (※1) is provided on the panel T-PSAE-5AW-E only.
 6. Section 2 (※2) is provided on the models 100,125 only.

PJF000Z430

(2) Outdoor units
 Models SRC40ZSX-S, 50ZSX-S, 60ZSX-S

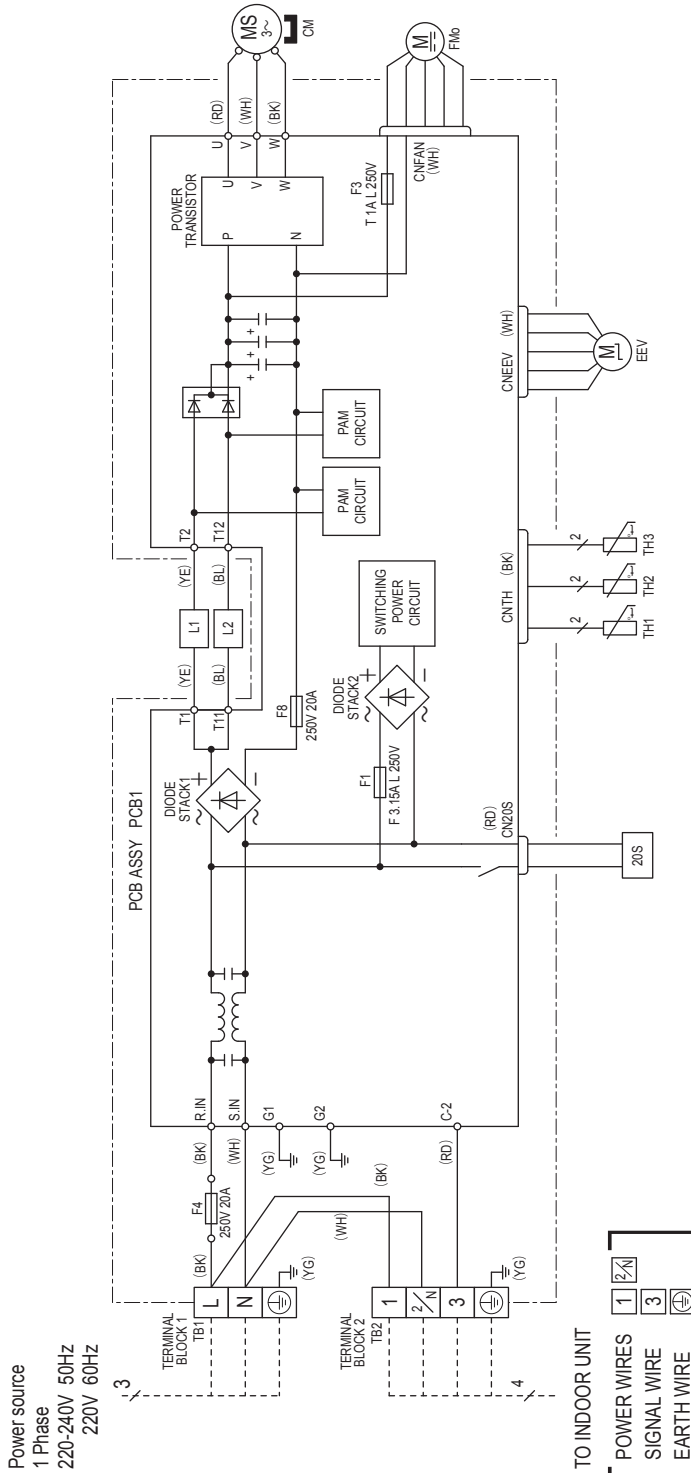

Power cable, indoor-outdoor connecting wires

Model name	MAX running current (A)	Power cable wire size x number*	Power cable length (m)	Connecting cable wire size x number*
SRC40ZSX-S	15	2.0mm ² x 3	13	1.5mm ² x 4
SRC50ZSX-S				
SRC60ZSX-S				

* The wire numbers include earth wire (Yellow/ Green)
 • Switchgear or circuit breaker capacity should be chosen according to national or regional electricity regulations.
 • The power cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation failing outside of these conditions, please follow the national or regional electricity regulations.

Meaning of marks

Item	Description
ZOS	Solenoid coil for 4 way valve
CN20S	Connector
CNEEV	Compressor motor
CNFAN	Electric expansion valve (coil)
CNTH	Fan motor
CM	Reactor
EeV	Heat exchanger sensor
FMo	Outdoor air temp. sensor
L1,2	Discharge pipe temp. sensor
TH1	
TH2	
TH3	

Color marks

Mark	Color
BK	Black
BL	Blue
RD	Red
WH	White
YE	Yellow
YG	Yellow/ Green

RWC000Z298


Model FDC71VNX

Meaning of marks

Item	Description
CM	Compressor motor
FM01	Fan motor
CH	Crankcase heater
DH	Drain pan heater
52X1	Auxiliary relay (for CH)
52X3	Auxiliary relay (for 20S)
52X4	Auxiliary relay (for DH)
20S	Solenoid valve for 4 way valve
SM1	Expansion valve for cooling
SM2	Expansion valve for heating
63H1	High pressure switch
Tho-A	Thermistor (Outdoor air temp.)
Tho-D	Thermistor (Discharge pipe temp.)
Tho-R1R2	Thermistor (Heat exchanger temp.)
Tho-S	Thermistor (Suction pipe temp.)
Tho-IPM	Thermistor (IPM)
LPT	Low pressure sensor
IPM	Intelligent power module
TB	Terminal block
FF3	Fuse
CoA-Z	Connector
SW9	Pump down switch
SW3.5	Local setting switch
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
L1	Reactor

Color marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
OR	Orange
RD	Red
WH	White
YE	Yellow
YE/GN	Yellow/Green
GY	Gray
PK	Pink

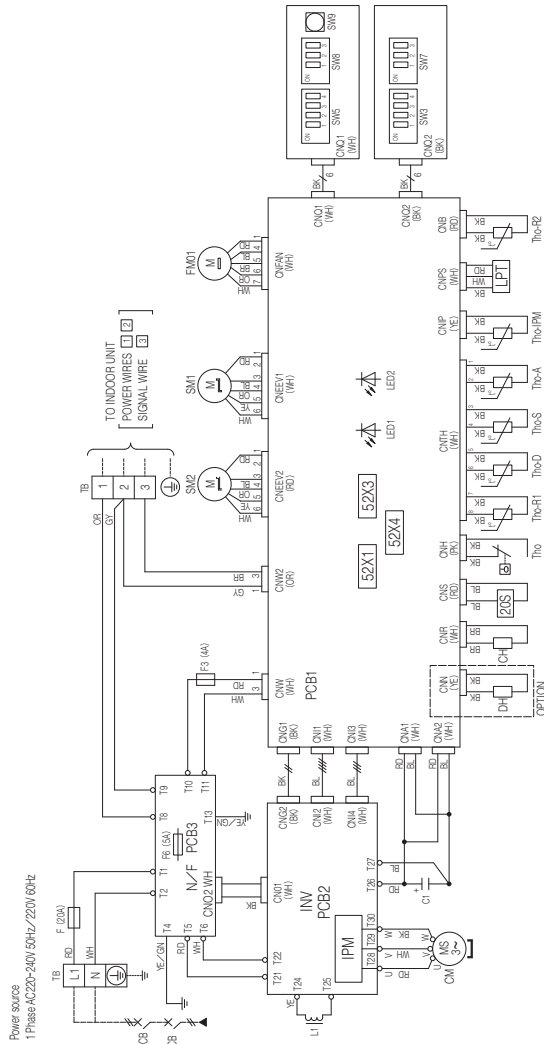

Local setting switch SW3, SW5 (Set up at shipment OFF)

SW3-1	Defrost control change	The defrost operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.
SW3-2	Snow guard fan control	When this switch is turned ON, the outdoor fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.
SW5-3,4	Trial operation	Method of trial operation 1. Trial operation can be performed by using SW5-3. 2. Cooling trial operation will be performed when SW5-4 is OFF, and heating trial operation when SW5-4 is ON. 3. Be sure to turn OFF SW5-3 after the trial operation is finished.

Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size
FDC71	17	3.5	21	φ 1.6mm x 3	φ 1.6mm


- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switching gear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.
- Don't operate SW3-3, SW5-1, SW5-2, SW7, SW8

PCA001Z605

Models FDC100VNX, 125VNX, 140VNX

Color marks		Meaning of marks	
Mark	Color	Item	Description
BK	Black	Cr-A-Z	Connector
BL	Blue	CH	Crankcase heater
BR	Brown	DH	Drain pan heater
GN	Green	CM	Compressor motor
GR	Gray	CT	Current sensor
P	Pink	DM	Diode module
OR	Orange	F	Fuse
RD	Red	FM01	Fan motor
WH	White	IPM	Intelligent power module
Y	Yellow	L	Reactor
Y/GN	Yellow/Green	LED1	Indication lamp (GREEN)
		LED2	Indication lamp (RED)
		LPT	Low pressure sensor
		SM1	Expansion valve for cooling
		SM2	Expansion valve for heating
		SW1	Pump down switch
		SW3.5	Local setting switch
		TB	Terminal block
		Tho-A	Thermistor (Outdoor air temp.)
		Tho-D	Thermistor (Discharge pipe temp.)
		Tho-P	Thermistor (IPM)
		Tho-R1,2	Thermistor (Heat exchanger pipe temp.)
		Tho-S	Thermistor (Suction pipe temp.)
		ZOS	Solenoid valve for 4 way valve
		52X1	Auxiliary relay (for CH)
		52X2	Auxiliary relay (for DH)
		52X3	Auxiliary relay (for 2OS)
		63H1	High pressure switch

Mark	Color
BK	Black
BL	Blue
BR	Brown
GN	Green
GR	Gray
P	Pink
OR	Orange
RD	Red
WH	White
Y	Yellow
Y/GN	Yellow/Green

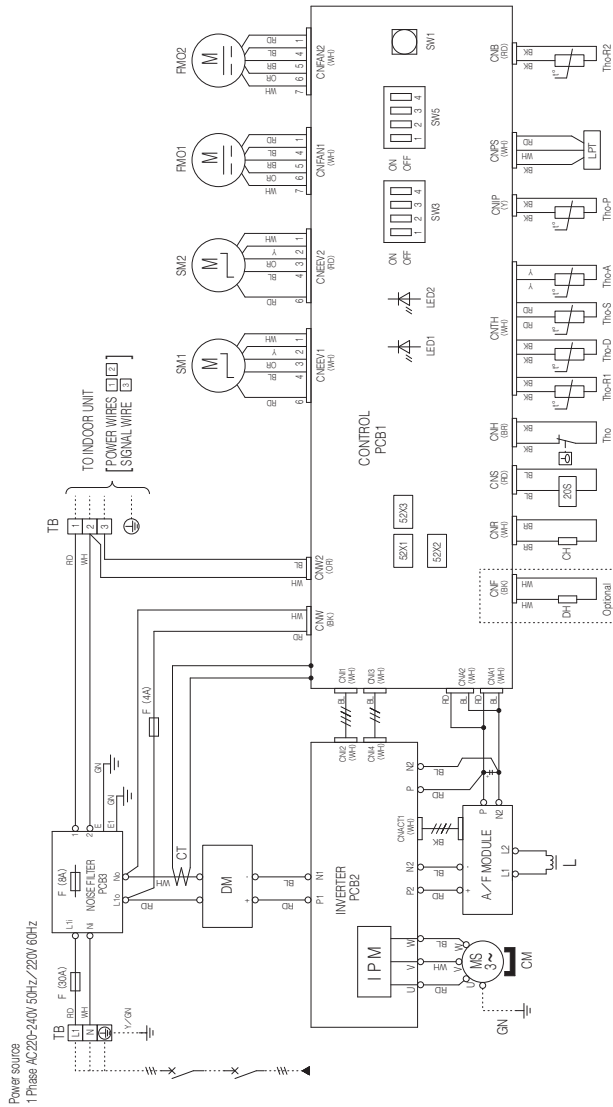


Local setting switch SW3 (Set up at shipment OFF)

Local setting switch SW3 (Set up at shipment OFF)	Function	Method of trial operation
SW3-1	Defrost control change	① Trial operation can be performed by using SW3-3,4. ② Compressor will be in the operation when SW3-3 is ON. ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON. ④ Be sure to turn OFF SW3-3 after the trial operation is finished.
SW3-2	Snow guard fan control	When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.
SW3-3,4	Trial operation	① Trial operation can be performed by using SW3-3,4. ② Compressor will be in the operation when SW3-3 is ON. ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON. ④ Be sure to turn OFF SW3-3 after the trial operation is finished.

Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm)
FDC100	24	5.5	25	φ 1.6mm x 3	φ 1.6
FDC125	26		23		
FDC140					


- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switching of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation failing outside of these conditions, please follow the internal cabling regulations. A dapt. fit to the regulation in effect in each country.



Models FDC100VSX, 125VSX, 140VSX

Meaning of marks

Item	Description
CH	Crankcase heater
CM	Compressor motor
CRA-Z	Connector
CT	Current sensor
DH	Drain pan heater
DM	Diode module
F	Fuse
FMo1.2	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
LPT	Low pressure sensor
SM1	Expansion valve for cooling
SM2	Expansion valve for heating
SW1	Pump down switch
SW3.5	Local setting switch
TB	Terminal block
Tho-A	Thermistor (Outdoor air temp.)
Tho-D	Thermistor (Discharger pipe temp.)
Tho-R1.2	Thermistor (Heat exchanger pipe temp.)
Tho-S	Thermistor (Suction pipe temp.)
Tho-P	Thermistor (IPM)
2XS	Solenoid valve for 4 way valve
52C	Relay
52X1	Auxiliary relay (for CH)
52X2	Auxiliary relay (for DH)
52X3	Auxiliary relay (for 2XS)
52X6	Auxiliary relay (for 52C)
63H1	High pressure switch

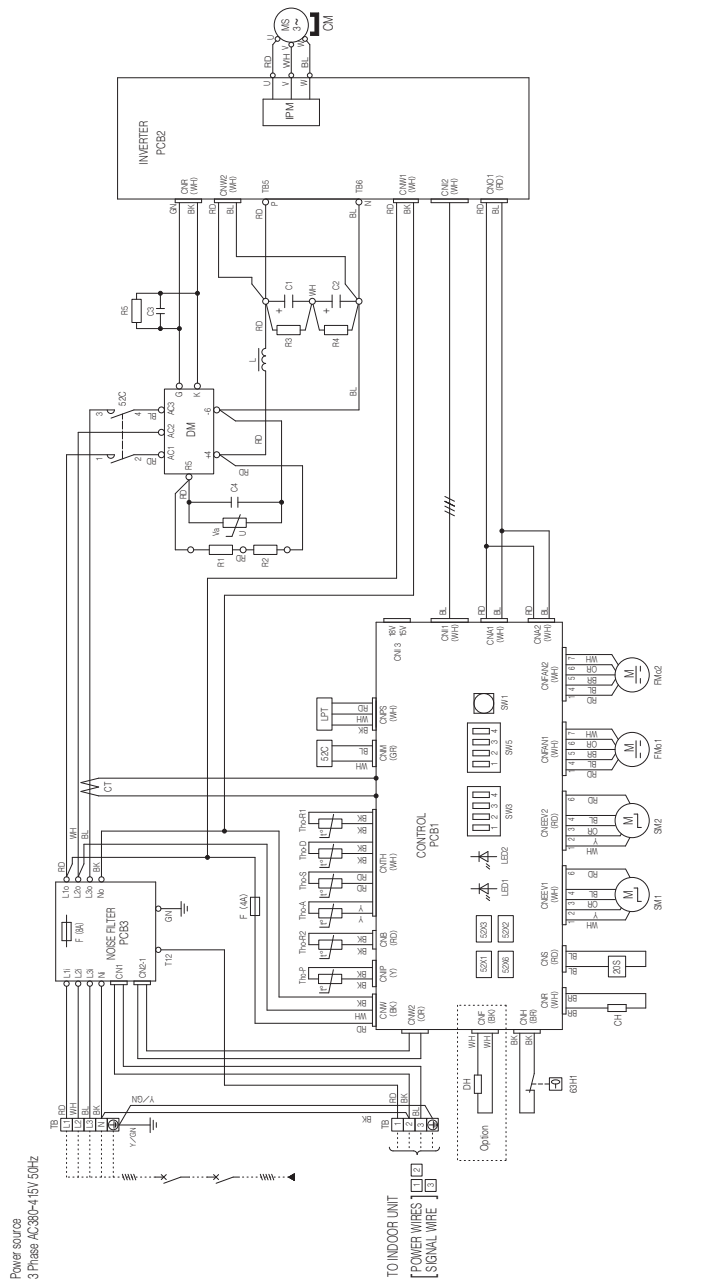

Color marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
OR	Orange
RD	Red
WH	White
Y	Yellow
Y/GN	Yellow/Green
GR	Gray
P	Pink


Local setting switch SW3 (Set up at shipment OFF)

SW3-1	Defrost control change	The defrost operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.
SW3-2	Show guard fan control	When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.
SW3-3.4	Trial operation	Method of trial operation ① Trial operation can be performed by using SW3-3.4. ② Compressor will be in the operation when SW3-3 is ON. ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON. ④ Be sure to turn OFF SW3.3 after the trial operation is finished.

Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm)
FDC100	15	3.5	27	φ 1.6mm x 3	φ 1.6
FDC125					
FDC140					

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear/circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.




1.4 NOISE LEVEL

Notes(1) The data are based on the following conditions.

Ambient air temperature: Indoor unit 27°CWB. Outdoor unit 35°CDB.

(2) The data in the chart are measured in an anechoic room.

(3) The noise levels measured in the field are usually higher than the data because of reflection.

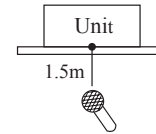


Mike (in front & below unit)

(1) Indoor units

Measured based on JIS B 8616
Mike position


Model FDT40VG

Noise level 36 dB (A) at P-HIGH
33 dB (A) at HIGH
30 dB (A) at MEDIUM
27 dB (A) at LOW

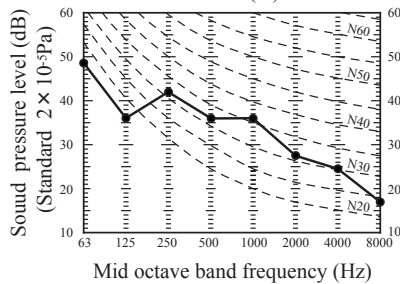


Model FDT50VG

Noise level 38 dB (A) at P-HIGH
33 dB (A) at HIGH
30 dB (A) at MEDIUM
27 dB (A) at LOW

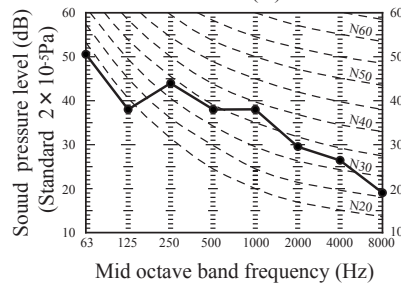


Model FDT60VG

Noise level 44 dB (A) at P-HIGH
34 dB (A) at HIGH
32 dB (A) at MEDIUM
28 dB (A) at LOW

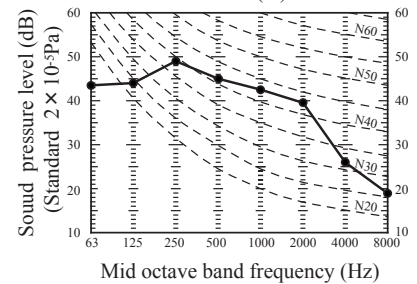


Model FDT71VG

Noise level 46 dB (A) at P-HIGH
35 dB (A) at HIGH
34 dB (A) at MEDIUM
29 dB (A) at LOW

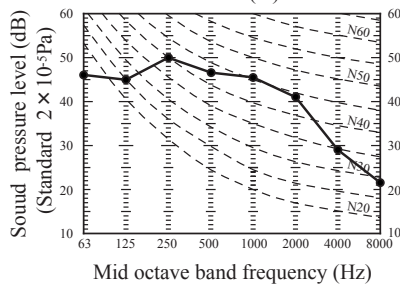


Model FDT100VG

Noise level 48 dB (A) at P-HIGH
39 dB (A) at HIGH
37 dB (A) at MEDIUM
31 dB (A) at LOW

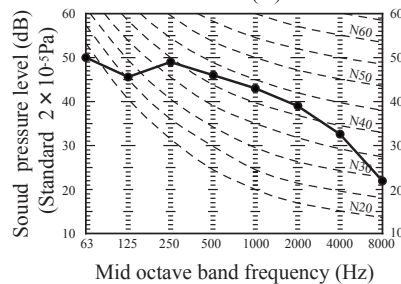


Model FDT125VG

Noise level 49 dB (A) at P-HIGH
41 dB (A) at HIGH
39 dB (A) at MEDIUM
32 dB (A) at LOW

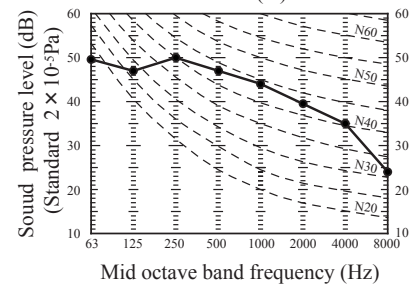

Model FDT140VG

Noise level 49 dB (A) at P-HIGH
42 dB (A) at HIGH
39 dB (A) at MEDIUM
33 dB (A) at LOW

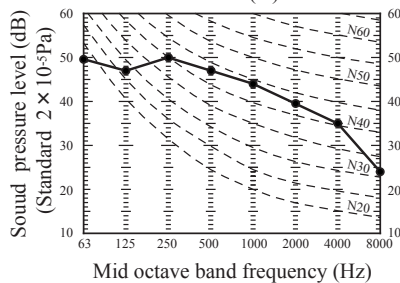



(2) Outdoor units

Measured based on JIS B 8616 or JIS C 9612



Mike position: at highest noise level in position as mentioned below.

Distance from front side 1m



Model SRC40ZSX-S, 50ZSX-S

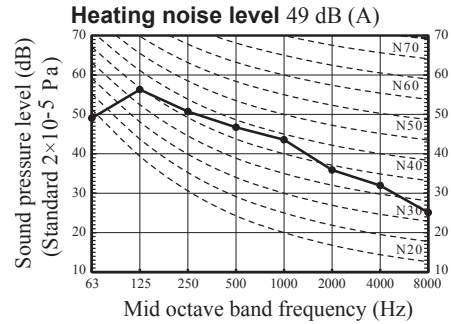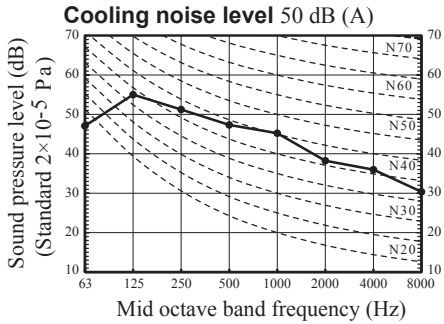

Model SRC60ZSX-S

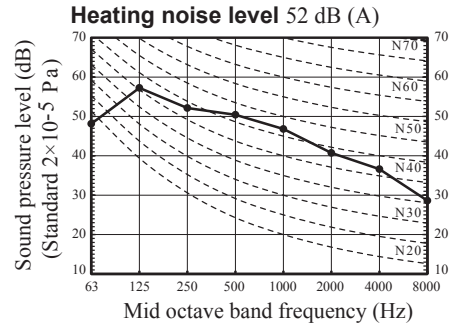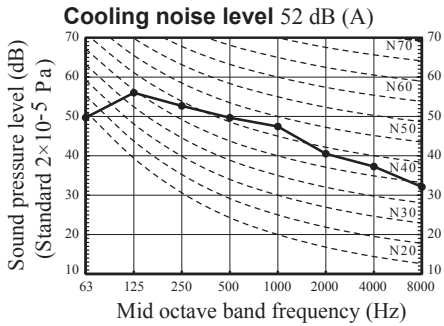


Model FDC71VNX

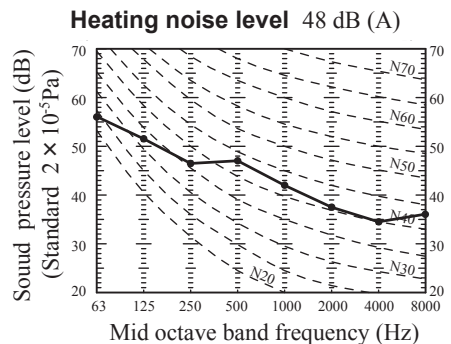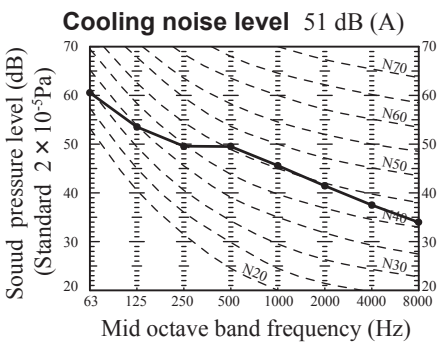


Model FDC100VNX,100VSX

Cooling noise level 48 dB (A)

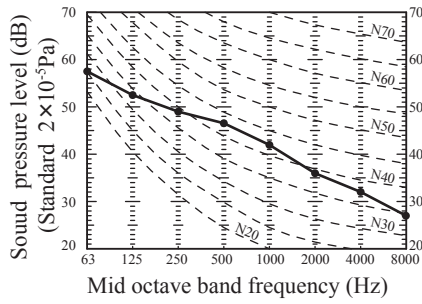


Heating noise level 50 dB (A)

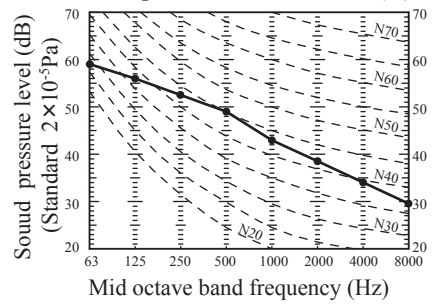


Models FDC125VNX,125VSX

Cooling noise level 48 dB (A)

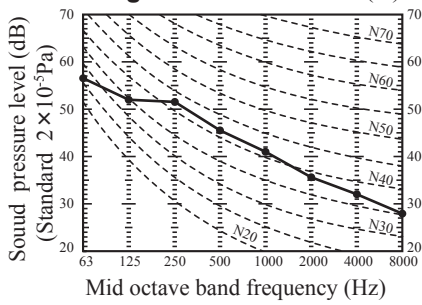


Heating noise level 50 dB (A)

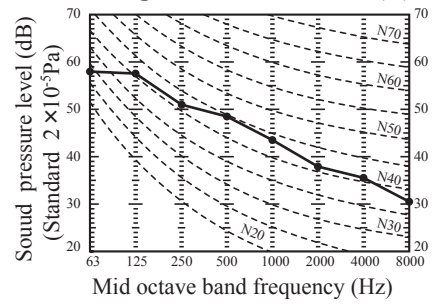


Models FDC140VNX,140VSX

Heating noise level 49 dB (A)

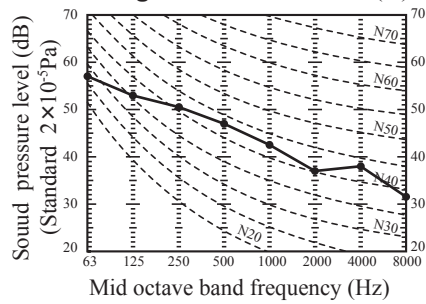

Heating noise level 52 dB (A)

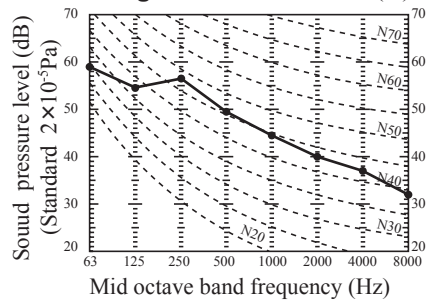



1.5 TEMPERATURE AND VELOCITY DISTRIBUTION

Indoor temperature
 Cooling 27°CDB / 19°CWB
 Heating 20°CDB
 Note: These figures represent the typical main range of temperature and velocity distribution at the center of air outlet within the published conditions.
 In the actual installation, they may differ from the typical figures under the influence of air temperature conditions, ceiling height, operation conditions and obstacles.


Models FDT40VG, 50VG

Cooling Air flow: P-Hi Temperature distribution

Louver position

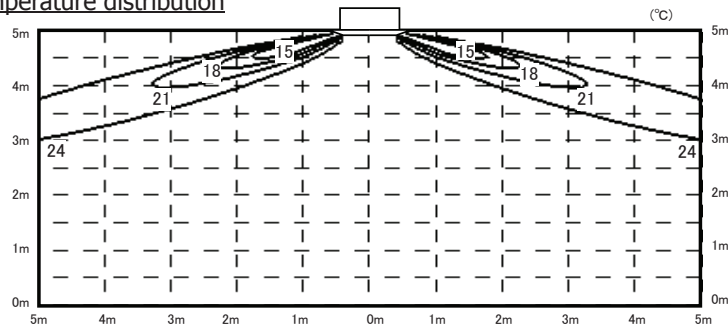
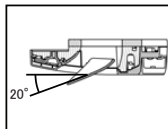


Velocity distribution

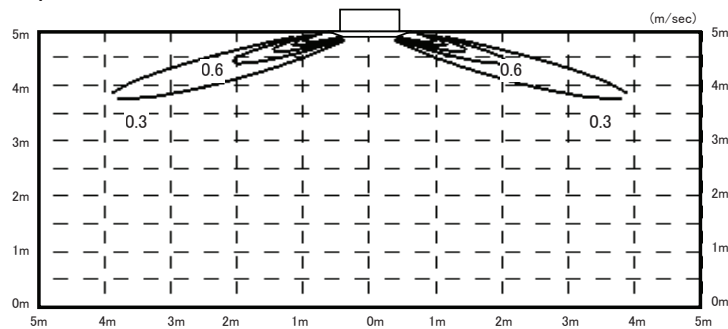


Heating Air flow: P-Hi Temperature distribution

Louver position

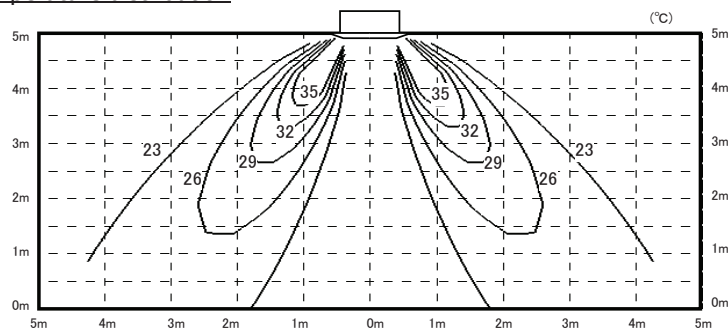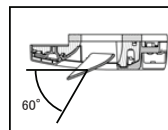



Velocity distribution

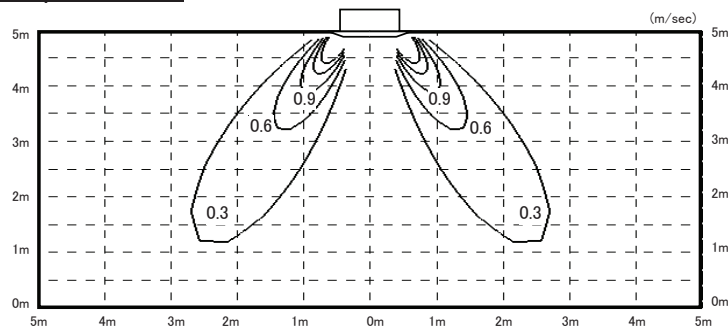


Models FDT60VG, 71VG

Cooling Air flow: P-Hi Temperature distribution

Louver position

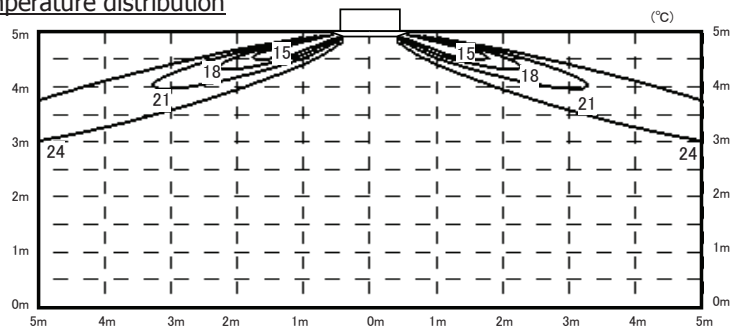
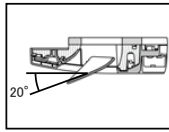


Velocity distribution

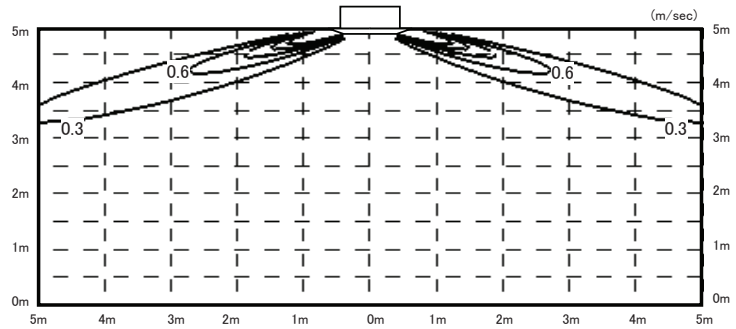


Heating Air flow: P-Hi Temperature distribution

Louver position

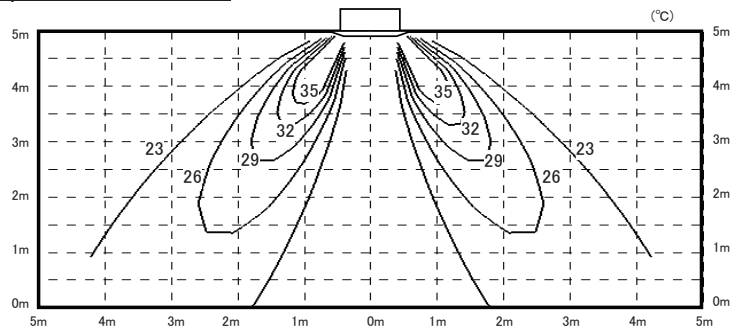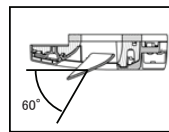



Velocity distribution

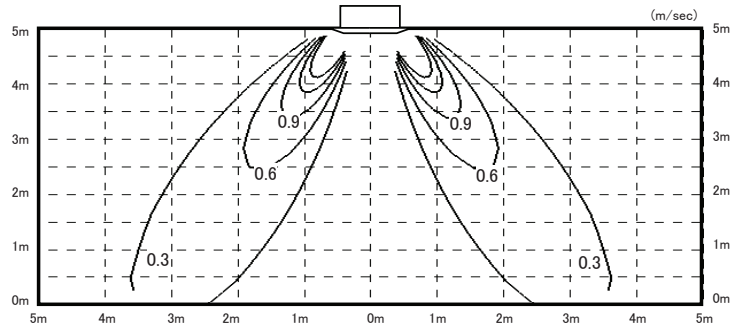


Models FDT100VG, 125VG, 140VG

Cooling Air flow: P-Hi Temperature distribution

Louver position

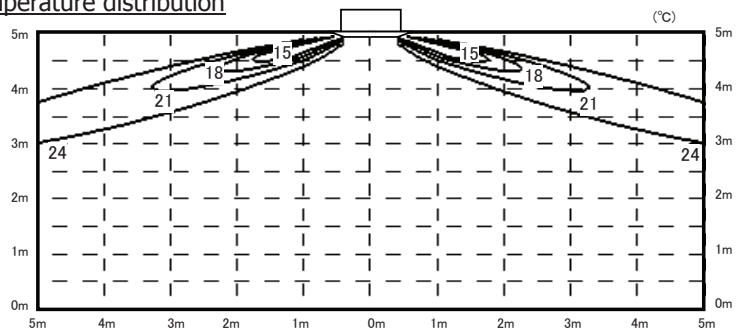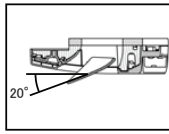


Velocity distribution

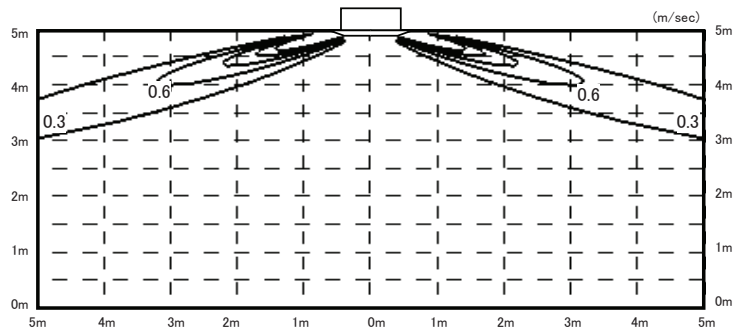


Heating Air flow: P-Hi Temperature distribution


Louver position

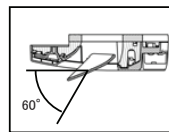

Temperature distribution

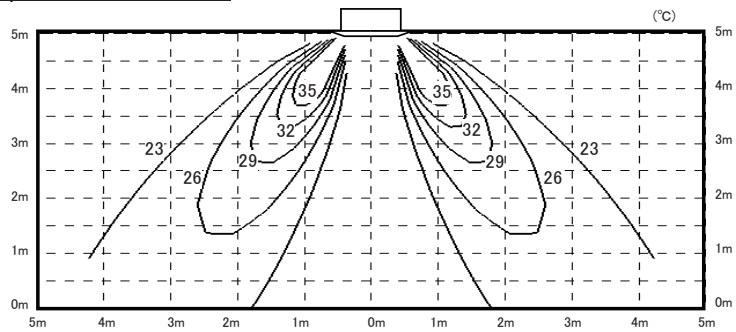


Velocity distribution

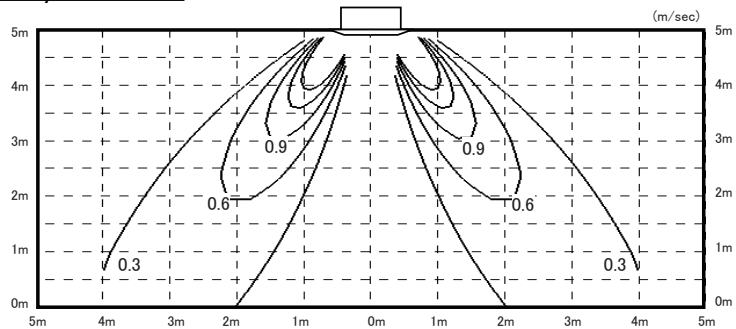


1.6 PIPING SYSTEM


(1) Single type
Models FDT40, 50, 60

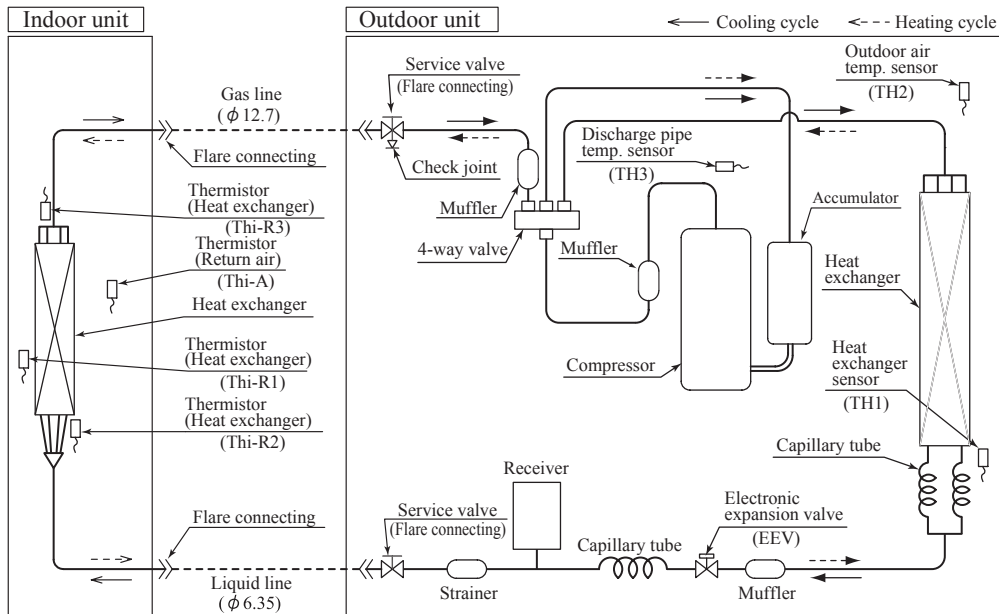


Models FDT71, 100, 125, 140

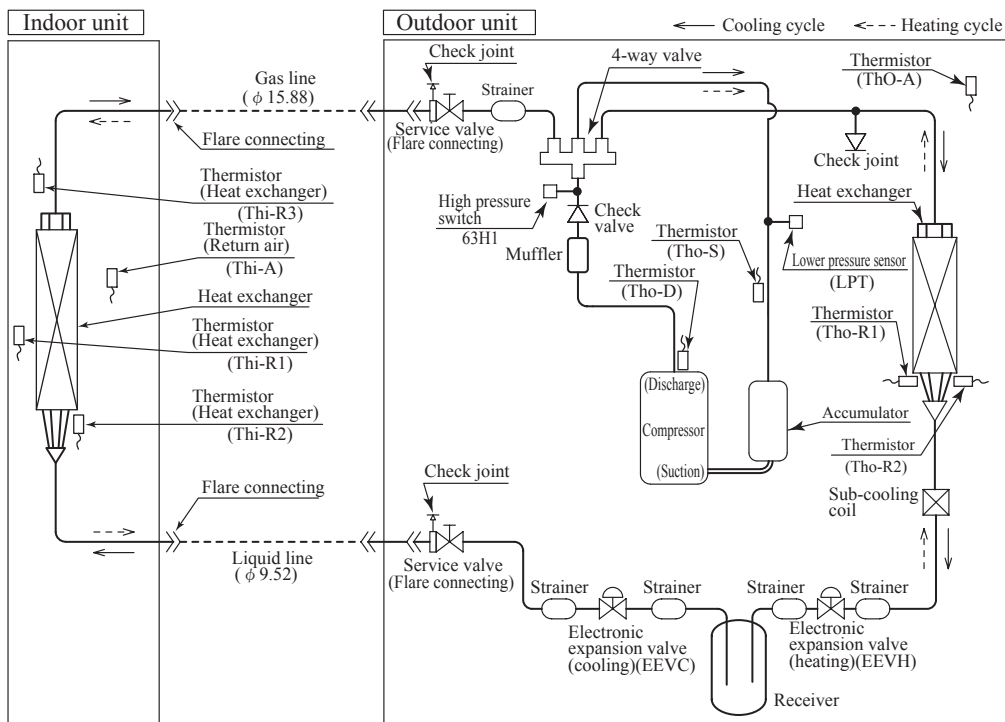

(2) Twin type
Models FDT71, 100, 125, 140

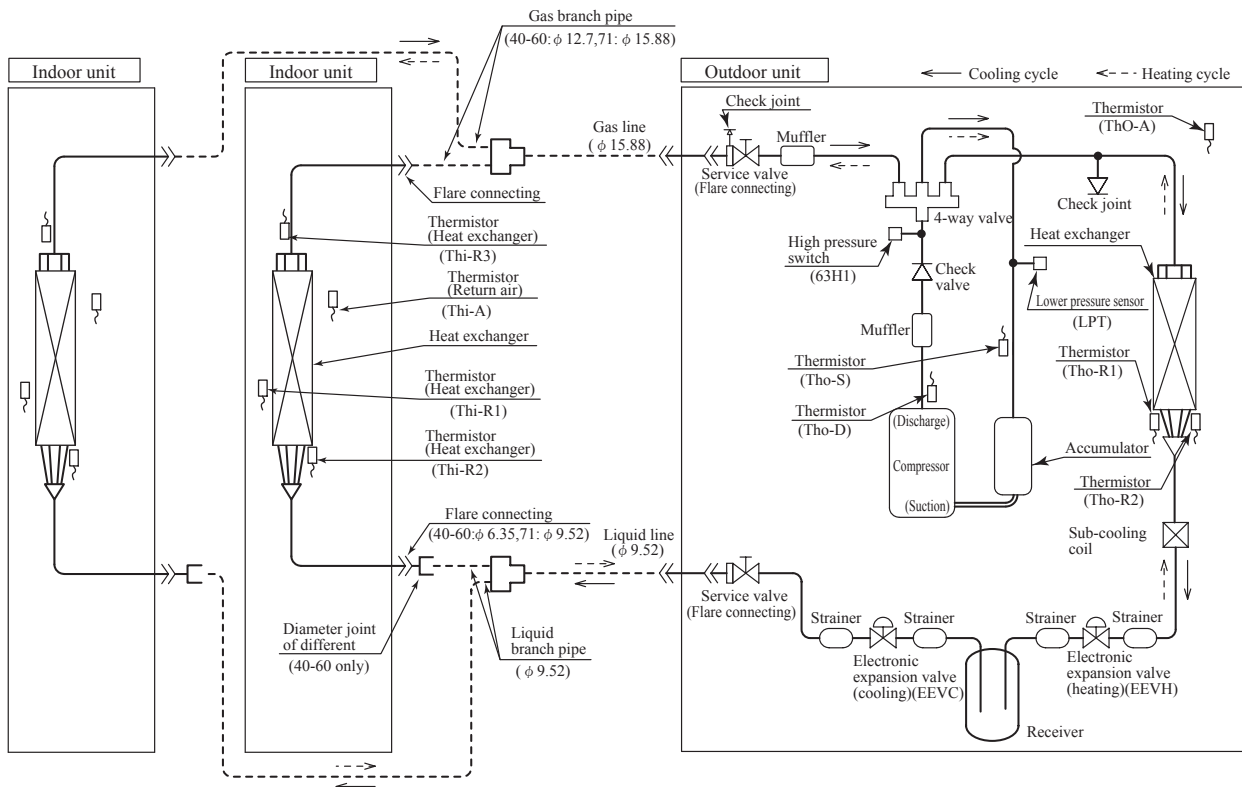

(3) Triple type
Model FDT140

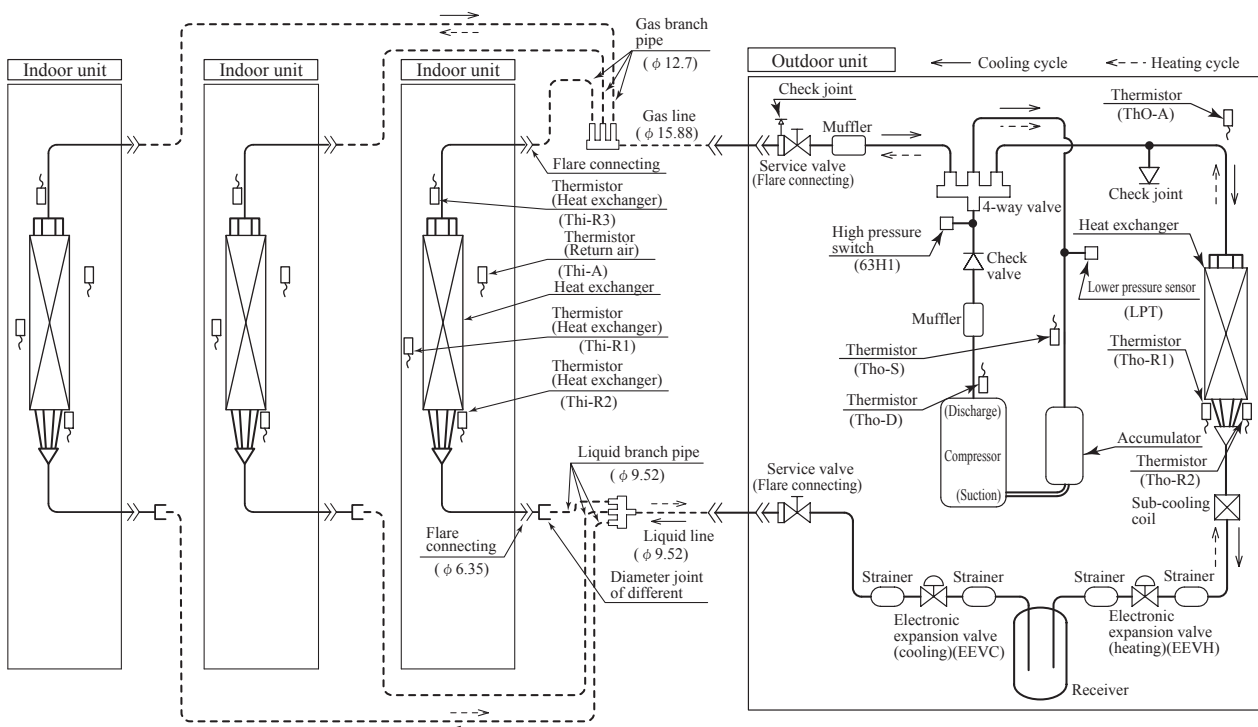

Preset point of the protective devices

Parts name	Mark	Equipped unit	FDT40, 50, 60 model	FDT71, 100, 125, 140 model
Thermistor (for protection overloading in heating)	Thi-R	Indoor unit	OFF 63°C ON 56°C	
Thermistor (for frost prevention)	Thi-R		OFF 1.0°C ON 10°C	
Thermistor (for protection high pressure in cooling.)	Tho-R (TH1)	Outdoor unit	OFF 63°C ON 53°C	OFF 65°C ON 51°C
Thermistor (for detecting discharge pipe temp.)	Tho-D (TH3)	Outdoor unit	OFF 115°C ON 95°C	OFF 115°C ON 85°C
High pressure switch (for protection)	63H1	Outdoor unit	—	OFF 4.15MPa ON 3.15MPa
Low pressure sensor (for protection)	LPT	Outdoor unit	—	OFF 0.079MPa ON 0.227MPa

Note(1) Values in () shown in the case of SRC40, 50, 60 models.

1.7 RANGE OF USAGE & LIMITATIONS

Operating temperature range		See the next page.
		When used below -5°C, install a snow hood. <FDC71-140 only>
Recommendable area to install		Considering to get sufficient heating capacity, the area where the averaged lowest ambient air temperature in day time during winter is above 0°C, and it has no accumulation of snow.
Installation site		The limitations of installation space are shown in the page for outline drawing. Install the indoor unit at least 2.5m higher than the floor surface.
Temperature and humidity conditions surrounding the indoor unit in the ceiling (Note 2)		Dew point temperature : 28°C or less, relative humidity : 80% or less
Limitations on unit and piping installation		See page 48 and 49
Compressor ON-OFF cycling	Cycle time	7 minutes or more (from OFF to OFF) or (from ON to ON)
	Stop time	3 minutes or more
Power source	Voltage range	Rating ±10%
	Voltage drop at start-up	Min.85% of rating
	Phase-to-phase unbalance	3% or less

Note 1. Do not install the unit in places which :

- 1) Flammable gas may leak.
- 2) Carbon fiber, metal particles, powder, etc. are floating.
- 3) Cosmetic or special sprays are used frequently.
- 4) Exposed to oil splashes or steam (e.g. kitchen and machine plant).
- 5) Exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent).
- 6) Exposed to ammonia substance (e.g. organic fertilizer).
- 7) Matters affecting devices, such as sulfuric gas, chlorine gas, acid, alkali, etc. may generate or accumulate.
- 8) Chimney smoke is hanging.
- 9) Sucking the exhaust gas from heat exchanger.
- 10) Adjacent to equipment generating electromagnetic waves or high frequency waves.
- 11) There is light beams that affect the receiving device of indoor unit in case of the wireless specification.
- 12) Snow falls heavily.
- 13) At an elevation of 1000 meters or higher.
- 14) On mobile machine (e.g. vehicle, ship, etc.)
- 15) Splashed with water to indoor unit (e.g. laundry room).
- 16) Indoor units of twin and triple specifications separately in a room with partition.

Note 2. If ambient temperature and humidity exceed the above values, add polyurethane foam insulation on the outer plate (10mm or thicker) of indoor unit.


Both gas and liquid pipes need to be cover with 20mm or thicker heat insulation materials at the place where humidity exceeds 70%.

Note 3. When used below -5°C, install a snow hood on site.


Regarding outline of a snow hood, refer to our technical manual.

Operating temperature range

■ Cooling

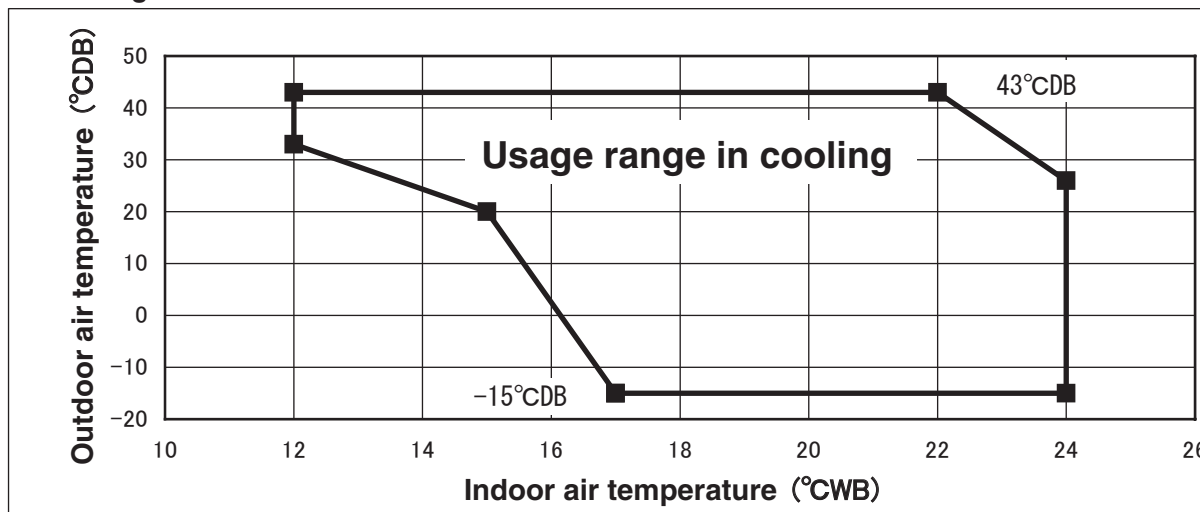

■ Heating

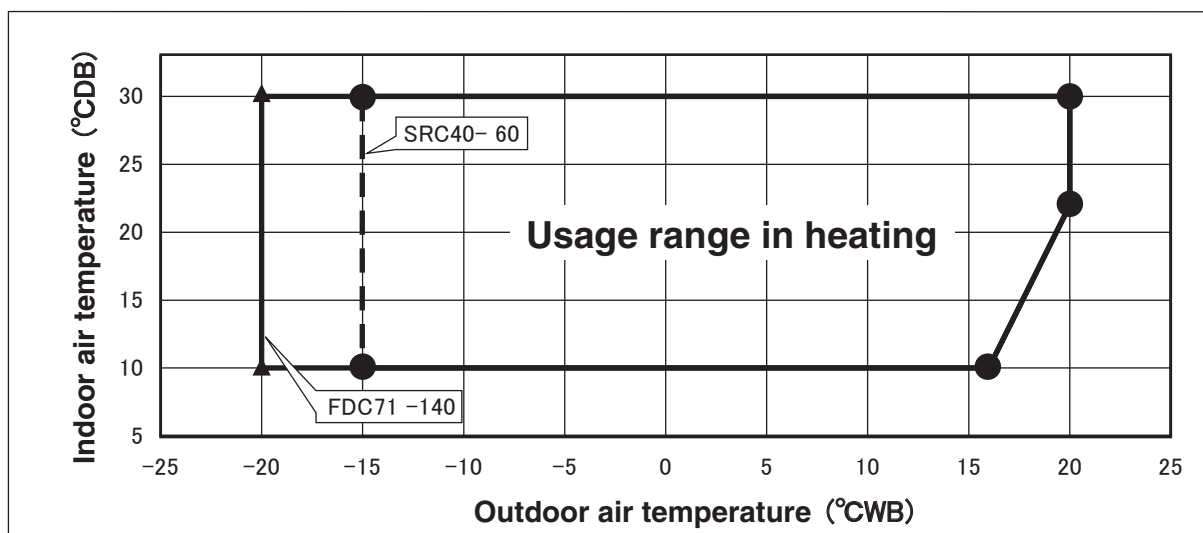

Decline in cooling and heating capacity or operation stop may occur when the outdoor unit is installed in places where natural wind can increase or decrease its design air flow rate.

“CAUTION” Cooling operation under low outdoor air temperature conditions

PAC models can be operated in cooling mode at low outdoor air temperature condition within above temperature range. However in case of severely low temperature conditions if the following precaution is not observed, it may not be operated in spite of operable temperature range mentioned above and cooling capacity may not be established under certain conditions.

[Precaution]

In case of severely low temperature condition

- 1) Install the outdoor unit at the place where strong wind cannot blow directly into the outdoor unit.
- 2) If there is no installation place where can prevent strong wind from directly blowing into the outdoor unit, mount the flex flow adapter (prepared as option part) or like such devices onto the outdoor unit in order to divert the strong wind.


[Reason]

Under the low outdoor air temperature conditions of -5°C or lower, the outdoor fan is controlled at lower or lowest speed by outdoor fan control, but if strong wind directly blow into the outdoor unit, the outdoor heat exchanger temperature will drop more.


This makes high and low pressures to drop as well. This low pressure drop makes the indoor heat exchanger temperature to drop and will activate anti-frost control at indoor heat exchanger at frequent intervals, that cooling operation may not be established for any given time.

Limitation on unit and piping installation - single, twin.				
Descriptions	Models for outdoor unit	Dimensional limitations	Marks appearing in the drawing	
			Single type	Twin type
One-way pipe length	SRC40 · 50 · 60	≤ 30m	L	L + L1 + L2
	FDC71	≤ 50m		
	FDC100 · 125 · 140	≤ 100m		
Main pipe length	FDC71	≤ 50m		L
	FDC100 · 125 · 140	≤ 100m		
	FDC71	≤ 20m		
One-way pipe length after first branching point	FDC100 · 125 · 140	≤ 30m		L1, L2
	FDC71	≤ 30m		
Difference of pipe length after first branching point		≤ 10m		L1 - L2 L2 - L1
		≤ 15m		
Total pipe length after the second branching point		≤ 20m		
		≤ 30m		
Elevation difference between indoor and outdoor unit	When outdoor unit is positioned higher	SRC40 · 50 · 60	H	H
		FDC71		
	FDC100 · 125 · 140			
	SRC40 · 50 · 60			
When outdoor unit is positioned lower	FDC71	≤ 20m	H	H
	FDC100 · 125 · 140	≤ 15m		
Elevation difference among indoor units		≤ 0.5m		h

Single type

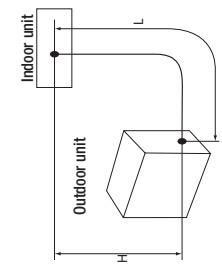

Twin type

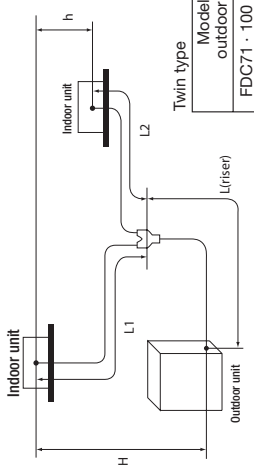

- (1) A riser pipe must be part of the main.
A branching pipe set should be installed horizontally at point as close to an indoor unit as possible.
- (2) Reduce refrigerant amount by according to table below from the factory charge when refrigerant piping is shorter than 3m.

Model for outdoor units	Refrigerant to be reduced
FDC71 · 100 · 125 · 140	1.0 kg

Limitation on unit and piping installation - triple.				
Descriptions	Models for outdoor unit	Dimensional limitations	Marks appearing in the drawing	
			Triple type A	Triple type B
One-way pipe length	FDC140	≤ 100m	L + L1 + L2 + L3	L + La + L1 + L2 + L3 ※1
Main pipe length	FDC140	≤ 100m	L	L
One-way pipe length first branching point to indoor units between	FDC140	≤ 30m	L1, □L2, □L3	L1 ※1
One-way pipe length between first branching point from and second branching point	FDC140	≤ 5m		La
One-way pipe length first branching point and indoor units	FDC140	≤ 27m		La + L2, □La + L3 ※1
Piping length difference among piping to indoor units from first branch		< 3m	L1 - L2, □L1 - L3, □L2 - L3	(not possible)
Piping length difference among piping to indoor units from second branching point to indoor units		3m ≤ ≤ 10m	(not possible)	L1 - (La + L2), □L1 - (La + L3) ※1
One-way pipe length difference from second branching point to indoor units		≤ 10m		L2 - L3
Elevation difference between indoor and outdoor	When the outdoor unit is positioned higher	≤ 30m	H	H
	When the outdoor unit is positioned lower	≤ 15m		
Elevation difference among indoor units		≤ 0.5m	h1, □h2, □h3	h1, □h2, □h3

Triple type A

Triple type B

Branch piping set (option)

Model for outdoor units	Triple type A Branch piping	Triple type B First branch	Triple type B Second branch
FDC140	DIS-TA1	DIS-WA1	DIS-WA1

※1 Install the indoor units so that L + L1 becomes the longest one-way pipe. Keep the pipe length difference between L1 and (La + L2) or (La + L3) within 10m.

(1) A riser pipe must be part of the main.
 A branching pipe set should be installed horizontally at point as close to an indoor unit as possible.
 (2) Reduce refrigerant amount by 1.0kg from the factory charge when refrigerant piping is shorter than 3m.

1.8 SELECTION CHART

Correct the cooling and heating capacity in accordance with the operating conditions. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown in the capacity tables (1.8.1) × Correction factors shown in the table (1.8.2) (1.8.3) (1.8.4).

Caution: In case that the cooling operation during low outdoor air temperature below -5°C is expected, install the outdoor unit where it is not influenced by natural wind. Otherwise protection control by low pressure will be activated much more frequently and it will cause insufficient capacity or breakdown of the compressor in worst case.

1.8.1 Capacity tables

(1) Single type

Model **FDT40ZSXVG** Indoor unit **FDT40VG** Outdoor unit **SRC40ZSX-S**
Cooling Mode (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					3.38	3.31	3.56	3.49	3.65	3.58	3.75	3.68	3.95	3.87	4.15	3.90
13					3.46	3.39	3.65	3.58	3.75	3.68	3.85	3.76	4.05	3.97	4.26	3.91
15					3.54	3.47	3.74	3.67	3.84	3.76	3.95	3.78	4.15	4.04	4.36	3.93
17					3.62	3.55	3.83	3.75	3.94	3.85	4.04	3.80	4.26	4.06	4.47	3.95
19					3.69	3.57	3.91	3.83	4.02	3.87	4.15	3.83	4.41	4.09	4.67	3.98
21					3.81	3.60	3.99	3.91	4.10	3.89	4.26	3.85	4.56	4.12	4.87	4.01
23					3.85	3.61	4.04	3.96	4.15	3.91	4.30	3.86	4.59	4.13	4.88	4.01
25			3.73	3.66	3.89	3.63	4.08	3.97	4.20	3.92	4.34	3.87	4.61	4.13	4.89	4.01
27			3.76	3.68	3.93	3.64	4.13	3.98	4.25	3.93	4.36	3.87	4.60	4.13		
29			3.70	3.63	3.86	3.62	4.06	3.96	4.18	3.91	4.30	3.86	4.54	4.12		
31			3.64	3.57	3.80	3.60	4.00	3.92	4.12	3.90	4.24	3.85	4.48	4.11		
33	3.23	3.17	3.44	3.37	3.74	3.58	3.94	3.86	4.06	3.88	4.18	3.83	4.42	4.09		
35	3.28	3.21	3.44	3.37	3.68	3.56	3.88	3.80	4.00	3.87	4.12	3.82	4.36	4.08		
37	3.23	3.17	3.38	3.31	3.62	3.55	3.82	3.74	3.94	3.85	4.06	3.81	4.30	4.07		
39	3.17	3.11	3.32	3.25	3.56	3.49	3.76	3.68	3.88	3.80	4.00	3.79	4.23	4.06		
41	3.12	3.06	3.27	3.20	3.50	3.43	3.70	3.63	3.82	3.74	3.93	3.78	4.17	4.05		
43	3.06	3.00	3.21	3.15	3.44	3.37	3.64	3.57	3.76	3.68	3.87	3.76	4.10	4.02		

Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB					
		16	18	20	22	24	
		-19.8	-20				
-17.7	-18						
-15.7	-16						
-13.5	-14	2.67	2.63	2.59	2.55	2.50	
-11.5	-12	2.83	2.79	2.75	2.71	2.67	
-9.5	-10	3.00	2.96	2.92	2.88	2.84	
-7.5	-8	3.17	3.13	3.09	3.05	3.01	
-5.5	-6	3.23	3.20	3.16	3.12	3.09	
-3.0	-4	3.29	3.26	3.23	3.20	3.17	
-1.0	-2	3.36	3.33	3.30	3.28	3.25	
1.0	0	3.42	3.40	3.38	3.35	3.33	
2.0	1	3.45	3.43	3.41	3.39	3.37	
3.0	2	3.67	3.65	3.63	3.61	3.59	
5.0	4	4.11	4.09	4.07	4.04	4.01	
7.0	6	4.55	4.53	4.50	4.47	4.44	
9.0	8	4.78	4.75	4.72	4.69	4.66	
11.5	10	5.01	4.98	4.95	4.91	4.88	
13.5	12	5.30	5.26	5.25	5.14	5.10	
15.5	14	5.58	5.53	5.48	5.37	5.32	
16.5	16	5.73	5.67	5.61	5.48	5.44	

PJF000Z451

Model **FDT50ZSXVG** Indoor unit **FDT50VG** Outdoor unit **SRC50ZSX-S**
Cooling Mode (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.22	3.95	4.45	4.33	4.56	4.27	4.69	4.22	4.94	4.50	5.19	4.38
13					4.32	3.99	4.56	4.36	4.68	4.31	4.81	4.25	5.07	4.53	5.32	4.40
15					4.42	4.02	4.68	4.39	4.80	4.34	4.93	4.28	5.19	4.55	5.45	4.43
17					4.53	4.05	4.79	4.43	4.92	4.37	5.06	4.32	5.32	4.58	5.58	4.45
19					4.62	4.08	4.89	4.46	5.02	4.40	5.19	4.35	5.51	4.63	5.84	4.51
21					4.76	4.13	4.99	4.49	5.13	4.43	5.32	4.39	5.70	4.67	6.09	4.56
23					4.81	4.15	5.04	4.50	5.19	4.45	5.37	4.40	5.73	4.68	6.10	4.56
25			4.66	4.36	4.86	4.16	5.10	4.52	5.25	4.46	5.42	4.41	5.76	4.68	6.11	4.56
27			4.70	4.38	4.91	4.18	5.16	4.54	5.31	4.48	5.46	4.42	5.75	4.68		
29			4.62	4.35	4.83	4.15	5.08	4.51	5.23	4.46	5.38	4.40	5.68	4.67		
31			4.54	4.32	4.75	4.13	5.00	4.49	5.15	4.44	5.30	4.38	5.60	4.65		
33	4.04	3.90	4.31	4.22	4.67	4.10	4.93	4.47	5.08	4.42	5.23	4.36	5.53	4.63		
35	4.11	3.93	4.30	4.21	4.59	4.07	4.85	4.44	5.00	4.39	5.15	4.34	5.45	4.61		
37	4.04	3.90	4.23	4.15	4.52	4.05	4.77	4.42	4.92	4.37	5.07	4.32	5.37	4.60		
39	3.97	3.87	4.16	4.08	4.45	4.03	4.70	4.40	4.85	4.35	4.99	4.30	5.29	4.58		
41	3.90	3.82	4.09	4.01	4.38	4.01	4.62	4.38	4.77	4.33	4.92	4.28	5.21	4.56		
43	3.83	3.75	4.01	3.93	4.30	3.98	4.55	4.36	4.69	4.31	4.84	4.26	5.13	4.54		

Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB					
		16	18	20	22	24	
		-19.8	-20				
-17.7	-18						
-15.7	-16						
-13.5	-14	3.20	3.15	3.11	3.05	3.00	
-11.5	-12	3.40	3.35	3.31	3.26	3.20	
-9.5	-10	3.60	3.55	3.51	3.46	3.41	
-7.5	-8	3.80	3.75	3.71	3.66	3.61	
-5.5	-6	3.88	3.83	3.79	3.75	3.71	
-3.0	-4	3.95	3.92	3.88	3.84	3.80	
-1.0	-2	4.03	4.00	3.97	3.93	3.90	
1.0	0	4.10	4.08	4.05	4.03	4.00	
2.0	1	4.14	4.12	4.10	4.07	4.05	
3.0	2	4.41	4.38	4.36	4.33	4.30	
5.0	4	4.94	4.91	4.88	4.85	4.82	
7.0	6	5.46	5.43	5.40	5.37	5.33	
9.0	8	5.74	5.70	5.67	5.63	5.59	
11.5	10	6.02	5.98	5.94	5.89	5.85	
13.5	12	6.36	6.31	6.25	6.17	6.12	
15.5	14	6.70	6.64	6.57	6.44	6.39	
16.5	16	6.87	6.80	6.73	6.58	6.52	

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length : 7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model **FDT60ZSXVG** Indoor unit **FDT60VG** Outdoor unit **SRC60ZSX-S**

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.73	4.64	4.98	4.88	5.11	5.01	5.25	5.15	5.53	5.42	5.81	5.67
13					4.84	4.74	5.11	5.01	5.24	5.14	5.39	5.28	5.67	5.56	5.96	5.70
15					4.95	4.85	5.24	5.14	5.38	5.27	5.52	5.41	5.82	5.70	6.11	5.73
17					5.07	4.97	5.37	5.26	5.51	5.40	5.66	5.52	5.96	5.84	6.25	5.76
19					5.17	5.07	5.48	5.37	5.63	5.52	5.81	5.66	6.17	5.95	6.54	5.82
21					5.33	5.21	5.59	5.48	5.74	5.63	5.96	5.60	6.39	6.00	6.82	5.88
23					5.39	5.23	5.65	5.54	5.81	5.66	6.01	5.61	6.42	6.01	6.83	5.88
25			5.22	5.12	5.44	5.24	5.71	5.60	5.88	5.68	6.07	5.63	6.45	6.01	6.84	5.89
27			5.27	5.16	5.50	5.26	5.78	5.66	5.94	5.70	6.11	5.64	6.44	6.01		
29			5.18	5.08	5.41	5.23	5.69	5.58	5.86	5.67	6.02	5.61	6.36	5.99		
31			5.09	4.99	5.32	5.20	5.60	5.49	5.77	5.65	5.94	5.59	6.27	5.97		
33	4.53	4.44	4.82	4.72	5.23	5.13	5.52	5.41	5.69	5.58	5.85	5.57	6.19	5.95		
35	4.60	4.51	4.81	4.71	5.15	5.05	5.43	5.32	5.60	5.49	5.77	5.54	6.10	5.93		
37	4.52	4.43	4.73	4.64	5.06	4.96	5.35	5.24	5.51	5.40	5.68	5.52	6.01	5.89		
39	4.44	4.35	4.65	4.56	4.98	4.88	5.26	5.15	5.43	5.32	5.59	5.48	5.92	5.80		
41	4.37	4.28	4.58	4.49	4.90	4.80	5.18	5.08	5.34	5.23	5.51	5.40	5.83	5.71		
43	4.29	4.20	4.50	4.41	4.82	4.72	5.10	5.00	5.26	5.15	5.42	5.31	5.74	5.63		

Outdoor air temp.	Indoor air temperature					
	°CDB					
°CDB	°CWB	16	18	20	22	24
-19.8	-20					
-17.7	-18					
-15.7	-16					
-13.5	-14	3.97	3.91	3.85	3.79	3.73
-11.5	-12	4.22	4.16	4.10	4.04	3.98
-9.5	-10	4.47	4.41	4.35	4.29	4.23
-7.5	-8	4.72	4.66	4.60	4.54	4.48
-5.5	-6	4.81	4.76	4.70	4.65	4.60
-3.0	-4	4.90	4.86	4.81	4.77	4.72
-1.0	-2	5.00	4.96	4.92	4.88	4.84
1.0	0	5.09	5.06	5.03	4.99	4.96
2.0	1	5.14	5.11	5.08	5.05	5.02
3.0	2	5.47	5.44	5.41	5.37	5.34
5.0	4	6.12	6.09	6.05	6.01	5.98
7.0	6	6.78	6.74	6.70	6.66	6.61
9.0	8	7.12	7.08	7.03	6.98	6.94
11.5	10	7.47	7.41	7.36	7.31	7.26
13.5	12	7.89	7.82	7.76	7.65	7.59
15.5	14	8.31	8.23	8.15	7.99	7.93
16.5	16	8.53	8.44	8.35	8.16	8.09

PJF000Z451

Model **FDT71VNXVG** Indoor unit **FDT71VG** Outdoor unit **FDC71VNX**

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.87	4.77	6.02	5.90	6.59	6.28	6.79	6.23	7.19	6.64	7.59	6.51
13					5.33	5.22	6.32	6.19	6.82	6.35	7.03	6.30	7.45	6.71	7.88	6.57
15					5.79	5.67	6.63	6.41	7.05	6.42	7.27	6.37	7.71	6.78	8.16	6.64
17					6.26	6.14	6.94	6.51	7.27	6.49	7.51	6.44	7.97	6.85	8.44	6.70
19					6.59	6.47	7.16	6.59	7.44	6.55	7.68	6.49	8.15	6.90	8.63	6.75
21					6.93	6.81	7.38	6.66	7.60	6.60	7.84	6.54	8.33	6.95	8.82	6.79
23					6.91	6.10	7.35	6.65	7.57	6.59	7.81	6.53	8.30	6.94	8.78	6.79
25			6.46	6.29	6.89	6.09	7.32	6.64	7.54	6.58	7.78	6.52	8.26	6.93	8.74	6.78
27			6.45	6.28	6.87	6.08	7.30	6.63	7.52	6.57	7.74	6.51	8.18	6.90		
29			6.34	6.21	6.75	6.04	7.19	6.60	7.41	6.54	7.64	6.48	8.09	6.88		
31			6.23	6.11	6.64	6.00	7.08	6.56	7.31	6.51	7.54	6.45	7.99	6.85		
33	5.77	5.65	6.05	5.93	6.53	5.96	6.97	6.52	7.20	6.47	7.44	6.42	7.90	6.83		
35	5.67	5.56	5.95	5.83	6.42	5.92	6.86	6.49	7.10	6.44	7.34	6.39	7.81	6.81		
37	5.58	5.47	5.85	5.73	6.31	5.88	6.72	6.44	6.95	6.39	7.18	6.34	7.64	6.76		
39	5.49	5.38	5.76	5.64	6.20	5.84	6.59	6.40	6.81	6.35	7.03	6.30	7.46	6.71		
41	5.39	5.28	5.67	5.56	6.09	5.80	6.45	6.32	6.66	6.30	6.87	6.25	7.29	6.67		
43	5.30	5.19	5.57	5.46	5.97	5.76	6.31	6.18	6.51	6.26	6.71	6.20	7.12	6.63		

Outdoor air temp.	Indoor air temperature					
	°CDB					
°CDB	°CWB	16	18	20	22	24
-19.8	-20	3.95	3.93	3.91	3.88	3.86
-17.7	-18	4.18	4.16	4.14	4.11	4.09
-15.7	-16	4.42	4.39	4.37	4.34	4.32
-13.5	-14	4.68	4.65	4.63	4.60	4.57
-11.5	-12	4.94	4.91	4.88	4.85	4.82
-9.5	-10	5.20	5.17	5.14	5.11	5.08
-7.5	-8	5.46	5.43	5.40	5.36	5.33
-5.5	-6	5.59	5.55	5.52	5.48	5.44
-3.0	-4	5.71	5.68	5.64	5.60	5.56
-1.0	-2	5.84	5.80	5.76	5.72	5.67
1.0	0	5.97	5.92	5.88	5.83	5.79
2.0	1	6.03	5.98	5.94	5.89	5.85
3.0	2	6.45	6.40	6.35	6.30	6.25
5.0	4	7.29	7.23	7.18	7.12	7.06
7.0	6	8.13	8.06	8.00	7.93	7.87
9.0	8	8.42	8.36	8.29	8.23	8.16
11.5	10	8.72	8.65	8.59	8.52	8.46
13.5	12	9.20	9.13	9.06	9.00	8.92
15.5	14	9.69	9.61	9.53	9.47	9.39
16.5	16	9.93	9.85	9.77	9.71	9.62

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model **FDT100VNXVG** Indoor unit FDT100VG Outdoor unit FDC100VNX
Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.33	7.81	8.84	8.54	9.10	8.46	9.38	8.39	9.94	8.94	10.50	8.76
13					8.63	7.91	9.17	8.65	9.43	8.57	9.73	8.49	10.32	9.04	10.92	8.86
15					8.93	8.02	9.49	8.76	9.77	8.68	10.09	8.60	10.71	9.15	11.34	8.96
17					9.23	8.13	9.82	8.87	10.11	8.78	10.44	8.71	11.10	9.26	11.75	9.06
19					9.44	8.21	10.04	8.94	10.34	8.86	10.68	8.78	11.35	9.32	12.01	9.12
21					9.64	8.29	10.26	9.01	10.57	8.93	10.91	8.85	11.59	9.39	12.28	9.19
23					9.64	8.29	10.28	9.02	10.59	8.94	10.94	8.86	11.63	9.40	12.32	9.20
25			8.95	8.51	9.64	8.29	10.30	9.03	10.62	8.95	10.97	8.87	11.66	9.41	12.36	9.21
27			8.91	8.49	9.64	8.29	10.33	9.04	10.64	8.96	10.96	8.87	11.59	9.39		
29			8.84	8.47	9.51	8.24	10.16	8.98	10.48	8.90	10.80	8.82	11.45	9.35		
31			8.76	8.43	9.37	8.19	10.00	8.93	10.32	8.85	10.65	8.77	11.30	9.31		
33	8.21	7.79	8.58	8.36	9.23	8.13	9.83	8.87	10.16	8.80	10.49	8.72	11.15	9.27		
35	7.77	7.60	8.31	8.14	9.09	8.08	9.66	8.81	10.00	8.75	10.34	8.68	11.01	9.23		
37	7.68	7.53	8.18	8.02	8.92	8.02	9.49	8.76	9.81	8.69	10.13	8.61	10.77	9.17		
39	7.58	7.43	8.04	7.88	8.76	7.96	9.31	8.70	9.62	8.63	9.93	8.55	10.54	9.10		
41	7.49	7.34	7.91	7.75	8.59	7.90	9.14	8.64	9.43	8.57	9.73	8.49	10.31	9.04		
43	7.40	7.25	7.78	7.62	8.42	7.84	8.96	8.58	9.24	8.51	9.52	8.43	10.08	8.98		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	7.30	7.24	7.18	7.12	7.06
-17.7	-18	7.74	7.68	7.62	7.55	7.49
-15.7	-16	8.18	8.12	8.05	7.99	7.92
-13.5	-14	8.54	8.47	8.40	8.33	8.27
-11.5	-12	8.89	8.82	8.75	8.68	8.61
-9.5	-10	9.25	9.17	9.10	9.03	8.95
-7.5	-8	9.60	9.53	9.45	9.38	9.30
-5.5	-6	10.00	9.92	9.84	9.76	9.68
-3.0	-4	10.39	10.31	10.23	10.14	10.06
-1.0	-2	10.79	10.70	10.62	10.53	10.44
1.0	0	11.18	11.09	11.01	10.91	10.82
2.0	1	11.38	11.29	11.20	11.10	11.01
3.0	2	11.38	11.29	11.20	11.10	11.01
5.0	4	11.38	11.29	11.20	11.11	11.01
7.0	6	11.37	11.29	11.20	11.11	11.01
9.0	8	11.85	11.76	11.67	11.58	11.48
11.5	10	12.32	12.23	12.15	12.05	11.95
13.5	12	12.97	12.88	12.78	12.68	12.72
15.5	14	13.62	13.52	13.41	13.32	13.49
16.5	16	13.95	13.84	13.72	13.63	13.87

PJF000Z451

Model **FDT100VSXVG** Indoor unit FDT100VG Outdoor unit FDC100VSX
Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.33	7.81	8.84	8.54	9.10	8.46	9.38	8.39	9.94	8.94	10.50	8.76
13					8.63	7.91	9.17	8.65	9.43	8.57	9.73	8.49	10.32	9.04	10.92	8.86
15					8.93	8.02	9.49	8.76	9.77	8.68	10.09	8.60	10.71	9.15	11.34	8.96
17					9.23	8.13	9.82	8.87	10.11	8.78	10.44	8.71	11.10	9.26	11.75	9.06
19					9.44	8.21	10.04	8.94	10.34	8.86	10.68	8.78	11.35	9.32	12.01	9.12
21					9.64	8.29	10.26	9.01	10.57	8.93	10.91	8.85	11.59	9.39	12.28	9.19
23					9.64	8.29	10.28	9.02	10.59	8.94	10.94	8.86	11.63	9.40	12.32	9.20
25			8.95	8.51	9.64	8.29	10.30	9.03	10.62	8.95	10.97	8.87	11.66	9.41	12.36	9.21
27			8.91	8.49	9.64	8.29	10.33	9.04	10.64	8.96	10.96	8.87	11.59	9.39		
29			8.84	8.47	9.51	8.24	10.16	8.98	10.48	8.90	10.80	8.82	11.45	9.35		
31			8.76	8.43	9.37	8.19	10.00	8.93	10.32	8.85	10.65	8.77	11.30	9.31		
33	8.21	7.79	8.58	8.36	9.23	8.13	9.83	8.87	10.16	8.80	10.49	8.72	11.15	9.27		
35	7.77	7.60	8.31	8.14	9.09	8.08	9.66	8.81	10.00	8.75	10.34	8.68	11.01	9.23		
37	7.68	7.53	8.18	8.02	8.92	8.02	9.49	8.76	9.81	8.69	10.13	8.61	10.77	9.17		
39	7.58	7.43	8.04	7.88	8.76	7.96	9.31	8.70	9.62	8.63	9.93	8.55	10.54	9.10		
41	7.49	7.34	7.91	7.75	8.59	7.90	9.14	8.64	9.43	8.57	9.73	8.49	10.31	9.04		
43	7.40	7.25	7.78	7.62	8.42	7.84	8.96	8.58	9.24	8.51	9.52	8.43	10.08	8.98		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	11.29	11.20	11.11	11.02	10.93
-17.7	-18	11.34	11.25	11.16	11.06	10.97
-15.7	-16	11.38	11.29	11.20	11.11	11.02
-13.5	-14	11.38	11.29	11.20	11.11	11.02
-11.5	-12	11.38	11.29	11.20	11.11	11.02
-9.5	-10	11.38	11.29	11.20	11.11	11.02
-7.5	-8	11.37	11.29	11.20	11.11	11.02
-5.5	-6	11.38	11.29	11.20	11.11	11.02
-3.0	-4	11.38	11.29	11.20	11.11	11.01
-1.0	-2	11.38	11.29	11.20	11.11	11.01
1.0	0	11.38	11.29	11.20	11.10	11.01
2.0	1	11.38	11.29	11.20	11.10	11.01
3.0	2	11.38	11.29	11.20	11.10	11.01
5.0	4	11.38	11.29	11.20	11.11	11.01
7.0	6	11.37	11.29	11.20	11.11	11.01
9.0	8	11.85	11.76	11.67	11.58	11.48
11.5	10	12.32	12.23	12.15	12.05	11.95
13.5	12	12.97	12.88	12.78	12.68	12.72
15.5	14	13.62	13.52	13.41	13.32	13.49
16.5	16	13.95	13.84	13.72	13.63	13.87

PJF000Z451

- Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.
- (3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

Model FDT125VNXVG Indoor unit FDT125VG Outdoor unit FDC125VNX
Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.41	8.85	11.05	9.61	11.37	9.52	11.72	9.44	12.42	10.00	13.12	9.80
13					10.79	9.00	11.46	9.75	11.79	9.67	12.16	9.59	12.91	10.15	13.65	9.94
15					11.16	9.15	11.87	9.90	12.22	9.82	12.61	9.74	13.39	10.29	14.17	10.08
17					11.54	9.30	12.27	10.05	12.64	9.96	13.05	9.89	13.87	10.44	14.69	10.23
19					11.80	9.41	12.55	10.15	12.93	10.07	13.34	9.98	14.18	10.53	15.02	10.32
21					12.05	9.51	12.83	10.26	13.21	10.17	13.64	10.09	14.49	10.63	15.34	10.41
23					12.05	9.51	12.85	10.26	13.24	10.18	13.67	10.10	14.54	10.65	15.40	10.43
25			11.19	9.72	12.05	9.51	12.88	10.28	13.27	10.19	13.71	10.11	14.58	10.66	15.45	10.44
27			11.14	9.70	12.05	9.51	12.91	10.29	13.30	10.20	13.70	10.11	14.49	10.63		
29			11.05	9.66	11.88	9.44	12.70	10.21	13.10	10.13	13.51	10.04	14.31	10.57		
31			10.95	9.62	11.71	9.37	12.49	10.13	12.90	10.06	13.31	9.97	14.13	10.52		
33	10.26	8.95	10.73	9.52	11.53	9.30	12.29	10.06	12.70	9.99	13.11	9.91	13.94	10.46		
35	9.71	8.69	10.39	9.38	11.36	9.23	12.08	9.98	12.50	9.91	12.92	9.84	13.76	10.40		
37	9.60	8.64	10.22	9.30	11.15	9.15	11.86	9.90	12.26	9.83	12.67	9.76	13.47	10.32		
39	9.48	8.59	10.05	9.23	10.94	9.06	11.64	9.82	12.03	9.75	12.41	9.67	13.18	10.23		
41	9.36	8.53	9.89	9.16	10.74	8.98	11.42	9.74	11.79	9.67	12.16	9.59	12.89	10.14		
43	9.25	8.48	9.72	9.09	10.53	8.90	11.21	9.66	11.55	9.58	11.90	9.50	12.60	10.05		

Heating Mode : HC (kW)

Outdoor air temp.	°CDB	°CWB	Indoor air temperature				
			16	18	20	22	24
-19.8	-20		9.12	9.05	8.97	8.90	8.83
-17.7	-18		9.67	9.60	9.52	9.44	9.37
-15.7	-16		10.23	10.15	10.07	9.98	9.90
-13.5	-14		10.67	10.59	10.50	10.42	10.33
-11.5	-12		11.11	11.03	10.94	10.85	10.76
-9.5	-10		11.56	11.47	11.38	11.29	11.19
-7.5	-8		12.00	11.91	11.82	11.72	11.62
-5.5	-6		12.49	12.40	12.30	12.20	12.10
-3.0	-4		12.99	12.89	12.79	12.68	12.57
-1.0	-2		13.48	13.38	13.27	13.16	13.05
1.0	0		13.98	13.87	13.76	13.64	13.52
2.0	1		14.22	14.11	14.00	13.88	13.76
3.0	2		14.22	14.11	14.00	13.88	13.76
5.0	4		14.22	14.11	14.00	13.88	13.76
7.0	6		14.22	14.11	14.00	13.88	13.77
9.0	8		14.81	14.70	14.59	14.47	14.35
11.5	10		15.41	15.29	15.18	15.06	14.94
13.5	12		16.22	16.09	15.97	15.85	15.90
15.5	14		17.03	16.90	16.76	16.65	16.86
16.5	16		17.44	17.30	17.16	17.04	17.34

PJF000Z451

Model FDT125VSXVG Indoor unit FDT125VG Outdoor unit FDC125VSX
Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.41	8.85	11.05	9.61	11.37	9.52	11.72	9.44	12.42	10.00	13.12	9.80
13					10.79	9.00	11.46	9.75	11.79	9.67	12.16	9.59	12.91	10.15	13.65	9.94
15					11.16	9.15	11.87	9.90	12.22	9.82	12.61	9.74	13.39	10.29	14.17	10.08
17					11.54	9.30	12.27	10.05	12.64	9.96	13.05	9.89	13.87	10.44	14.69	10.23
19					11.80	9.41	12.55	10.15	12.93	10.07	13.34	9.98	14.18	10.53	15.02	10.32
21					12.05	9.51	12.83	10.26	13.21	10.17	13.64	10.09	14.49	10.63	15.34	10.41
23					12.05	9.51	12.85	10.26	13.24	10.18	13.67	10.10	14.54	10.65	15.40	10.43
25			11.19	9.72	12.05	9.51	12.88	10.28	13.27	10.19	13.71	10.11	14.58	10.66	15.45	10.44
27			11.14	9.70	12.05	9.51	12.91	10.29	13.30	10.20	13.70	10.11	14.49	10.63		
29			11.05	9.66	11.88	9.44	12.70	10.21	13.10	10.13	13.51	10.04	14.31	10.57		
31			10.95	9.62	11.71	9.37	12.49	10.13	12.90	10.06	13.31	9.97	14.13	10.52		
33	10.26	8.95	10.73	9.52	11.53	9.30	12.29	10.06	12.70	9.99	13.11	9.91	13.94	10.46		
35	9.71	8.69	10.39	9.38	11.36	9.23	12.08	9.98	12.50	9.91	12.92	9.84	13.76	10.40		
37	9.60	8.64	10.22	9.30	11.15	9.15	11.86	9.90	12.26	9.83	12.67	9.76	13.47	10.32		
39	9.48	8.59	10.05	9.23	10.94	9.06	11.64	9.82	12.03	9.75	12.41	9.67	13.18	10.23		
41	9.36	8.53	9.89	9.16	10.74	8.98	11.42	9.74	11.79	9.67	12.16	9.59	12.89	10.14		
43	9.25	8.48	9.72	9.09	10.53	8.90	11.21	9.66	11.55	9.58	11.90	9.50	12.60	10.05		

Heating Mode : HC (kW)

Outdoor air temp.	°CDB	°CWB	Indoor air temperature				
			16	18	20	22	24
-19.8	-20		14.11	14.00	13.89	13.78	13.66
-17.7	-18		14.17	14.06	13.94	13.83	13.72
-15.7	-16		14.23	14.11	14.00	13.89	13.77
-13.5	-14		14.23	14.11	14.00	13.89	13.77
-11.5	-12		14.22	14.11	14.00	13.89	13.77
-9.5	-10		14.22	14.11	14.00	13.89	13.77
-7.5	-8		14.22	14.11	14.00	13.89	13.77
-5.5	-6		14.22	14.11	14.00	13.88	13.77
-3.0	-4		14.22	14.11	14.00	13.88	13.77
-1.0	-2		14.22	14.11	14.00	13.88	13.76
1.0	0		14.22	14.11	14.00	13.88	13.76
2.0	1		14.22	14.11	14.00	13.88	13.76
3.0	2		14.22	14.11	14.00	13.88	13.76
5.0	4		14.22	14.11	14.00	13.88	13.76
7.0	6		14.22	14.11	14.00	13.88	13.77
9.0	8		14.81	14.70	14.59	14.47	14.35
11.5	10		15.41	15.29	15.18	15.06	14.94
13.5	12		16.22	16.09	15.97	15.85	15.90
15.5	14		17.03	16.90	16.76	16.65	16.86
16.5	16		17.44	17.30	17.16	17.04	17.34

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model FDT140VNXVG Indoor unit FDT140VG Outdoor unit FDC140VNX
Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.66	9.38	12.38	10.12	12.73	10.03	13.13	9.95	13.91	10.49	14.70	10.27
13					12.08	9.55	12.83	10.29	13.21	10.20	13.62	10.12	14.45	10.66	15.28	10.44
15					12.50	9.72	13.29	10.47	13.68	10.37	14.12	10.29	14.99	10.83	15.87	10.61
17					12.92	9.90	13.75	10.64	14.16	10.55	14.62	10.47	15.54	11.01	16.45	10.78
19					13.21	10.02	14.06	10.76	14.48	10.67	14.95	10.58	15.88	11.12	16.82	10.88
21					13.50	10.14	14.36	10.88	14.80	10.79	15.28	10.70	16.23	11.23	17.19	10.99
23					13.50	10.14	14.40	10.89	14.83	10.80	15.31	10.71	16.28	11.25	17.25	11.01
25			12.53	10.35	13.50	10.14	14.43	10.91	14.87	10.81	15.35	10.73	16.33	11.26	17.30	11.03
27			12.48	10.33	13.50	10.14	14.46	10.92	14.90	10.82	15.34	10.72	16.23	11.23		
29			12.37	10.28	13.31	10.06	14.23	10.83	14.68	10.74	15.13	10.65	16.03	11.17		
31			12.26	10.23	13.11	9.98	13.99	10.73	14.45	10.66	14.91	10.57	15.82	11.10		
33	11.49	9.56	12.02	10.12	12.92	9.90	13.76	10.65	14.23	10.58	14.69	10.49	15.61	11.03		
35	10.88	9.26	11.63	9.94	12.72	9.81	13.53	10.56	14.00	10.49	14.47	10.41	15.41	10.97		
37	10.75	9.20	11.45	9.86	12.49	9.72	13.29	10.47	13.74	10.40	14.18	10.31	15.08	10.86		
39	10.62	9.14	11.26	9.78	12.26	9.62	13.04	10.37	13.47	10.30	13.90	10.21	14.76	10.76		
41	10.49	9.08	11.07	9.70	12.02	9.53	12.80	10.28	13.21	10.20	13.62	10.12	14.44	10.66		
43	10.35	9.01	10.89	9.62	11.79	9.43	12.55	10.19	12.94	10.11	13.33	10.02	14.11	10.55		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature (kW)					
	°CDB		°CDB			
	°CDB	°CWB	16	18	20	22
-19.8	-20	10.42	10.34	10.26	10.17	10.09
-17.7	-18	11.06	10.97	10.88	10.79	10.70
-15.7	-16	11.69	11.60	11.50	11.41	11.32
-13.5	-14	12.20	12.10	12.00	11.91	11.81
-11.5	-12	12.70	12.60	12.50	12.40	12.30
-9.5	-10	13.21	13.11	13.00	12.90	12.79
-7.5	-8	13.71	13.61	13.50	13.39	13.28
-5.5	-6	14.28	14.17	14.06	13.94	13.83
-3.0	-4	14.84	14.73	14.61	14.49	14.37
-1.0	-2	15.41	15.29	15.17	15.04	14.91
1.0	0	15.97	15.85	15.72	15.59	15.45
2.0	1	16.26	16.13	16.00	15.86	15.73
3.0	2	16.25	16.13	16.00	15.86	15.73
5.0	4	16.25	16.13	16.00	15.86	15.73
7.0	6	16.25	16.12	16.00	15.87	15.73
9.0	8	16.93	16.80	16.68	16.54	16.40
11.5	10	17.61	17.48	17.35	17.21	17.07
13.5	12	18.53	18.39	18.25	18.12	18.17
15.5	14	19.46	19.31	19.16	19.02	19.27
16.5	16	19.93	19.77	19.61	19.48	19.82

PJF000Z451

Model FDT140VSXVG Indoor unit FDT140VG Outdoor unit FDC140VSX
Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.66	9.38	12.38	10.12	12.73	10.03	13.13	9.95	13.91	10.49	14.70	10.27
13					12.08	9.55	12.83	10.29	13.21	10.20	13.62	10.12	14.45	10.66	15.28	10.44
15					12.50	9.72	13.29	10.47	13.68	10.37	14.12	10.29	14.99	10.83	15.87	10.61
17					12.92	9.90	13.75	10.64	14.16	10.55	14.62	10.47	15.54	11.01	16.45	10.78
19					13.21	10.02	14.06	10.76	14.48	10.67	14.95	10.58	15.88	11.12	16.82	10.88
21					13.50	10.14	14.36	10.88	14.80	10.79	15.28	10.70	16.23	11.23	17.19	10.99
23					13.50	10.14	14.40	10.89	14.83	10.80	15.31	10.71	16.28	11.25	17.25	11.01
25			12.53	10.35	13.50	10.14	14.43	10.91	14.87	10.81	15.35	10.73	16.33	11.26	17.30	11.03
27			12.48	10.33	13.50	10.14	14.46	10.92	14.90	10.82	15.34	10.72	16.23	11.23		
29			12.37	10.28	13.31	10.06	14.23	10.83	14.68	10.74	15.13	10.65	16.03	11.17		
31			12.26	10.23	13.11	9.98	13.99	10.73	14.45	10.66	14.91	10.57	15.82	11.10		
33	11.49	9.56	12.02	10.12	12.92	9.90	13.76	10.65	14.23	10.58	14.69	10.49	15.61	11.03		
35	10.88	9.26	11.63	9.94	12.72	9.81	13.53	10.56	14.00	10.49	14.47	10.41	15.41	10.97		
37	10.75	9.20	11.45	9.86	12.49	9.72	13.29	10.47	13.74	10.40	14.18	10.31	15.08	10.86		
39	10.62	9.14	11.26	9.78	12.26	9.62	13.04	10.37	13.47	10.30	13.90	10.21	14.76	10.76		
41	10.49	9.08	11.07	9.70	12.02	9.53	12.80	10.28	13.21	10.20	13.62	10.12	14.44	10.66		
43	10.35	9.01	10.89	9.62	11.79	9.43	12.55	10.19	12.94	10.11	13.33	10.02	14.11	10.55		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature (kW)					
	°CDB		°CDB			
	°CDB	°CWB	16	18	20	22
-19.8	-20	16.13	16.00	15.87	15.74	15.61
-17.7	-18	16.19	16.07	15.94	15.81	15.68
-15.7	-16	16.26	16.13	16.00	15.87	15.74
-13.5	-14	16.26	16.13	16.00	15.87	15.74
-11.5	-12	16.25	16.13	16.00	15.87	15.74
-9.5	-10	16.25	16.13	16.00	15.87	15.74
-7.5	-8	16.25	16.12	16.00	15.87	15.74
-5.5	-6	16.25	16.13	16.00	15.87	15.74
-3.0	-4	16.25	16.13	16.00	15.87	15.73
-1.0	-2	16.25	16.13	16.00	15.86	15.73
1.0	0	16.25	16.13	16.00	15.86	15.73
2.0	1	16.26	16.13	16.00	15.86	15.73
3.0	2	16.25	16.13	16.00	15.86	15.73
5.0	4	16.25	16.13	16.00	15.86	15.73
7.0	6	16.25	16.12	16.00	15.87	15.73
9.0	8	16.93	16.80	16.68	16.54	16.40
11.5	10	17.61	17.48	17.35	17.21	17.07
13.5	12	18.53	18.39	18.25	18.12	18.17
15.5	14	19.46	19.31	19.16	19.02	19.27
16.5	16	19.93	19.77	19.61	19.48	19.82

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

(2) Twin type

Model **FDT71VNXPVG** Indoor unit FDT40VG (2 units) Outdoor unit FDC71VNX
Cooling Mode (kW) Heating Mode : HC (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB	14°CWB	16°CWB	18°CWB	19°CWB	20°CWB	22°CWB	24°CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11				4.87	4.77	6.02	5.90	6.59	6.46	6.79	6.65	7.19	7.05	7.59	7.44	
13				5.33	5.22	6.32	6.19	6.82	6.68	7.03	6.89	7.45	7.30	7.88	7.72	
15				5.79	5.67	6.63	6.50	7.05	6.91	7.27	7.12	7.71	7.56	8.16	7.77	
17				6.26	6.13	6.94	6.80	7.27	7.12	7.51	7.36	7.97	7.81	8.44	7.82	
19				6.59	6.46	7.16	7.02	7.44	7.29	7.68	7.52	8.15	7.99	8.63	7.85	
21				6.93	6.79	7.38	7.23	7.60	7.45	7.84	7.55	8.33	8.09	8.82	7.88	
23				6.91	6.77	7.35	7.20	7.57	7.42	7.81	7.54	8.30	8.09	8.78	7.87	
25			6.46	6.33	6.89	6.75	7.32	7.17	7.54	7.39	7.78	7.54	8.26	8.08	8.74	7.86
27			6.45	6.32	6.87	6.73	7.30	7.15	7.52	7.37	7.74	7.53	8.18	8.02		
29			6.34	6.21	6.75	6.62	7.19	7.05	7.41	7.26	7.64	7.49	8.09	7.93		
31			6.23	6.11	6.64	6.51	7.08	6.94	7.31	7.16	7.54	7.39	7.99	7.83		
33	5.77	5.65	6.05	5.93	6.53	6.40	6.97	6.83	7.20	7.06	7.44	7.29	7.90	7.74		
35	5.67	5.56	5.95	5.83	6.42	6.29	6.86	6.72	7.10	6.96	7.34	7.19	7.81	7.65		
37	5.58	5.47	5.85	5.73	6.31	6.18	6.72	6.59	6.95	6.81	7.18	7.04	7.64	7.49		
39	5.49	5.38	5.76	5.64	6.20	6.08	6.59	6.46	6.81	6.67	7.03	6.89	7.46	7.31		
41	5.39	5.28	5.67	5.56	6.09	5.97	6.45	6.32	6.66	6.53	6.87	6.73	7.29	7.14		
43	5.30	5.19	5.57	5.46	5.97	5.85	6.31	6.18	6.51	6.38	6.71	6.58	7.12	6.98		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
-19.8	-20	3.95	3.93	3.91	3.88	3.86
-17.7	-18	4.18	4.16	4.14	4.11	4.09
-15.7	-16	4.42	4.39	4.37	4.34	4.32
-13.5	-14	4.68	4.65	4.63	4.60	4.57
-11.5	-12	4.94	4.91	4.88	4.85	4.82
-9.5	-10	5.20	5.17	5.14	5.11	5.08
-7.5	-8	5.46	5.43	5.40	5.36	5.33
-5.5	-6	5.59	5.55	5.52	5.48	5.44
-3.0	-4	5.71	5.68	5.64	5.60	5.56
-1.0	-2	5.84	5.80	5.76	5.72	5.67
1.0	0	5.97	5.92	5.88	5.83	5.79
2.0	1	6.03	5.98	5.94	5.89	5.85
3.0	2	6.45	6.40	6.35	6.30	6.25
5.0	4	7.29	7.23	7.18	7.12	7.06
7.0	6	8.13	8.06	8.00	7.93	7.87
9.0	8	8.42	8.36	8.29	8.23	8.16
11.5	10	8.72	8.65	8.59	8.52	8.46
13.5	12	9.20	9.13	9.06	9.00	8.92
15.5	14	9.69	9.61	9.53	9.47	9.39
16.5	16	9.93	9.85	9.77	9.71	9.62

PJF000Z451

Model **FDT100VNXPVG** Indoor unit FDT50VG (2 units) Outdoor unit FDC100VNX
Cooling Mode (kW) Heating Mode : HC (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB	14°CWB	16°CWB	18°CWB	19°CWB	20°CWB	22°CWB	24°CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11				8.33	7.87	8.84	8.64	9.10	8.54	9.38	8.45	9.94	9.01	10.50	8.78	
13				8.63	7.97	9.17	8.73	9.43	8.63	9.73	8.53	10.32	9.10	10.92	8.86	
15				8.93	8.07	9.49	8.83	9.77	8.72	10.09	8.63	10.71	9.18	11.34	8.94	
17				9.23	8.17	9.82	8.92	10.11	8.82	10.44	8.72	11.10	9.27	11.75	9.03	
19				9.44	8.24	10.04	8.99	10.34	8.88	10.68	8.78	11.35	9.33	12.01	9.08	
21				9.64	8.30	10.26	9.05	10.57	8.95	10.91	8.84	11.59	9.39	12.28	9.13	
23				9.64	8.30	10.28	9.06	10.59	8.95	10.94	8.85	11.63	9.40	12.32	9.14	
25			8.95	8.58	9.64	8.30	10.30	9.07	10.62	8.96	10.97	8.86	11.66	9.40	12.36	9.15
27			8.91	8.57	9.64	8.30	10.33	9.07	10.64	8.97	10.96	8.86	11.59	9.39		
29			8.84	8.54	9.51	8.26	10.16	9.02	10.48	8.92	10.80	8.81	11.45	9.35		
31			8.76	8.51	9.37	8.21	10.00	8.98	10.32	8.88	10.65	8.77	11.30	9.32		
33	8.21	7.85	8.58	8.41	9.23	8.17	9.83	8.93	10.16	8.83	10.49	8.73	11.15	9.28		
35	7.77	7.61	8.31	8.14	9.09	8.12	9.66	8.88	10.00	8.79	10.34	8.69	11.01	9.25		
37	7.68	7.53	8.18	8.02	8.92	8.06	9.49	8.83	9.81	8.74	10.13	8.64	10.77	9.20		
39	7.58	7.43	8.04	7.88	8.76	8.01	9.31	8.77	9.62	8.68	9.93	8.59	10.54	9.15		
41	7.49	7.34	7.91	7.75	8.59	7.96	9.14	8.72	9.43	8.63	9.73	8.53	10.31	9.09		
43	7.40	7.25	7.78	7.62	8.42	7.90	8.96	8.67	9.24	8.58	9.52	8.48	10.08	9.04		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
-19.8	-20	7.30	7.24	7.18	7.12	7.06
-17.7	-18	7.74	7.68	7.62	7.55	7.49
-15.7	-16	8.18	8.12	8.05	7.99	7.92
-13.5	-14	8.54	8.47	8.40	8.33	8.27
-11.5	-12	8.89	8.82	8.75	8.68	8.61
-9.5	-10	9.25	9.17	9.10	9.03	8.95
-7.5	-8	9.60	9.53	9.45	9.38	9.30
-5.5	-6	10.00	9.92	9.84	9.76	9.68
-3.0	-4	10.39	10.31	10.23	10.14	10.06
-1.0	-2	10.79	10.70	10.62	10.53	10.44
1.0	0	11.18	11.09	11.01	10.91	10.82
2.0	1	11.38	11.29	11.20	11.10	11.01
3.0	2	11.38	11.29	11.20	11.10	11.01
5.0	4	11.38	11.29	11.20	11.11	11.01
7.0	6	11.37	11.29	11.20	11.11	11.01
9.0	8	11.85	11.76	11.67	11.58	11.48
11.5	10	12.32	12.23	12.15	12.05	11.95
13.5	12	12.97	12.88	12.78	12.68	12.72
15.5	14	13.62	13.52	13.41	13.32	13.49
16.5	16	13.95	13.84	13.72	13.63	13.87

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model FDT100VSPVGV Indoor unit FDT50VG (2 units) Outdoor unit FDC100VSX
Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.33	7.87	8.84	8.64	9.10	8.54	9.38	8.45	9.94	9.01	10.50	8.78
13					8.63	7.97	9.17	8.73	9.43	8.63	9.73	8.53	10.32	9.10	10.92	8.86
15					8.93	8.07	9.49	8.83	9.77	8.72	10.09	8.63	10.71	9.18	11.34	8.94
17					9.23	8.17	9.82	8.92	10.11	8.82	10.44	8.72	11.10	9.27	11.75	9.03
19					9.44	8.24	10.04	8.99	10.34	8.88	10.68	8.78	11.35	9.33	12.01	9.08
21					9.64	8.30	10.26	9.05	10.57	8.95	10.91	8.84	11.59	9.39	12.28	9.13
23					9.64	8.30	10.28	9.06	10.59	8.95	10.94	8.85	11.63	9.40	12.32	9.14
25			8.95	8.58	9.64	8.30	10.30	9.07	10.62	8.96	10.97	8.86	11.66	9.40	12.36	9.15
27			8.91	8.57	9.64	8.30	10.33	9.07	10.64	8.97	10.96	8.86	11.59	9.39		
29			8.84	8.54	9.51	8.26	10.16	9.02	10.48	8.92	10.80	8.81	11.45	9.35		
31			8.76	8.51	9.37	8.21	10.00	8.98	10.32	8.88	10.65	8.77	11.30	9.32		
33	8.21	7.85	8.58	8.41	9.23	8.17	9.83	8.93	10.16	8.83	10.49	8.73	11.15	9.28		
35	7.77	7.61	8.31	8.14	9.09	8.12	9.66	8.88	10.00	8.79	10.34	8.69	11.01	9.25		
37	7.68	7.53	8.18	8.02	8.92	8.06	9.49	8.83	9.81	8.74	10.13	8.64	10.77	9.20		
39	7.58	7.43	8.04	7.88	8.76	8.01	9.31	8.77	9.62	8.68	9.93	8.59	10.54	9.15		
41	7.49	7.34	7.91	7.75	8.59	7.96	9.14	8.72	9.43	8.63	9.73	8.53	10.31	9.09		
43	7.40	7.25	7.78	7.62	8.42	7.90	8.96	8.67	9.24	8.58	9.52	8.48	10.08	9.04		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature (kW)					
	°CDB		°CWB		°CDB	
°CDB	°CWB	16	18	20	22	24
-19.8	-20	11.29	11.20	11.11	11.02	10.93
-17.7	-18	11.34	11.25	11.16	11.06	10.97
-15.7	-16	11.38	11.29	11.20	11.11	11.02
-13.5	-14	11.38	11.29	11.20	11.11	11.02
-11.5	-12	11.38	11.29	11.20	11.11	11.02
-9.5	-10	11.38	11.29	11.20	11.11	11.02
-7.5	-8	11.37	11.29	11.20	11.11	11.02
-5.5	-6	11.38	11.29	11.20	11.11	11.02
-3.0	-4	11.38	11.29	11.20	11.11	11.01
-1.0	-2	11.38	11.29	11.20	11.11	11.01
1.0	0	11.38	11.29	11.20	11.10	11.01
2.0	1	11.38	11.29	11.20	11.10	11.01
3.0	2	11.38	11.29	11.20	11.10	11.01
5.0	4	11.38	11.29	11.20	11.11	11.01
7.0	6	11.37	11.29	11.20	11.11	11.01
9.0	8	11.85	11.76	11.67	11.58	11.48
11.5	10	12.32	12.23	12.15	12.05	11.95
13.5	12	12.97	12.88	12.78	12.68	12.72
15.5	14	13.62	13.52	13.41	13.32	13.49
16.5	16	13.95	13.84	13.72	13.63	13.87

PJF000Z451

Model FDT125VNXVGV Indoor unit FDT60VG (2 units) Outdoor unit FDC125VNX
Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.41	10.20	11.05	10.83	11.37	11.14	11.72	11.14	12.42	11.91	13.12	11.65
13					10.79	10.46	11.46	11.23	11.79	11.37	12.16	11.26	12.91	12.03	13.65	11.77
15					11.16	10.58	11.87	11.61	12.22	11.49	12.61	11.38	13.39	12.15	14.17	11.88
17					11.54	10.71	12.27	11.73	12.64	11.61	13.05	11.50	13.87	12.27	14.69	11.99
19					11.80	10.80	12.55	11.82	12.93	11.70	13.34	11.59	14.18	12.34	15.02	12.06
21					12.05	10.89	12.83	11.90	13.21	11.78	13.64	11.67	14.49	12.42	15.34	12.13
23					12.05	10.89	12.85	11.91	13.24	11.79	13.67	11.68	14.54	12.43	15.40	12.15
25			11.19	10.97	12.05	10.89	12.88	11.92	13.27	11.80	13.71	11.69	14.58	12.44	15.45	12.16
27			11.14	10.92	12.05	10.89	12.91	11.93	13.30	11.81	13.70	11.69	14.49	12.42		
29			11.05	10.83	11.88	10.83	12.70	11.86	13.10	11.75	13.51	11.63	14.31	12.38		
31			10.95	10.73	11.71	10.77	12.49	11.80	12.90	11.69	13.31	11.58	14.13	12.33		
33	10.26	10.05	10.73	10.52	11.53	10.71	12.29	11.74	12.70	11.63	13.11	11.52	13.94	12.28		
35	9.71	9.52	10.39	10.18	11.36	10.65	12.08	11.67	12.50	11.57	12.92	11.47	13.76	12.24		
37	9.60	9.41	10.22	10.02	11.15	10.58	11.86	11.60	12.26	11.50	12.67	11.40	13.47	12.17		
39	9.48	9.29	10.05	9.85	10.94	10.51	11.64	11.41	12.03	11.44	12.41	11.33	13.18	12.10		
41	9.36	9.17	9.89	9.69	10.74	10.44	11.42	11.19	11.79	11.37	12.16	11.26	12.89	12.03		
43	9.25	9.07	9.72	9.53	10.53	10.32	11.21	10.99	11.55	11.30	11.90	11.19	12.60	11.95		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature (kW)					
	°CDB		°CWB		°CDB	
°CDB	°CWB	16	18	20	22	24
-19.8	-20	9.12	9.05	8.97	8.90	8.83
-17.7	-18	9.67	9.60	9.52	9.44	9.37
-15.7	-16	10.23	10.15	10.07	9.98	9.90
-13.5	-14	10.67	10.59	10.50	10.42	10.33
-11.5	-12	11.11	11.03	10.94	10.85	10.76
-9.5	-10	11.56	11.47	11.38	11.29	11.19
-7.5	-8	12.00	11.91	11.82	11.72	11.62
-5.5	-6	12.49	12.40	12.30	12.20	12.10
-3.0	-4	12.99	12.89	12.79	12.68	12.57
-1.0	-2	13.48	13.38	13.27	13.16	13.05
1.0	0	13.98	13.87	13.76	13.64	13.52
2.0	1	14.22	14.11	14.00	13.88	13.76
3.0	2	14.22	14.11	14.00	13.88	13.76
5.0	4	14.22	14.11	14.00	13.88	13.76
7.0	6	14.22	14.11	14.00	13.88	13.77
9.0	8	14.81	14.70	14.59	14.47	14.35
11.5	10	15.41	15.29	15.18	15.06	14.94
13.5	12	16.22	16.09	15.97	15.85	15.90
15.5	14	17.03	16.90	16.76	16.65	16.86
16.5	16	17.44	17.30	17.16	17.04	17.34

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model FDT125VSPVG Indoor unit FDT60VG (2 units) Outdoor unit FDC125VSX
 Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.41	10.20	11.05	10.83	11.37	11.14	11.72	11.14	12.42	11.91	13.12	11.65
13					10.79	10.46	11.46	11.23	11.79	11.37	12.16	11.26	12.91	12.03	13.65	11.77
15					11.16	10.58	11.87	11.61	12.22	11.49	12.61	11.38	13.39	12.15	14.17	11.88
17					11.54	10.71	12.27	11.73	12.64	11.61	13.05	11.50	13.87	12.27	14.69	11.99
19					11.80	10.80	12.55	11.82	12.93	11.70	13.34	11.59	14.18	12.34	15.02	12.06
21					12.05	10.89	12.83	11.90	13.21	11.78	13.64	11.67	14.49	12.42	15.34	12.13
23					12.05	10.89	12.85	11.91	13.24	11.79	13.67	11.68	14.54	12.43	15.40	12.15
25			11.19	10.97	12.05	10.89	12.88	11.92	13.27	11.80	13.71	11.69	14.58	12.44	15.45	12.16
27			11.14	10.92	12.05	10.89	12.91	11.93	13.30	11.81	13.70	11.69	14.49	12.42		
29			11.05	10.83	11.88	10.83	12.70	11.86	13.10	11.75	13.51	11.63	14.31	12.38		
31			10.95	10.73	11.71	10.77	12.49	11.80	12.90	11.69	13.31	11.58	14.13	12.33		
33	10.26	10.05	10.73	10.52	11.53	10.71	12.29	11.74	12.70	11.63	13.11	11.52	13.94	12.28		
35	9.71	9.52	10.39	10.18	11.36	10.65	12.08	11.67	12.50	11.57	12.92	11.47	13.76	12.24		
37	9.60	9.41	10.22	10.02	11.15	10.58	11.86	11.60	12.26	11.50	12.67	11.40	13.47	12.17		
39	9.48	9.29	10.05	9.85	10.94	10.51	11.64	11.41	12.03	11.44	12.41	11.33	13.18	12.10		
41	9.36	9.17	9.89	9.69	10.74	10.44	11.42	11.19	11.79	11.37	12.16	11.26	12.89	12.03		
43	9.25	9.07	9.72	9.53	10.53	10.32	11.21	10.99	11.55	11.30	11.90	11.19	12.60	11.95		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature (kW)					
	°CDB		°CDB			
	°CDB	°CWB	16	18	20	22
-19.8	-20	14.11	14.00	13.89	13.78	13.66
-17.7	-18	14.17	14.06	13.94	13.83	13.72
-15.7	-16	14.23	14.11	14.00	13.89	13.77
-13.5	-14	14.23	14.11	14.00	13.89	13.77
-11.5	-12	14.22	14.11	14.00	13.89	13.77
-9.5	-10	14.22	14.11	14.00	13.89	13.77
-7.5	-8	14.22	14.11	14.00	13.89	13.77
-5.5	-6	14.22	14.11	14.00	13.88	13.77
-3.0	-4	14.22	14.11	14.00	13.88	13.77
-1.0	-2	14.22	14.11	14.00	13.88	13.76
1.0	0	14.22	14.11	14.00	13.88	13.76
2.0	1	14.22	14.11	14.00	13.88	13.76
3.0	2	14.22	14.11	14.00	13.88	13.76
5.0	4	14.22	14.11	14.00	13.88	13.76
7.0	6	14.22	14.11	14.00	13.88	13.77
9.0	8	14.81	14.70	14.59	14.47	14.35
11.5	10	15.41	15.29	15.18	15.06	14.94
13.5	12	16.22	16.09	15.97	15.85	15.90
15.5	14	17.03	16.90	16.76	16.65	16.86
16.5	16	17.44	17.30	17.16	17.04	17.34

PJF000Z451

Model FDT140VNXPVG Indoor unit FDT71VG (2 units) Outdoor unit FDC140VNX
 Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.66	11.43	12.38	12.13	12.73	12.43	13.13	12.32	13.91	13.17	14.70	12.90
13					12.08	11.57	12.83	12.57	13.21	12.58	13.62	12.46	14.45	13.31	15.28	13.03
15					12.50	11.72	13.29	12.84	13.68	12.72	14.12	12.61	14.99	13.45	15.87	13.17
17					12.92	11.87	13.75	12.99	14.16	12.87	14.62	12.76	15.54	13.59	16.45	13.31
19					13.21	11.98	14.06	13.09	14.48	12.97	14.95	12.85	15.88	13.68	16.82	13.39
21					13.50	12.08	14.36	13.19	14.80	13.07	15.28	12.95	16.23	13.77	17.19	13.48
23					13.50	12.08	14.40	13.20	14.83	13.08	15.31	12.96	16.28	13.79	17.25	13.50
25			12.53	12.28	13.50	12.08	14.43	13.21	14.87	13.09	15.35	12.97	16.33	13.80	17.30	13.51
27			12.48	12.23	13.50	12.08	14.46	13.22	14.90	13.10	15.34	12.97	16.23	13.77		
29			12.37	12.12	13.31	12.01	14.23	13.14	14.68	13.03	15.13	12.91	16.03	13.72		
31			12.26	12.01	13.11	11.94	13.99	13.07	14.45	12.96	14.91	12.84	15.82	13.67		
33	11.49	11.26	12.02	11.78	12.92	11.87	13.76	12.99	14.23	12.89	14.69	12.78	15.61	13.61		
35	10.88	10.66	11.63	11.40	12.72	11.80	13.53	12.92	14.00	12.82	14.47	12.71	15.41	13.56		
37	10.75	10.54	11.45	11.22	12.49	11.72	13.29	12.84	13.74	12.74	14.18	12.63	15.08	13.47		
39	10.62	10.41	11.26	11.03	12.26	11.64	13.04	12.76	13.47	12.66	13.90	12.55	14.76	13.39		
41	10.49	10.28	11.07	10.85	12.02	11.55	12.80	12.54	13.21	12.58	13.62	12.46	14.44	13.30		
43	10.35	10.14	10.89	10.67	11.79	11.47	12.55	12.30	12.94	12.49	13.33	12.38	14.11	13.22		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature (kW)					
	°CDB		°CDB			
	°CDB	°CWB	16	18	20	22
-19.8	-20	10.42	10.34	10.26	10.17	10.09
-17.7	-18	11.06	10.97	10.88	10.79	10.70
-15.7	-16	11.69	11.60	11.50	11.41	11.32
-13.5	-14	12.20	12.10	12.00	11.91	11.81
-11.5	-12	12.70	12.60	12.50	12.40	12.30
-9.5	-10	13.21	13.11	13.00	12.90	12.79
-7.5	-8	13.71	13.61	13.50	13.39	13.28
-5.5	-6	14.28	14.17	14.06	13.94	13.83
-3.0	-4	14.84	14.73	14.61	14.49	14.37
-1.0	-2	15.41	15.29	15.17	15.04	14.91
1.0	0	15.97	15.85	15.72	15.59	15.45
2.0	1	16.26	16.13	16.00	15.86	15.73
3.0	2	16.25	16.13	16.00	15.86	15.73
5.0	4	16.25	16.13	16.00	15.86	15.73
7.0	6	16.25	16.12	16.00	15.87	15.73
9.0	8	16.93	16.80	16.68	16.54	16.40
11.5	10	17.61	17.48	17.35	17.21	17.07
13.5	12	18.53	18.39	18.25	18.12	18.17
15.5	14	19.46	19.31	19.16	19.02	19.27
16.5	16	19.93	19.77	19.61	19.48	19.82

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model FDT140VSPVG Indoor unit FDT71VG (2 units) Outdoor unit FDC140VSX
 Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.66	11.43	12.38	12.13	12.73	12.43	13.13	12.32	13.91	13.17	14.70	12.90
13					12.08	11.57	12.83	12.57	13.21	12.58	13.62	12.46	14.45	13.31	15.28	13.03
15					12.50	11.72	13.29	12.84	13.68	12.72	14.12	12.61	14.99	13.45	15.87	13.17
17					12.92	11.87	13.75	12.99	14.16	12.87	14.62	12.76	15.54	13.59	16.45	13.31
19					13.21	11.98	14.06	13.09	14.48	12.97	14.95	12.85	15.88	13.68	16.82	13.39
21					13.50	12.08	14.36	13.19	14.80	13.07	15.28	12.95	16.23	13.77	17.19	13.48
23					13.50	12.08	14.40	13.20	14.83	13.08	15.31	12.96	16.28	13.79	17.25	13.50
25			12.53	12.28	13.50	12.08	14.43	13.21	14.87	13.09	15.35	12.97	16.33	13.80	17.30	13.51
27			12.48	12.23	13.50	12.08	14.46	13.22	14.90	13.10	15.34	12.97	16.23	13.77		
29			12.37	12.12	13.31	12.01	14.23	13.14	14.68	13.03	15.13	12.91	16.03	13.72		
31			12.26	12.01	13.11	11.94	13.99	13.07	14.45	12.96	14.91	12.84	15.82	13.67		
33	11.49	11.26	12.02	11.78	12.92	11.87	13.76	12.99	14.23	12.89	14.69	12.78	15.61	13.61		
35	10.88	10.66	11.63	11.40	12.72	11.80	13.53	12.92	14.00	12.82	14.47	12.71	15.41	13.56		
37	10.75	10.54	11.45	11.22	12.49	11.72	13.29	12.84	13.74	12.74	14.18	12.63	15.08	13.47		
39	10.62	10.41	11.26	11.03	12.26	11.64	13.04	12.76	13.47	12.66	13.90	12.55	14.76	13.39		
41	10.49	10.28	11.07	10.85	12.02	11.55	12.80	12.54	13.21	12.58	13.62	12.46	14.44	13.30		
43	10.35	10.14	10.89	10.67	11.79	11.47	12.55	12.30	12.94	12.49	13.33	12.38	14.11	13.22		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature (kW)					
	°CDB		°CDB			
	°CDB	°CWB	16	18	20	22
-19.8	-20	16.13	16.00	15.87	15.74	15.61
-17.7	-18	16.19	16.07	15.94	15.81	15.68
-15.7	-16	16.26	16.13	16.00	15.87	15.74
-13.5	-14	16.26	16.13	16.00	15.87	15.74
-11.5	-12	16.25	16.13	16.00	15.87	15.74
-9.5	-10	16.25	16.13	16.00	15.87	15.74
-7.5	-8	16.25	16.12	16.00	15.87	15.74
-5.5	-6	16.25	16.13	16.00	15.87	15.74
-3.0	-4	16.25	16.13	16.00	15.87	15.73
-1.0	-2	16.25	16.13	16.00	15.86	15.73
1.0	0	16.25	16.13	16.00	15.86	15.73
2.0	1	16.26	16.13	16.00	15.86	15.73
3.0	2	16.25	16.13	16.00	15.86	15.73
5.0	4	16.25	16.13	16.00	15.86	15.73
7.0	6	16.25	16.12	16.00	15.87	15.73
9.0	8	16.93	16.80	16.68	16.54	16.40
11.5	10	17.61	17.48	17.35	17.21	17.07
13.5	12	18.53	18.39	18.25	18.12	18.17
15.5	14	19.46	19.31	19.16	19.02	19.27
16.5	16	19.93	19.77	19.61	19.48	19.82

PJF000Z451

(3) Triple type

Model FDT140VNXTVG Indoor unit FDT50VG (3 units) Outdoor unit FDC140VNX
 Cooling Mode

Outdoor air temp.	Indoor air temperature (kW)															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.66	11.43	12.38	12.13	12.73	12.48	13.13	12.43	13.91	13.30	14.70	12.98
13					12.08	11.68	12.83	12.57	13.21	12.70	13.62	12.56	14.45	13.42	15.28	13.08
15					12.50	11.81	13.29	12.97	13.68	12.82	14.12	12.68	14.99	13.53	15.87	13.20
17					12.92	11.95	13.75	13.10	14.16	12.95	14.62	12.81	15.54	13.66	16.45	13.31
19					13.21	12.04	14.06	13.19	14.48	13.04	14.95	12.89	15.88	13.73	16.82	13.38
21					13.50	12.14	14.36	13.28	14.80	13.13	15.28	12.98	16.23	13.81	17.19	13.45
23					13.50	12.14	14.40	13.29	14.83	13.13	15.31	12.99	16.28	13.82	17.25	13.46
25			12.53	12.28	13.50	12.14	14.43	13.30	14.87	13.15	15.35	13.00	16.33	13.84	17.30	13.47
27			12.48	12.23	13.50	12.14	14.46	13.31	14.90	13.15	15.34	12.99	16.23	13.81		
29			12.37	12.12	13.31	12.07	14.23	13.24	14.68	13.09	15.13	12.94	16.03	13.77		
31			12.26	12.01	13.11	12.01	13.99	13.17	14.45	13.03	14.91	12.88	15.82	13.72		
33	11.49	11.26	12.02	11.78	12.92	11.95	13.76	13.10	14.23	12.97	14.69	12.83	15.61	13.67		
35	10.88	10.66	11.63	11.40	12.72	11.88	13.53	13.04	14.00	12.91	14.47	12.77	15.41	13.63		
37	10.75	10.54	11.45	11.22	12.49	11.81	13.29	12.97	13.74	12.84	14.18	12.70	15.08	13.55		
39	10.62	10.41	11.26	11.03	12.26	11.74	13.04	12.78	13.47	12.77	13.90	12.63	14.76	13.48		
41	10.49	10.28	11.07	10.85	12.02	11.66	12.80	12.54	13.21	12.70	13.62	12.56	14.44	13.41		
43	10.35	10.14	10.89	10.67	11.79	11.55	12.55	12.30	12.94	12.62	13.33	12.48	14.11	13.34		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature (kW)					
	°CDB		°CDB			
	°CDB	°CWB	16	18	20	22
-19.8	-20	10.42	10.34	10.26	10.17	10.09
-17.7	-18	11.06	10.97	10.88	10.79	10.70
-15.7	-16	11.69	11.60	11.50	11.41	11.32
-13.5	-14	12.20	12.10	12.00	11.91	11.81
-11.5	-12	12.70	12.60	12.50	12.40	12.30
-9.5	-10	13.21	13.11	13.00	12.90	12.79
-7.5	-8	13.71	13.61	13.50	13.39	13.28
-5.5	-6	14.28	14.17	14.06	13.94	13.83
-3.0	-4	14.84	14.73	14.61	14.49	14.37
-1.0	-2	15.41	15.29	15.17	15.04	14.91
1.0	0	15.97	15.85	15.72	15.59	15.45
2.0	1	16.26	16.13	16.00	15.86	15.73
3.0	2	16.25	16.13	16.00	15.86	15.73
5.0	4	16.25	16.13	16.00	15.86	15.73
7.0	6	16.25	16.12	16.00	15.87	15.73
9.0	8	16.93	16.80	16.68	16.54	16.40
11.5	10	17.61	17.48	17.35	17.21	17.07
13.5	12	18.53	18.39	18.25	18.12	18.17
15.5	14	19.46	19.31	19.16	19.02	19.27
16.5	16	19.93	19.77	19.61	19.48	19.82

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed. (Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length : 7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model FDT140VSXTVG Indoor unit FDT50VG (3 units) Outdoor unit FDC140VSX
 Cooling Mode

(kW) Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.66	11.43	12.38	12.13	12.73	12.48	13.13	12.43	13.91	13.30	14.70	12.98
13					12.08	11.68	12.83	12.57	13.21	12.70	13.62	12.56	14.45	13.42	15.28	13.08
15					12.50	11.81	13.29	12.97	13.68	12.82	14.12	12.68	14.99	13.53	15.87	13.20
17					12.92	11.95	13.75	13.10	14.16	12.95	14.62	12.81	15.54	13.66	16.45	13.31
19					13.21	12.04	14.06	13.19	14.48	13.04	14.95	12.89	15.88	13.73	16.82	13.38
21					13.50	12.14	14.36	13.28	14.80	13.13	15.28	12.98	16.23	13.81	17.19	13.45
23					13.50	12.14	14.40	13.29	14.83	13.13	15.31	12.99	16.28	13.82	17.25	13.46
25			12.53	12.28	13.50	12.14	14.43	13.30	14.87	13.15	15.35	13.00	16.33	13.84	17.30	13.47
27			12.48	12.23	13.50	12.14	14.46	13.31	14.90	13.15	15.34	12.99	16.23	13.81		
29			12.37	12.12	13.31	12.07	14.23	13.24	14.68	13.09	15.13	12.94	16.03	13.77		
31			12.26	12.01	13.11	12.01	13.99	13.17	14.45	13.03	14.91	12.88	15.82	13.72		
33	11.49	11.26	12.02	11.78	12.92	11.95	13.76	13.10	14.23	12.97	14.69	12.83	15.61	13.67		
35	10.88	10.66	11.63	11.40	12.72	11.88	13.53	13.04	14.00	12.91	14.47	12.77	15.41	13.63		
37	10.75	10.54	11.45	11.22	12.49	11.81	13.29	12.97	13.74	12.84	14.18	12.70	15.08	13.55		
39	10.62	10.41	11.26	11.03	12.26	11.74	13.04	12.78	13.47	12.77	13.90	12.63	14.76	13.48		
41	10.49	10.28	11.07	10.85	12.02	11.66	12.80	12.54	13.21	12.70	13.62	12.56	14.44	13.41		
43	10.35	10.14	10.89	10.67	11.79	11.55	12.55	12.30	12.94	12.62	13.33	12.48	14.11	13.34		

Outdoor air temp.	°CDB	°CWB	Indoor air temperature				
			°CDB				
			16	18	20	22	24
-19.8	-20		16.13	16.00	15.87	15.74	15.61
-17.7	-18		16.19	16.07	15.94	15.81	15.68
-15.7	-16		16.26	16.13	16.00	15.87	15.74
-13.5	-14		16.26	16.13	16.00	15.87	15.74
-11.5	-12		16.25	16.13	16.00	15.87	15.74
-9.5	-10		16.25	16.13	16.00	15.87	15.74
-7.5	-8		16.25	16.12	16.00	15.87	15.74
-5.5	-6		16.25	16.13	16.00	15.87	15.74
-3.0	-4		16.25	16.13	16.00	15.87	15.73
-1.0	-2		16.25	16.13	16.00	15.86	15.73
1.0	0		16.25	16.13	16.00	15.86	15.73
2.0	1		16.26	16.13	16.00	15.86	15.73
3.0	2		16.25	16.13	16.00	15.86	15.73
5.0	4		16.25	16.13	16.00	15.86	15.73
7.0	6		16.25	16.12	16.00	15.87	15.73
9.0	8		16.93	16.80	16.68	16.54	16.40
11.5	10		17.61	17.48	17.35	17.21	17.07
13.5	12		18.53	18.39	18.25	18.12	18.17
15.5	14		19.46	19.31	19.16	19.02	19.27
16.5	16		19.93	19.77	19.61	19.48	19.82

- Note(1) These data show average statuses.
 Depending on the system control, there may be ranges where the operation is not conducted continuously.
 These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
 Corresponding refrigerant piping length :7.5m
 Level difference of Zero.
- (3) Symbols are as follows.
 TC : Total cooling capacity (kW)
 SHC : Sensible heat capacity (kW)
 HC : Heating capacity (kW)


PJF000Z451

[References data]


Capacity variation against outdoor and indoor temperature at the maximum compressor speed capacity compensation coefficient shows the ratio to nominal capacity.

(I) Models SRC40, 50, 60ZSX-S

① Cooling

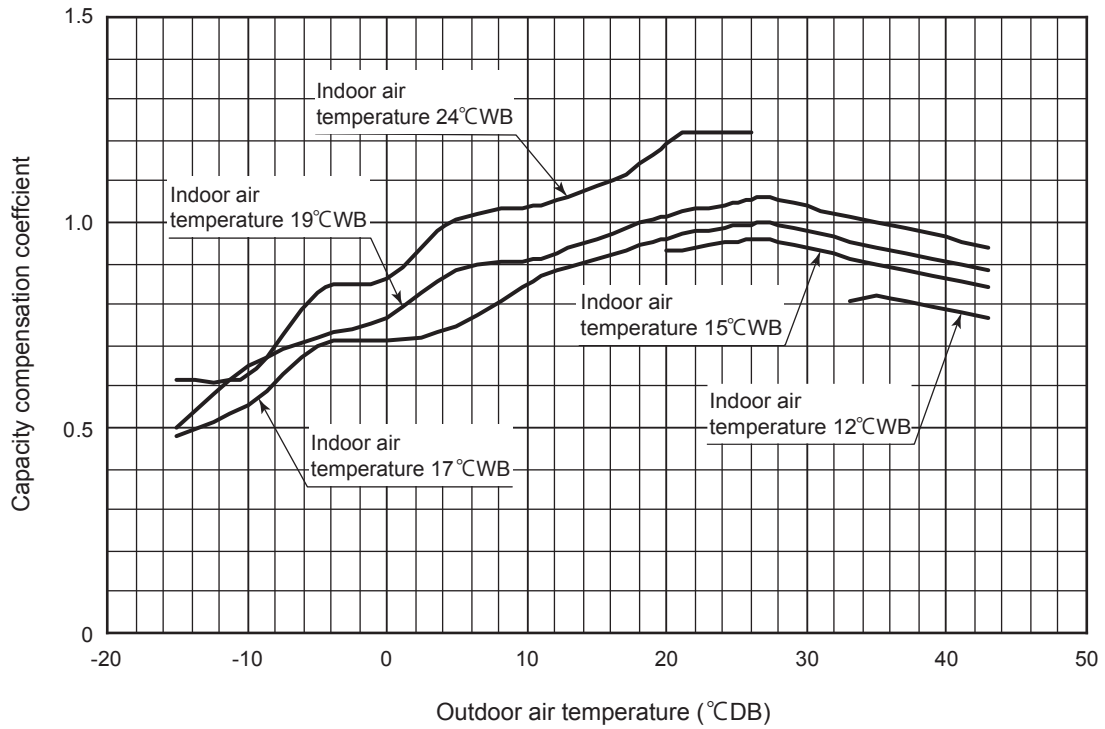


② Heating

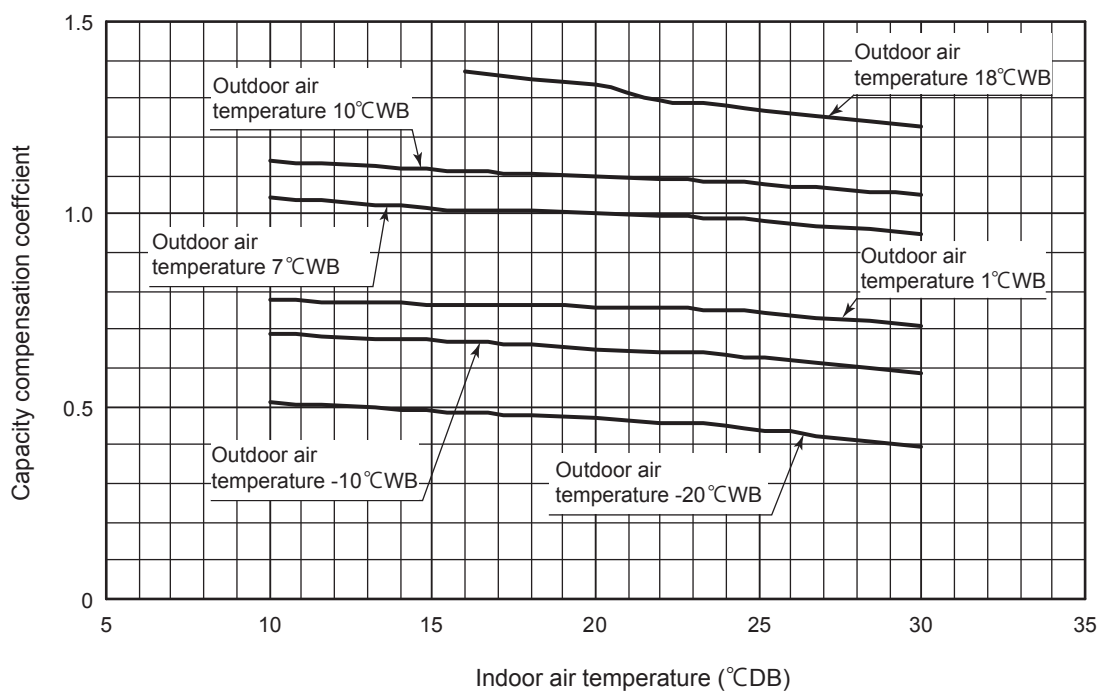


(II) Model FDC71VNX

① Cooling

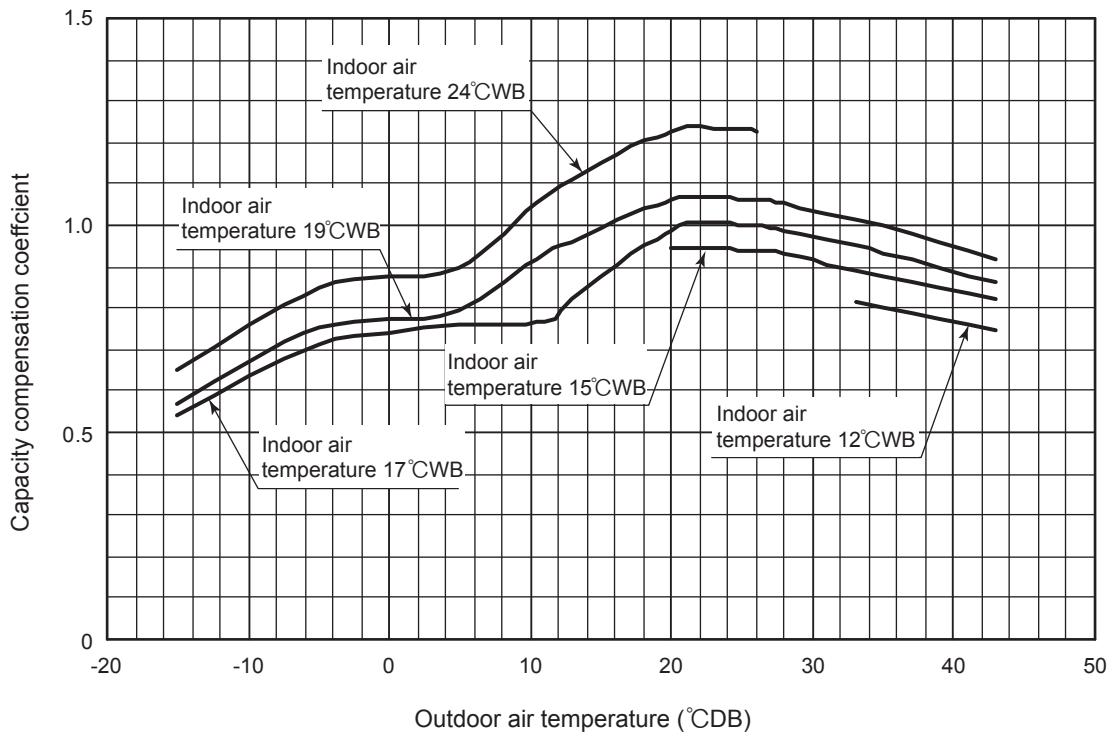


② Heating

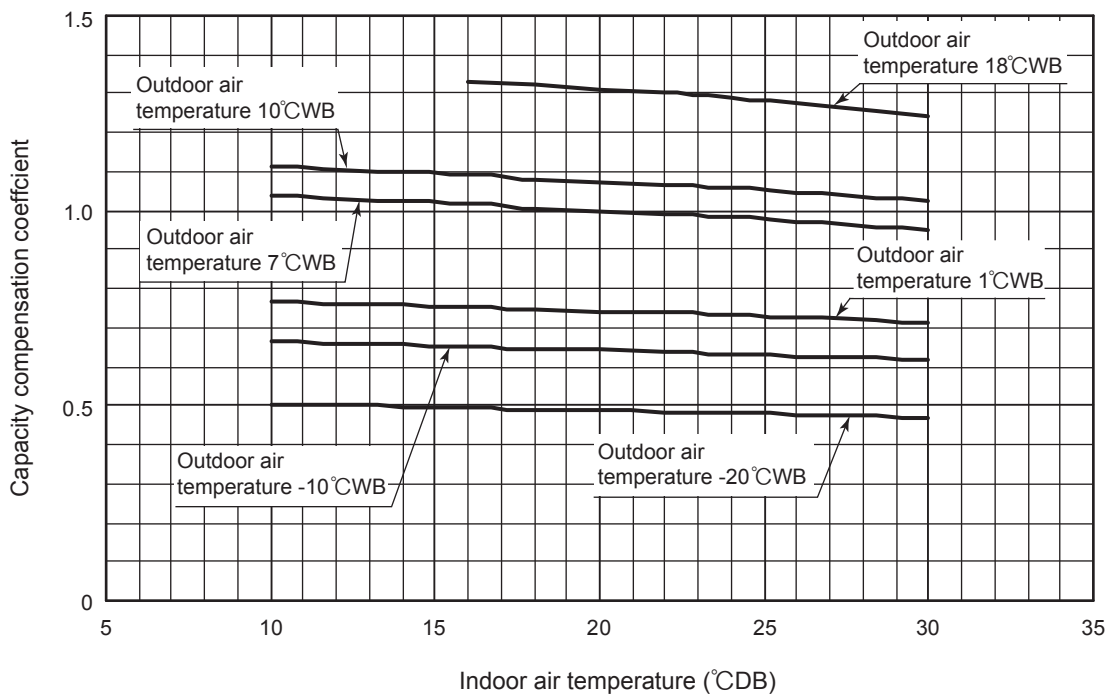


Ⅲ Models FDC100, 125, 140VNX, 100, 125, 140VSX

① Cooling

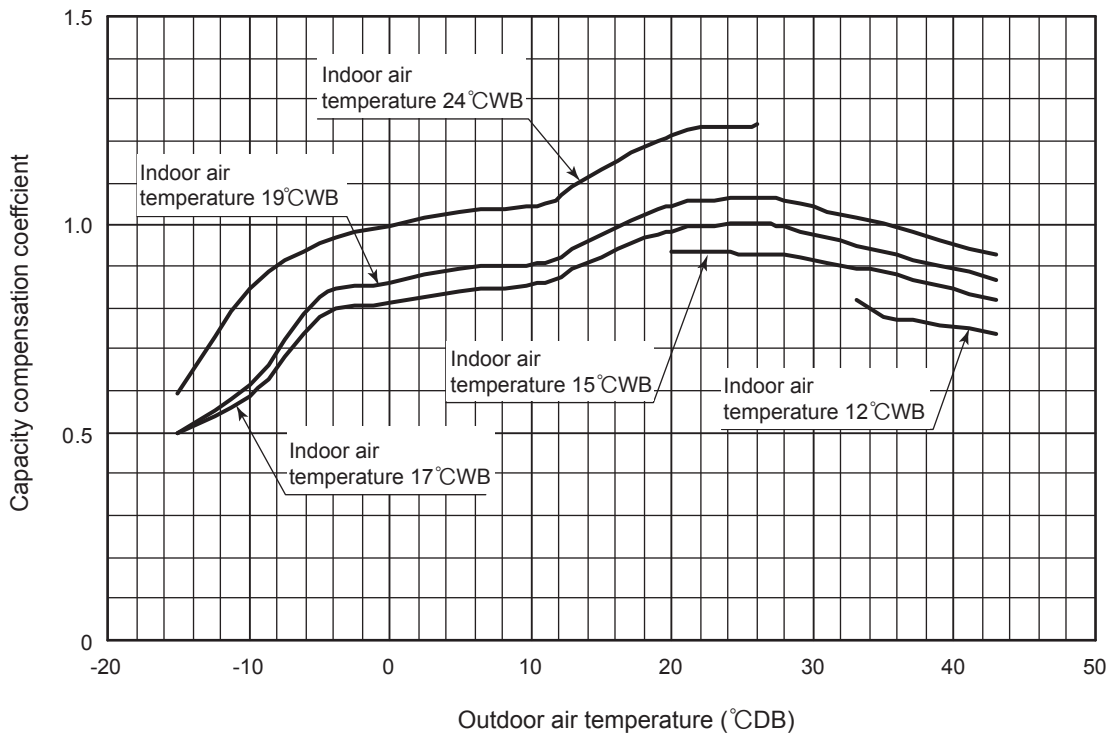

② Heating

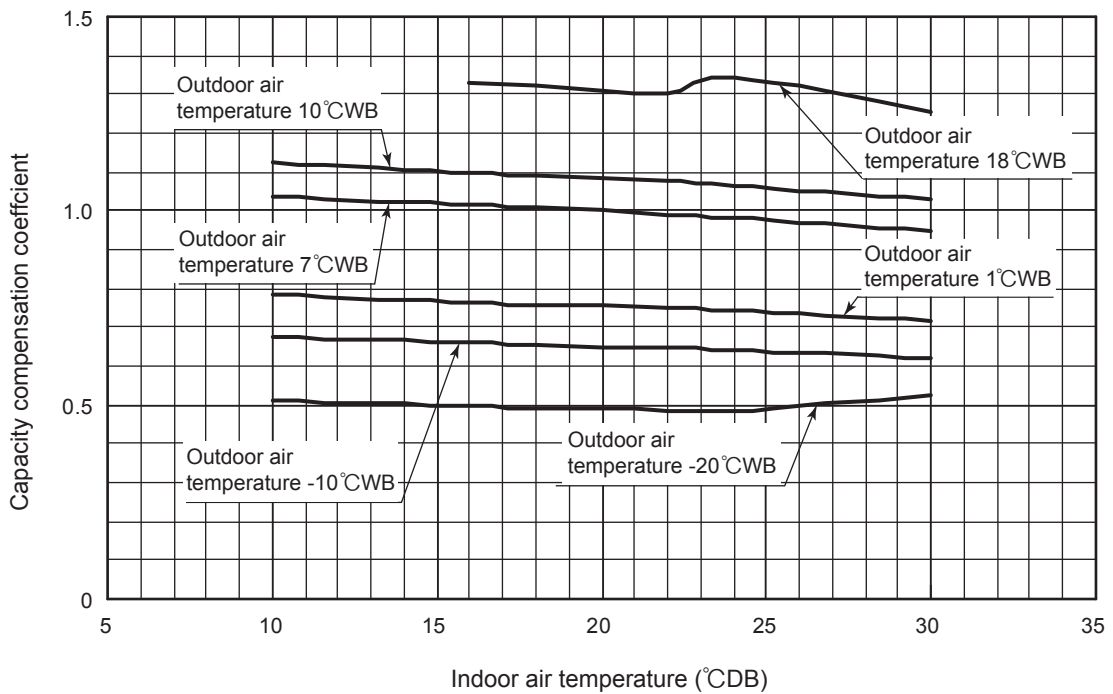

1.8.2 Correction of cooling and heating capacity in relation to air flow rate control (fan speed)

Fan speed	P-Hi or Hi	Me	Lo
Coefficient	1.00	0.97	0.95

1.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way equivalent piping length between the indoor and outdoor units.

(1) Models SRC40-60

Piping length (m)	7	10	15	20	25	30
Cooling	1	0.99	0.975	0.965	0.95	0.935
Heating	1	1	1	1	1	1

(2) Models FDC71-140

Equivalent piping length ⁽¹⁾ (m)		7.5	10	15	20	25	30	35	40	45	50	55	
Heating		1	1	1	1	1	0.998	0.998	0.993	0.993	0.988	0.988	
Cooling	FDC71 model	φ 15.88	1	0.996	0.989	0.982	0.975	0.968	0.961	0.954	0.947	0.940	0.933
	FDC100 model		1	0.991	0.978	0.964	0.951	0.937	0.924	0.910	0.897	0.883	0.870
	FDC125 model		1	0.986	0.968	0.950	0.932	0.914	0.896	0.878	0.860	0.842	0.824
	FDC140 model		1	0.985	0.966	0.946	0.927	0.907	0.888	0.868	0.849	0.829	0.810
	FDC71 model	φ 19.05	1.008	1.006	1.003	1	0.997	0.994	0.991	0.988	0.985	0.982	0.979
	FDC100 model		1.016	1.013	1.007	1.002	0.996	0.991	0.985	0.980	0.974	0.969	0.963
	FDC125 model		1.022	1.018	1.009	1.001	0.992	0.984	0.975	0.967	0.958	0.950	0.941
	FDC140 model		1.026	1.021	1.011	1.002	0.992	0.983	0.973	0.964	0.954	0.945	0.935

Equivalent piping length ⁽¹⁾ (m)		60	65	70	75	80	85	90	95	100	105	
Heating		0.983	0.983	0.978	0.978	0.973	0.973	0.968	0.968	0.963	0.963	
Cooling	FDC71 model	φ 15.88	—	—	—	—	—	—	—	—	—	
	FDC100 model		0.856	0.843	0.829	0.816	0.803	0.789	0.776	0.762	0.749	0.736
	FDC125 model		0.806	0.788	0.770	0.752	0.734	0.716	0.698	0.680	0.662	0.644
	FDC140 model		0.790	0.771	0.751	0.732	0.712	0.693	0.673	0.654	0.634	0.615
	FDC71 model	φ 19.05	—	—	—	—	—	—	—	—	—	
	FDC100 model		0.959	0.955	0.951	0.948	0.944	0.940	0.936	0.932	0.929	0.926
	FDC125 model		0.935	0.929	0.924	0.919	0.912	0.908	0.902	0.897	0.892	0.887
	FDC140 model		0.928	0.920	0.913	0.907	0.900	0.894	0.888	0.882	0.876	0.870

Note (1) Calculate the equivalent length using the following formula.

However, install the piping so that the piping length is within +5 m of the limit length (actual length) for the respective types.

• Equivalent length = Actual length + (Equivalent bend length x number of bends in the piping.)
Equivalent length per bend. (Models FDC71-140 only)

Gas pipe diameter (mm)	φ 12.7	φ 15.88	φ 19.05
Equivalent bend length	0.20	0.25	0.30

1.8.4 Height difference between the indoor unit and outdoor unit

When the outdoor unit is located below indoor units in cooling mode, or when the outdoor unit is located above indoor units in heating mode, the correction coefficient mentioned in the below table should be subtracted from the value in the above table.

Height difference between the indoor unit and outdoor unit in the vertical height difference	5m	10m	15m	20m	25m	30m
Adjustment coefficient	0.99	0.98	0.97	0.96	0.95	0.94

Piping length limitations

Item	Model	SRC40, 50, 60	FDC71	FDC100, 125, 140
Max. one way piping length		30m	50m	100m
Max. vertical height difference		Outdoor unit is higher 20m Outdoor unit is lower 20m	Outdoor unit is higher 30m Outdoor unit is lower 15m	

Note (1) Values in the table indicate the one way piping length between the indoor and outdoor units.

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model FDT100VNXVG with the air flow “P-High”, the piping length of 15m, the outdoor unit located 5m lower than the indoor unit, indoor wet-bulb temperature at 19.0°C and outdoor dry-bulb temperature 35°C is

$$\text{Net cooling capacity} = \frac{10.0}{1} \times \frac{1.00}{1} \times \frac{0.978}{1} \times \frac{0.99}{1} \approx 9.7\text{kW}$$

↑

Net cooling total capacity of FDT100VNXVG (Outdoor temp. : 35°CDB Indoor temp. : 19°CWB) shown in table 1.8.1

↑

Air flow : P-High shown in table 1.8.2

↑

Piping length : 15m (Gas pipe size is φ15.88) shown in table 1.8.3

↑

Height diff. : 5m (Outdoor unit : below) shown in table 1.8.4

1.9 APPLICATION DATA

1.9.1 Installation of indoor unit

PJF012D029

This manual is for the installation of the indoor unit.
 For electrical wiring work (Indoor unit), refer to page 71. For remote control installation, refer to page 75. For wireless kit installation, refer to page 475. For electrical wiring work (Outdoor unit) and refrigerant pipe work installation for outdoor unit, refer to page 88. For motion sensor kit installation, refer to the installation manual attached to the motion sensor kit.
 This unit must always be used with the panel.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **WARNING** and **CAUTION**.
WARNING: Wrong installation would cause serious consequences such as injuries or death.
CAUTION: Wrong installation might cause serious consequences depending on circumstances.
 Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 Never do it under any circumstances. Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit.
 Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

WARNING

- **Installation should be performed by the specialist.**
 If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Install the system correctly according to these installation manuals.**
 Improper installation may cause explosion, injury, water leakage, electric shock, and fire.
- **Check the density referred by the formula (accordance with ISO5149).**
 If the density exceeds the limit density, please consult the dealer and installate the ventilation system.
- **Use the genuine accessories and the specified parts for installation.**
 If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Ventilate the working area well in case the refrigerant leaks during installation.**
 If the refrigerant contacts the fire, toxic gas is produced.
- **Install the unit in a location that can hold heavy weight.**
 Improper installation may cause the unit to fall leading to accidents.
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.**
 Improper installation may cause the unit to fall leading to accidents.
- **Do not mix air in to the cooling cycle on installation or removal of the air conditioner.**
 If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
 Power source with insufficient capacity and improper work can cause electric shock and fire.
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.**
 Loose connections or hold could result in abnormal heat generation or fire.
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.**
 Improper fitting may cause abnormal heat and fire.
- **Check for refrigerant gas leakage after installation is completed.**
 If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.
- **Use the specified pipe, flare nut, and tools for R410A.**
 Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle.
- **Tighten the flare nut according to the specified method by with torque wrench.**
 If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.**
 Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.**
 If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
 If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
- **Only use prescribed optional parts. The installation must be carried out by the qualified installer.**
 If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not repair by yourself. And consult with the dealer about repair.**
 Improper repair may cause water leakage, electric shock or fire.
- **Consult the dealer or a specialist about removal of the air conditioner.**
 Improper installation may cause water leakage, electric shock or fire.
- **Turn off the power source during servicing or inspection work.**
 If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- **Do not run the unit when the panel or protection guard are taken off.**
 Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.
- **Shut off the power before electrical wiring work.**
 It could cause electric shock, unit failure and improper running.

CAUTION

- **Perform earth wiring surely.**
 Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.
- **Earth leakage breaker must be installed.**
 If the earth leakage breaker is not installed, it can cause electric shocks.
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.**
 Using the incorrect one could cause the system failure and fire.
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.**
 Connecting the circuit by wire or copper wire could cause unit failure and fire.
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.**
 If the gas leaks and gathers around the unit, it could cause fire.
- **Do not install and use the unit where corrosive gas (such as sulfuric acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.**
 It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.**
 Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **Do not use the indoor unit at the place where water splashes such as laundry.**
 Indoor unit is not waterproof. It could cause electric shock and fire.
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.**
 It could cause the damage of the items.
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.**
 Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming.
- **Do not install the remote control at the direct sunlight.**
 It could cause breakdown or deformation of the remote control.
- **Do not install the indoor unit at the place listed below.**
 - Places where flammable gas could leak.
 - Places where carbon fiber, metal powder or any powder is floated.
 - Places where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammoniac atmospheres.
 - Places exposed to oil mist or steam directly.
 - On vehicles and ships
 - Places where machinery which generates high harmonics is used.
 - Places where cosmetics or special sprays are frequently used.
 - Highly salted area such as beach.
 - Heavy snow area
 - Places where the system is affected by smoke from a chimney.
 - Altitude over 1000m
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)**
 - Locations with any obstacles which can prevent inlet and outlet air of the unit
 - Locations where vibration can be amplified due to insufficient strength of structure.
 - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (In case of the infrared specification unit)
 - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
 - Locations where drainage cannot run off safely.
 It can affect performance or function and etc..
- **Do not put any valuables which will break down by getting wet under the air conditioner.**
 Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.**
 It could cause the unit falling down and injury.
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.**
 If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit.
- **Install the drain pipe to drain the water surely according to the installation manual.**
 Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
 If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.**
 Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance.
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.**
 Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.**
 Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean.
- **Pay extra attention, carrying the unit by hand.**
 Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin.
- **Make sure to dispose of the packaging material.**
 Leaving the materials may cause injury as metals like nail and woods are used in the package.
- **Do not operate the system without the air filter.**
 It may cause the breakdown of the system due to clogging of the heat exchanger.
- **Do not touch any button with wet hands.**
 It could cause electric shock.
- **Do not touch the refrigerant piping with bare hands when in operation.**
 The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite.
- **Do not clean up the air conditioner with water.**
 It could cause electric shock.
- **Do not turn off the power source immediately after stopping the operation.**
 Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- **Do not control the operation with the circuit breaker.**
 It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

① Before installation

- Install correctly according to the installation manual.
- Confirm the following points:
 - Unit type/Power supply specification
 - Pipes/Wires/Small parts
 - Accessory items

Accessory item

For unit hanging		For refrigerant pipe			For drain pipe			
Flat washer (M10)	Level gauge	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose	Hose clamp
8	1	1	1	4	1	1	1	1
For unit hanging	For level adjustment	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover fixing	For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting	For drain hose mounting


② Selection of installation location for the indoor unit

- Select the suitable areas to install the unit under approval of the user.
 - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
 - Areas where there is enough space to install and service.
 - Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
 - Areas where there is no obstruction of airflow on both air return grille and air supply port.
 - Areas where fire alarm will not be accidentally activated by the air conditioner.
 - Areas where the supply air does not short-circuit.
 - Areas where it is not influenced by draft air.
 - Areas not exposed to direct sunlight.
 - Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
 [This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above.]
 - If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.
 - Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
 - Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
 - Areas where there is no influence by the heat which cookware generates.
 - Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
 - Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
 (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air conditioner might not work properly.)

- Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- If there are 2 units of wireless type, keep them away for more than 6m to avoid malfunction due to cross communication.
- When plural indoor units are installed nearby, keep them away for more than 4 to 5m.

Space for installation and service

- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of airflow.
- Install the indoor unit at a height of more than 2.5m above the floor.

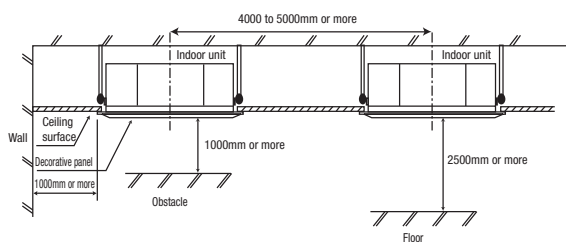

Set blow-out pattern

- Select the most proper number of blow-out air supply port direction from 4 way, 3 way or 2 way according to the shape of the room and installation position. (1 way is not available.)
- If it is necessary to change the number of air supply port, prepare the covering materials. (sold as accessory)
- Instruct the user not to use low fan speed when 2way or 3way air supply is used.
- Do not use 2way air supply port under high temperature and humidity environment. (Otherwise it could cause condensation and leakage of water.)
- It is possible to set the airflow direction port by port independently. Refer to the user's manual for details.

Where there are pipe joints on the way of embedded piping, provide adequate openings for inspection of the joints.

③ Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant.
 - For grid ceiling
 When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
 - In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
 When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.
- Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.


Ceiling opening, Suspension bolts pitch, Pipe position

※It is possible the suspension bolts pitch to adjust according to the this table.

Type	Mark	P1	P2
1		770	725~770
2		770~800	725

Series	Type	a	d	f	g	h
Single Split (PAC) series	40 to 71 type	236	37	105	88	67
	100 to 140 type	298	99	167	140	129
VRF (KX) series	28 to 71 type	236	37	105	88	67
	90 to 160 type	298	99	167	140	129


Symbol	
A	Gas piping
B	Liquid piping
C	Drain piping
D	Hole for wiring
F	Suspension bolts
G	Outside air opening for ducting
H1	Air outlet opening for ducting
H2	Air outlet opening for ducting

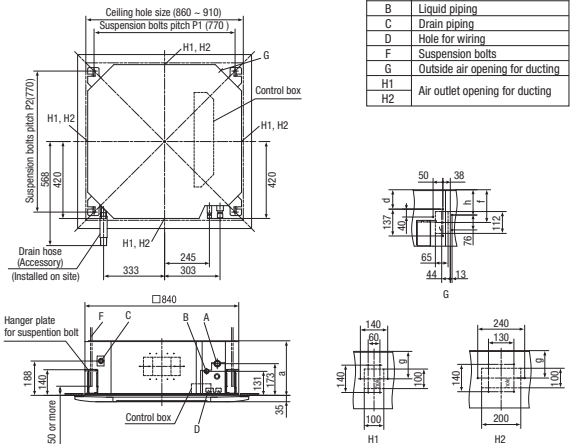

④ Installation of indoor unit

Work procedure


- Set the suspension bolt length to about 50 mm from the ceiling.
- Temporarily locate the lower nuts of the suspension bolts (4 places) at a position approximately 150 mm from the ceiling.
- Temporarily locate the upper nuts of the suspension bolts (4 places) at positions sufficiently distance from the lower nuts so that they do not interfere with the suspension of the indoor unit and with its height adjustment.
- Set the upper nuts of the suspension bolts and upper washers (4 places) at positions sufficiently distance from the lower nuts. Then, push and insert the temporary fixing carton of washers (*1) onto suspension bolts. Make sure that the upper washers do not slide down.
- Suspend the indoor unit.
- After suspending the indoor unit, mount the level gauge (*2) to the air outlet of the indoor unit, and adjust the suspension height of the indoor unit. Loosen the upper nuts (4 places), and adjust the suspension height using the lower nuts (4 places). Confirm there is no slack between the lower nuts and flat washers of the indoor unit hanger plate (4 places).
- Remove the temporary fixing carton of washers (from all 4 places).
- Make sure that the indoor unit is installed horizontally. Confirm the levelness of the indoor unit using a level gauge or transparent hose filled with water. (Keep the height difference at both ends of the indoor unit within 3 mm.)
- Tighten the upper nuts of the suspension bolts (4 places).

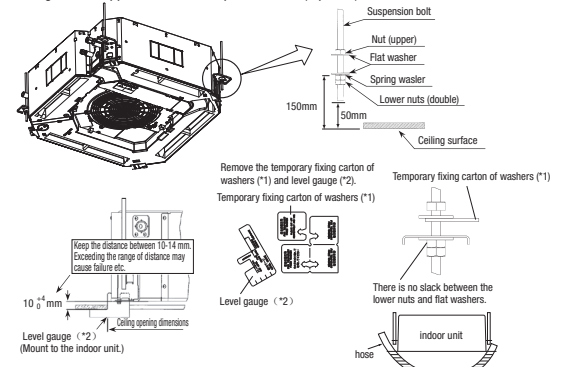

4 Installation of indoor unit (continued)

Protection of the indoor unit

- If it is not possible to install the panel for a while or if attaching the ceiling board after installing the indoor unit, protect the indoor unit by using upper carton.



Caution

- Do not adjust the unit height by adjusting the upper nuts. Doing so will cause unexpected stress on the indoor unit and cause the unit to become deformed, prevent the panel from being installed, and be generated fan interference noise.
- Make sure that the indoor unit is installed horizontally and set the appropriate gap between the underside of the unit and the ceiling plane. Improper installation may cause air leakage, dew condensation, water leakage and noise.
- Even after the panel has been installed, the unit height can still be finely adjusted. Refer to the panel installation manual for details.
- Make sure there is no gap between the panel and the ceiling surface, and between the panel and the indoor unit. Any gap may cause air and/or water to leak, or condensation to form.

5 Refrigerant pipe

Caution

- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product or a nut compatible with JIS B 8607, Class 2. Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction manual of the outdoor unit, catalogue or technical data.
- 1) In case of reuse: Do not use old flare nut, but use the nut attached to the unit or compatible with JIS B 8607, Class 2.
- 2) In case of reuse: Flare the end of pipe replaced partially for R410A.

Pipe dia. d mm	Min. pipe wall thickness mm	Protruding dimension for flares, mm		Flare O.D. D mm	Flare nut tightening torque N·m
		For R410A	Conventional tool		
6.35	0.8	0 ~ 0.5	0.7 ~ 1.3	8.9 ~ 9.1	14 ~ 18
9.52	0.8			12.8 ~ 13.2	34 ~ 42
12.7	0.8			16.2 ~ 16.6	49 ~ 61
15.88	1			19.3 ~ 19.7	68 ~ 82
19.05	1.2			23.6 ~ 24.0	100 ~ 120

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation. In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than the designated refrigerant. Using other refrigerant except the designated refrigerant, may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410A refrigerant.


Work procedure

- Remove the flare nut and blind flanges on the pipe of the indoor unit.
 - ※ Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)
 - Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
- Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
 - ※ Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending. Do not twist a pipe or collapse to 2/3D or smaller.
 - ※ Do a flare connection as follows:
 - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
 - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table above. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
- Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
 - Make sure to insulate both gas pipes and liquid pipes completely.
 - ※ Incomplete insulation may cause dew condensation or water dropping.
 - Use heat-resistant (120 °C or more) insulations on the gas side pipes.
 - In case of using at high humidity condition, reinforce insulation of refrigerant pipes. Surface of insulation may cause dew condition or water dropping, if insulations are not reinforced.
- Refrigerant is charged in the outdoor unit. As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

5 Refrigerant pipe (continued)

Caution:

Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the side friction force on the threads and increase, in turn, the axial component force so that it could crack the flare by the stress corrosion. Refrigerating machine oil may be applied to the internal surface of flare only.

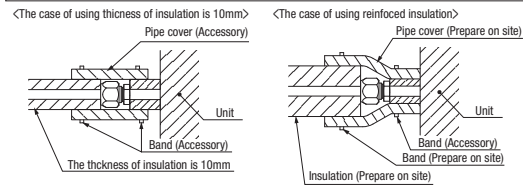


6 Drain pipe

Caution

- Install the drain pipe according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

Work procedure

- Make sure that the drain hose (the soft PVC side) is inserted into the end of the step part of the drain socket. Fix the hose clamp so that its bolt is located on the outside of the indoor unit, and the bolt are fastened in a vertical orientation.
 - Do not apply adhesives on this end.
- Position the hose clamp so that it touches the insulation of the drain hose, and then tighten the bolt.
- Turn the bolt several times until it is securely tightened, but do not tighten it excessively.

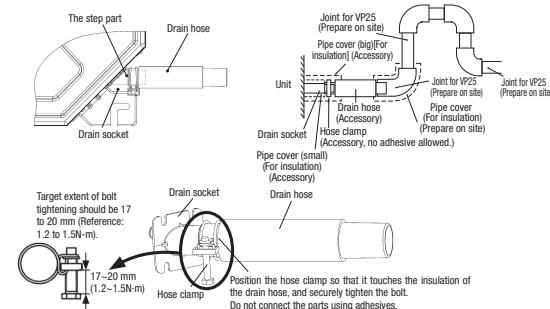


- Prepare a joint for connecting VP25 pipe, adhere and connect the joint to the drain hose (the rigid PVC side), and adhere and connect VP25 pipe (prepare on site).
 - ※As for drain pipe, apply VP25 made of rigid PVC which is on the market.


- Make sure that the adhesive will not get into the supplied drain hose. It may cause the flexible part broken after the adhesive is dried up and gets rigid.

- The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.

- As for drain pipe, apply VP25 (OD32). If apply PVC25 (OD25), connect the expanded connector to the drain hose, with adhesive. (Multi unit only)

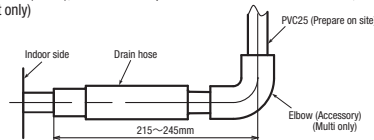


- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
 - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
 - Do not set up air vent.

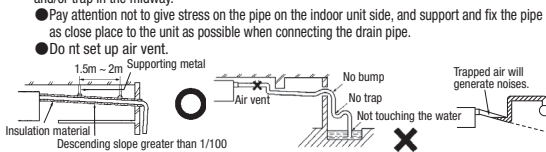

⑥ Drain pipe (continued)

- When sharing a drain pipe for more than 1 unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP30 or bigger size for main drain pipe.




6. Insulate the drain pipe.

- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
- ※ After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

Drain up


- The position for drain pipe outlet can be raised up to 850mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

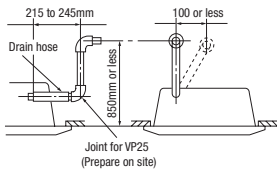

Drain test

- After installing the drain pipe, make sure that drain system works correctly and that no water leaks from the joint and drain pan. Check whether the motor sound of the drain pump is normal.
 - Conduct a drain test when installing, even during the heating season.
 - In the case of new buildings, be sure to complete the test before fixing the ceiling.
1. Pour about 1,000 cc of test water into the drain pan of the indoor unit. Exercise care not to allow electrical equipment such as the drain pump and other components to become wet while filling water. Pour test water through the pouring port of the pipe lid using a feed water pump or a similar device, or through the refrigerant pipe joint.

- In case of pouring water from the air outlet
- In case of pouring water from the pouring port of the pipe lid

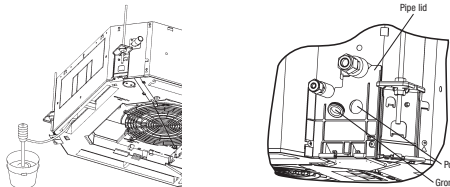

2. Make sure that water drains out completely and that no water leaks from any joints of the drain pipe during the test. Test to confirm that the water drains out correctly while listening to the drain pump motor operating sound. At the drain socket (transparent), it is possible to check whether the water drains out correctly.
3. Unplug the rubber plug on the indoor unit so that the remaining water drains from the drain pan after the draining test. After checking the water drainage, fix the drain plug correctly. Installation work for the drain pipe must be performed for the entire drain pipe up to the indoor unit. If the pipe lid has been removed in order to pour water, mount the pipe lid again.

Drain pump operation

- In case electrical wiring work completed
Drain pump can be operated by the wired remote controller. For the operation method, refer to [Operation for drain pump] in the installation manual for wiring work.
- In case electrical wiring work not completed
Drain pump will run continuously when the dip switch "SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (230VAC on the terminal block ① and ②) is turned ON. Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test.


⑦ Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
- Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.


1. Loosen the 2 screws of the lid of the control box, and slide the lid in the direction of the arrow shown in the figure. It will then be possible to open the lid.
2. Unhook the lid from the control box, and remove the lid.
3. Remove the 2 screws from the wiring cover, and remove the wiring cover.
4. Hold each wire inside the unit, and securely fasten them to the terminal block.
5. Fix the wiring using clamps.
6. Install the wiring cover and the lid of the control box.

Main fuse specification

Specification	Part No.
T3.15A L250V	SSA564A149AF

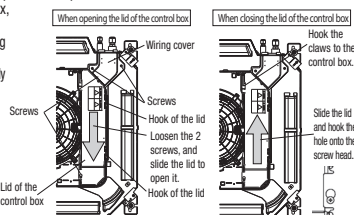

⑦ Wiring-out position and wiring connection (continued)

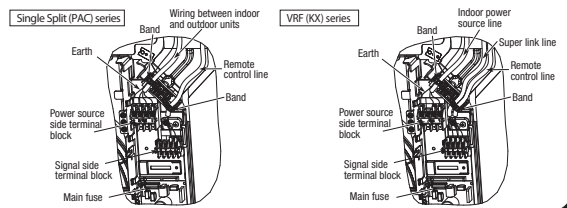

⑧ Panel installation

- Install the panel on the indoor unit after electrical wiring work.
- Refer to the attached manual for panel installation for details.

⑨ Check list after installation


- Check the following items after all installation work completed.

Check if:	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

⑩ How to check the dirt of drain pan and cleaning the inlet of the drain pump. (Maintenance)


The method of checking the dirt of drain pan

- It is possible to check dirt on the drain pan and drain pump inlet without removing the panel.
1. Open the inlet grille and remove the corner lid on the drain pan side.
 2. Remove the drain cap cover (1 screw) from the panel corner.
 3. Check the dirt on the drain pan from the drain cap, and check the drain pump inlet. If the drain pan is very dirty, remove the drain pan and clean it.
 4. After checking, refix the drain cap cover securely. If the cover is not refixed correctly, it may cause condensation to form and/or water to leak.




Cleaning of drain pump inlet

- It is possible to clean the drain pump inlet and surrounding area by removing the drain cap only; it is not necessary to remove the panel and drain pan.
 - Before removing the drain cap, remove the rubber plug and drain water from the drain pan.
1. Remove the drain cap cover as described above.
 2. Insert the nose of the pliers into the concave portions (2 places) of the drain cap, and rotate the pliers about 1 turn in the CCW direction. The drain cap is removed.
 3. When cleaning the drain pump inlet, use a soft plastic tool. If a metallic tool is used, the drain cap mounting portion may be scratched and water may leak.
 4. Before mounting the drain cap, rinse it and remove any foreign material from the inside of the cap. If the drain cap is installed with foreign material inside it, it may cause water to leak.
 5. Insert the nose of the pliers into the concave portions of the drain cap and rotate the pliers to install the drain cap. Rotate the drain cap about 1 turn in the CW direction until it stops rotating. If the drain cap is not rotated for 1 or more turns, the cap will not have been installed correctly. Remove the drain cap, and then install it again correctly.
 6. After tightening the drain cap, make sure the triangle (△) mark of the drain cap comes close to the triangle mark on the panel. If these triangle marks are not close to each other, tighten the drain cap further.
 7. Refix the drain cap cover and rubber plug securely. If the cover is not refixed correctly, it may cause condensation to form and/or water to leak.

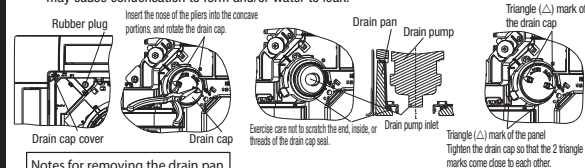

Notes for removing the drain pan

- Before removing the drain pan, drain water from the drain pan. Remove the rubber plug and drain water.
- The drain pan is installed by the temporary installation plate. Remove the 2 drain pan fixing screws, and loosen the 2 screws of the temporary installation plate.
- Slide the temporary installation plate to the outside of the drain pan. And then, it is possible to remove the drain pan.
- When reinstalling the drain pan, slide the temporary installation plate to the inside and temporarily fix the drain pan. Then, tighten the 2 drain pan fixing screws and the 2 screws of the temporary installation plate. Also, refix the rubber plug securely.

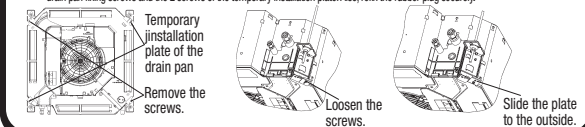

PJF012D029



• Panel installation

Read this manual together with the indoor unit's installation manual.

⚠ WARNING

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal. **Loose connection or hold will cause abnormal heat generation or fire.**
- Make sure the power source is turned off when electric wiring work. **Otherwise, electric shock, malfunction and improper running may occur.**

Function

The Anti draft panel has the anti draft mechanism. If the Anti draft panel is installed and the anti draft function is set, the anti draft function will be operated and reduce the draft feeling. (Refer to **Panel setting**)


- Standard panel: without the anti draft mechanism
- Anti draft panel: with the anti draft mechanism

① Before installation

- Follow installation manual carefully, and install the panel properly.
- Check the following items.
- Accessories

Accessories		
Bolt		4 pieces For panel installation
Strap		4 pieces For avoiding the corner panel from falling
Screw		4 pieces For fixing the corner panel

Note: Accessories are laid in the position removing the corner lid.

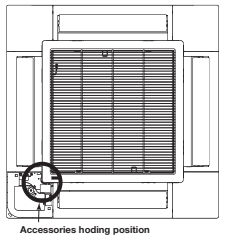


② Checking the indoor unit installation position

- Read this manual together with the air-conditioner installation manual carefully.
- Check if the opening size for the indoor unit is correct with the level gauge supplied in the indoor unit.
- Check if the gap between the plane and the indoor unit is correct by inserting the level gauge into the air outlet port of the indoor unit. (See below drawing)
- Adjust the installation elevation if necessary.
- Remove the level gauge before installing the panel.

Caution


If there is a height difference beyond the design limit between the installation level of the indoor unit and the panel, the panel may be subject to excessive stress during installation and it may cause distortion and damage.

- The installation level of the indoor unit can be adjusted finely from the opening provided on the corner, even after panel is installed. (Refer to **Installing the panel** for details.)

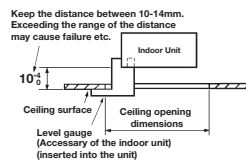


③ Removing the inlet grille

- Hold the stoppers on the inlet grille (2 places) toward OPEN direction, open the inlet grille.
- Remove the hooks of the inlet grille from the panel while it is in the open position.



④ Removing the corner lid

- Pull the corner lid toward the direction indicated by the arrow and remove it. (Same way for all 4 corner lids)




⑤ Orientation of the panel installation

- Take note that there is an orientation to install the panel.
- Install the panel with the orientation shown on the right.
 - Align the "PIPE SIDE" mark (on the panel) with the refrigerant pipes on the indoor unit.
 - Align the "DRAIN" mark (on the panel) with the drain pipe on the indoor unit.


CAUTION

In case the orientation of the panel is not correct, it will lead to air leakage and also it is not possible to connect the flap motor wiring.

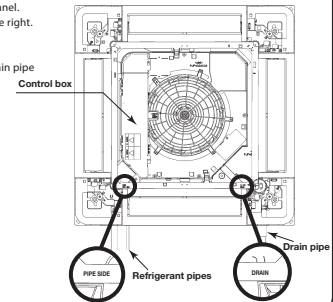

⑥ Installing the panel

- Temporary hanging
 - Lift up the hanger (2 places) on the panel for temporary support.
 - Hang the panel on the hook on the indoor unit.

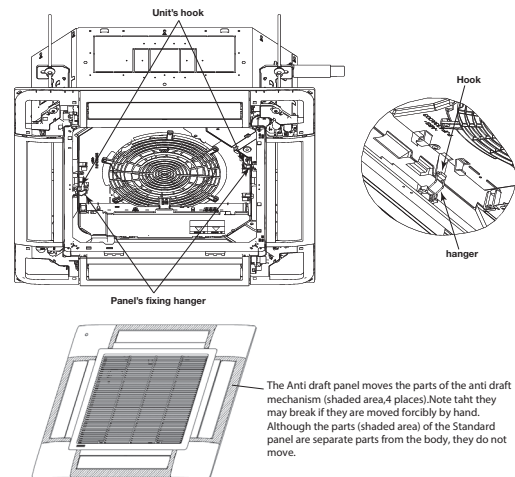

Caution


The parts (shaded area), of the anti draft mechanism around the air outlet, are separate parts. Handle the panel with care. Especially, the shaded area of the Anti draft panel move. Note that they may break if they are moved forcibly by hand.

- Fix the panel on the indoor unit
 - Fasten the panel on the indoor unit with the 4 bolts supplied with the panel.


Caution

Improperly tightened fixing bolts cause the problems listed below, so make sure that bolts are securely tightened.

- If there is a gap between the ceiling and the panel even after the fixing bolts are tightened, adjust the installation level of the indoor unit again.



- It is possible to adjust the installation height of the indoor unit with the panel installed as long as there is no influence on the drain pipe inclination and/or the indoor unit levelness.

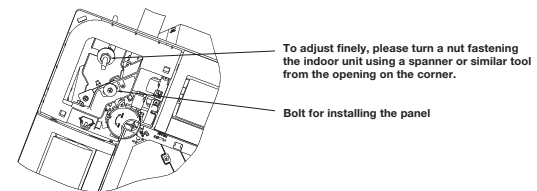


Caution

Do not give any stress on the panel when adjusting the height of the indoor unit to avoid unexpected distortion. It may cause the distortion of panel or failing to close the inlet grille, and the parts of the anti draft mechanism.

7 Electrical wiring


The wiring work varies depending on the panel type. Select the wiring work appropriate for the panel type. The connection positions of the indoor unit are as shown below irrespective of the panel type.

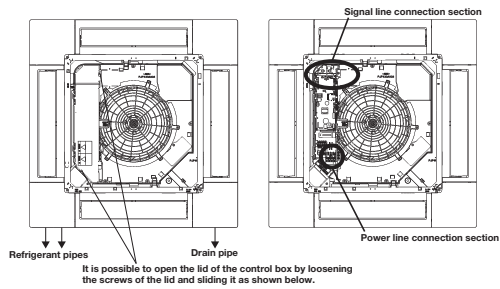

<For the Standard panel>

1. Loosen 2 screws on the control box lid of the indoor unit, and remove the lid by sliding it.
2. Pass the flap motor wiring (20-wire) through the hook of the control box, and connect to CNJ1 (20P, white).
3. Fix the control box lid of the indoor unit, and tighten 2 screws.


For the Standard panel
Signal line connection section

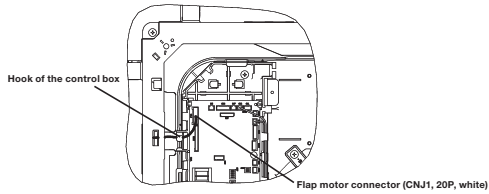

<For the Anti draft panel>


1. Loosen 2 screws on the control box lid of the indoor unit, and remove the lid by sliding it.
2. Pass the flap motor cable (20-wire) through the hook of the control box, and connect to CNJ1 (20P, white).
3. Pass the anti draft motor cable (20-wire) through the hook of the control box, and connect to CNJ2 (20P, white).
4. Fix the control box lid of the indoor unit, and tighten the 2 screws.

For the Anti draft panel
Signal line connection section

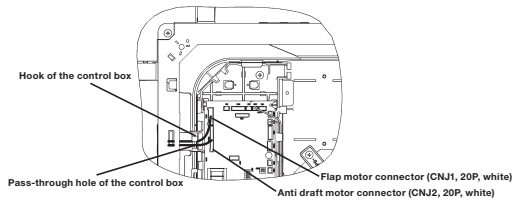

8 Installing a corner lid

1. To avoid unexpected falling of the corner lid, put the strap onto the corner lid's pin with turning the strap up.
2. Then hang the strap of a corner lid onto the panel's pin.
3. First insert the part "a" of a corner lid into the part "A" of the panel, and then engage 2 hooks.
4. Fix with screw.

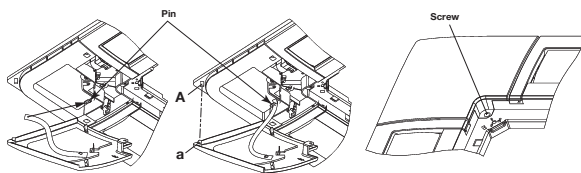


9 Installing the inlet grille

To attach the inlet grille, follow the procedure described in 8. Removing the inlet grille in the reverse order.

1. Hang the hooks of the inlet grille in the hole of the panel. (The hooks of the grille can be hanged in 4 side of the panel as following.)
2. After the grille is hanged, close the grille while the stoppers(2 places) on the grille are kept pressed to "OPEN" direction. When the grille comes to the original position, release the stoppers to hold the grille. Make sure to hear the sound of "CLICK" in both stoppers.

<Installation>

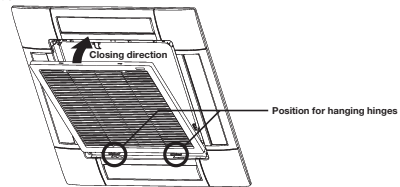

Caution

- Installing the inlet grille from the hinge side.
- Be careful in the inlet grille installing, unstable installing may cause grille falling.
- Repair or replace the distorted, broken stopper at once, or the grille falling may occur.

10 Panel setting

<Flap swing range setting (Individual flap control setting)>

It is possible to change the swing range of the flap by the wired remote control. Once the upper and lower limit positions are set, the flap will swing within the set range. It is also possible to set the different range to each flap.

<Anti draft setting>

The anti draft function will not be operated if the Anti draft panel is installed and its wirings are only connected. To operate the anti draft function, enable the anti draft setting by using the wired or wireless remote control.

Note: It is not possible to set by the following remote control models or older.

Wired: RC-EX1A, RC-E5, RCH-E3
Wireless: RCN-E1R

Once you have enabled the settings in this mode, the anti draft function is operated when the air-conditioner is started, and the parts of the anti draft mechanism are always open when the air-conditioner is operating. When the air-conditioner is stopped, they are closed. It is possible to enable or disabled the anti draft function for each air outlet.

For the setting details, refer to the user's manual supplied with the remote control.

1.9.2 Electric wiring work installation

Electrical wiring work must be performed by an electrician qualified by a local power provider according to the electrical installation technical standards and interior wiring regulations applicable to the installation site.

Security instructions

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **WARNING** and **CAUTION**.
 - WARNING**: Wrong installation would cause serious consequences such as injuries or death.
 - CAUTION**: Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 - ⊘ Never do it under any circumstances.
 - ⊕ Always do it according to the instruction.
- Accord with following items. Otherwise, there will be the risks of electric shock and fire caused by overheating or short circuit.

WARNING

- Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

Power source with insufficient capacity and improper work can cause electric shock and fire.
- Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.

Loose connections or hold could result in abnormal heat generation or fire.
- Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.

Improper fitting may cause abnormal heat and fire.
- Use the genuine option parts. And installation should be performed by a specialist.

If you install the unit by yourself, it could cause water leakage, electric shock and fire.
- Do not repair by yourself. And consult with the dealer about repair.

Improper repair may cause water leakage, electric shock or fire.
- Consult the dealer or a specialist about removal of the air-conditioner.

Improper installation may cause water leakage, electric shock or fire.
- Turn off the power source during servicing or inspection work.

If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- Shut off the power before electrical wiring work.

It could cause electric shock, unit failure and improper running.

CAUTION

- Perform earth wiring surely.

Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.
- Earth leakage breaker must be installed.

If the earth leakage breaker is not installed, it can cause electric shocks.
- Make sure to install earth leakage breaker on power source line. (countermeasure thing to high harmonics.)

Absence of breaker could cause electric shock.
- Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.

Using the incorrect one could cause the system failure and fire.
- Do not use any materials other than a fuse of correct capacity where a fuse should be used.

Connecting the circuit by wire or copper wire could cause unit failure and fire.
- Use power source line of correct capacity.

Using incorrect capacity one could cause electric leak, abnormal heat generation and fire.
- Do not mingle solid cord and stranded cord on power source and signal side terminal block.

In addition, do not mingle difference capacity solid or stranded cord. Inappropriate cord setting could cause losing screw on terminal block, bad electrical contact, smoke and fire.
- Do not turn off the power source immediately after stopping the operation.

Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- Do not control the operation with the circuit breaker.

It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

Control mode switching

- The control content of indoor units can be switched in following way. is the default setting


Switch No.	Control Content	
SW2	Indoor unit address (0-Fh)	
SW5-1	Master/Slave Switching (plural /Slave unit Setting)	
SW5-2		
SW6-1-4	Model capacity setting	
SW7-1	ON	Operation check, Drain motor test run
	OFF	Normal operation

① Electrical Wiring Connection

- Electrical wiring work must be performed by an electrician qualified by a local power provider. These wiring specifications are determined on the assumption that the following instructions are observed:
 - Do not use cords other than copper ones.
 - Do not use any power source line lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51), if allowed in the relevant part 2;
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53);
 - flat twin tinsel cord (code designation 60227 IEC 41);
 - ordinary polyvinyl chloride sheathed cord (code designation 60227 IEC 53);
 - Connect the power source to the outdoor unit.
 - Pay extra attention so as not to confuse signal line and power source line connection, because an error in their connection can burn all the boards at once.
- Connect ground wires before connecting wires between the indoor and outdoor units and between indoor units. The ground wires need to be longer than the wires between the indoor and outdoor units, and protected from undue stress.
- Do not turn on the power source before completing the work.
 - The ground wires must be connected by the Class D grounding connection.
 - Use the round crimp terminals for connections to the terminal block.
 - Use dedicated branch circuits, avoiding combination with other devices. Otherwise, it could trip the power source breaker, resulting in secondary accidents.
 - Install the overcurrent and earth leakage breakers (sensitivity current: 30 mA) specified to respective models.
 - Do not connect indoor and outdoor signal cables to extension cables on the way. If the joint is wetted with intruding water, it could cause a ground insulation failure or poor connection, resulting in communication errors. (If it is inevitable to connect cables on the way, make sure to prevent the water intrusion completely.)
 - When running wires (wires for power source, remote control, connecting between indoor and outdoor units, or other) behind the ceiling, protect them using copper or other pipes against assault by rat, or other.
 - It is up to 3.5 mm² the size of power source cables connected to indoor units. When using cables of 5.5 mm² or larger, provide a dedicated pull box for branching connection to indoor units.
 - If signal and power source cables are connected mistakenly, it could burn down all PCBs.
 - Even if the power source of AC 220/240/380/415 V is connected mistakenly to A-B signal cable, it is protected at initial occasion only.
 - If the remote control fails to detect the unit No. (address) at 15 minutes after turning the power on, check and repair all signal cables for misconnection.
 - Cut the jumper wire J10SL1 of burnt PCB, and reconnect connectors Ck1 (yellow) and Ck1 (white) to Ck2 (black).
 - If any anomaly is found on wires between the A-B terminal block and the PCB, replace them.
 - At the outside of indoor and outdoor units, take care to avoid direct contacts between remote control and power source cables.
 - In no event connect the power source of AC 220/240/380/415 V to the remote control terminal block. It could cause failures.
 - Connections of wiring between units, ground wire and remote control cable
 - When connecting wires between units, ground wire or remote control wire, connect them according to the number of terminals on the power source terminal block or signal terminal block in the control box. Connect the ground wire to the ground terminal on the power source terminal block.
 - Make sure to install an earth leakage breaker for the power source. Select a breaker for inverter circuit.
 - When the earth leakage protection, it is necessary to connect also an isolating switch (Switch + Class B fuse) or wiring circuit breaker in series to the earth leakage breaker.
 - Install the isolating switch close to the unit.
 - Connect wires securing by tightening screws firmly. Confirm also no connector or wire (from terminal) is disconnected in the control box.
 - When installing an auxiliary electric heater, consult the electric heater manual or technical data.

Cable connection for single unit installation

- As for connecting method of power source, select from following connecting patterns. In principle, do not directly connect power source line to inside unit.
 - As for exceptional connecting method of power source, discuss with the power provider of the country with referring to technical documents, and follow its instruction.
- For cable size and circuit breaker selection, refer to the outdoor unit installation manual.

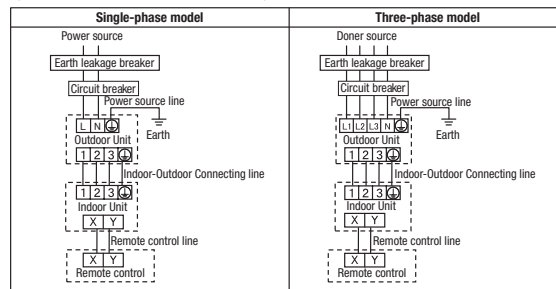

Cable connection for a V multi configuration installation

- Connect the same pairs number of terminal block "①, ②, and ③" and "ⓧ and Ⓨ" between master and slave indoor units.
- Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW2 on indoor unit's PCB (Printed circuit board).
- Set slave indoor unit as "slave 1" through "slave 3" by address switch SW5-1, 5-2 on PCB.
- When the [AIR CON No.] button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the or button.

Method of setting Master/Slave of indoor unit
(Factory setting: "Master")

Indoor Unit	Master	Slave 1	Slave 2	Slave 3
PCB SW	SW5-1	OFF	OFF	ON
	SW5-2	OFF	ON	OFF

② Remote Control, Wiring and functions

● DO NOT install it on the following places


- ① Places exposed to direct sunlight
- ② Places near heat devices
- ③ High humidity places
- ④ Hot surface or cold surface enough to generate condensation
- ⑤ Places exposed to oil mist or steam directly.
- ⑥ Uneven surface

Installation and wiring of remote control

- ① Install remote control referring to the attached installation manual.
- ② Wiring of remote control should use 0.3mm² × 2 core wires or cables.
The insulation thickness is 1mm or more. (on-site configuration)
- ③ Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
100 - 200m 0.5mm² × 2 cores
Under 300m 0.75mm² × 2 cores
Under 400m 1.25mm² × 2 cores
Under 600m 2.0mm² × 2 cores
- ④ Avoid using multi-core cables to prevent malfunction.
- ⑤ Keep remote control line away from earth (frame or any metal of building).
- ⑥ Make sure to connect remote control line to the remote control and terminal block of indoor unit. (No polarity)

Control plural indoor units by a single remote control

- ① A remote control can control plural indoor units (Up to 16).
- In above setting, all plural indoor units will operate under same mode and temperature setting.
- ② Connect all indoor units with 2 core remote control line.
- ③ Set unique remote control communication address from "0" to "F" to each inside unit by the rotary switch SW2 on the indoor unit's PCB.

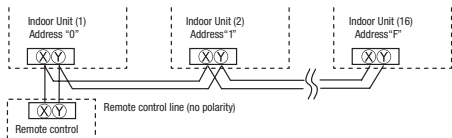

Master/ slave setting when more than one remote control unit are used


A maximum of two remote control units can be connected to one indoor unit (or one group of indoor units.)

The air-conditioner operation follows the last operation of the remote control regardless of the master/slave setting of it.

Acceptable combination is "two (2) wired remote controls", "one (1) wired remote control and one (1) wireless kit" or "two (2) wireless kits".

Set one to "Master" and the other to "Slave".

Note: The setting "Remote control unit sensor enabled" is only selectable with the master remote control unit in the position where you want to check room temperature.

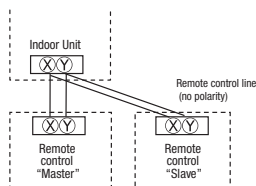


③ Operation and confirmation from remote control

No.	Item	Operation from the eco touch remote control (RC-EX3)	Operation from the standard remote control (RC-E4, RC-E5)
1	Check the number of units connected in the multi remote control system.	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [IU address]	① Press the [AIR CON No.] button to display the IU address. ② Press the [▲] or [▼] button and check addresses of connected indoor units one by one.
2	Check if each unit is connected properly in the remote control system.	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [IU address] ⇒ [Check run mode]	① Press the [AIR CON No.] button to display the IU address. ② Press the [▲] or [▼] button and select one of IU addresses. ③ Press the [MODE] button. The unit starts to blow air.
3	Setting main/sub remote controls	[Menu] ⇒ [Service setting] ⇒ [R/C function settings] ⇒ [Service password] ⇒ [Main/Sub of R/C]	Set SW1 to "Sub" for the sub remote control unit.
4	Checking operation data	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [Operation data]	Press the [CHECK] button. ⇒ "OPER DATA" is displayed. ⇒ Press the [SET] button. ⇒ "DATA LINKING" is displayed. ⇒ Select one of addresses for connected indoor units by pressing the [▲] or [▼] button. ⇒ Press the [SET] button. ⇒ "DATA LINKING" is displayed. ⇒ Select data by pressing the [▲] or [▼] button.
5	Checking inspection display	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [Error display]	Press the [CHECK] button. ⇒ "OPER DATA" is displayed. ⇒ Press the [▼] button. ⇒ "ERROR DATA" is displayed. ⇒ Press the [SET] button. ⇒ "DATA LINKING" is displayed. ⇒ Data is displayed.
6	Cooling test run from remote control	[Menu] ⇒ [Service setting] ⇒ [Installation settings] ⇒ [Service password] ⇒ [Test run] ⇒ [Cooling test run] ⇒ [Start]	① Start the system by pressing the [ON/OFF] button. ② Select "❄️ (Cool)" with the [MODE] button. ③ Press the [TEST] button for 3 seconds or longer. The screen display will switch to "❄️ TEST RUN". ④ Pressing the [SET] button, while the "❄️ TEST RUN" is displayed, starts the cooling test run. The screen display will switch to "❄️ TEST RUN".
7	Trial operation of drain pump from remote control	[Menu] ⇒ [Service setting] ⇒ [Installation settings] ⇒ [Service password] ⇒ [Test run] ⇒ [Drain pump test run] ⇒ [Run]	① Start the system by pressing the [ON/OFF] button. The display will change to "❄️ TEST RUN". ② Press the [▼] button once to display "DRAIN PUMP". ③ Pressing the [SET] button starts the drain pump operation. The display will show "DRAIN PUMP STOP".

The menu configuration may vary depending on models of the remote control. If the model of your remote control is different, refer to the installation manual attached to the remote control.

④ Function of CnT connector of indoor printed circuit board

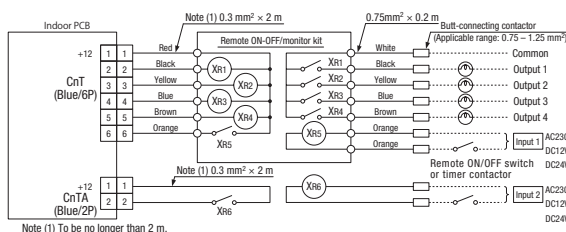

Note (1) To be no longer than 2 m.

- Xr1-4 are DC 12 V relays. (Equivalent to Omron's LY2F)
- Xr5 is a DC 12 V, 24 V or AC230 V relay. (Equivalent to Omron's MY2F)

- Maker and model of CnT connector (Site side)
Connector : Molex 5264-06
Terminal : Molex 5263T

- CnTA connector is used on FDT, or other. <Check with the specifications.> (Site side) Maker and model
Connector : J.S.T. Mfg. XAP02V-1-E
Terminal : J.S.T. Mfg. SXA-01T-P0.6

- Output 1 - 4 and input1/2 can be selected/set as required from following items.
Factory default is set as shown below.

Output	
① RUN output	⑧ Fan ON output 3
② Heating output	⑨ Defrost/oil return output
③ Compressor ON output	⑩ Ventilation output
④ Inspection (error) output	⑪ Heater output
⑤ Cooling output	⑫ Free cleaning output
⑥ Fan ON output 1	⑬ Indoor overload error output
⑦ Fan ON output 2	

Input	
① RUN/STOP	⑤ Setting temp. shift
② RUN permit prohibition	⑥ Compulsory thermostat OFF
③ Emergency stop	⑦ Temporary stop
④ Cooling/Heating	⑧ Silent mode

Factory default setting			
CnT-2 Output 1	RUN output	CnT-5 Output 4	Inspection (error) output
CnT-3 Output 2	Heating output	CnT-6 Input 1	RUN/STOP
CnT-4 Output 3	Compressor ON output	CnTA Input 2	RUN/STOP

- For the setting method, refer to the technical data.

⑤ Operation and setting from remote control

A : Refer to the instruction manual for RC-EX series
 B : Refer to the installation manual for RC-EX series
 C : Loading a utility software via Internet

○ : Nearly same function setting and operations are possible.
 △ : Similar function setting and operations are possible.
 *1: RC-EX1A has not this function.

Setting & display item	Description	RC-EX3	RC-E4 RC-E5	
1.Remote control network				
1 Control plural indoor units by a single remote control	A remote control can control plural indoor units up to 16 (in one group of remote control network). An address is set to each indoor unit.		○	
2 Main/sub setting of remote controls	A pair of remote controls (including optional wireless remote control) can be connected within the remote control network. Set one to "Main" and the other to "Sub".	B	○	
2.TOP screen, Switch manipulation				
1 Menu	"Control", "State", or "Details" can be selected. (3-8)	A		
2 Operation mode	"Cooling", "Heating", "Fan", "Dry" or "Auto" can be set.	A	○	
3 Set temp.	"Set temperature" can be set by 0.5°C interval.	A	○	
4 Air flow direction	"Air flow direction" [Individual flap control] can be set. Select Enable or Disable for the "3D AUTO" (in case of FDK). *1	A	△	
5 Fan speed	"Fan speed" can be set.	A	○	
6 Timer setting	"Timer operation" can be set.	A	○	
7 ON/OFF	"On/Off operation of the system" can be done.	A	○	
8 F1 SW	*1 The system operates and is controlled according to the function specified to the F1 switch.	A		
9 F2 SW	*1 The system operates and is controlled according to the function specified to the F2 switch.	A		
3.Useful functions				
1 Individual flap control	The moving range (the positions of upper limit and lower limit) of the flap for individual flap can be set. Set also the left and right limit positions for FDK. *1	A	△	
2 Anti draft setting When the panel with the anti-draft function is assembled.	*1 When the panel with the anti draft function is assembled, select to Enable or Disable the anti draft setting for each operation mode and for each blow outlet.	A		
3 Timer settings	Set On timer by hour	The period of time to start operation after stopping can be set. • The period of set time can be set within range of 1hour-12hours (1hr interval). • The operation mode, set temp and fan speed at starting operation can be set.	A	△
	Set Off timer by hour	The period of time to stop operation after starting can be set. • The period of set time can be set within range of 1hour-12hours (1hr interval).	A	△
	Set On timer by clock	The clock time to start operation can be set. • The set clock time can be set by 5 minutes interval. • [Once (one time only)] or [Everyday] operation can be switched. • The operation mode, set temp and fan speed at starting operation can be set.	A	△
	Set Off timer by clock	The clock time to stop operation can be set. • The set clock time can be set by 5 minutes interval. • [Once (one time only)] or [Everyday] operation can be switched.	A	△
Confirmation of timer settings: Status of timer settings can be seen.				
4 Favorite setting [Administrator password]	*1 Set the operation mode, setting temperature, air flow capacity and air flow direction for the choice setting operations. Set them for the Favorite set 1 and the Favorite set 2 respectively.	A		
5 Weekly timer	On timer and Off timer on weekly basis can be set. • 8-operation patterns per day can be set at a maximum. • The setting clock time can be set by 5 minutes interval. • Holiday setting is available. • The operation mode, set temp and fan speed at starting operation can be set.	A	△	
6 Home leave mode [Administrator password]	When leaving home for a long period like a vacation leave, the unit can be operated to maintain the room temperature not to be hotter in summer or not to be colder in winter. • The judgment to switch the operation mode (Cooling ↔ Heating) is done by the both factors of the set temp. and outdoor air temp. • The set temp. and fan speed can be set.	A		
7 External Ventilation When the ventilator is combined.	On/Off operation of the external ventilator can be done. It is necessary to set from [Menu] ⇒ [Service setting] ⇒ [R/C function settings] ⇒ [Ventilation setting]. • If the "Independent" is selected for the ventilation setting, the ventilator can be operated or stopped.	A	○	
8 Select the language	Select the language to display on the remote control. • Select from English, German, French, Spanish, Italian, Dutch, Turkish, Portuguese, Russian, Polish, Japanese and Chinese. *1	A		
4.Energy-saving setting				
Administrator password				
1 Sleep timer	To prevent the timer from keeping ON, set hours to stop operation automatically with this timer. • The selectable range of setting time is from 30 to 240 minutes. (10 minutes interval) • When setting is "Enable", this timer will activate whenever the ON timer is set.	A	△	
2 Peak-cut timer	Power consumption can be reduced by restructuring the maximum capacity. Set the [Start time], the [End time] and the capacity limit % (Peak-cut %). • 4-operation patterns per day can be set at maximum. • The setting time can be changed by 5-minutes interval. • The selectable range of capacity limit % (Peak-cut %) is from 0% to 40-80% (20% interval) • Holiday setting is available.	A		
3 Automatic temp set back	After the elapse of the set time period, the current set temp. will be set back to the [Set back time.] • The setting can be done in cooling and heating mode respectively. • Selectable range of the set time is from 20 min. to 120 min. (10 min. interval). • Set the [Set back temp.] by 1°C interval.	A	△	
4 Infrared sensor control (Motion sensor control) When the panel with the infrared sensor (motion sensor) is assembled.	*1 When the infrared sensor (motion sensor) is used, it is necessary to set Enable or Disable for the "Power control" and the "Auto-off".	A		
5.Filter				
1 Filter sign reset	Filter sign reset	The filter sign can be reset.	A	
	Setting next cleaning date	The next cleaning date can be set.	A	
6.User setting				
1 Internal settings	Clock setting	The current date and time can be set or revised. • If a power failure continues no longer than 80 hours, the clock continues to tick by the built-in power source.	A	△
	Date and time display	[Display] or [Hide] the date and/or time can be set, and [12H] or [24H] display can be set.	A	
	Summer time	When select [Enable], the +1 hour adjustment of current time can be set. When select [Disable], the [Summer time] adjustment can be reset.	A	
	Contrast	The contrast of LCD can be adjusted higher or lower.	A	
	Backlight	Switching on/off a light can be set and period of the lighting time can be set within the range of 5sec-90 sec (5sec interval).	A	
	Control sound	It can set with or without [Controller sound (beep sound)] at touch panel.	A	
2 Administrator settings [Administrator password]	Operation lamp luminance *1	This is used to adjust the luminance of operation lamp.	A	
	Permission/Prohibition setting	• Permission/Prohibition setting of operation can be set. [On/Off] [Change set temp] [Change operation mode] [Change flap direction] [Change fan speed] [High power operation] [Energy-saving operation] [Timer] Request for administrator can be set. [Individual flap control] [Weekly timer] [Select the language] [Anti draft setting] *1	A	△
	Outdoor unit silent mode timer	The period of time to operate the outdoor unit by prioritizing the quietness can be set. • The [Start time] and the [End time] for operating outdoor unit in silent mode can be set. • The period of the operation time can be set once a day by 5 minutes interval.	A	△
	Setting temp range	The upper/lower limit of temp. setting range can be set.	A	△
	Temp increment setting	The temp increment setting can be changed by 0.5°C or 1.0°C.	A	
Set temp display	Ways of displaying setting temperatures can be selected.	A		


⑤ Operation and setting from remote control (continued)

Setting & display item	Description	RC-EX3	RC-E4 RC-E5	
2 Administrator settings [Administrator password]	R/C display setting	Register [Room name] [Name of I/U] Display [Indoor temp. display] or not. Display [Error code display] or not. Display [Heating stand-by display] [Defrost operation display] [Auto cooling/heating display] [Display temp of R/C, Room, Outdoor] or not	A	△
	Change administrator password	The administrator password can be changed. (Default setting is "0000") The administrator password can be reset.	A B	
	F1/F2 function setting *1	Functions can be set for F1 and F2. Selectable functions: [High power operation], [Energy-saving operation], [Silent mode cont.], [Home leave mode], [Favorite set 1], [Favorite set 2] and [Filter sign reset].	A	
7. Service setting				
1 Installer settings [Service password]	Installation date	The [Installation date] can be registered. • When registering the [Installation date], the [Next service date] is displayed automatically. (For changing the [Next service date], please refer the item of [Service & Maintenance])	B	
	Company information	The [Company information] can be registered and can be displayed on the R/C. • The [Company] can be registered within 26 characters. • The [Phone No.] can be registered within 13 digits.	B	
	Test run	On/Off operation of the test run can be done.		
	Cooling test run	The [Cooling test run] can be done at 5°C of set temp. for 30 minutes.	B	○
	Drain pump test run	Only drain pump can be operated.		
	Static pressure adjustment	In case of combination with only the ducted indoor unit which has a function of static pressure adjustment, the static pressure is adjustable. • It can be set for each indoor unit individually.	B	
	Change auto-address	The set address of each indoor unit decided by auto-address setting method can be changed to any other address. (For multiple KX units only)	B	△
	Address setting of main IU	Main indoor unit address can be set. • Only the Main indoor unit can change operation mode and the Sub indoor units dominated by the Main indoor shall follow. • The Main indoor unit can domain 10 indoor units at a maximum.	B	△
	IU back-up function	When a pair of indoor units (2 groups) is connected to one unit of remote control, it can be set Enable or Disable for the [IU rotation], [IU capacity back-up] and [IU fault back-up]	B	
	Infrared sensor setting (Motion sensor setting) *1 When the panel with the infrared sensor (motion sensor) is assembled.	Set Enable or Disable for the infrared sensor detectors of indoor units connected to the remote control. If Disable is selected, it cannot be control the infrared sensor control for the energy-saving setting.	B	
2 R/C function setting [Service password]	Main/Sub R/C	The R/C setting of [Main/Sub] can be changed.	B	○
	Return air temp.	When two or more indoor units are connected to one unit of remote controller, suction sensors, which are used for the judgement by thermostat, can be selected. • It can be selected from [Individual], [Master IU] and [Average temp].	B	
	R/C sensor	It can be set the mode to switch to the remote controller sensor. It can be selected from cooling and heating.	B	△
	R/C sensor adjustment	The offset value of [R/C sensor] sensing temp. can be set respectively in heating and cooling.	B	△
	Operation mode	Enable or Disable can be set for each operation mode.	B	△
	°C / °F	Set the unit for setting temperatures. • °C or °F can be selected.	B	
	Fan speed	Fan speeds can be selected.	B	○
	External input	When two or more indoor units are connected to one unit of remote control, the range to apply CnT inputs can be set.	B	○
	Upper/lower flap control	[Stop at fixed position] or [Stop at any position] can be selected for the upper and lower louvers.	B	○
	Left/right flap control *1	[Fixed position stop] or [Stop at any position] can be selected for the right and left louvers.	B	
	Ventilation setting	Combination control for ventilator can be set.	B	○
	Auto-restart	The operation control method after recovery of power failure happened during operation can be set.	B	○
	Auto temp setting	[Enable] or [Disable] of [Auto temp setting] can be selected.	B	
	Auto fan speed	[Enable] or [Disable] of [Auto fan speed] can be selected.	B	
3 IU settings [Service password]	Fan speed setting	The fan speed for indoor units can be set.	B	○
	Filter sign	The setting of filter sign display timer can be done from following patterns.	B	○
	External input 1	The connect of control by external input 1 can be changed.	B	○
	External input 1 signal	The type of external input 1 signal can be changed.	B	○
	External input 2	The connect of control by external input 2 can be changed.	B	
	External input 2 signal	The type of external input 2 signal can be changed.	B	
	Heating thermo-OFF temp adjustment	The judgement temp. of heating thermo-off can be adjusted within the range from 0 to +3°C (1°C interval)	B	△
	Return temperature adjustment	The sensing temp. of return air temp. sensor built in the indoor unit can be adjusted within the range of ±2°C.	B	△
	Fan control in cooling thermo-OFF	Fan control, when the cooling thermostat is turned OFF, can be changed.	B	○
	Fan control in heating thermo-OFF	Fan control, when the heating thermostat is turned OFF, can be changed.	B	○
	Anti-frost temp.	Judgment temperature for the anti-frost control during cooling can be changed.	B	○
	Anti-frost control	When the anti-frost control of indoor unit in cooling is activated, the fan speed can be changed.	B	○
	Drain pump operation	In any operation mode in addition to cooling and dry mode, the setting of drain pump operation can be done.	B	○
	Keep fan operating after cooling is stopped	The time period residual fan operation after stopping or thermo-off in cooling mode can be set.	B	○
	Keep fan operating after heating is stopped	The time period residual fan operation after stopping or thermo-off in heating mode can be set.	B	○
	Intermittent fan operation in heating	The fan operation rule following the residual fan operation after stopping or thermo-off in heating mode can be set.	B	○
	Fan circulator operation	In case that the fan is operated as the circulator, the fan control rule can be set.	B	
	Control pressure adjust	When only the OA processing units are operated, control pressure value can be changed.	B	
	Auto operation mode	The [Auto rule selection] for switching the operation mode automatically can be selected from 3 patterns.	B	
	Thermo. rule setting	When selecting [Outdoor air temp. control], the judgment temp. can be offset by outdoor temp..	B	
Auto fan speed control	Auto switching range for the auto fan speed control can be set.	B		
IU overload alarm	If the difference between the setting temperature and the suction temperature becomes larger than the temperature difference set for the overload alarm, at 30 minutes after the start of operation, the overload alarm signal is transmitted from the external output (CnT-5).	B		
External output setting *1	Functions assigned to the external outputs 1 to 4 can be changed.	B		
4 Service & Maintenance [Service password]	IU address	Max 16 indoor units can be connected to one remote control, and all address No. of the connected indoor units can be displayed. • The indoor unit conforming to the address No. can be identified by selecting the address No. and tapping [Check] to operate the indoor fan.	B	○
	Next service date	The [Next service date] can be registered. • The [Next service date] and [Company information] is displayed on the message screen.	A B	○
	Operation data	The [Operation data] for indoor unit and outdoor unit can be displayed.	B	○
	Error display			
	Error history	The error history can be displayed.		
	Display anomaly data	The operation data just before the latest error stop can be displayed.	B	△
	Erase anomaly data	Anomaly operation data can be erased.		
Reset periodical check	The timer for the periodical check can be reset.			
Saving IU settings	The IU settings memorized in the indoor PCB connected to the remote control can be saved in the memory of the remote control.	B		
Special settings	[Erase IU address] [CPU reset] [Restore of default setting] [Touch panel calibration]	B	△	
Indoor unit capacity display *1	Address No. and capacities of indoor units connected to the remote control are displayed.	B		
8. Contact company				
9. Inspection				
Confirmation of Inspection	This is displayed when any error occurs.	A	△	
10. PC connection				
USB connection	Weekly timer setting and etc., can be set from PC.	C		

◆ Listed items may not function depending on the specifications of indoor and outdoor units which are combined.



1.9.3 Installation of wired remote control (Option)

(1) Model RC-EX3

PJZ012A131 

1. Safety precautions

- Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.

 WARNING	Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.
 CAUTION	Failure to follow these instructions properly may cause injury or property damage.

It could have serious consequences depending on the circumstances.

- The following pictograms are used in the text.

 Never do.	 Always follow the instructions given.
---	---

- Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

WARNING



Consult your dealer or a professional contractor to install the unit.

Improper installation made on your own may cause electric shocks, fire or dropping of the unit.



Installation work should be performed properly according to this installation manual.

Improper installation work may result in electric shocks, fire or break-down.



Be sure to use accessories and specified parts for installation work.

Use of unspecified parts may result in drop, fire or electric shocks.



Install the unit properly to a place with sufficient strength to hold the weight.

If the place is not strong enough, the unit may drop and cause injury.



Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

Power source with insufficient and improper work can cause electric shock and fire.



Shut OFF the main power source before starting electrical work.

Otherwise, it could result in electric shocks, break-down or malfunction.



Do not modify the unit.

It could cause electric shocks, fire, or break-down.



Be sure to turn OFF the power circuit breaker before repairing/ inspecting the unit.

Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.

 **WARNING**
Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.


If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion.

Do not install the unit where water vapor is generated excessively or condensation occurs.


It could cause electric shocks, fire, or break-down.

Do not use the unit in a place where it gets wet, such as laundry room.


It could cause electric shocks, fire, or break-down.

Do not operate the unit with wet hands.


It could cause electric shocks.

Do not wash the unit with water.


It could cause electric shocks, fire, or break-down.

Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.


Improper connections or fixing could cause heat generation, fire, etc.

Seal the inlet hole for remote control cable with putty.


If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

If dew or water enters the unit, it may cause screen display anomalies.

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.


It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.

The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

Do not leave the remote control with its upper case removed.


If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

⚠ CAUTION**Do not install the remote control at following places.**

- (1) It could cause break-down or deformation of remote control.
 - Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0 °C or below, or 40 °C or above
 - Where the surface is not flat
 - Where the strength of installation area is insufficient
- (2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
 - Place with high humidity where condensation occurs on the remote control
 - Where the remote controller gets wet
- (3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
 - Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - Place affected by outside air in opening/closing the door
 - Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large



To connect to a personal computer via USB, use the dedicated software.**Do not connect other USB devices and the remote control at the same time.**

It could cause malfunction or break-down of the remote control/personal computer.

2 . Accessories & Prepare on site

Following parts are provided.

Accessories	R/C main unit, wood screw (ø3.5 x 16) 2 pcs, Quick reference
-------------	--

Following parts are arranged at site. Prepare them according to the respective installation procedures.

Item name	Q'ty	Remark
Switch box For 1 piece or 2 pieces (JIS C 8340 or equivalent)	1	These are not required when installing directly on a wall.
Thin wall steel pipe for electric appliance directly on a wall. (JIS C 8305 or equivalent)	As required	
Lock nut, bushing (JIS C 8330 or equivalent)	As required	
Lacing (JIS C 8425 or equivalent)	As required	Necessary to run R/C cable on the wall.
Putty	Suitably	For sealing gaps
Molly anchor	As required	
R/C cable (0.3 mm ² x 2 pcs)	As required	See right table when longer than 100 m

When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≤ 200 m	0.5 mm ² x 2 cores
≤ 300m	0.75 mm ² x 2 cores
≤ 400m	1.25 mm ² x 2 cores
≤ 600m	2.0 mm ² x 2 cores

3 . Installation place


Secure the installation space shown in the figure.

For the installation method, "embedding wiring" or "exposing wiring" can be selected.

For the wiring direction, "Backward", "Upper center" or "Upper left" can be selected.

Determine the installation place in consideration of the installation method and wiring direction.


Installation space

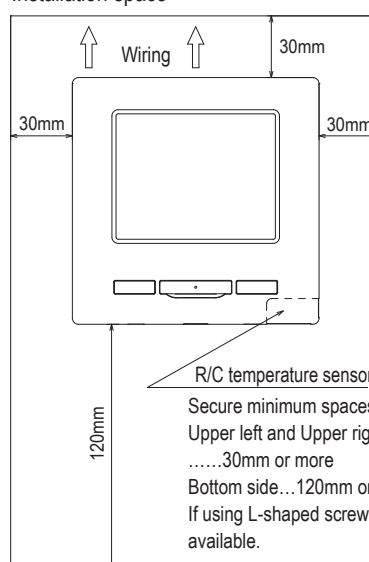

4 . Installation procedure

Perform installation and wiring work for the remote control according to the following procedure.

Dimensions (Viewed from front)

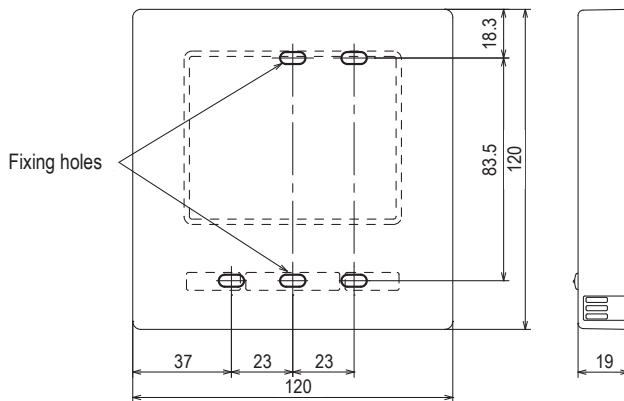



To remove the upper case from the bottom cases of R/C
 · Insert the tip of flat head screwdriver or the like in the recess at the lower part of R/C and twist it lightly to remove. It is recommended that the tip of the screwdriver be wrapped with tape to avoid damaging the case.
 Take care to protect the removed upper case from moisture or dust.

In case of embedding wiring



(When the wiring is retrieved "Backward")

- ① Embed the switch box and the R/C wires beforehand.
 Seal the inlet hole for the R/C wiring with putty.

PCB side (Viewed from rear)

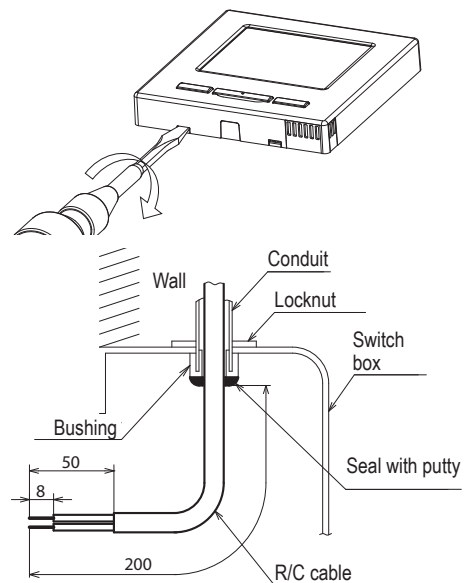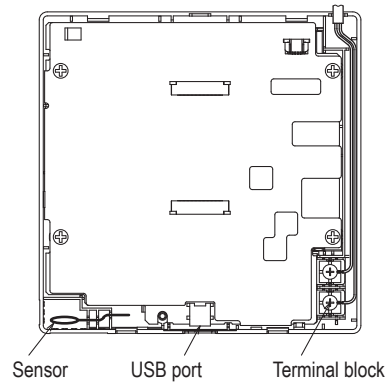

- ② When wires are passed through the bottom case, fix the bottom case at 2 places on the switch box.

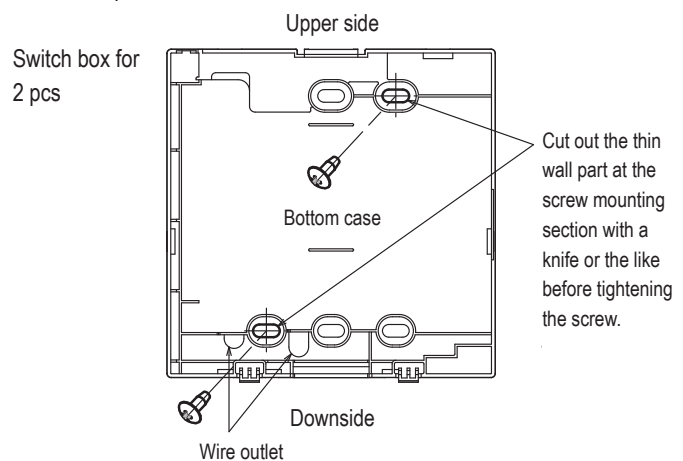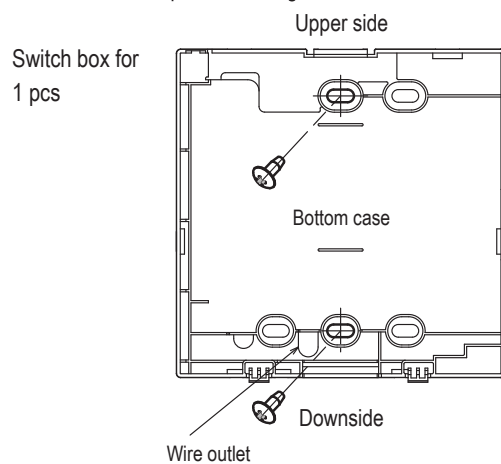

- ③ Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- ④ Install the upper case with care not to pinch wires of R/C.

Cautions for wire connection


Use wires of no larger than 0.5 mm² for wiring running through the remote control case. Take care not to pinch the sheath.

Tighten by hand (0.7 N·m or less) the wire connection. If the wire is connected using an electric driver, it may cause failure or deformation.


In case of exposing wiring

(When the wiring is taken out from the “upper center” or “upper left” of R/C)


- ① Cut out the thin wall sections on the cases for the size of wire.

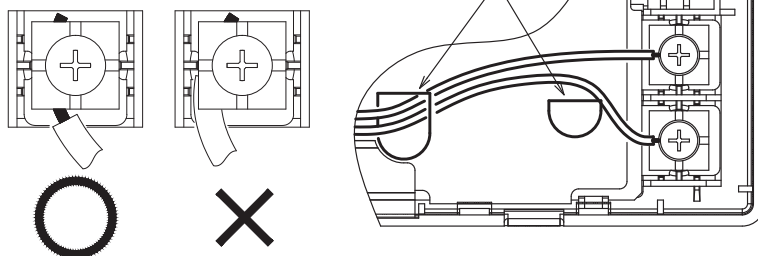

When taking the wiring out from the upper center, open a hole before separating the upper and bottom cases. This will reduce risk of damaging the PCB and facilitate subsequent work.
 When taking the wiring out from the upper left, take care not to damage the PCB and not to leave any chips of cut thin wall inside.

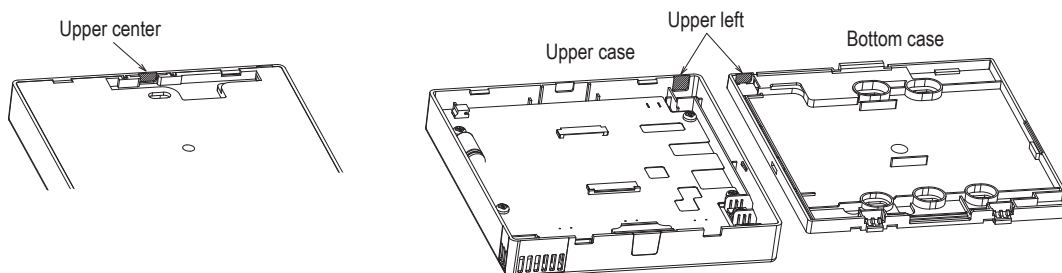

- ② Fix the bottom R/C case on a flat surface with two wood screws.
- ③ In case of the upper center, pass the wiring behind the bottom case. (Hatched section)
- ④ Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- ⑤ Install the top case with care not to pinch wires of R/C.
- ⑥ Seal the area cut in ① with putty.

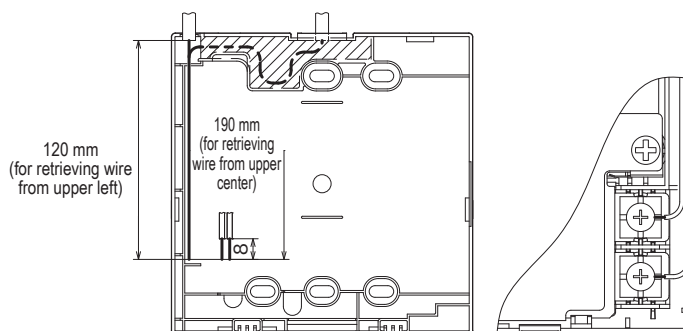


5 . Main/Sub setting when more than one remote control are used

Up to two units of R/C can be used at the maximum for 1 indoor unit or 1 group.

One is main R/C and the other is sub R/C.

Operating range is different depending on the main or sub R/C.

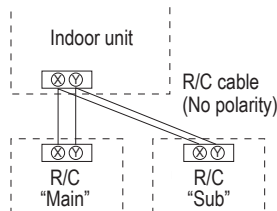

Set the "Main" and "Sub" as described at Section 8.


R/C operations		Main	Sub	
Run/Stop, Change set temp, Change flap direction, Auto swing, Change fan speed operations		○	○	
High power operation, Energy-saving operation		○	○	
Silent mode control		○	×	
Useful functions	Individual flap control	○	×	
	Anti draft setting	○	×	
	Timer	○	○	
	Choice setting	○	○	
	Weekly timer	○	×	
	Home leave mode	○	×	
	External ventilation	○	○	
Select the language		○	○	
Energy-saving setting		○	×	
Filter	Filter sign reset	○	○	
User setting	Initial settings		○	○
	Administrator settings	Permission/Prohibition setting	○	×
		Outdoor unit silent mode timer	○	×
		Setting temp range	○	×
		Temp increment setting	○	×
		Set temp display	○	○
		R/C display setting	○	○
		Change administrator password	○	○
		Switch function change	○	○

○ : operable × : not operable

R/C operations		Main	Sub		
Service setting	Installation settings	Installation date	○	×	
		Company information	○	○	
		Test run	○	×	
		Static pressure adjustment	○	×	
		Change auto-address	○	×	
		Address setting of main IU	○	×	
		IU back-up function	○	×	
		Infrared sensor (motion sensor) setting	○	×	
		R/C function settings	Main/Sub of R/C	○	○
			Return air temp	○	×
	R/C sensor		○	×	
	R/C sensor adjustment		○	×	
	Operation mode		○	×	
	°C / °F		○	×	
	Fan speed		○	×	
	External input		○	×	
	Upper/lower flap control		○	×	
	Left/right flap control		○	×	
	Ventilation setting	○	×		
	Auto-restart	○	×		
	Auto temp setting	○	×		
	Auto fan speed	○	×		
	IU settings		○	×	
	Service & Maintenance	IU address	○	○	
		Next service date	○	×	
		Operation data	Error history	○	○
			Display/erase anomaly data	○	×
			Reset periodical check	○	○
		Saving IU settings	○	×	
		Special settings	Erase IU address	○	×
			CPU reset	○	○
			Restore of default setting	○	×
			Touch panel calibration	○	○
	Indoor unit capacity display	○	×		

Advice: Connection to personal computer

It can be set from a personal computer via the USB port (mini-B).
 Connect after removing the cover for USB port of upper case.
 Replace the cover after use.
 Special software is necessary for the connection.
 For details, view the web site or refer to the engineering data.

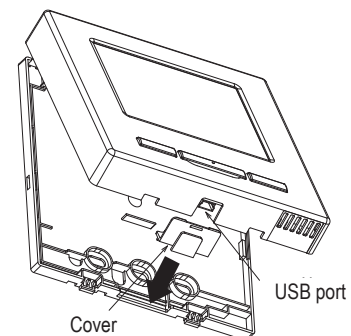

Advice: Initializing of password


Administrator password (for daily setting items) and service password (for installation, test run and maintenance) are used.

○ The administrator password at factory default is "0000". This setting can be changed (Refer to User's Manual).

If the administrator password is forgotten, it can be initialized by holding down the [F1] and [F2] switches together for five seconds on the administrator password input screen.

○ Service password is "9999", which cannot be changed.

When the administrator password is input, the service password is also accepted.

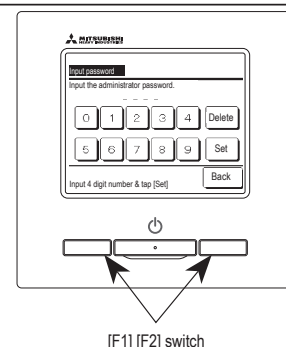

(2) Model RC-E5

PJA012D730

Read together with indoor unit's installation manual.

⚠ WARNING

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.
Loose connection or hold will cause abnormal heat generation or fire. !
- Make sure the power source is turned off when electric wiring work.
Otherwise, electric shock, malfunction and improper running may occur. !

⚠ CAUTION

- DO NOT install the remote control at the following places in order to avoid malfunction.


(1) Places exposed to direct sunlight	(4) Hot surface or cold surface enough to generate condensation
(2) Places near heat devices	(5) Places exposed to oil mist or steam directly
(3) High humidity places	(6) Uneven surface

⊘
- DO NOT leave the remote control without the upper case.
In case the upper case needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust. ⊘

Accessories	Remote control, wood screw (ø3.5×16) 2 pieces
Prepare on site	Remote control cord (2 cores) the insulation thickness in 1mm or more. [In case of embedding cord] Electrical box, M4 screw (2 pieces) [In case of exposing cord] Cord clamp (if needed)


Installation procedure

- ① Open the cover of remote control, and remove the screw under the buttons without fail.
- ② Remove the upper case of remote control.
Insert a flat-blade screwdriver into the dented part of the upper part of the remote control, and wrench slightly.

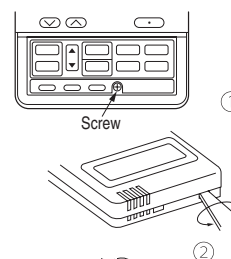


[In case of embedding cord]

- ③ Embed the electrical box and remote control cord beforehand.

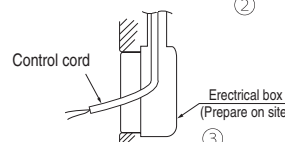


- ④ Prepare two M4 screws (recommended length is 12-16mm) on site, and install the lower case to electrical box. Choose either of the following two positions in fixing it with screws.

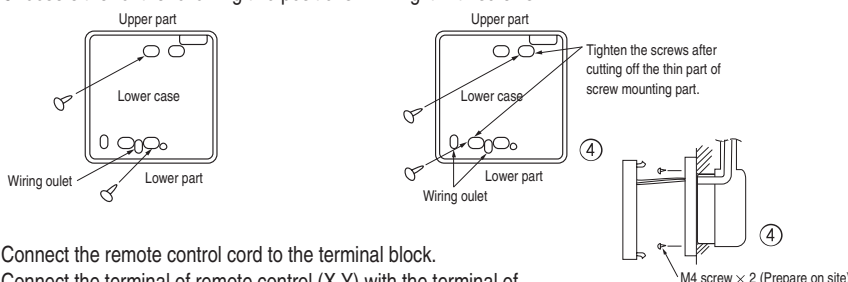

- ⑤ Connect the remote control cord to the terminal block.
Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)


- ⑥ Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.

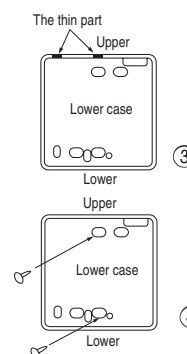

[In case of exposing cord]


- ③ You can pull out the remote control cord from left upper part or center upper part.
Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.
- ④ Install the lower case to the flat wall with attached two wooden screws.

- ⑤ Connect the remote control cord to the terminal block.
Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y).
(X and Y are no polarity)
Wiring route is as shown in the right diagram depending on the pulling out direction.

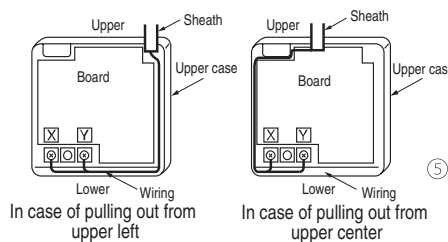

The wiring inside the remote control case should be within 0.3mm² (recommended) to 0.5mm².
The sheath should be peeled off inside the remote control case.
The peeling-off length of each wire is as below.

Pulling out from upper left	Pulling out from upper center
X wiring : 215mm	X wiring : 170mm
Y wiring : 195mm	Y wiring : 190mm




- ⑥ Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.
- ⑦ In case of exposing cord, fix the cord on the wall with cord clamp so as not to slack.

Installation and wiring of remote control

- ① Wiring of remote control should use 0.3mm² × 2 core wires or cables. (on-site configuration)
- ② Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
100 - 200m.....0.5mm² × 2 cores
Under 300m.....0.75mm² × 2 cores
Under 400m.....1.25mm² × 2 cores
Under 600m.....2.0mm² × 2 cores

Master/ slave setting when more than one remote controls are used

A maximum of two remote controls can be connected to one indoor unit (or one group of indoor units.)

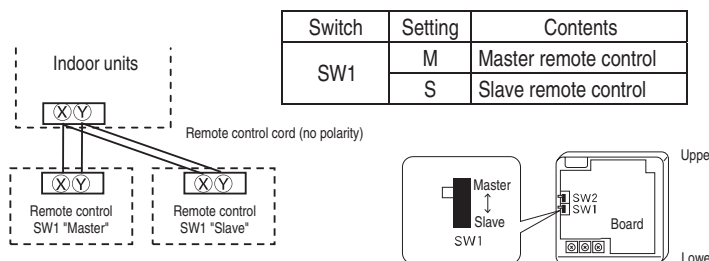


Set SW1 to "Slave" for the slave remote control. It was factory set to "Master" for shipment.
Note: The setting "Remote control thermistor enabled" is only selectable with the master remote control in the position where you want to check room temperature.
The air-conditioner operation follows the last operation of the remote control regardless of the master/ slave setting of it.

The indication when power source is supplied

When power source is turned on, the following is displayed on the remote control until the communication between the remote control and indoor unit settled.

Master remote control : "WAIT M"
Slave remote control : "WAIT S"

At the same time, a mark or a number will be displayed for two seconds first.
This is the software's administration number of the remote control, not an error cord.



※ The left mark is only an example. Other marks may appear.

When remote control cannot communicate with the indoor unit for half an hour, the below indication will appear.
Check wiring of the indoor unit and the outdoor unit etc.



The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.

Heating : 16-30°C (55-86°F)

Except heating (cooling, fan, dry, automatic) : 18-30°C (62-86°F)

●Upper limit and lower limit of set temperature can be changed with remote control.

Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 30°C (68 to 86°F).

Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 26°C (62 to 79°F).

When you set upper and lower limit by this function, control as below.


1. When ② TEMP RANGE SET, remote control function of function setting mode is "INDN CHANGE" (factory setting),
 【 If upper limit value is set 】
 During heating, you cannot set the value exceeding the upper limit.
 【 If lower limit value is set 】
 During operation mode except heating, you cannot set the value below the lower limit.
2. When ② TEMP RANGE SET, remote control function of function setting mode is "NO INDN CHANGE"
 【 If upper limit value is set 】
 During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit.
 But, the indication is the same as the temperature set.
 【 If lower limit value is set 】
 During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit.
 But, the indication is the same as the temperature set.

●How to set upper and lower limit value

1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for over three seconds.
 The indication changes to "FUNCTION SET ▼".
2. Press button once, and change to the "TEMP RANGE ▲" indication.
3. Press (SET) button, and enter the temperature range setting mode.
4. Select "UPPER LIMIT ▼" or "LOWER LIMIT ▲" by using button.
5. Press (SET) button to fix.
6. When "UPPER LIMIT ▼" is selected (valid during heating)
 - ① Indication: " ▼ ^ SET UP" → "UPPER 30°C ▼"
 - ② Select the upper limit value with temperature setting button . Indication example: "UPPER 26°C ▼ ^" (blinking)
 - ③ Press (SET) button to fix. Indication example: "UPPER 26°C" (Displayed for two seconds)
 After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".
7. When "LOWER LIMIT ▲" is selected (valid during cooling, dry, fan, automatic)
 - ① Indication: " ▼ ^ SET UP" → "LOWER 18°C ^"
 - ② Select the lower limit value with temperature setting button . Indication example: "LOWER 24°C ▼ ^" (blinking)
 - ③ Press (SET) button to fix. Indication for example: "LOWER 24°C" (Displayed for two seconds)
 After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT ▼".
8. Press button to finish.

• It is possible to finish by pressing button on the way, but unfinished change of setting is unavailable.

• During setting, if you press (RESET) button, you return to the previous screen.

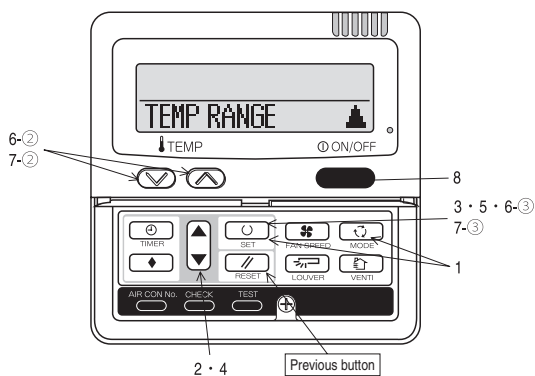


The functional setting

- The initial function setting for typical using is performed automatically by the indoor unit connected, when remote control and indoor unit are connected.
- As long as they are used in a typical manner, there will be no need to change the initial settings.
- If you would like to change the initial setting marked "○", set your desired setting as for the selected item.
- The procedure of functional setting is shown as the following diagram.

[Flow of function setting]

- Start : Stop air-conditioner and press "○" (SET) and "⇄" (MODE) buttons at the same time for over three seconds.
- Finalize : Press "○" (SET) button.
- Reset : Press "↺" (RESET) button.
- Select : Press "▲" (UP) button.
- End : Press "ON/OFF" button.

It is possible to finish above setting on the way, and unfinished change of setting is unavailable.
 "○": Initial settings
 "※": Automatic criterion

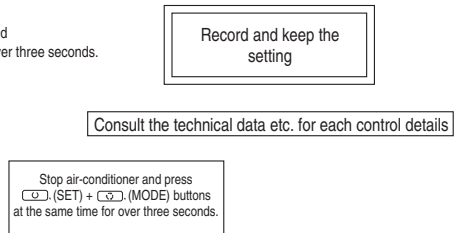

To next page

FUNCTION (Remote control function)

Function	setting	
01 ESP SET	ESP VALID	○ Validate setting of ESP: External Static Pressure
	ESP INVALID	○ Invalidate setting of ESP
02 AUTO RUN SET	AUTO RUN ON	※ Automatic operation is impossible
	AUTO RUN OFF	※ Automatic operation is impossible
03 TEMP SW	TEMP VALID	○ Temperature setting button is not working
	TEMP INVALID	○ Temperature setting button is not working
04 MODE SW	MODE VALID	○ Mode button is not working
	MODE INVALID	○ Mode button is not working
05 ON/OFF SW	ON/OFF VALID	○ On/Off button is not working
	ON/OFF INVALID	○ On/Off button is not working
06 FAN SPEED SW	FAN SPEED VALID	※ Fan speed button is not working
	FAN SPEED INVALID	※ Fan speed button is not working
07 LOUVER SW	LOUVER VALID	※ Louver button is not working
	LOUVER INVALID	※ Louver button is not working
08 TIMER SW	TIMER VALID	○ Timer button is not working
	TIMER INVALID	○ Timer button is not working
09 SENSOR SET	SENSOR OFF	○ Remote thermistor is not working.
	SENSOR ON	○ Remote thermistor is working.
	SENSOR +3.0℃	○ Remote thermistor is working, and to be set for producing +3.0℃ increase in temperature.
	SENSOR +2.0℃	○ Remote thermistor is working, and to be set for producing +2.0℃ increase in temperature.
	SENSOR +1.0℃	○ Remote thermistor is working, and to be set for producing +1.0℃ increase in temperature.
	SENSOR -1.0℃	○ Remote thermistor is working, and to be set for producing -1.0℃ increase in temperature.
	SENSOR -2.0℃	○ Remote thermistor is working, and to be set for producing -2.0℃ increase in temperature.
SENSOR -3.0℃	○ Remote thermistor is working, and to be set for producing -3.0℃ increase in temperature.	
10 AUTO RESTART	INVALID	○
	VALID	○
11 VENT LINK SET	NO VENT	○ In case of Single split series, by connecting ventilation device to CnT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), the operation of ventilation device is linked with the operation of indoor unit.
	VENT LINK	○ In case of Single split series, by connecting ventilation device to CnT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), you can operate /stop the ventilation device independently by (VENT) button.
	NO VENT LINK	○ In case of Single split series, by connecting ventilation device to CnT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), you can operate /stop the ventilation device independently by (VENT) button.
12 TEMP RANGE SET	INDX CHANGE	○ If you change the range of set temperature, the indication of set temperature will vary following the control.
	NO INDX CHANGE	○ If you change the range of set temperature, the indication of set temperature will not vary following the control, and keep the set temperature.
13 L/U FAN	HI-MID-LO	※ Airflow of fan becomes of [HI-MID-LO] or the four speed of [HI-MID-LO].
	HI-LO	※ Airflow of fan becomes of [HI-LO].
	HI-MID	※ Airflow of fan becomes of [HI-MID].
	1 FAN SPEED	※ Airflow of fan is fixed at one speed.
14 POSITION	POSITION STOP	○ If you change the remote control function "14 POSITION", you must change the indoor function "04 POSITION" accordingly. You can select the louver stop position in the four.
	FREE STOP	○ The louver can stop at any position.
15 MODEL TYPE	HEAT PUMP	※
	COOLING ONLY	※
16 EXTERNAL CONTROL SET	INDIVIDUAL	○ If you input signal into CnT of the indoor printed circuit board from external, the indoor unit will be operated independently according to the input from external.
	FOR ALL UNITS	○ If you input into CnT of the indoor printed circuit board from external, all units which connect to the same remote control are operated according to the input from external.
17 ROOM TEMP INDICATION SET	INDICATION OFF	○ In normal working indication, indoor unit temperature is indicated instead of airflow. (Only the master remote control can be indicated.)
	INDICATION ON	○ In normal working indication, indoor unit temperature is indicated instead of airflow. (Only the master remote control can be indicated.)
18 INDICATION	INDICATION ON	○ Heating preparation indication should not be indicated.
	INDICATION OFF	○ Heating preparation indication should not be indicated.
19 °C/°F SET	°C	○ Temperature indication is by degree C
	°F	○ Temperature indication is by degree F

To next page

ON/OFF button (finished)

Note 1: The initial setting marked "※" is decided by connected indoor and outdoor unit, and is automatically defined as following table.

Function No.	Item	Default	Model
Remote control function02	AUTO RUN SET	AUTO RUN ON	"Auto-RUN" mode selectable indoor unit.
		AUTO RUN OFF	Indoor unit without "Auto-RUN" mode
Remote control function06	FAN SPEED SW	VALID	Indoor unit with two or three step of air flow setting
		INVALID	Indoor unit with only one of air flow setting
Remote control function07	LOUVER SW	VALID	Indoor unit with automatically swing louver
		INVALID	Indoor unit without automatically swing louver
Remote control function13	I/U FAN	HI-MID-LO	Indoor unit with three step of air flow setting
		HI-LO	Indoor unit with two step of air flow setting
		HI-MID	
		1 FAN SPEED	Indoor unit with only one of air flow setting
Remote control function15	MODEL TYPE	HEAT PUMP	Heat pump unit
		COOLING ONLY	Exclusive cooling unit

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit.
But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL INPUT" and "06 PERMISSION / PROHIBITION".

From previous page

(Indoor unit function) I/UFUNCTION ▲ Indoor unit No. are indicated only when plural indoor units are connected.

To set other indoor unit, press [AIRCON No.] button, which allows you to go back to the indoor unit selection screen (for example: I/U 000 ▲).

Function	setting
02 FAN SPEED SET	STANDARD ※ HIGH SPEED 1 ※ HIGH SPEED 2
03 FILTER SIGN SET	INDICATION OFF TYPE 1 ○ TYPE 2 TYPE 3 TYPE 4
04 POSITION	4 POSITION STOP ○ FREE STOP
05 EXTERNAL INPUT	LEVEL INPUT ○ PULSE INPUT
06 OPERATION PERMISSION/PROHIBITION	INVALID ○ VALID
07 EMERGENCY STOP	INVALID ○ VALID
08 ※SP OFFSET	OFFSET +3.0℃ OFFSET +2.0℃ OFFSET +1.0℃ NO OFFSET ○
09 RETURN AIR TEMP	OFFSET +2.0℃ OFFSET +1.5℃ OFFSET +1.0℃ NO OFFSET ○ OFFSET -1.0℃ OFFSET -1.5℃ OFFSET -2.0℃
10 ※FAN CONTROL	LOW FAN SPEED ○ SET FAN SPEED INTERMITTENCE FAN OFF
11 FROST PREVENTION TEMP	TEMP HIGH TEMP LOW ○
12 FROST PREVENTION CONTROL	FAN CONTROL ON ○ FAN CONTROL OFF
13 DRAIN PUMP LINK	○ AND ※ ○ AND ※ AND ※ ○ AND ※ AND ※ AND ※ ○ AND ※ AND ※
14 ※FAN REMAINING	NO REMAINING ○ 0.5 HOUR 1 HOUR 6 HOUR
15 ※FAN REMAINING	NO REMAINING ○ 0.5 HOUR 2 HOUR 6 HOUR
16 ※FAN INTERMITTENCE	NO REMAINING ○ 20min OFF swi ON 5min OFF swi ON
17 PRESSURE CONTROL	STANDARD ※ TYPE1 ※

Note2: Fan setting of "HIGH SPEED"

FAN SPEED SET	Fan tap	Indoor unit air flow setting					
		Hi - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me	Hi - Hi	Hi - Hi
STANDARD		Hi - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me	Hi - Hi	
HIGH SPEED1,2		UH - UH - Hi - Me	UH - Hi - Me	UH - Me	UH - Hi	UH - Hi	

Initial function setting of some indoor unit is "HIGH SPEED".
4 speed is not able to be set with wireless remote control.
The filter sign is indicated after running for 180 hours.
The filter sign is indicated after running for 600 hours.
The filter sign is indicated after running for 1000 hours.
The filter sign is indicated after running for 1000 hours, then the indoor unit will be stopped by compulsion after 24 hours.

If you change the indoor function "04 POSITION", you must change the remote control function "14 POSITION" accordingly.
You can select the louver stop position in the four.
The louver can stop at any position.

Permission/prohibition control of operation will be valid.

With the VRF series, it is used to stop all indoor units connected with the same outdoor unit immediately.
When stop signal is inputted from remote on-off terminal "CnT-6", all indoor units are stopped immediately.

To be reset for producing +3.0℃ increase in temperature during heating.
To be reset for producing +2.0℃ increase in temperature during heating.
To be reset for producing +1.0℃ increase in temperature during heating.

To be reset producing +2.0℃ increase in return air temperature of indoor unit.
To be reset producing +1.5℃ increase in return air temperature of indoor unit.
To be reset producing +1.0℃ increase in return air temperature of indoor unit.
To be reset producing -1.0℃ increase in return air temperature of indoor unit.
To be reset producing -1.5℃ increase in return air temperature of indoor unit.
To be reset producing -2.0℃ increase in return air temperature of indoor unit.

When heating thermostat is OFF, fan speed is low speed.
When heating thermostat is OFF, fan speed is set speed.
When heating thermostat is OFF, fan speed is operated intermittently.
When heating thermostat is OFF, the fan is stopped.
When the remote thermostat is working, "FAN OFF" is set automatically.
Do not set "FAN OFF" when the indoor unit's thermostat is working.

Change of indoor heat exchanger temperature to start frost prevention control.

Working only with the Single split series.
To control frost prevention, the indoor fan tap is raised.

Drain pump is run during cooling and dry.
Drain pump is run during cooling, dry and heating.
Drain pump is run during cooling, dry, heating and fan.
Drain pump is run during cooling, dry and fan.

After cooling is stopped, the fan does not perform extra operation.
After cooling is stopped, the fan perform extra operation for half an hour.
After cooling is stopped, the fan perform extra operation for an hour.
After cooling is stopped, the fan perform extra operation for six hours.

After heating is stopped or heating thermostat is OFF, the fan does not perform extra operation.
After heating is stopped or heating thermostat is OFF, the fan perform extra operation for half an hour.
After heating is stopped or heating thermostat is OFF, the fan perform extra operation for two hours.
After heating is stopped or heating thermostat is OFF, the fan perform extra operation for six hours.

During heating is stopped or heating thermostat is OFF, the fan perform intermittent operation for five minutes with low fan speed after twenty minutes' OFF.
During heating is stopped or heating thermostat is OFF, the fan perform intermittent operation for five minutes with low fan speed after five minutes' OFF.

Connected "OA Processing" type indoor unit, and is automatically defined.


From previous page

How to set function

1. Stop air-conditioner and press (SET) (MODE) buttons at the same time for over three seconds, and the "FUNCTION SET ▼" will be displayed.




2. Press (SET) button.
3. Make sure which do you want to set, "FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function).
4. Press (▲) or (▼) button.
Select "FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function).




5. Press (SET) button.

6. 【On the occasion of remote control function selection】


- ① "DATA LOADING" (Indication with blinking)
↓
Display is changed to "01 ESP SET".
- ② Press (▲) or (▼) button.
"No. and function" are indicated by turns on the remote control function table, then you can select from them.
(For example)



- ③ Press (SET) button.
The current setting of selected function is indicated.
(for example) "AUTO RUN ON" ← If "02 AUTO RUN SET" is selected




- ④ Press (▲) or (▼) button.
Select the setting.



- ⑤ Press (SET) button.
"SET COMPLETE" will be indicated, and the setting will be completed.
Then after "No. and function" indication returns, set as the same procedure if you want to set continuously, and if to finish, go to 7.



7. Press (ON/OFF) button.
Setting is finished.

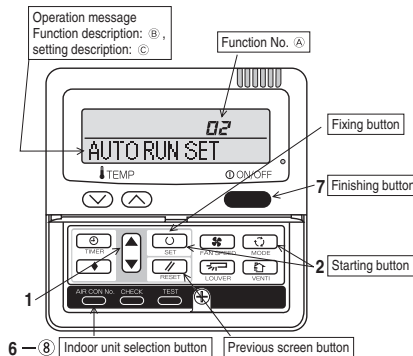


【On the occasion of indoor unit function selection】

- ① "DATA LOADING" (Blinking for 2 to 23 seconds to read the data)
↓
Indication is changed to "02 FAN SPEED SET".
Go to ②.

[Note]


- (1) If plural indoor units are connected to a remote control, the indication is "I/U 000" (blinking) ← The lowest number of the indoor unit connected is indicated.




- (2) Press (▲) or (▼) button.
Select the number of the indoor unit you are to set
If you select "ALL UNIT ▼", you can set the same setting with all unites.

- (3) Press (SET) button.

- ② Press (▲) or (▼) button.
"No. and function" are indicated by turns on the indoor unit function table, then you can select from them.
(For example)



- ③ Press (SET) button.
The current setting of selected function is indicated.
(For example) "STANDARD" ← If "02 FAN SPEED SET" is selected.



- ④ Press (▲) or (▼) button.
Select the setting.

- ⑤ Press (SET) button.
"SET COMPLETE" will be indicated, and the setting will be completed.
Then after "No. and function" indication returns, set as the same procedure if you want to set continuously, and if to finish, go to 7.



※ When plural indoor units are connected to a remote control, press the (AIR CON No.) button, which allows you to go back to the indoor unit selection screen. (example "I/U 000 ▲")


- It is possible to finish by pressing (ON/OFF) button on the way, but unfinished change of setting is unavailable.
- During setting, if you press (RESET) button, you return to the previous screen.
- Setting is memorized in the control and it is saved independently of power failure.

[How to check the current setting]

When you select from "No. and function" and press set button by the previous operation, the "Setting" displayed first is the current setting.
(But, if you select "ALL UNIT ▼", the setting of the lowest number indoor unit is displayed.)

1.9.4 Installation of outdoor unit

(1) Models SRC40-60ZSX-S

RWC012A060 

Model SRC20,25,35,40,50,60ZSX-S SRC20,25,35ZSX-SA
R410A REFRIGERANT USED

- This installation manual deals with an outdoor unit installation only. For an indoor unit installation, refer to page 65.

SAFETY PRECAUTIONS

- Before installation, read the "SAFETY PRECAUTIONS" carefully and strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **⚠ WARNING** and **⚠ CAUTION**.
 - ⚠ WARNING** Indicates a potentially hazardous situation which, if not avoided, can result in serious consequences such as death or severe injury.
 - ⚠ CAUTION** Indicates a potentially hazardous situation which, if not avoided, can result in personal injury or property damage.
- Be sure to confirm no operation problem on the equipment after completing the installation. If unusual noise can be heard during the test run, consult the dealer.
- Be sure to explain the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.
- Be sure to keep the installation manual together with user's manual at a place where it is easily accessible to the user any time. Moreover, ask the user to hand the manuals to a new user, whenever required.

Both mention the important items to protect your health and safety. Therefore, strictly follow them by any means.


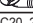
⚠ WARNING

- **Be sure to use only for residential purpose.**
If this unit is installed in inferior environment such as machine shop, vehicle (like ship), warehouse, etc., it can malfunction.
- **Installation must be carried out by the qualified installer completely in accordance with the installation manual.**
Installation by non qualified person or incorrect installation can cause serious troubles such as water leak, electric shock, fire and personal injury.
- **Be sure to wear protective goggles and gloves while performing installation work.**
Improper safety measures can result in personal injury.
- **Use the original accessories and the specified components for the installation.**
Using parts other than those prescribed may cause water leak, electric shock, fire and personal injury.
- **Do not install the unit near the location where leakage of flammable gases can occur.**
If leaked gases accumulate around the unit, it can cause fire resulting in property damage and personal injury.
- **When installing the unit in small rooms, make sure that refrigerant density does not exceed the limit (Reference: ISO5149) in the event of leakage.**
If refrigerant density exceeds the limit, consult the dealer and install the ventilation system. Otherwise lack of oxygen can occur resulting in serious accident.
- **Install the unit in a location where unit will remain stable, horizontal and free of any vibration transmission.**
Unsuitable installation location can cause the unit to fall resulting in material damage and personal injury.
- **Do not run the unit with removed panels or protections.**
Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shock.
- **This unit is designed specifically for R410A.**
Using any other refrigerant can cause unit failure and personal injury.
- **Do not vent R410A into atmosphere.**
R410A is a fluorinated greenhouse gas with a Global Warming Potential(GWP)=2088.
- **Make sure that no air enters the refrigerant circuit when the unit is installed and removed.**
If air enters the refrigerant circuit, the pressure in the refrigerant circuit will become too high, which can cause burst and personal injury.
- **Be sure to use the prescribed pipes, flare nuts and tools for R410A.**
Using existing parts (for R22 or R407C) can cause refrigerant circuit burst resulting in unit failure and personal injury.
- **Be sure to connect both liquid and gas connecting pipes properly before operating the compressor.**
Do not open the liquid and gas service valves before completing piping work, and evacuation.
If the compressor is operated when connecting pipes are not connected and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure resulting in burst or personal injury.
- **Be sure to tighten the flare nuts to specified torque using the torque wrench.**
Tightening flare nuts with excess torque can cause burst and refrigerant leakage after a long period.
- **During pump down work, be sure to stop the compressor before closing service valves and removing connecting pipes.**
If the connecting pipes are removed when the compressor is in operation and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure resulting in burst or personal injury.
- **In the event of refrigerant leakage during installation, be sure to ventilate the working area properly.**
If the refrigerant comes into contact with naked flames, poisonous gases will be produced.
- **Electrical work must be carried out by the qualified electrician, strictly in accordance with national or regional electricity regulations.**
Incorrect installation can cause electric shock, fire or personal injury.
- **Make sure that earth leakage breaker and circuit breaker of appropriate capacities are installed.**
Circuit breaker should be able to disconnect all poles under over current. Absence of appropriate breakers can cause electric shock, personal injury or property damage.
- **Be sure to switch off the power source in the event of installation, maintenance or service.**
If the power source is not switched off, there is a risk of electric shock, unit failure or personal injury.
- **Be sure to tighten the cables securely in terminal block and relieve the cables properly to prevent overloading the terminal blocks.**
Loose connections or cable mountings can cause anomalous heat production or fire.
- **Do not process, splice or modify the power cable, or share the socket with other power plugs.**
Improper power cable or power plug can cause fire or electric shock due to poor connection, insufficient insulation or over-current.
- **Do not perform any change in protective device or its setup condition yourself.**
Changing protective device specifications can cause electric shock, fire or burst.
- **Be sure to clamp the cables properly so that they do not touch any internal component of the unit.**
If cables touch any internal component, it can cause overheating and fire.
- **Be sure to install service cover properly.**
Improper installation can cause electric shock or fire due to intrusion of dust or water.
- **Be sure to use the prescribed power and connecting cables for electrical work.**
Using improper cables can cause electric leak, anomalous heat production or fire.
- **This appliance must be connected to main power source by means of a circuit breaker or switch with a contact separation of at least 3mm.**
Improper electrical work can cause unit failure or personal injury.
- **When plugging this unit, a plug conforming to the norm IEC60884-1 must be used.**
Using improper plug can cause electric shock or fire.
- **Be sure to connect the power source cable with power source properly.**
Improper connection can cause intrusion of dust or water resulting in electric shock or fire.

⚠ CAUTION

- **Take care when carrying the unit by hand.**
If the unit weight is more than 20kg, it must be carried by two or more persons.
Do not carry the unit by the plastic straps. Always use the carry handle.
- **Do not install the outdoor unit in a location where insects and small animals can inhabit.**
Insects and small animals can enter the electrical parts and cause damage resulting in fire or personal injury. Instruct the user to keep the surroundings clean.
- **If the outdoor unit is installed at height, make sure that there is enough space for installation, maintenance and service.**
Insufficient space can result in personal injury due to falling from the height.
- **Do not install the unit near the location where neighbours are bothered by noise or air generating from the unit.**
It can affect surrounding environment and cause a claim.
- **Do not install in the locations where unit is directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty atmosphere.**
It can cause corrosion of heat exchanger and damage to plastic parts.
- **Do not install the unit close to the equipments that generate electromagnetic waves and/or high-harmonic waves.**
Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns.
The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.
- **Do not install the unit in the locations where:**
 - There are heat sources nearby.
 - Unit is directly exposed to rain or sunlight.
 - There is any obstacle which can prevent smooth air circulation from inlet and outlet side of the unit.
 - Unit is directly exposed to oil mist and steam such as kitchen.
 - Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and acid (sulfurous acid etc.), which can harm the unit, will generate or accumulate.
 - Drain water can not be discharged properly.
 - TV set or radio receiver is placed within 1m.
 - Height above sea level is more than 1000m.
- **It can cause performance degradation, corrosion and damage of components, unit malfunction and fire.**
- **Dispose of all packing materials properly.**
Packing materials contain nails and wood which can cause personal injury.
Keep the polybag away from children to avoid the risk of suffocation.
- **Do not put anything on the outdoor unit.**
Object may fall causing property damage or personal injury.
- **Do not touch the aluminum fin of the outdoor unit.**
Aluminium fin temperature is high during heating operation. Touching fin can cause burn.
- **Do not touch any refrigerant pipe with your hands when the system is in operation.**
During operation the refrigerant pipes become extremely hot or extremely cold depending on the operating condition. Touching pipes can cause personal injury like burn (hot/cold).
- **Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.**
The isolator should be locked in OFF state in accordance with EN60204-1.

1. ACCESSORIES AND TOOLS

Standard accessories (Supplied with outdoor unit)	Q'ty	Locally procured parts	Tools for installation work		
(1) Drain grommet 	4	(a) Anchor bolt(M10-M12)×4 pcs	Plus headed driver	Spanner wrench	Vacuum pump*
(2) Drain elbow 	1	(b) Putty	Knife	Torque wrench [14.0-62.0N/m(1.4-6.2kgf·m)]	Gauge manifold *
		(c) Electrical tape	Saw	Wrench key (Hexagon) [4m/m]	Charge hose *
		(d) Connecting pipe	Tape measure	Flaring tool set *	Vacuum pump adapter* (Anti-reverse flow type)
		(e) Connecting cable	Pipe cutter	Flare adjustment gauge	Gas leak detector *
		(f) Power cable			
		(g) Clamp and screw (for finishing work)			


*Not included for SRC20, 25, or 35ZSX-SA.

*Designed specifically for R410A

2. OUTDOOR UNIT INSTALLATION

1. Haulage

- Always carry or move the unit with two or more persons.
 - The right hand side of the unit as viewed from the front (outlet side) is heavier.
- A person carrying the right hand side must take care of this fact. A person carrying the left hand side must hold the handle provided on the front panel of the unit with his right hand and the corner column section of the unit with his left hand.

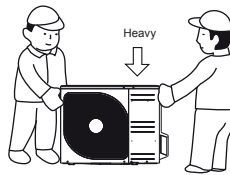

CAUTION

When a unit is hauled, take care of its gravity center position which is shifted towards right hand side. If the unit is not hauled properly, it can go off balance and fall resulting in serious injury.

2. Selecting the installation location

Select the suitable installation location where:

- Unit will be stable, horizontal and free of any vibration transmission.
- There is no obstacle which can prevent smooth air circulation from inlet and outlet side of the unit.
- There is enough space for service and maintenance of unit.
- Neighbours are not bothered by noise or air generating from the unit.
- Outlet air of the unit does not blow directly to animals or plants.
- Drain water can be discharged properly.
- There is no risk of flammable gas leakage.
- There are no other heat sources nearby.
- Unit is not directly exposed to rain or sunlight.
- Unit is not directly exposed to oil mist and steam.
- Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and acid (sulfurous acid etc.), which can harm the unit, will not generate or accumulate.
- Unit is not directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty atmosphere.
- No TV set or radio receiver is placed within 1m.
- Unit is not affected by electromagnetic waves and/or high-harmonic waves generated by other equipments.
- Strong wind does not blow against the unit outlet.
- Heavy snowfalls do not occur (If installed, provide proper protection to avoid snow accumulation).

NOTE

If the unit is installed in the area where there is a possibility of strong wind or snow accumulation, the following measures are required.


(1) Location of strong wind

- Place the unit with its outlet side facing the wall.
- Place the unit such that the direction of air from the outlet gets perpendicular to the wind direction.




(2) Location of snow accumulation

- Install the unit on the base so that the bottom is higher than snow cover surface.
- Install the unit under eaves or provide the roof on site.

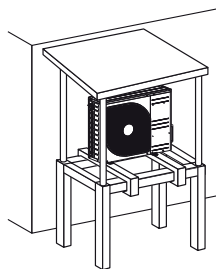

3. Installation space

- There must be 1 meter or larger space between the unit and the wall in at least 1 of the 4 sides. Walls surrounding the unit from 4 sides is not acceptable. The wall height on the outlet side should be 1200 mm or less. Refer to the following figure and table for details.

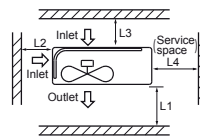

		(mm)			
Example installation		I	II	III	IV
Size	L1	Open	280	280	180
	L2	100	75	Open	Open
	L3	100	80	80	80
	L4	250	Open	250	Open

NOTE

When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space.

CAUTION


When more than one unit are installed in parallel directions, provide sufficient inlet space so that short-circuiting may not occur.

4. Drain piping work (If necessary)

Carry out drain piping work by using a drain elbow and a drain grommet supplied separately as accessories if condensed water needs to be drained out.

- Install drain elbow and drain grommet.
- Seal around the drain elbow and drain grommet with putty or adequate caulking material.

<SRC20/25/35/40/50/60ZSX-S>

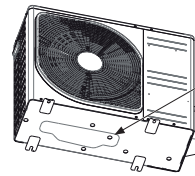


Do not put a grommet on this hole. This is a supplementary drain hole to discharge drain water, when a large amount of it is gathered.

CAUTION

Do not use drain elbow and drain grommet if there is a possibility to have several consecutive days of sub zero temperature. (There is a risk of drain water freezing inside and blocking the drain.)


<SRC20/25/35ZSX-SA>

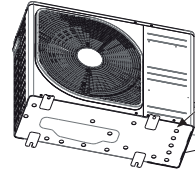

Do not block the drain holes when installing the outdoor unit.

5. Installation

- Install the unit on a flat level base.
- While installing the unit, keep space and fix the unit's legs with 4 anchor bolts as shown in the figure below. The protrusion of an anchor bolt from the foundation surface must be kept within 15mm.

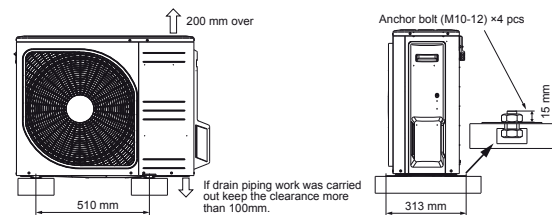


CAUTION

- Install the unit properly so that it does not fall over during earthquake, strong wind, etc.
- Make sure that unit is installed on a flat level base. Installing unit on uneven base may result in unit malfunction.

3. PREPARATION FOR WORK


1. Removing service cover

Remove the screw. Slide service cover downwards and remove it.

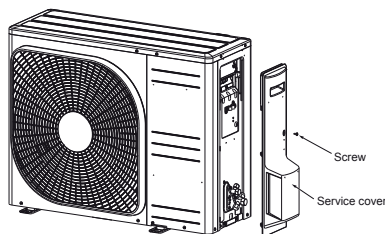

2. Removing terminal cover

Remove the screw and take out terminal cover.

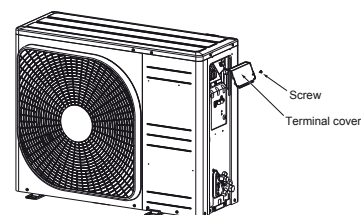


4. CONNECTING PIPING WORK

1. Restrictions on unit installation

Abide by the following restrictions on unit installation. Improper installation can cause compressor failure or performance degradation.

	Dimensional restrictions	
	Model SRC20/25/35	Model SRC40/50/60
Connecting pipe length(L)	25m or less	30m or less
Elevation difference between indoor and outdoor units(H)*	15m or less	20m or less

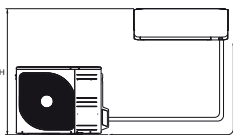

* Outdoor unit installation position can be higher as well as lower than the indoor unit installation position.

2. Preparation of connecting pipe

2.1. Selecting connecting pipe

Select connecting pipe according to the following table.

	Model SRC20/25/35	Model SRC40/50/60
Gas pipe	ø9.52	ø12.7
Liquid pipe	ø6.35	ø6.35

- Pipe wall thickness must be greater than or equal to 0.8 mm.
- Pipe material must be O-type (Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30).

NOTE


If it is required to reuse the existing connecting pipe system, refer to 5. UTILIZATION OF EXISTING PIPE.

2.2. Cutting connecting pipe

- (1) Cut the connecting pipe to the required length with pipe cutter.
- (2) Hold the pipe downward and remove the burrs. Make sure that no foreign material enters the pipe.
- (3) Cover the connecting pipe ends with the tape.

3. Piping work

Check that both liquid and gas service valves are fully closed. Carry out the piping work with service valves fully closed.

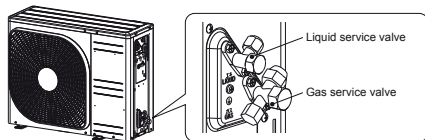

3.1. Flaring pipe


- (1) Take out flare nuts from the service valves of outdoor unit and engage them onto connecting pipes.
- (2) Flare the pipes according to table and figure shown below. Flare dimensions for R410A are different from those for conventional refrigerant. Although it is recommended to use the flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a flare adjustment gauge.

Copper pipe outer diameter	A ₀ -0.4	Copper pipe outer diameter	Rigid (clutch) type	
			R410A	Conventional
ø6.35	9.1	ø6.35		
ø9.52	13.2	ø9.52	0.0-5	1.0-1.5
ø12.7	16.6	ø12.7		

3.2. Connecting pipes

- (1) Connect pipes on both liquid and gas sides.
- (2) Tighten nuts to specified torque shown in the table below.

Service valve size (mm)	Tightening torque (N·m)
ø6.35 (1/4")	14-18
ø9.52 (3/8")	34-42
ø12.7 (1/2")	49-61

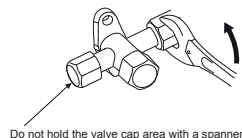


CAUTION

- Do not apply refrigerating machine oil to the flared surface. It can cause refrigerant leakage.
- Do not apply excess torque to the flared nuts. The flared nuts may crack resulting in refrigerant leakage.

4. Evacuation

- (1) Connect vacuum pump to gauge manifold. Connect charge hose of gauge manifold to service port of outdoor unit.
- (2) Run the vacuum pump for at least one hour after the vacuum gauge shows -0.1MPa (-76cm Hg).
- (3) Confirm that the vacuum gauge indicator does not rise even if the system is left for 15 minutes or more. Vacuum gauge indicator will rise if the system has moisture left inside or has a leakage point. Check the system for the leakage point. If leakage point is found, repair it and return to (1) again.
- (4) Close the Handle Lo and stop the vacuum pump. Keep this state for a few minutes to make sure that the compound pressure gauge pointer does not swing back.
- (5) Remove valve caps from liquid service valve and gas service valve.
- (6) Turn the liquid service valve's rod 90 degree counterclockwise with a hexagonal wrench key to open valve. Close it after 5 seconds, and check for gas leakage. Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods. Wipe off all the water after completing the check.
- (7) Disconnect charging hose from gas service valve's service port and fully open liquid and gas service valves. (Do not attempt to turn valve rod beyond its stop.)
- (8) Tighten service valve caps and service port cap to the specified torque shown in the table below.

Service valve size (mm)	Service valve cap tightening torque (N·m)	Service port cap tightening torque (N·m)
ø6.35 (1/4")	20-30	10-12
ø9.52 (3/8")		
ø12.7 (1/2")	25-35	

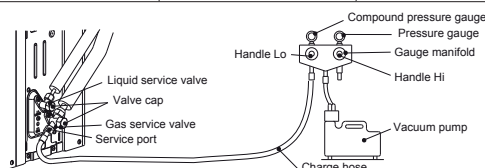

CAUTION

- To prevent the entering of different oil into the refrigeration system, do not use tools designed for any other refrigerant type (R22, R407C, etc.).
- To prevent vacuum pump oil from entering into the refrigerant system, use a counterflow prevention adapter.

5. Additional refrigerant charge

Additional refrigerant charge is required only when connecting pipe length exceeds 15 m.

5.1 Calculating additional refrigerant charge

Additional refrigerant charge can be calculated using the formula given below. Additional refrigerant charge (g) = { Connecting pipe length (m) - Factory charged length 15 (m) } x 20 (g/m)

NOTE

- If additional refrigerant charge calculation result is negative, there is no need to remove the refrigerant.
- If refrigerant recharge is required for the unit with connecting pipe length 15m or shorter, charge the factory charged volume as shown in the table below.

	Model SRC 20/25/35	Model SRC40/50/60
Factory charged volume(kg)	1.45	1.50

5.2 Charging refrigerant


- (1) Charge the R410A refrigerant in liquid phase from service port with both liquid and gas service valves shut. Since R410A refrigerant must be charged in the liquid phase, make sure that refrigerant is discharged from the cylinder in the liquid phase all the time.
- (2) When it is difficult to charge a required refrigerant volume, fully open both liquid and gas service valves and charge refrigerant, while running the unit in the cooling mode. When refrigerant is charged with the unit being run, complete the charge operation within 30 minutes.
- (3) Write the additional refrigerant charge calculated from the connecting pipe length on the label attached on the service cover.

CAUTION

Running the unit with an insufficient quantity of refrigerant for a long time can cause unit malfunction.

5. UTILIZATION OF EXISTING PIPE

- (1) Check whether an existing pipe system is reusable or not by using the following flow chart.

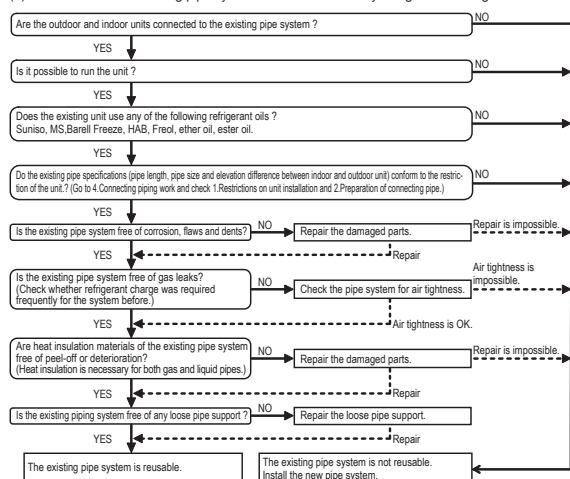

NOTE

- Consult with our distributor in the area, if you need to recover refrigerant and charge it again.
- (2) Clean the existing pipe system according to the procedure given below.
 - (a) Carry out forced cooling operation of existing unit for 30 minutes. For "Forced cooling operation" refer to the indoor unit installation manual.
 - (b) Stop the indoor fan and carry out forced cooling operation for 3 minutes (Liquid return).
 - (c) Close the liquid service valve of the outdoor unit and carry out pump down operation (Refer to 6. PUMP DOWN).
 - (d) Blow with nitrogen gas. If discolored refrigeration oil or any foreign matter is discharged by the blow, wash the pipe system or install a new pipe system.
- (3) Remove the flare nuts from the existing pipe system. Go back to 4. Connecting Piping work and proceed to step 2.2 Cutting connecting pipe.

CAUTION

Do not use the old flare nuts (of existing unit). Make sure that the flare nuts supplied with the (new) outdoor unit are used.

* If the existing piping is specified as liquid pipe ø9.52 or gas pipe ø12.7, refer to the following. (SRC40.50 and 60 only)


<Table of pipe size restrictions>

Additional charge volume per meter of pipe		0.06kg/m
Pipe size	Liquid pipe	ø9.52
	Gas pipe	ø12.7
Maximum one-way pipe length		10
Length covered without additional charge		5

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) X Additional charge volume per meter of pipe shown in the table (kg/m)

6. PUMP DOWN

- Connect charge hose of gauge manifold to service port of outdoor unit.
- Close the liquid service valve with hexagonal wrench key.
- Fully open the gas service valve with hexagonal wrench key.
- Carry out forced cooling operation (For forced cooling operation procedure, refer to indoor unit installation manual).
- When the low pressure gauge becomes 0.01MPa, close the gas service valve and stop forced cooling operation.

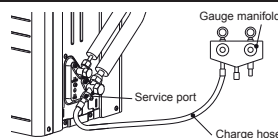

7. ELECTRICAL WIRING WORK

⚠ WARNING

- Make sure that all the electrical work is carried out in accordance with the national or regional electrical standards.
- Make sure that the earth leakage breaker and circuit breaker of appropriate capacities are installed (Refer to the table given below).
- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor. Moreover, it can cause an abnormal overheat accident).

Breaker specifications

Model	Phase	Earth leakage breaker	Circuit breaker
SRC20/25/35	Single phase	Leakage current: 30mA, 0.1sec or less	Over current: 16A
SRC40/50/60			Over current: 20A

Main fuse specification

Model	Specification	Parts No.	Code on LABEL,WIRING
SRC20/25/35	250V 15A	SSA564A136	F7
SRC40/50/60	250V 20A	SSA564A136A	F4


1.Preparing cable

- Selecting cable
Select the power source cable and connecting cable in accordance with the specifications mentioned below.


- Power source cable
3-core* 2.0mm² or more, conformed with 60245 IEC57(CENELEC H05RN-F)
When selecting the power source cable length, make sure that voltage drop is less than 2%.
If the wire length gets longer, increase the wire diameter.

- Connecting cable
4-core* 1.5mm², conformed with 60245 IEC57(CENELEC H05RN-F)
* 1 Earth wire is included (Yellow/Green)

- Arrange each wire length as shown below.
Make sure that each wire is stripped 10mm from the end.

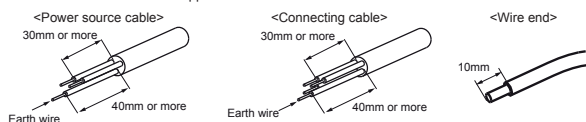

- Attach round crimp-type terminal to each wire as shown in the below.
Select the size of round crimp-type terminal after considering the specifications of terminal block and wire diameter.





⚠ CAUTION

Power source cable and connecting cable must conform to the specifications mentioned in the manual. Using cables with wrong specifications may result in unit malfunction.

2.Connecting cable

- Remove the service cover.
- Connect the cables according to the instructions and figures given below.
 - Connect the earth wire of power source cable.
An earth wire must be connected before connecting the other wires of power source cable. Keep the earth wire longer than the remaining two wires of power source cable.
 - Connect the remaining two wires (N and L) of power source cable.
 - Connect the wires of connecting cable. Make sure that for each wire, outdoor and indoor side terminal numbers match.
- Fasten the cables properly with cable clamps so that no external force may work on terminal connections.
Moreover, make sure that cables do not touch the piping, etc. When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection.


<Circuit diagram>

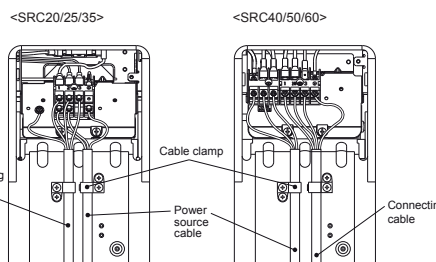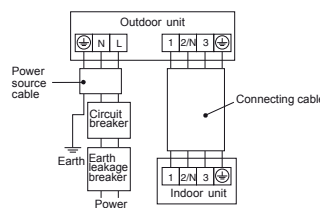

8. FINISHING WORK

1. Heating and condensation prevention

- Dress the connecting pipes (both liquid and gas pipes) with insulation to prevent it from heating and dew condensation.
Use the heat insulating material which can withstand 120°C or higher temperature. Make sure that insulation is wrapped tightly around the pipes and no gap is left between them.
- Wrap the refrigerant pipings of indoor unit with indoor unit heat insulation using tape.
- Cover the flare-connected joints (indoor side) with the indoor unit heat insulation and wrap it with an insulation pad (standard accessory provided with indoor unit).
- Wrap the connecting pipes, connecting cable and drain hose with the tape.

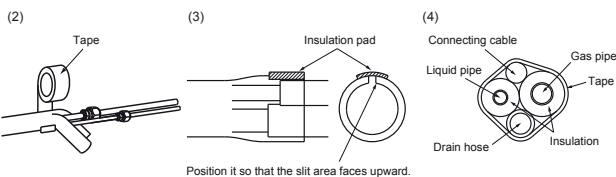

NOTE


Locations where relative humidity exceeds 70%, both liquid and gas pipes need to be dressed with 20mm or thicker heat insulation materials.

⚠ CAUTION

- Improper insulation can cause condensate(water) formation during cooling operation. Condensate can leak or drip causing damage to household property.
- Poor heat insulating capacity can cause pipe outer surface to reach high temperature during heating operation. It can cause cable deterioration and personal injury.

2.Finishing work

- Make sure that the exterior portion of connecting pipes, connecting cable and drain hose is wrapped properly with tape. Shape the connecting pipes to match with the contours of the pipe assembly route.
- Fix the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5m or less to isolate the vibration.
- Install the service cover securely. Water may enter the unit if service cover is not installed properly, resulting in unit malfunction and failure.

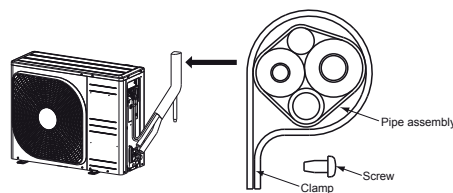

⚠ CAUTION

Make sure that the connecting pipes do not touch the components within the unit. If pipes touch the internal components, it may generate abnormal sounds and/or vibrations.

9. INSTALLATION TEST CHECK POINTS

After finishing the installation work, check the following points again before turning on the power. Conduct test run (Refer to indoor unit installation manual) and ensure that the unit operates properly.

Power source voltage complies with the rated voltage of air-conditioner.	
Earth leakage breaker and circuit breaker are installed.	
Power cable and connecting cable are securely fixed to the terminal block.	
Both liquid and gas service valves are fully open.	

No gas leaks from the joints of the service valves.	
Indoor and outdoor side pipe joints have been insulated.	
Drain hose (if installed) is fixed properly.	
Screw of the service cover is tightened properly.	

PSC012D062F

Inverter driven single split PAC

71V

Designed for R410A refrigerant

Check before installation work

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

(2) Model FDC71VNX

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 65.
- When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces

SAFETY PRECAUTIONS

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into **WARNING** and **CAUTION**. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the **WARNING** and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in **CAUTION**. **These are very important precautions for safety. Be sure to observe all of them without fail.** The meaning of "Marks" used here are as shown below.
- ⊘ Never do it under any circumstance. **!** Always do it according to the instruction
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user



WARNING

- **Installation must be carried out by the qualified installer.**
If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction.
- **Install the system in full accordance with the instruction manual.**
Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire.
- **Use the original accessories and the specified components for installation.**
If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury.
- **When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage accordance with ISO5149.**
Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents.
- **Ventilate the working area well in the event of refrigerant leakage during installation.**
If the refrigerant comes into contact with naked flames, poisonous gas is produced.
- **After completed installation, check that no refrigerant leaks from the system.**
If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced.
- **Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up or set up the unit with proper support.**
An improper manner of portage, such as 3-point support can cause death or serious personal injury due to falling of the unit.
- **Install the unit in a location with good support.**
Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- **Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.**
Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- **The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.**
Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.
- **Be sure to shut off the power before starting electrical work.**
Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.
- **Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.**
Unconformable cables can cause electric leak, anomalous heat production or fire.
- **Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.**
Loose connections or cable mountings can cause anomalous heat production or fire.
- **Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.**
Incorrect installation may result in overheating and fire.



- **Do not perform brazing work in the airtight room**
It can cause lack of oxygen.
- **Use the prescribed pipes, flare nuts and tools for R410A.**
Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.
- **Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to hit the flare nut by the spanner.**
Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen.
- **Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.**
If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from an abrupt refrigerant outflow. The refrigerant can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant.
- **Only use prescribed optional parts. The installation must be carried out by the qualified installer.**
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not perform any change of protective device itself or its setup condition**
The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.
- **Be sure to switch off the power source in the event of installation, inspection or servicing.**
If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.
- **Consult the dealer or an expert regarding removal of the unit.**
Incorrect installation can cause water leaks, electric shocks or fire.
- **Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation.**
If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit.
- **Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.**
If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.
- **Do not run the unit with removed panels or protections**
Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.
- **Be sure to fix up the service panels.**
Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.
- **Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair.**
If you repair or modify the unit, it can cause water leaks, electric shocks or fire.

⚠	CAUTION	<p>● Carry out the electrical work for ground lead with care If you cut the gas line, wire, lighting conductor or telephone line's ground lead, incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because it can cause explosion or ignition.</p> <p>● Use the circuit breaker for all pipe with correct capacity Using the incorrect circuit breaker, it can cause the unit malfunction and fire.</p> <p>● Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in accordance with EN60204-1.</p> <p>● Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts or bruises by the aluminium fins.</p> <p>● Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.</p> <p>● Pay attention not to damage the drain pan by weld spatter when welding work is done near the indoor unit. If weld spatter entered into the indoor unit during welding work, it can cause pin-hole in drain pan and result in water leakage. To prevent such damage, keep the indoor unit in its packing or cover it.</p> <p>● Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.</p> <p>● Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.</p> <p>● Perform installation work properly according to this installation manual. Improper installation can cause abnormal vibrations or increased noise generation.</p> <p>● Earth leakage breaker must be installed If the earth leakage breaker is not installed, it can cause fire or electric shocks.</p> <p>● Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.</p> <p>● Do not install the unit near the location where leakage of combustible gases can occur. If leaked gases accumulate around the unit, it can cause fire.</p> <p>● Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled. Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire.</p> <p>● Secure a space for installation, inspection and maintenance specified in the manual Insufficient space can result in accident such as personal injury due to falling from the installation place.</p> <p>● When the outdoor unit is installed on a roof or a high place, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit. If safety facilities are not provided, it can cause personal injury due to falling from the installation place.</p> <p>● Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics Equipment such as meters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.</p> <p>● Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.</p>
⊘	CAUTION	<p>● Do not use the base frame for outdoor unit which is corroded or damaged due to long periods of operation. Using an old and damaged base frame can cause the unit falling down and cause personal injury.</p> <p>● Do not install the unit in the locations listed below</p> <ul style="list-style-type: none"> • Locations where carbon fiber, metal powder or any powder is floating. • Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. • Vehicles and ships • Locations where smoke or special sprays are often used • Locations where direct exposure of oil mist and steam such as kitchen and machine plant. • Locations where any machines which generate high frequency harmonics are used. • Locations with salty atmospheres such as coastlines • Locations with heavy snow (if installed, be sure to provide base frame and snow hood mentioned in the manual) • Locations where the unit is exposed to chimney smoke • Locations at high altitude (more than 1000m high) • Locations with ammoniac atmospheres • Locations where heat radiation from other heat source can affect the unit • Locations without good air circulation. • Locations with any obstacles which can prevent inflow and outflow of air of the unit • Locations where strong air flows against the air outlet of outdoor unit • Locations where strong air flows against the air outlet of outdoor unit <p>It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.</p> <p>● Do not install the outdoor unit in the locations listed below.</p> <ul style="list-style-type: none"> • Locations where operating sound of the outdoor unit can bother neighborhood • Locations where electric power lines or other electric lines can be directly connected to the unit • Locations where vibration can be amplified and transmitted due to insufficient strength of structure. • Locations where vibration and operation sound generated by the outdoor unit can affect seriously. (on the wall or at the place near bed room) • Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) • Locations where drainage cannot run off safely. <p>It can affect surrounding environment and cause a claim</p> <p>● Do not use fire unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art. It can cause the damage of the items.</p> <p>● Do not touch any buttons with wet hands It can cause electric shocks</p> <p>● Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending on the operating condition, and it can cause burn injury or frost injury.</p> <p>● Do not clean up the unit with water It can cause electric shocks</p> <p>● Do not operate the outdoor unit with any article placed on it. You may incur property damage or personal injury from a fall of the article.</p> <p>● Do not step onto the outdoor unit You may incur injury from a drop or fall.</p>

Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

	Dedicated R410A tools
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector


1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

⚠ CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.


1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

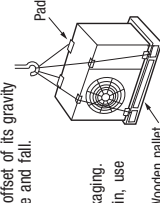

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

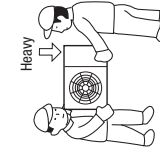

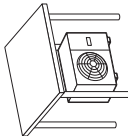


3) Selection of installation location for the outdoor unit

- Be sure to select a suitable installation place in consideration of following conditions.
- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
 - A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit
 - A place where it is not exposed to oil splashes.
 - A place where it can be free from danger of flammable gas leakage.
 - A place where drain water can be disposed without any trouble.
 - A place where the unit will not be affected by heat radiation from other heat source.
 - A place where snow will not accumulate.
 - A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
 - A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
 - A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
 - A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
 - A place where strong wind will not blow against the outlet air blow of the unit.


4) Caution about selection of installation location

(1) If the unit is installed in the area where the snow will accumulate, following measures are required.

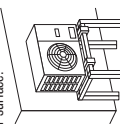
1. Install the unit on the base so that the bottom is higher than snow cover surface. 
2. Provide a snow hood to the outdoor unit on site.  Regarding outline of a snow hood, refer to our technical manual.
3. Install the unit under eaves or provide the roof on site. 

6) Installation

① Anchor bolt fixed position

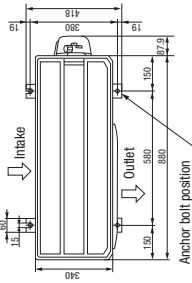

② Notabilia for installation

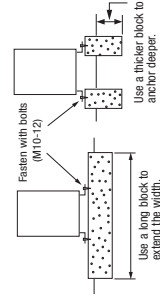


Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grammets (option parts). [Refer to Setting SW3-1, SW3-2.]
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). [Refer to Setting SW3-1, SW3-2.]


(2) If the unit can be affected by strong wind, following measures are required.

Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.



5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controllers, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.

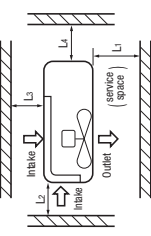

Size	I	II	III
Example installation	Open	Open	Open
L1	300	250	Open
L2	100	150	100
L3	250	250	250
L4			

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- In installing the unit, fix the unit's legs with bolts specified on the above.
 - The protrusion or an anchor bolt on the front side must be kept within 15 mm.
 - Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
 - Refer to the above illustrations for information regarding concrete foundations.
 - Install the unit in a level area. (With a gradient of 0.5 mm or less.)
 - Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.
- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

2. REFRIGERANT PIPING WORK


1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Marks appearing in the drawing on the right	
	Single type	Twin type
Dimensional restrictions	L	L1+L1+L2
One-way pipe length of refrigerant piping	50m or less	L
Main pipe length	20m or less	L1, L2
Difference of pipe length after the first branching point	10m or less	L1-L2
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher, 30m or less When the outdoor unit is positioned lower, 15m or less	H
Elevation difference between indoor units	0.5m or less	H
		h

⚠ CAUTION

The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see "6. UTILIZATION OF EXISTING PIPING."

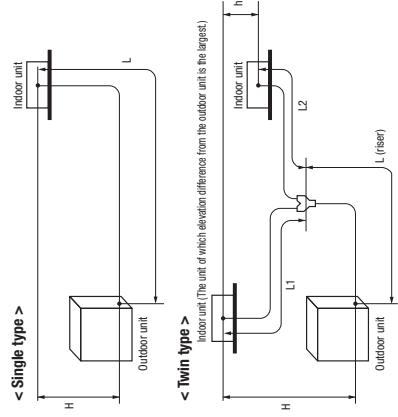

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Model 7TV	
	Gas pipe	Liquid pipe
Outdoor unit connected	φ9.52 Flare	φ9.52 Flare
	φ9.52	φ9.52
Refrigerant piping (branch pipe/L)		
In the case of a single type	Indoor unit connected	φ9.52
	Capacity of indoor unit	Model 7TV
In the case of a twin type	Branching pipe set	DIS-WA1
	Refrigerant piping (branch pipe L1, L2)	φ9.52
Capacity of indoor unit	Indoor unit connected	φ12.7
	Model 40V>2	φ6.35

CAUTION

- When the 40V model is connected as an indoor unit, always use a φ9.52 liquid pipe for the branch (branching pipe – indoor unit) and a different diameter joint supplied with the indoor unit (φ6.35 on the liquid pipe side).
- If a φ6.35 pipe is used for connection with a branching pipe, a refrigerant distribution disorder may occur, causing one of the indoor units to fall short of the rated capacity.
- A riser pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.
- A branching part must be dressed with a heat-insulation material supplied as an accessory.
- For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

Pipe diameter [mm]	6.35	9.52	12.7	15.88
Minimum pipe wall thickness [mm]	0.8	0.8	0.8	1.0
Pipe material*	O-type pipe	O-type pipe	O-type pipe	O-type pipe

- Select pipes having a wall thickness larger than the specified minimum pipe thickness.
- *Phosphorus deoxidized seamless copper pipe C1220T, JIS H 3300

4) On-site piping work

- Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.

IMPORTANT

How to remove the side cover

Please remove the screw of a side cover and remove to the front.

- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical.(R100-R150) Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

CAUTION

Do not apply force beyond proper fastening torque in tightening the flare nut.


Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
φ6.35 (1/4")	14-18	45-60	150
φ9.52 (3/8")	34-42	30-45	200
φ12.7 (1/2")	49-61	30-45	250
φ15.88(5/8")	68-82	15-20	300

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.


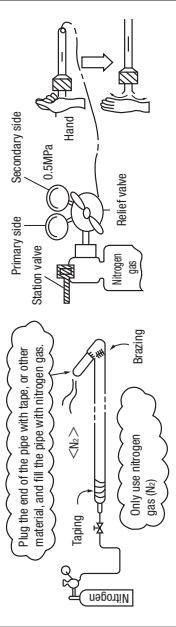


Flared pipe end: A (mm)

Copper pipe outer diameter	A
φ6.35	0
φ9.52	9.1
φ12.7	13.2
φ15.88	16.6
	19.7

Copper pipe protrusion for flaring: B (mm)


Copper pipe outer diameter	B
φ6.35	0-0.5
φ9.52	0-0.5
φ12.7	0.7-1.3
φ15.88	0.7-1.3

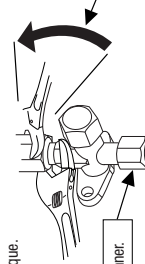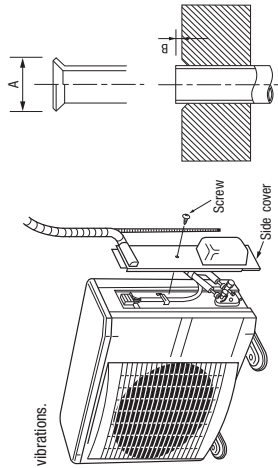

Do not hold the valve cap area with a spanner.

5) Air tightness test


- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient Temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

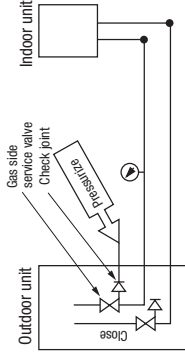

6) Evacuation

<Work flow>

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.

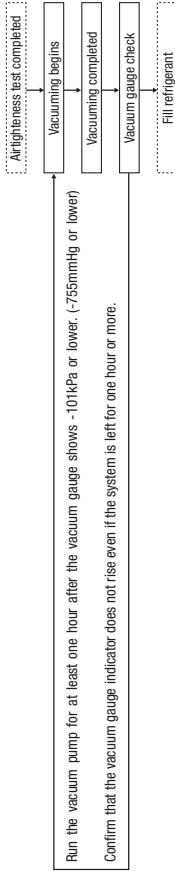

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Model	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe, φ6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Model 7TV	2.35	20	0.06	2.95	30

- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping. When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from the factory charge volume and adjust to 1.95kg.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, please see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (kg)} = \{ \text{Main pipe length (m)} - \text{Length covered without additional charge (30 m)} \} \times 0.06 \text{ (kg/m)} + \text{Total length of branch pipes (m)} \times 0.06 \text{ (kg/m)}$$

- For an installation measuring 3m or longer, but not more than 20m, in pipe length, please charge the standard refrigerant charge volume, when you recharge refrigerant after servicing etc.
- When refrigerant piping is shorter than 3m, recharge 1.95kg of refrigerant.

Ex.) For a 10m installation, charge 2.35 kg of refrigerant.

For a 25m installation, charge "2.35 + (25-20) x 0.06 = 2.65 kg."


(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube. Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

8) Heating and condensation prevention


- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Although it is verified in a test that this air-conditioning unit shows satisfactory performance under JIS condensation test conditions, **both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.**

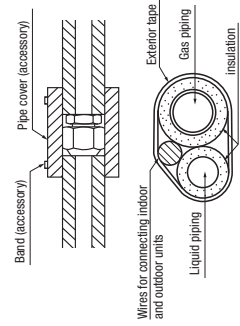

*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as optional parts, where water drained from the outdoor unit is a problem.

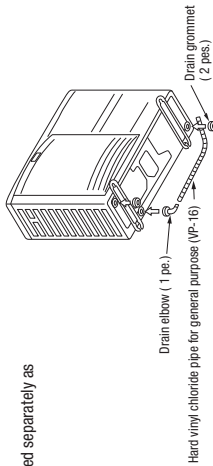

- There are 3 drain holes provided on the bottom plate of an outdoor unit to discharge condensed water.
- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an optional part) or concrete blocks.
- Connect a drain elbow as shown in the illustration and close the other two drain holes with grommets.


4. ELECTRICAL WIRING WORK For details of electrical cabling, refer to the indoor unit installation manual.

- Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country.
- Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.
- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51),
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinned cord (code designation 60227 IEC 41).
 - Do not use anything lighter than polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
 - Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
 - If improper grounded, an electric shock or malfunction may result.
 - A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
 - The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
 - Do not turn on the power until the electrical work is completed.
 - Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheat accident)
 - For power source cables, use conduits.
 - Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
 - Fasten cables so that they may not touch the piping, etc.
 - When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
 - Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.

Power cable, indoor-outdoor connecting wires


- Always perform grounding system installation work with the power cord unplugged.

CAUTION Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

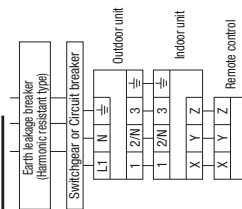


Model	Power source	Power cable thickness (mm²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness X number
71V	Single phase 3 wire 220-240V 50Hz	3.5	17	21	φ1.6mm	φ1.6mm x 3

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

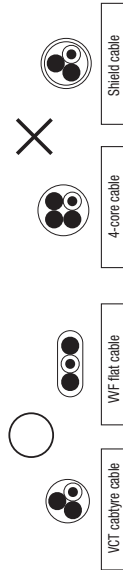

- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

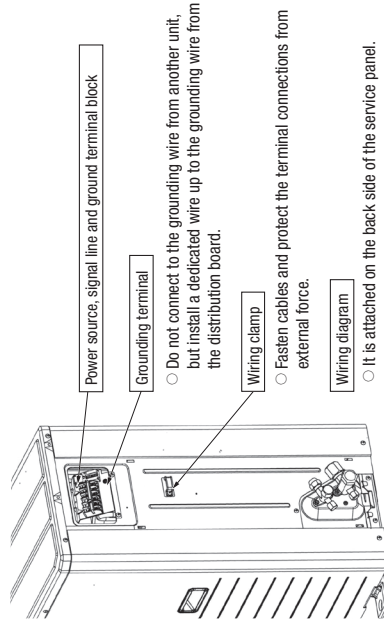

- Do not connect to the grounding wire from another unit, but install a dedicated wire up to the grounding wire from the distribution board.
- Fasten cables and protect the terminal connections from external force.
- It is attached on the back side of the service panel.

5. TEST RUN

⚠ WARNING

- Before conduct a test run, do not fail to make sure that the service valves are closed.
- Turn on power 6 hours prior to a test run to energize the crank case heater.
- In case of the first operation after turning on power, even if the unit does not move for 30 minutes, it is not a breakdown.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite dangerous. Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

⚠ CAUTION

- When you operate switches for on-site setting, be careful not to touch a live part.
- You cannot check discharge pressure from the liquid service valve charge port.
- The crank case heater (CCH) operates during a test run.
- When power is cut off, reset the unit after 3 or more minutes before you turn on power again after power is cut off. If this procedure is not observed in turning on power again, "E-5" (communication error) may occur.

About insulation resistance

- An insulation resistance value may drop to several M ohms immediately after installation or when the unit is left for a long time without power, because refrigerant is gathered in the compressor. When the earth-leakage breaker is actuated due to low insulation resistance, please check the following:
 - (1) Check whether a normal insulation resistance value is restored about 6 hours after power is turned. Turning on power will energize the compressor and heat it to evaporate refrigerant gathered in it.
 - (2) Check whether the earth-leakage breaker is a harmonic resistant type.
 This unit is equipped with an inverter and therefore, the use of a harmonic resistant type earth-leakage breaker is necessary to prevent a false actuation.

1) Test run method

Please remove a side cover.

- (1) A test run can be initiated from an outdoor unit by using SW5-4 and SW5-3 for on-site setting.
- (2) Switching SW5-3 to ON will start the compressor.
- (3) The unit will start a cooling operation, when SW5-4 is OFF, or a heating operation, when SW5-4 is ON.
- (4) Do not fail to switch SW5-3 to OFF when a test run is completed.

※ In case of the first operation after turning on the power source, when the unit runs in the cooling mode at outside temperature 5°C or lower, it automatically changes into the cooling mode after it runs in the heating mode for 10 minutes.

2) Checking the state of the unit in operation

Please remove a service panel.

Use check joints provided on the piping before and after the four-way valve installed on the side of the outdoor unit for checking discharge pressure and suction pressure. As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

Cooling operation	Discharge pressure (high pressure)	Suction pressure (low pressure)	Charge part of the gas service valve
Heating operation	Suction pressure (low pressure)	Discharge pressure (high pressure)	

3) Setting SW3-1, SW3-2.

Please remove a service panel.

- (1) Defrost control switching (SW3-1)
 - When this switch is turned ON, the unit will run in the defrost mode more frequently.
 - Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
 - When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
 - When the unit is used in a very snowy country, set this switch to ON.

4) Failure diagnosis in a test run

Error indicated on the remote control unit	Panel control board (PCB) display	Failure event	Action
E34	Red LED Blinking once	Open phase	Check power cables for loose contact or disconnection 1. Check whether the service valves are open. 2. If an error has been cancelled when 3 minutes have elapsed since compressor stops, you can restart the unit by affecting Check Reset on the remote control unit.
E40	Blinking continuously	63Hz activation or operation with service valves shut (occurs mainly during a heating operation)	
E49	Blinking once	Low pressure error or operation with service valves shut (occurs mainly during a cooling operation)	
	Blinking continuously	Low pressure error or operation with service valves shut (occurs mainly during a cooling operation)	

- If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve.

Valve for a cooling operation	When power is turned on	When the unit comes to a normal stop	When the unit comes to an abnormal stop
Valve for a heating operation <td>Complete shut position</td> <td>During a heating operation</td> <td>During a cooling operation</td>	Complete shut position	During a heating operation	During a cooling operation
Valve for a cooling operation <td>Full open position</td> <td>Complete shut position</td> <td>Full open position</td>	Full open position	Complete shut position	Full open position
Valve for a heating operation <td>Full open position</td> <td>Complete shut position</td> <td>Full open position</td>	Full open position	Complete shut position	Full open position

6) The following on the first operation after turning on the circuit breaker.

This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.


- When you leave the outdoor unit with power supplied to it, be sure to close the panel.

Item focused in the installation manual	Item	Check item	Check
2	Refrigerant piping	Is the unit installed under a shelter for the piping? Have all joints been checked and confirmed to be leak-free? Are seal materials installed on both liquid and gas pipes? Are service valves fully opened for both liquid and gas systems? Have you avoided the additional refrigerant charge volume unit dependent pipe length on the panel's back? Is the unit free of calling errors such as unaccomplished connections, an absent or reversed phase? Are property rated test equipments used for circuit breakers and cables? Are indoor and outdoor units, when more than one unit are installed? Are indoor and outdoor units connected to the same terminal number? Are indoor and outdoor units connected to the same terminal number? Are the correct connection cables connected between the indoor and outdoor units? Are the correct cables (E, F, G) used for indoor-outdoor connecting cables? Does grounding safety (Type D type grounding pipe is grounding) requirement? Is the unit grounded with a dedicated grounding wire not connected to another unit's grounding wire? Are cables free of loose screws at their connection points? Are cables tied down with cable straps so that no external force works onto terminal connectors?	
4	Electric wiring	Is the indoor unit installation work completed? Where is a test point for outdoor unit or indoor unit in the face cover attached to the indoor unit?	

Test run procedure

- Always carry out a test run and check the following in order as listed.


Turn	The contents of operation	Check
①	Open the gas side service valve fully.	
②	Open the liquid side service valve fully.	
③	Close the panel.	
④	When a remote control unit is used for unit start in the installation, always train for an alarm in the installation site with a remote control unit.	
⑤	SW5-3 (SW5-4 OFF) for the unit will start a cooling operation.	
⑥	Check the operation of the unit.	
⑦	Place your hand before the indoor unit's display to check whether the remote control unit is checked its operation.	
⑧	Place your hand before the indoor unit's display to check whether cold (warm) winds come out in a cooling (heating) operation.	
⑨	Make sure that a red LED is not lighting.	
⑩	When you complete the test run, please turn on SW3-2 for 1 second and be sure to enter a test run.	
⑪	When actions are taken, check their operation according to the respective instruction manuals.	

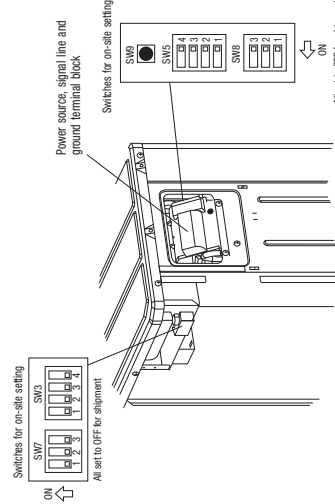

※1 Do not operate SW5-3, SW5-1, SW5-2, SW8.
 ※2 Refer to TECHNICAL MANUAL about SW9. (Pump down SW)

6. UTILIZATION OF EXISTING PIPING.

Check whether an existing pipe system is reusable or not by using the following flow chart.

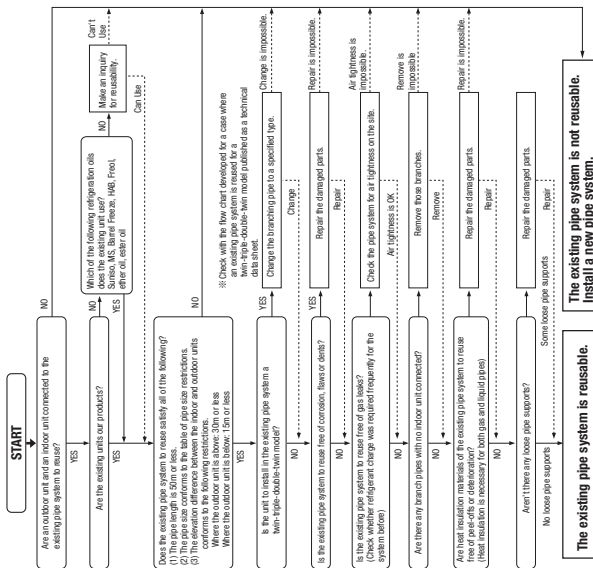

WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4)).

- (1) Run the unit for 30 minutes for a cooling operation.
 - (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
 - (3) Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
 - (4) Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
 - Process a flare to the dimensions specified for R410A.
 - Turn on-site setting switch SWB-1 to the ON position. (Where the gas pipe size is φ19.05)

<Table of pipe size restrictions>

○: Standard pipe size ◯: Usable △: Restricted to shorter pipe length limits Cool ↓: Cooling capacity drop

Additional charge volume per meter of pipe	0.08kg/m	0.08kg/m	0.08kg/m
Pipe size	φ9.52	φ9.52	φ12.7
Liquid pipe	φ9.52	φ9.52	φ12.7
Gas pipe	φ12.7	φ15.88	φ15.88
Usability	Cool ↓	○	△
7TV	Maximum one-way pipe length	35	50
	Length covered without additional charge	30	30
			15

● The pipe length should be at least 3m. If the pipe length is shorter than 3m, the quantity of refrigerant needs to be reduced. Please consult with our distributor in the area, if you need to recover refrigerant and charge it again.

● Any combinations of pipe sizes not listed in the table are not usable.

<Pipe system after the branching pipe>

○: Standard pipe size ◯: Usable

Additional charging amount of refrigerant per 1m	0.08kg/m	0.08kg/m
Pipe size	φ9.52	φ12.7
Liquid pipe	φ9.52	φ12.7
Gas pipe	φ12.7	φ15.88
Model	Combination type	Combination of capacity
FDC71	Twin	40+40

● Any combinations of pipe sizes not listed in the table are not usable.

<The model types of existing units of which branching pipes are reusable.>

The branching pipes used with models other than those listed above are not reusable. Use our genuine branching pipes for R410A.

Formula to calculate additional charge volume

$$\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - \text{Length covered without additional charge shown in the table (m)}) \times \text{Additional charge volume per meter of branch pipes (m)} + \text{Additional charge volume per meter of pipe shown in the table (kg/m)}$$

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example) When an 7TV (single installation) is installed in a 30m long existing pipe system (liquid φ12.7, gas φ15.88), the quantity of refrigerant to charge additionally should be (30m-15m) × 0.08kg/m = 1.2 kg.

Example) When an 7TV (twin installation) is installed in a 30m long existing pipe system (main pipe length 20m, liquid φ12.7, gas φ15.88; pipe length after branching pipe 5m x 2, liquid φ9.52, gas φ12.7), the quantity of refrigerant to charge additionally should be (20m-15m) × 0.08kg/m + 5m x 2 × 0.06kg/m = 1.0 kg.


<Where the existing unit cannot be run for a cooling operation.>

Wash the pipe system or install a new pipe system.

● If you choose to wash the pipe system, contact our distributor in the area.

PSC012D066H	
Inverter driven split PAC	
100VN~140VN, 100VS~140VS	
100VNX~140VNX, 100VSX~140VSX	
Designed for R410A refrigerant	

Check before installation work

[Accessory]	1 piece	knock-out hole protection
Edging		



- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

(3) Models FDC100-140VNX, 100-140VSX



- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 65.
- When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces

SAFETY PRECAUTIONS

- We recommend you to read this "SAFETY PRECAUTIONS", carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into [**WARNING**] and [**CAUTION**]. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the [**WARNING**] and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in [**CAUTION**]. **These are very important precautions for safety. Be sure to observe all of them without fail.**
- The meaning of "Marks" used here are as shown below.

	Never do it under any circumstance.		Always do it according to the instruction
---	-------------------------------------	---	---
- For 3 phase power source outdoor unit, ENG1000-3-2 is not applicable if consent by the utility company or notification to the utility company is given before usage.
- 3 phase power source unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment, if installed as a house-hold appliance, it could cause electromagnetic interference.
- 5 and 6 HP units of single phase power source are equipment complying with IEC 61000-3-12.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user

WARNING

	<ul style="list-style-type: none"> ● Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. ● Install the system in full accordance with the instruction manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. ● Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury. ● When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage accordance with ISO5149. Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents. ● Ventilate the working area well in the event of refrigerant leakage during installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced. ● After completed installation, check that no refrigerant leaks from the system. If refrigerant leaks into the room and comes into contact with an open or other hot surface, poisonous gas is produced. ● Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support. An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit. ● Install the unit in a location with good support. Unstable installation locations can cause the unit to fall and cause material damage and personal injury. ● Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unstable installation locations can cause the unit to fall and cause material damage and personal injury. ● The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. ● Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. ● Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. ● Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat production or fire. ● Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. Incorrect installation may result in overheating and fire.
	<ul style="list-style-type: none"> ● Do not perform brazing work in the airtight room It can cause lack of oxygen. ● Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. ● Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much. Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in leak of oxygen. ● Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant. ● Only use prescribed optional parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. ● Do not perform any change of protective device itself or its setup condition The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst. ● Be sure to switch off the power source in the event of installation, inspection or servicing. If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. ● Consult the dealer or an expert regarding removal of the unit. Incorrect installation can cause water leaks, electric shocks or fire. ● Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation. If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit. ● Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury. ● Do not run the unit with removed panels or protections Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks. ● Be sure to fix up the service panels. Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water. ● Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair. If you repair or modify the unit, it can cause water leaks, electric shocks or fire.

CAUTION



- **Carry out the electrical work for ground lead with care**
Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because if gas leaks, it could cause explosion or fire.
- **Use the circuit breaker for all pole with correct capacity.**
Using the incorrect circuit breaker, it can cause the unit malfunction and fire.
- **Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.**
The isolator should be locked in accordance with EN60294-1.
- **Take care when carrying the unit by hand.**
If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.
- **Dispose of any packing materials correctly.**
Do not use any packing materials for other purposes. Improper disposal may cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.
- **Pay attention not to damage the drain pan by wiper scraper when welding work is done near the indoor unit.**
If the wiper scraper of the indoor unit during welding work, it can cause the hole in drain pan and result in water leakage. To prevent such damage, keep the indoor unit in its packing or cover it.
- **Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.**
Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
If the density of nitrogen exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **Perform installation work properly according to this installation manual.**
Improper installation can cause abnormal vibrations or increased noise generation.
- **Earth leakage breaker must be installed.**
If the earth leakage breaker is not installed, it can cause fire or electric shocks.
- **Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.**
Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.
- **Do not install the unit near the location where leakage of combustible gases can occur.**
If leaked gases accumulate around the unit, it can cause fire.
- **Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled.**
Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.**
Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **When the outdoor unit is installed on a roof or a high place, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit.**
If safety facilities are not provided, it can cause personal injury due to falling from the installation place.
- **Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics**
Equipment such as inverters, standby generators, standby high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.
- **Do not install the outdoor unit in a location where insects and small animals can inhabit.**
Insects and small animals can enter the electric parts and cause damage of fire. Instruct the user to keep the surroundings clean.



- **Do not use the base frame for outdoor unit which is corroded or damaged due to long periods of operation.**
Using an old and damaged base frame can cause the unit falling down and cause personal injury.
- **Do not install the unit in the locations listed below**
 - Locations where carbon fiber, metal powder or any powder is floating.
 - Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur.
 - Locations where corrosive or special sprays are often used.
 - Locations where direct exposure of oil mist and steam such as kitchen and machine plant.
 - Locations where any machines which generate high frequency harmonics are used.
 - Locations where the unit is exposed to chlorine or ozone.
 - Locations where the unit is exposed to humidity or salt.
 - Locations at high altitude (more than 1,000m high)
 - Locations with ammoniac atmosphere (e.g. organic fertilizer).
 - Locations where calcium chloride (e.g. snow melting agent).
 - Locations where any other heat source can affect the unit
 - Locations where the unit is installed on a roof.
 - Locations with any obstacles which can prevent inlet and outlet air of the unit.
 - Locations where short circuit of air can occur (in case of multiple units installation)
 - Locations where strong air blows against the air case of outdoor unit
- **Do not install the outdoor unit in the locations listed below.**
 - Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood.
 - Locations where outlet air of the outdoor unit blows directly to animal or plants. The hot air can affect adversely to the plant etc.
 - Locations where the unit is installed near the bed.
 - Locations where vibration and operation sound generated by the outdoor unit can affect seriously. (on the wall or at the place near bed room)
 - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
 - Locations where drainage cannot run off safely.


It can affect surrounding environment and cause a drain
- **Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.**
It can cause the damage of the items.
- **Do not touch any buttons with wet hands**
It can cause electric shocks
- **Do not touch any refrigerant pipes with your hands when the system is in operation.**
During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.
- **Do not clean up the unit with water**
It can cause electric shocks
- **Do not operate the outdoor unit with any article placed on it.**
You may incur property damage or personal injury from a fall of the article.
- **Do not slip onto the outdoor unit.**
You may incur injury from a drop or fall.

Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

Dedicated R410A tools	
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Profusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector

1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

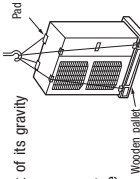


CAUTION When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.



3) Selection of installation location for the outdoor unit

- Be sure to select a suitable installation place in consideration of following conditions.
- A place where it is horizontal, stable and can reduce the unit weight and will not allow vibration transmission of the unit.
 - A place where it can be free from possibility of both noise and vibration due to noise or exhaust air from the unit.
 - A place where it can be free from possibility of oil splashes.
 - A place where it can be free from danger of flammable gas leakage.
 - A place where drain water can be disposed without any trouble.
 - A place where snow will not accumulate.
 - A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
 - A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
 - A place where chemical substances like sulfuric gas, chlorine gas, acid and alkali (including ammonia), which can harm the unit, are not present.
 - A place where strong wind will not blow against the outlet air blow of the unit.
 - Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

(1) If the unit is installed in the area where the snow will accumulate, following measures are required.

1. Install the unit on the base so that the bottom is higher than snow cover surface.
2. Provide a snow hood to the outdoor unit on site. Regarding outline of a snow hood, refer to our technical manual.
3. Install the unit under eaves or provide the roof on site.




Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (option parts). [Refer to Drain piping work.]
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). [Refer to Setting SW3-1, SW3-2.]
- Attach heater on a base plate on site, if there is possibility to freeze drain water. In case that the product has a corrective drainage system, the drainage paths should have suitable measure against freezing but be sure not to meet the material of drainage paths with heat.


(2) If the unit can be affected by strong wind, following measures are required.

1. Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.
2. Install the outlet air blow side of the unit in a position perpendicular to face a wall of building, or provide a fence or a windbreak screen. to the direction of wind.
3. The unit should be installed on the stable and level foundation. If the foundation is not level, tie down the unit with wires.




5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- The distance between the unit and the wall should be 300 mm or more.
- Where a space of short-circuiting exists, install guide lowers.
- Where more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.
- A barrier wall placed in front of the exhaust diffuser must not be higher than the unit.



6) Installation

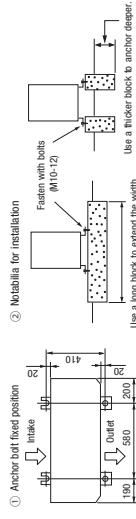

- In installing the unit, fix the unit's legs with bolts specified on the left.
 - The protrusion of an anchor bolt on the front side must be kept within 15 mm.
 - Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
 - Refer to the left illustrations for information regarding concrete foundations.
 - Install the unit in a level area. (With a gradient of 5 mm or less.)
- Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.


- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site.
- So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Descriptions	Model for outdoor units		Models depending on the room	
	Model for outdoor units	Dimensional limitations	Single type	Twin type
One-way pipe length of refrigerant piping	140W/L, 125W/L, 100W/S, 125S/S	≤ 50m	L	L+L1+L2
	140W/L, 140W/S	≤ 10m	L	L+L1+L2+L3
	100W/L, 125W/L, 100W/S, 125S/S	≤ 50m	-	L+L1+L2+L3
	140W/L, 140W/S	≤ 50m	-	L
Main pipe length	140W/L, 140W/S	≤ 100m	-	L
	100W/L, 125W/L, 100W/S, 125S/S	≤ 50m	-	L
	140W/L, 140W/S	≤ 50m	-	L
	100W/L, 125W/L, 100W/S, 125S/S	≤ 50m	-	L
One-way pipe length between the first branching point to the second branching point	140W/L, 140W/S	≤ 5m	-	La
	100W/L, 125W/L, 100W/S, 125S/S	≤ 5m	-	-
	140W/L, 140W/S	≤ 5m	L1, L2	-
	100W/L, 125W/L, 100W/S, 125S/S	≤ 5m	-	L1 (1)
One-way pipe length after the first branching point and second branching point	140W/L, 140W/S	≤ 27m	-	-
	100W/L, 125W/L, 100W/S, 125S/S	≤ 27m	-	-
	140W/L, 140W/S	≤ 10m	L1+L2	La+L2, La+L3 (1)
	100W/L, 125W/L, 100W/S, 125S/S	≤ 10m	-	-
One-way pipe length difference from the second branching point to the indoor unit	140W/L, 140W/S	≤ 50m	-	-
	100W/L, 125W/L, 100W/S, 125S/S	≤ 50m	-	-
	140W/L, 140W/S	≤ 10m	-	L1+L2
	100W/L, 125W/L, 100W/S, 125S/S	≤ 10m	-	L1+L2+L3, L1+L3+L4 (1)
One-way pipe length difference from the second branching point to the outdoor unit	140W/L, 140W/S	≤ 30m	-	-
	100W/L, 125W/L, 100W/S, 125S/S	≤ 30m	-	-
Elevation difference between indoor and outdoor units	When the outdoor unit is installed higher	≤ 30m	H	H
	When the outdoor unit is installed lower	≤ 0.5m	-	h
Elevation difference between indoor units	-	-	-	h
	-	-	-	h1, h2, h3

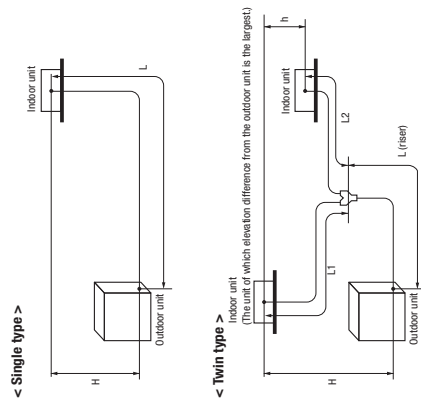

CAUTION

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, see "UTILIZATION OF EXISTING PIPING."
- With the triple pipe connection, the way of use is different when the difference of one-way pipe length after the first branching point is 3m to 10m. For details, refer to the above table and right figure.

Note (1) Install the indoor units so that L₁ + L₂ or (L₁ + L₃) becomes the longest one-way pipe. Keep the pipe length difference between L₁ and (L₁ + L₂) or (L₁ + L₃) within 10m.

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Model 100V		Model 125V		Model 140V	
	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe
Outdoor unit connected	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
Refrigerant piping (Main pipe L)	Flare	Flare	Flare	Flare	Flare	Flare
Indoor unit connected	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
In the case of a single type	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
Capacity of indoor unit	Model 100V		Model 125V		Model 140V	
Branching pipe set	DS-WA1	DS-WA1	DS-WA1	DS-WA1	DS-WA1	DS-WA1
Branching pipe set (Branching pipe L1, L2)	φ12.7	φ6.35	φ12.7	φ6.35	φ15.88	φ9.52
Branching pipe set (Branching pipe L3)	φ12.7	φ6.35	φ12.7	φ6.35	φ15.88	φ9.52
Branching pipe set (After branch pipe L4)	φ12.7	φ6.35	φ12.7	φ6.35	φ15.88	φ9.52
Refrigerant (catch) Branch pipe L2, L3	φ12.7	φ6.35	φ12.7	φ6.35	φ15.88	φ9.52
Indoor unit connected	φ12.7	φ6.35	φ12.7	φ6.35	φ15.88	φ9.52
Capacity of indoor unit	Model 50V-2		Model 60V-2		Model 50V-3	
Branching pipe set	DS-3A1	DS-3A1	DS-3A1	DS-3A1	DS-3A1	DS-3A1
Refrigerant (catch) Branch pipe L1, L2, L3	φ12.7	φ6.35	φ12.7	φ6.35	φ15.88	φ9.52
Indoor unit connected	φ12.7	φ6.35	φ12.7	φ6.35	φ15.88	φ9.52
Capacity of indoor unit	Model 50V-6		Model 50V-6		Model 50V-6	
Branching pipe set	DS-5A1	DS-5A1	DS-5A1	DS-5A1	DS-5A1	DS-5A1
Refrigerant (catch) Branch pipe L1, L3	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
Indoor unit connected	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
Capacity of indoor unit	Model 50V-3		Model 50V-3		Model 50V-3	


CAUTION

- When the 50V or 60V model is connected as an indoor unit, always use a φ9.52 liquid pipe for the branch (branching pipe - indoor unit) and a different diameter pipe for the main pipe. If φ6.35 pipe is used for connection with a branching pipe, a refrigerant distribution disorder may occur, causing one of the indoor units to fail short of the rated capacity.
- A riser pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible. A branching part must be dressed with a heat-insulation material supplied as an accessory.
- For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

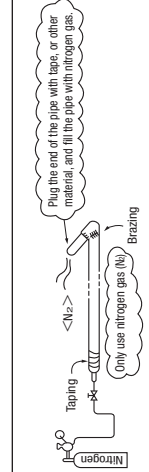

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.
- This unit uses R410A. Always use 1/2H pipes having a 1.0mm or thicker wall for φ19.05 or larger pipes, because O-type pipes do not meet the pressure resistance requirement.

Pipe diameter (mm)	6.35	9.52	12.7	15.88	22.22	25.4	28.58
Minimum pipe wall thickness (mm)	0.8	0.8	0.8	1.0	1.0	1.0	1.0
Pipe material*	O-type pipe		L-type pipe		O-type pipe		L-type pipe


*Phosphorus deoxidized seamless copper pipe C1220T-JIS H 3300

4) On-site piping work

- Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.

How to remove the service panel


- First remove the five screws (X mark) of the service panel and push it down into the direction of the arrow mark and then remove it by pulling it toward you.
- The pipe can be laid in any of the following directions: side right, front, rear and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and brazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement or protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

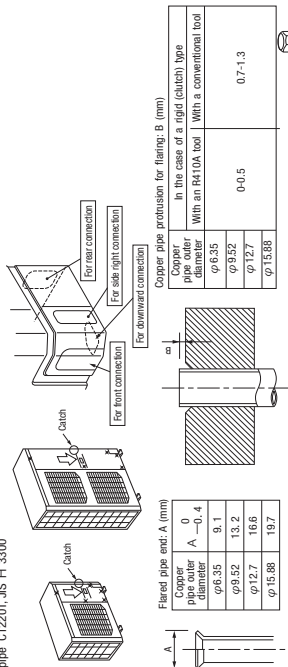


Do not apply force beyond proper fastening torque in tightening the flare nut.

Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.


Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
φ6.35 (1/4")	14-18	45-60	150
φ9.52 (3/8")	30-42	30-45	200
φ12.7 (1/2")	49-61	30-45	250
φ15.88 (5/8")	68-82	15-20	300

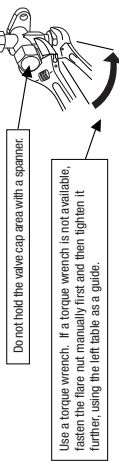

< Triple type A >

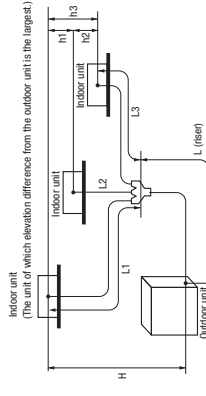


< Triple type B >

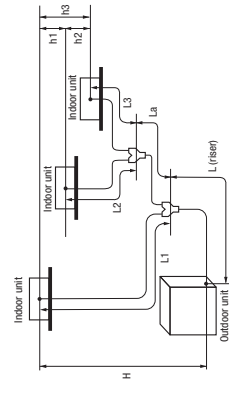


5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

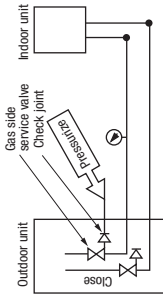

6) Evacuation

- <Work flow> When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.



Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.)
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Capacity					
100W~140W	2.0	0	0.06	3.8	30
100S~140S	2.7			4.5	

<Single type>

- A standard refrigerant charge volume means a refrigerant charge volume for an installation with 0m long refrigerant piping.
- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping.
- When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from the factory charge volume and adjust to 2.8kg or 3.5kg.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - \text{Length covered without additional charge 30 (m)}) \times 0.06 \text{ (kg/m)} + \text{Total length of branch pipes (m)} \times 0.06 \text{ (kg/m)}$$

*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

- To charge refrigerant again, recover refrigerant from the system first and then charge the volume calculated from the above table (Standard refrigerant charge volume + additional charge volume for total pipe length).

(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to charge liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gassy upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.


NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

8) Heating and condensation prevention

(1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.


(2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.

- Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
- Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
- Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
- Although it is verified in a test that this air-conditioning unit shows satisfactory performance under JIS condensation test conditions, both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

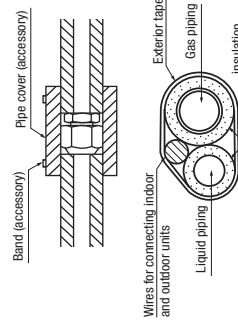


3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as option parts, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)
- Do not use drain elbow and grommet made of plastic for drain piping when base heater for outdoor unit is used. Plastic grommet and elbow will be damaged and burnt in worst case.
- Prepare another drain tray made of metallic material for collecting drain when base heater is used.

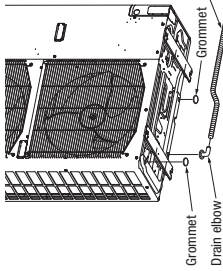


- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an option part) or concrete blocks.
- Then, please secure space for the drain elbow and the drain hose.




4. ELECTRICAL WIRING WORK For details of electrical cabling, refer to the indoor unit installation manual.

- Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.
- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51).
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41);
 - flat twin tinsel cord than polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
 - Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
 - If improper grounded, an electric shock or malfunction may result.
 - A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
 - The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.

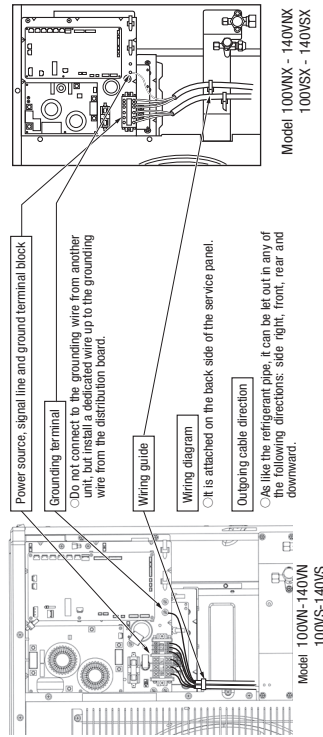

- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overcurrent accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

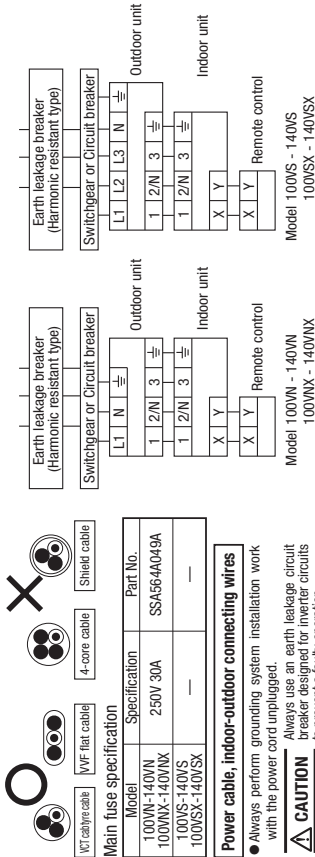

Power cable, indoor-outdoor connecting wires

- Always perform grounding system installation work with the power cord unplugged.
- Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

Model 100WN - 140WN
100VSX - 140VSX

Model	Power source	Power cable thickness(mm ²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness X number
100WN-140WN	Single phases 3 wire 220-240V 50Hz	5.5	24	24	φ4.6mm	φ4.6mm x 3
100WNX-140WNX				25		
100VS-140VS	3 phase 4 wire 380-415V 50Hz	3.5	15	15	φ4.6mm	φ4.6mm x 3
100VSX-140VSX				27		

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Model	Power source	Power cable thickness(mm ²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness X number
100WN-100WN	Single phases 3 wire 220-240V 50Hz	5.5	25	24	φ4.6mm	φ4.6mm x 3
123M				22		
140M	220V 60Hz	8	28	28	φ4.6mm	φ4.6mm
123MX				32		
140MX	220V 60Hz	8	29	29	φ4.6mm	φ4.6mm
140VX				31		
100VS-100VS	3 phase 4 wire 380-415V 50Hz	3.5	16	16	φ4.6mm	φ4.6mm x 3
129S-129SX				26		
140VS-140VSX	380V 60Hz	3.5	18	18	φ4.6mm	φ4.6mm x 3
140VX				21		

※ At the connection with the duct type indoor unit.

5. TEST RUN

⚠ WARNING

- Before conduct a test run, make sure that the service valves are closed.
- Turn on power 6 hours prior to a test run to energize the crank case heater.
- In case of the first operation after turning on power, even if the unit does not move for 30 minutes, it is not a breakdown.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite dangerous. Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

⚠ CAUTION

- When you operate switches (SW3, SW5) for on-site setting, be careful not to touch a live part.
- You cannot check discharge pressure from the liquid service valve charge port.
- The 4-way valve (2GS) is energized during a heating operation.
- When power source is cut off to reset the unit, give 3 or more minutes before you turn on power again after power is cut off. If this procedure is not observed in turning on power again, "Communication error between outdoor and indoor unit" may occur.

1) Test run method

- (1) A test run can be initiated from an outdoor unit by using SW3-3 and SW3-4 for on-site setting.
- (2) Switching SW3-3 to ON will start the compressor.
- (3) The unit will start a cooling operation, when SW3-4 is OFF, or a heating operation, when SW3-4 is ON.
- (4) Do not fail to switch SW3-3 to OFF when a test run is completed.

SW3-3	SW3-4	Operation
ON	OFF	Cooling during a test run
ON	ON	Heating during a test run
OFF	—	Normal or After the test operation

2) Checking the state of the unit in operation

Use check joints provided on the piping before and after the four-way valve installed inside the outdoor unit for checking discharge pressure and suction pressure. As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

Check point of the pipe	Change part of the
Cooling operation	Discharge pressure (High pressure)
Heating operation	Suction pressure (Low pressure)
	Discharge pressure (High pressure)

3) Setting SW3-1, SW3-2, on-site

- (1) Defrost control switching (SW3-1)
 - When this switch is turned ON, the unit will run in the defrost mode more frequently.
 - Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
 - When this switch is turned on, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
 - When the unit is used in a very snowy country, set this switch to ON.

4) Failure diagnosis in a test run

Error indicated on the remote control unit	Primer/circuit board LED (The cycles of 5 seconds)	Failure event	Action
E34	Red LED Blinking once	Open phase	Check power cables for loose contact or disconnection
E40	Blinking once	63H1 actuation or operation with service valves shut (occurs mainly during a heating operation)	1. Check whether the service valves are open. 2. If an error has been remedied when 3 minutes have elapsed, check the wiring diagram of the remote control unit for effecting Check Reset from the remote control unit.
E49	Blinking once	Low pressure error or operation with service valves shut (occurs mainly during a cooling operation)	

- If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve.

When power is turned on	When the unit comes to a normal stop
Valve for a cooling operation	Valve for a cooling operation
Valve for a heating operation	Valve for a heating operation

6) Heed the following on the first operation after turning on the circuit breaker.


This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.

A failure to observe these instructions can result in a compressor breakdown.

Items to check before a test run	Item	Check item	Check
2	Refrigerant plumbing	If brazed, was it brazed under a nitrogen gas flow? Were air-tightness test and vacuum extraction surely performed? Are heat insulation materials installed on both liquid and gas pipes? Are service valves surely opened for both liquid and gas systems? Have you recorded the additional refrigerant charge volume and refrigerant pipe length on the panel's label? Is the unit free of cabling errors such as uncompleted connection, an absent or reversed phase?	
4	Electric wiring	Are properly rated electrical equipments used for circuit breakers and cables? Doesn't cabling cross-connect between units, where more than one unit are installed? Are indoor-outdoor signal wires connected to remote control wires? Do indoor-outdoor connecting cables connect between the same terminal numbers? Are either VCT cabletype cables or VFF flat cables used for indoor-outdoor connecting cables? Does grounding satisfy the D type grounding (type III grounding) requirements? Is the unit grounded with a dedicated grounding wire not connected to another unit's grounding wire? Are cables held down with cable clamps so that no external force works onto terminal connections? Is indoor unit installation work completed?	
—	Indoor unit	Where a face cover should be attached onto an indoor unit, is the face cover attached to the indoor unit?	


Test run procedure ● Always carry out a test run and check the following in order as listed.

Turn	The contents of operation	Check
①	Open the gas side service valve fully.	
②	Open the liquid side service valve fully.	
③	Close the panel.	
④	Where a remote control unit is used for unit setup on the installation site, follow instructions for unit setup on the installation site with a remote control unit. SW3-3 ON / SW3-4 OFF: the unit will start a cooling operation.	
⑤	SW3-3 ON / SW3-4 ON: the unit will start a heating operation.	
⑥	When the unit starts operation, press the wind direction button provided on the remote control unit to check its operation.	
⑦	Place your hand before the indoor unit's diffuser to check whether cold (warm) winds come out in a cooling (heating) operation.	
⑧	Make sure that a red LED is not blinking.	
⑨	When you complete the test run, do not forget to turn SW3-3 to the OFF position.	
⑩	Where options are used, check their operation according to the respective instruction manuals.	

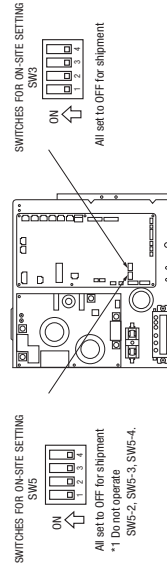

6. UTILIZATION OF EXISTING PIPING.

Check whether an existing pipe system is reusable or not by using the following flow chart.

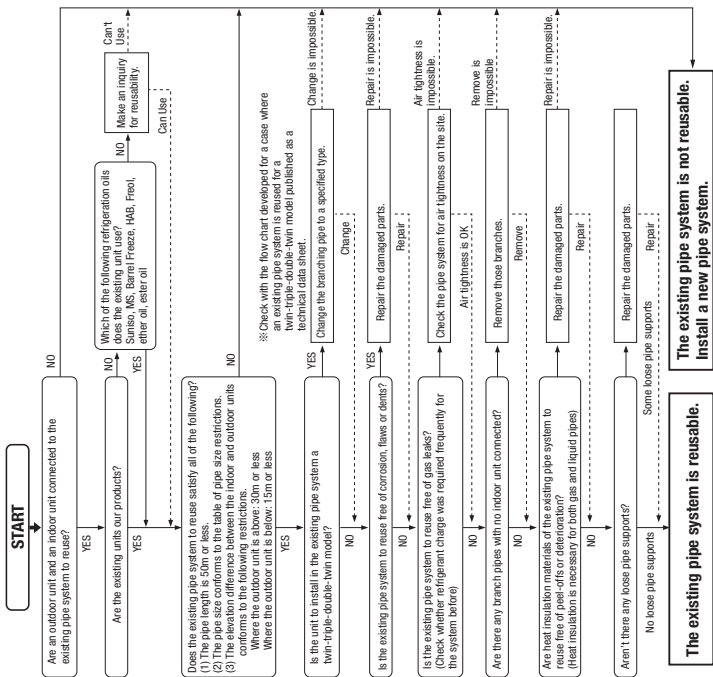

WARNING <Where the existing unit can be run for a cooling operation.>
 Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))

- (1) Run the unit for 30 minutes for a cooling operation.
 - (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
 - (3) Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
 - (4) Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
 - **turn on-site setting switch SW5-1** to the ON position. (Where the gas pipe size is φ 19.05)

<Where the existing unit cannot be run for a cooling operation.>
 Wash the pipe system or install a new pipe system.

- If you choose to wash the pipe system, contact our distributor in the area.

<Table of pipe size restrictions>

○: Standard pipe size
 △: Restricted to shorter pipe length limits
 ×: Not usable

Pipe size	Additional charging amount of refrigerant per 1m		0.08kg/m		0.09kg/m		0.08kg/m	
	Liquid pipe	Gas pipe	φ6.35	φ6.52	φ6.27	φ6.27	φ6.52	φ6.27
100W	Usability	Usability	φ5.88	φ5.88	φ5.88	φ5.88	φ5.88	φ5.88
100SX	Maximum one-way pipe length	Usability	50	50	25	25	50	50
	Length covered without additional charge	Usability	30	30	15	15	30	15
125W	Usability	Usability	φ5.88	φ5.88	φ5.88	φ5.88	φ5.88	φ5.88
125SX	Maximum one-way pipe length	Usability	50	50	25	25	50	50
	Length covered without additional charge	Usability	30	30	15	15	30	15
140W	Usability	Usability	φ5.88	φ5.88	φ5.88	φ5.88	φ5.88	φ5.88
140SX	Maximum one-way pipe length	Usability	50	50	25	25	50	50
	Length covered without additional charge	Usability	30	30	15	15	30	15

<Pipe system after the branching pipe>

Pipe size	Additional charging amount of refrigerant per 1m		0.08kg/m		0.09kg/m		0.08kg/m	
	Liquid pipe	Gas pipe	φ6.27	φ6.52	φ6.27	φ6.52	φ6.52	φ6.52
100V	Combination Type	Combination of capacity	○	○	○	○	○	○
	Twin	50-50	○	○	○	○	○	○
	Twin	60-60	○	○	○	○	○	○
	Twin	71-71	○	○	○	○	○	○
	Triple A	50-50-50	○	○	○	○	○	○
	Triple B	50-50-50	○	○	○	○	○	○

※1 Because of its insufficient pressure resistance, **turn the dip switch SW5-1** provided on the outdoor unit board to the ON position for φ 19.05 × 11.0. (In the case of a twin-triple-double-twin model, this also applies to the case where φ 19.05 × 11.0 is used in a pipe system after the first branching point). However, you need not turn the dip switch SW5-1 to the ON position, if 1/2H pipes or pipes having 1.2 or thicker walls are used.

※2 When the main pipe length exceeds 40m, a significant capacity drop may be experienced due to pressure loss in the liquid pipe system. Use φ 12.7 for the liquid main.

※3 Keep the total pipe length, not one-way pipe length, below the specified maximum pipe length.

※4 Piping size after branch should be equal or smaller than main pipe size.

※5 Piping size from first branch to indoor unit should be φ 9.52 (Liquid) / φ 12.7 (Gas).

- When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from factory charged volume.
- Any combinations of pipe sizes not listed in the table or marked with × in the table are not usable.

<The model types of existing units of which branching pipes are reusable.>

- Models later than Type 8.
- FDC * * * * 8 □ □ □ □
- FDCP * * * * 8 □ □ □ □

The branching pipes used with models other than those listed above are not reusable because of their insufficient pressure resistance. Please use our genuine branching pipes for R410A.

● * * * are numbers representing horsepower. □ □ □ □ is an alphanumeric letter.


Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) × Additional charge volume per meter of pipe shown in the table (kg/m) + Total length of branch pipes (m) × Additional charge volume per meter of pipe shown in the table (kg/m)

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.
Example When an 140V (single installation) is installed in a 20m long existing pipe system (liquid φ 12.7, gas φ 19.05), the quantity of refrigerant to charge additionally should be (20m-15m) x 0.08kg/m = 0.4 kg.

1.9.5 Instructions for branching pipe set (DIS-WA1, WB1, TA1, TB1)

For R410A

PSB012D865 




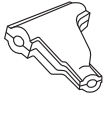
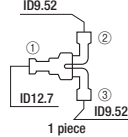
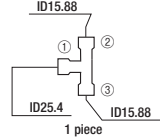

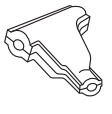
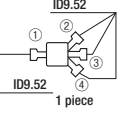
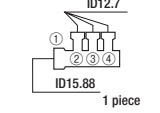





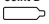


WARNING / CAUTION

- This set is for R410A refrigerant.
- Select a branching pipe set correctly rated for the combined total capacity of connected indoor units and install it according to this manual. An improperly installed branching pipe set can cause degraded performance or an abnormal unit stop.
- Provide good heat insulation to the pipes by following instructions contained in this manual. Improper heat insulation can result in degraded performance or a water leak accident from condensation.
- Please make sure that only parts supplied as accessories or the manufacturer's approved parts are used in installing the unit, because a leak of refrigerant can result in a lack-of-oxygen accident, if it reaches a concentration beyond the tolerable limit.

This manual explains how to use a branching pipe set that is indispensable in connecting pipes for a twin/triple/double-twin configuration installation (system). For the details of piping work, unit installation work and electrical installation work, please refer to the installation manuals and installation guides supplied with your outdoor and indoor units.

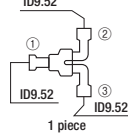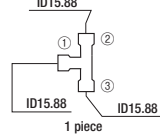1. Branching pipe set specifications

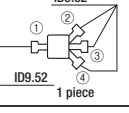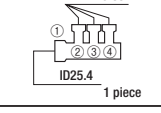- (1) Please make sure that you have chosen the right branching pipe set and the specifications of the parts contained in it by checking with the table below.
- (2) Connect pipes as illustrated in the table below. The pipe from an outdoor unit must be brazed to the pipe connection port "①" and the pipes from indoor units to "②," "③" and "④."


Branching pipe set type	Supported outdoor/indoor unit combinations		Part lists			
	Outdoor unit model	Indoor unit model	Branching pipe set for a liquid pipe	Branching pipe set for a gas pipe	Different diameter pipe joint	Heat insulation material
DIS-WA1 (Two-way branching set)	3HP	1.5HP + 1.5HP			Joint A ID9.52  2 pieces Flare joint (for indoor unit side connection)	
	4HP	2HP + 2HP 1.5HP + 2.5HP				
	5HP	2.5HP + 2.5HP 2HP + 3HP				
	6HP	3HP + 3HP 2HP + 4HP				
DIS-WB1 (Two-way branching set)	8HP	4HP + 4HP 3HP + 5HP			Joint C OD12.7  1 piece ID9.52	
	10HP	5HP + 5HP				
DIS-TA1 (Three-way branching set)	6HP	2HP + 2HP + 2HP			Joint A ID9.52  3 pieces Flare joint (for indoor unit side connection)	
DIS-TB1 (Three-way branching set)	8HP	3HP + 3HP + 3HP			Joint A ID9.52  2 pieces Flare joint (for indoor unit side connection) Joint B OD15.88  1 piece Joint D ID12.7  1 piece OD9.52	

- (3) To connect pipes for a Double Twin installation (involving 4 indoor units), please see 2-7. "Double Twin configuration."
- (4) A branching pipe set must always be installed into the posture as illustrated in the drawing below.

ID stands for inner diameter and OD, outer diameter.

< Posture to install into >

Two-way branching




Install it to make the _____ part lie parallel to the floor.


Three-way branching



Floor surface



Floor surface



Floor surface



Floor surface



Floor surface


2. Pipe connecting procedure

Braze the different diameter pipe joint found in the set matching the connected outdoor and indoor unit capacities according to the instructions set out below.



CAUTION

In connecting an indoor unit of which capacity is 1.5HP, 2HP or 2.5HP, always use a $\phi 9.52$ liquid pipe to connect to the branching pipe (branching pipe – indoor unit).
In connecting to an indoor unit (liquid pipe side: $\phi 6.35$), use the different diameter pipe joint A supplied with the set and follow the procedure set out below.



2-1 DIS-WA1

Supported combinations		Liquid branching pipe	Gas branching pipe
Outdoor unit model	Indoor unit model		
3HP	1.5HP + 1.5HP		
4HP	2HP + 2HP		
	1.5HP + 2.5HP		
5HP	2.5HP + 2.5HP		
	2HP + 3HP		
6HP	3HP + 3HP		
	2HP + 4HP		

Note When connect the indoor unit of an old model that is shown in the model list, use the joint supplied with the branch piping set like *A

2-2 DIS-WB1

Supported combinations		Liquid branching pipe	Gas branching pipe
Outdoor unit model	Indoor unit model		
8HP	3HP + 5HP		
	4HP + 4HP		
10HP	5HP + 5HP		

2-3 DIS-TA1

Applicable to the difference in length of pipes after the branch being less than 3 m
* Connection is not allowed when the difference in length of pipes is larger than 3 m.

Supported combinations		Liquid branching pipe	Gas branching pipe
Outdoor unit model	Indoor unit model		
6HP	2HP + 2HP + 2HP		

2-4 DIS-TB1

Applicable to the difference in length of pipes after the branch being less than 3 m
* Connection is not allowed when the difference in length of pipes is larger than 3 m.


Supported combinations		Liquid branching pipe	Gas branching pipe
Outdoor unit model	Indoor unit model		
8HP	3HP + 3HP + 3HP		

OLD Model list

model name
FDTA251R
FDENA251R
FDKNA251R
FDURA251R
FDUMA252R

2-5. Triple type for same model/same capacity or different model/same capacity

When the difference in length of pipes after the branch is longer than 3 m and shorter than 10 m

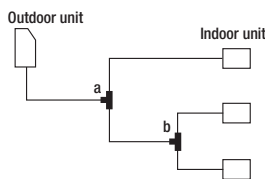


Outdoor unit model	Indoor unit model	Branching pipe	Branching pipe set type	Liquid branching pipe	Gas branching pipe
6HP	2HP + 2HP + 2HP	a	DIS-WA1		
		b			
8HP	3HP + 3HP + 3HP	a	DIS-WB1		
		b	DIS-WA1		

2-6. Triple type for same model/different capacity or different model/different capacity

Applicable to the difference in length of pipes after the branch being less than 3 m

* Connection is not allowed when the difference in length of pipes is larger than 3 m.

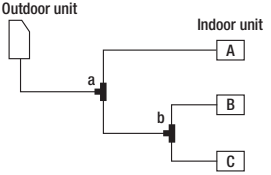

Outdoor unit model	Indoor unit model	Branching pipe	Branching pipe set type	Liquid branching pipe	Gas branching pipe
10HP	2.5HP+2.5HP+5HP	a	DIS-WB1		
		b	DIS-WA1		
10HP	3HP+3HP+4HP	a	DIS-WB1		
		b	DIS-WA1		

Connecting position


Outdoor unit model	Indoor unit model	A	B	C
10HP	2.5HP+2.5HP+5HP	5HP	2.5HP	2.5HP
	3HP+3HP+4HP	4HP	3HP	3HP

Note When connect the indoor unit of an old model that is shown in the model list, use the joint supplied with the branch piping set like ※ A.

2-7. Double Twin type

Pipes should be connected as follows for a Double Twin installation (4 connected indoor units. The capacity of an outdoor unit available for this configuration is either 8HP or 10HP only):

Outdoor unit capacity	Indoor unit capacity
8HP	2HP × 4 units
10HP	2.5HP × 4 units

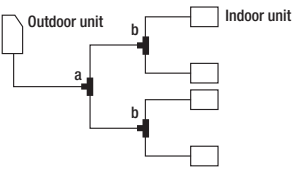


Branching pipe	Branching pipe set type	Outdoor unit model	Liquid branching pipe	Gas branching pipe
a	DIS-WB1	8HP		
		10HP		
b	DIS-WA1	8HP		
		10HP		

Note When connect the indoor unit of an old model that is shown in the model list, use the joint supplied with the branch piping set like ※ A.


3. Heat insulation work

- (1) Condensation can also occur on liquid pipes with this model. Please provide good heat insulation to both liquid and gas pipes.
- (2) For the heat insulation of a branching pipe, always use the heat insulation material supplied with the set and provide heat insulation according to the instructions set out below.

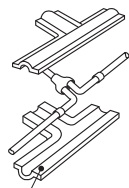

1. It has an adhesive layer on the entire inner face. Remove a separator and wrap it around the branching pipe.

Heat insulation material (for pipe insulation, etc.) to be procured locally

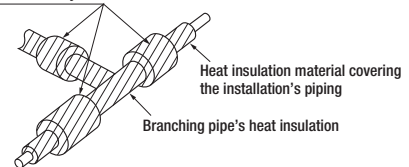


2. Apply a heat insulation material (to be procured locally) to the joint between the branching pipe's heat insulation and the heat insulation material covering the installation's piping as described above and wrap a tape over the gap shown as a hatched (///) area to complete dressing of the piping.

1.10 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER

1.10.1 Remote control

- (1) **Wired remote control**
Model RC-EX3

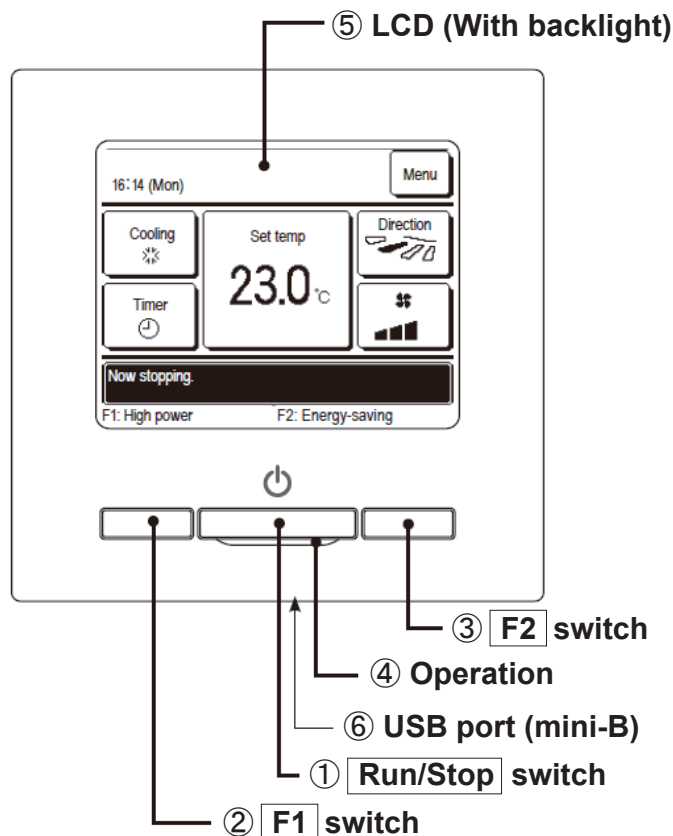

Touch panel system, which is operated by tapping the LCD screen with a finger, is employed for any operations other than the ①Run/Stop, ②F1 and ③F2 switches.

① **Run/Stop switch**

One push on the button starts operation and another push stops operation.

If the backlight is ON setting, when the screen is tapped while the backlight is turned off, the backlight only is turned on. (Operations with switches ①, ② and ③ are excluded.)

② **F1 switch** ③ **F2 switch**

This switch starts operation that is set in switch function change.

⑥ **USB port**

USB connector (mini-B) allows connecting to a personal computer. For operating methods, refer to the instruction manual attached to the software for personal computer (eco-touch remote control utility software).

④ **Operation**

This lamp lights in green (yellow-green) during operation. It changes to red (orange) if any error occurs. Operation lamp luminance can be changed.

Note(1) When connecting to a personal computer, do not connect simultaneously with other USB devices. Please be sure to connect to the computer directly, without going through a hub, etc.


⑤ **LCD (With backlight)**

A tap on the LCD lights the backlight. The backlight turns off automatically if there is no operation for certain period of time. Lighting period of the backlight lighting can be changed.

Model RC-E5

The figure below shows the remote control with the cover opened. Note that all the items that may be displayed in the liquid crystal display area are shown in the figure for the sake of explanation
 Characters displayed with dots in the liquid crystal display area are abbreviated.


The figure below shows the remote control with the cover opened.

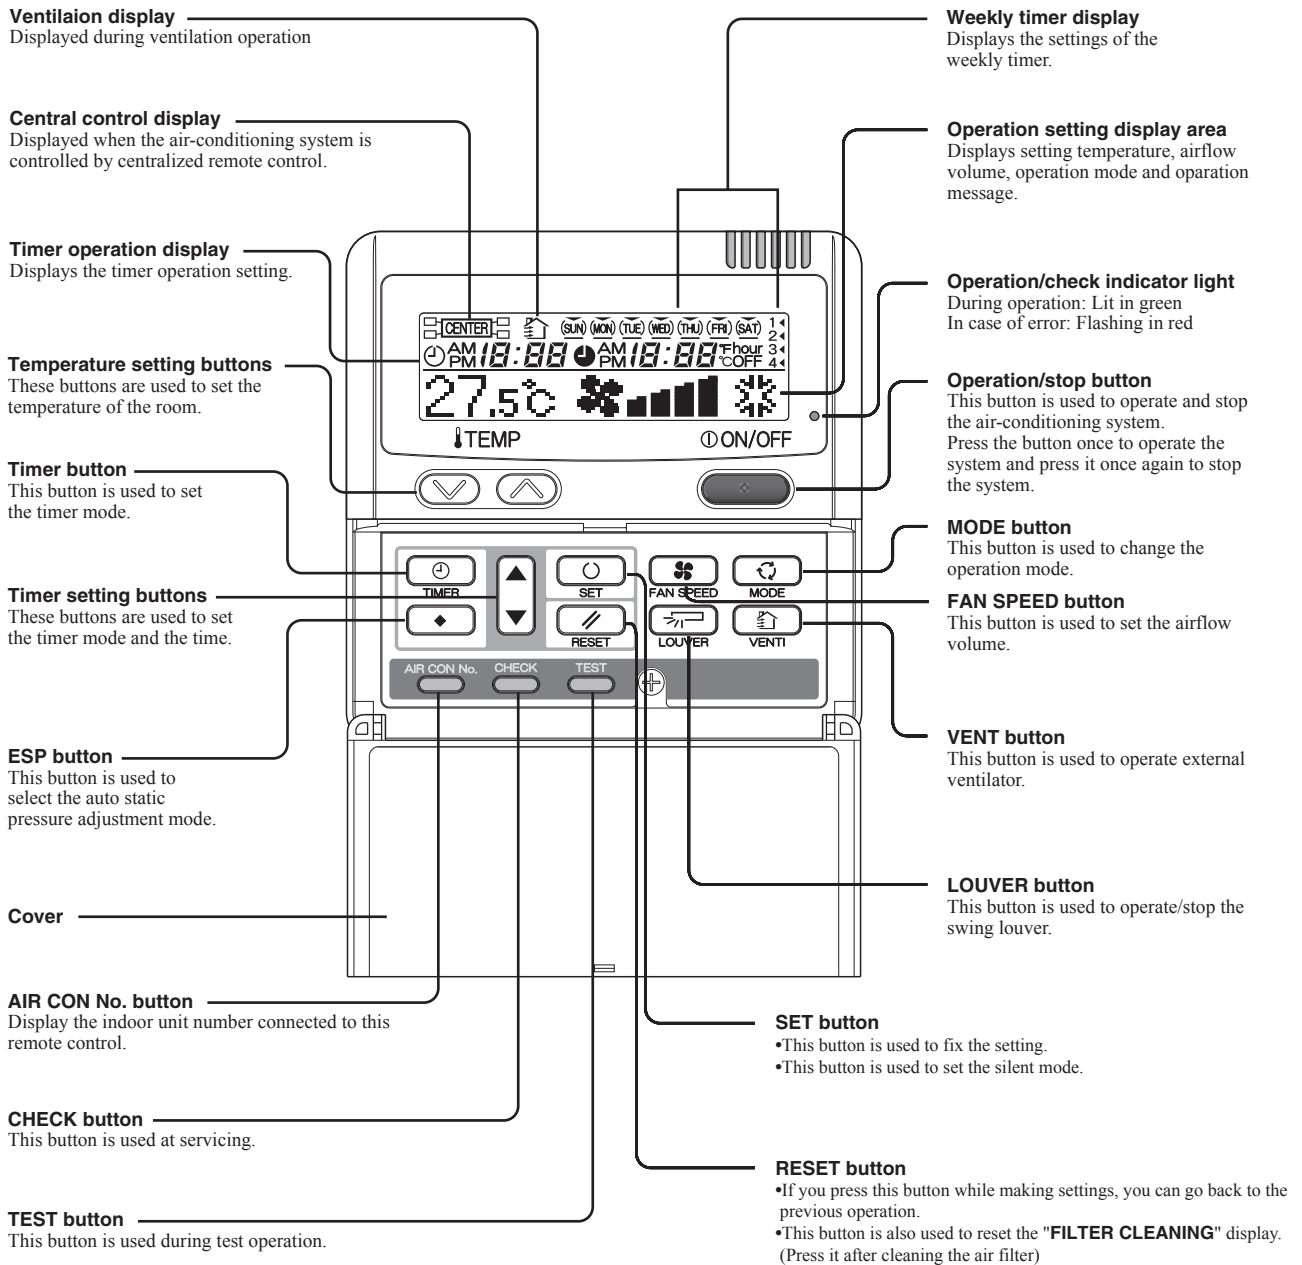

* All displays are described in the liquid crystal display for explanation.

(2) Wireless remote control


Indication section

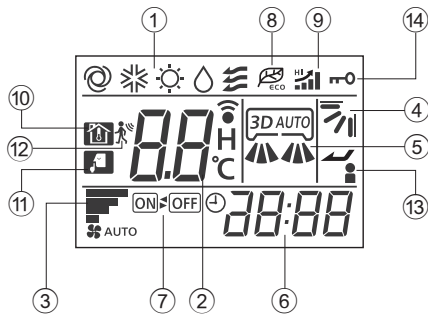

①	OPERATION MODE display	Indicates selected operation mode.
	SET TEMP display	Indicates set temperature.
②	SLEEP TIMER time display	Indicates the amount of time remaining on the sleep timer.
	Indoor function setting number display	Indicates the setting number of the indoor function setting.
③	FAN SPEED display	Indicates the selected air flow volume.
④	UP/DOWN AIRFLOW display	Indicates the up/down louver position.
⑤	LEFT/RIGHT AIRFLOW display	Indicates the left/right louver position.(RCN-EK2 only)
⑥	Clock display	Indicates the current time. If the timer is set, the ON TIMER and OFF TIMER setting times are indicated.
⑦	ON/OFF TIMER display	Displayed when the timer is set.
⑧	ECO mode display	Displayed when the energy-saving operation is active.
⑨	HI POWER display	Displayed when the high power operation is active.
⑩	NIGHT SETBACK display	Displayed when the home leave mode is active.
⑪	SILENT display	Displayed when the silent mode control is active.
⑫	Motion sensor display	Displayed when the infrared sensor control(motion sensor control) is enabled.
⑬	Anti draft setting display	Displayed when anti draft setting is enabled.
⑭	Child lock display	Displayed when child lock is enabled.

Operation section

Transmitter: Sends signal to the air conditioner.

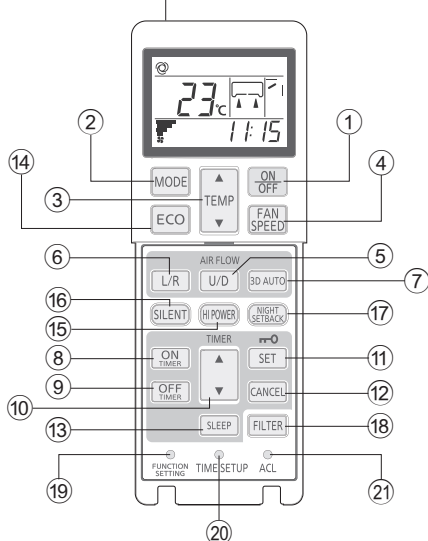

①	ON/OFF button	When this is pressed once, the air conditioner starts to operate and when this is pressed once again, it stops operating.
②	MODE button	Every time this button is pressed, displays switch as below
③	TEMP button	Change the set temperature by pressing ▲ or ▼ button.
④	FAN SPEED button	The fan speed is switched in the following order: 1-speed → 2-speed → 3-speed → 4-speed → AUTO → 1-speed.
⑤	U/D button	Used to determine the up/down louver position.
⑥	L/R button	Used to determine the left/right louver position. (RCN-EK2 only)
⑦	3D AUTO button	Used to switch whether or not to enable or disable 3D AUTO mode. (RCN-EK2 only)
⑧	ON TIMER button	Used to set the ON TIMER.
⑨	OFF TIMER button	Used to set the OFF TIMER.
⑩	SELECT button	Used to switch the time when setting the timer or adjusting the time. Used to switch the settings of the indoor function.
⑪	SET button	Used to determine the setting when setting the timer or adjusting the time. Used to determine the settings of the indoor function. When press and hold SET button ,Child Lock is enabled.
⑫	CANCEL button	Used to cancel the timer setting.
⑬	SLEEP button	Used to set the sleep timer.
⑭	ECO button	Pressing this button starts the energy-saving operation. Pressing this button again cancels it.
⑮	HI POWER button	Pressing this button starts the high power operation. Pressing this button again cancels it.
⑯	SILENT button	Pressing this button starts the silent mode control. Pressing this button again cancels it.
⑰	NIGHT SETBACK button	Pressing this button starts the home leave mode. Pressing this button again cancels it.
⑱	FILTER button	Pressing this button resets FILTER SIGN.
⑲	FUNCTION SETTING switch	Used to set the indoor function.
⑳	TIME SETUP switch	Used to set the current time.
㉑	ACL switch	Used to reset the microcomputer.


1.10.2 Operation control function by the wired remote control

●Model RC-EX3

(1) Switching sequence of the operation mode switches of remote control



- Tap the change operation mode button on the TOP screen.
- When the change operation mode screen is displayed, tap the button of desired mode.
- When the operation mode is selected, the display returns to the TOP screen.

Icons displayed have the following meanings.

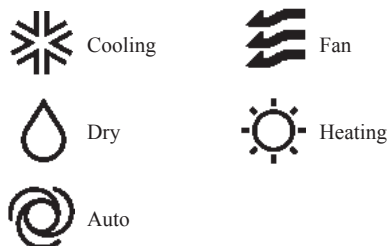

Notes(1) Operation modes which cannot be selected depending on combinations of indoor unit and outdoor unit are not displayed.


- When the Auto is selected, the cooling and heating switching operation is performed automatically according to indoor and outdoor temperatures.

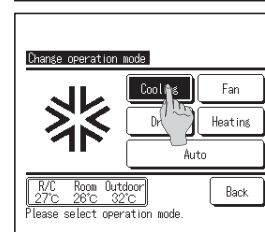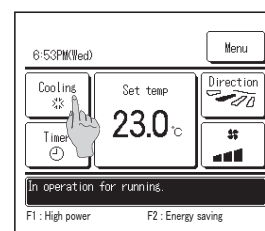


(2) CPU reset

Reset CPU from the remote control as follows.

TOP screen ⇒ ⇒ ⇒

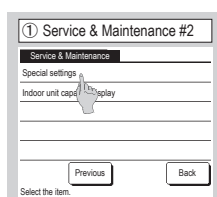

The selected screen is displayed.

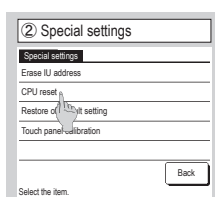



The selected screen is displayed.

Microcomputers of indoor unit and outdoor unit connected are reset (State of restoration after power failure).

(3) Power failure compensation function (Electric power source failure)

Enable the Auto-restart function from the remote control as follows.

TOP screen ⇒ ⇒ ⇒

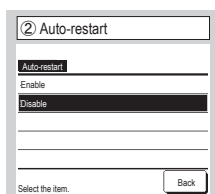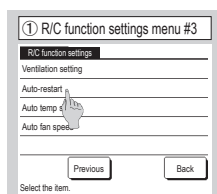

If the unit stops during operation,

It returns to the state before the power failure as soon as the power source is restored (After the end of the primary control at the power on).

It stops after the restoration of power source.

- Since the status of remote control is retained in memory always, it restarts operations according to the contents of memory as soon as the power source is restored. Although the timer mode is cancelled, the weekly timer, peak cut timer and silent mode timer operate according to the following contents:

- When the clock setting is valid : These timer settings are also valid.
- When the clock setting is invalid : These timer settings become "Invalid" since the clock setting is invalid. These timer settings have to be changed to "Valid" after the timer setting.

- Content memorized with the power failure compensation are as follows.

Note(1) Items (f) and (g) are memorized regardless whether the power failure compensation is effective or not while the setting of silent mode is cancelled regardless whether the power failure compensation is effective or not.

- (a) At power failure – Operating/stopped
If it had been operating under the off timer mode, sleep timer mode, the state of stop is memorized.
- (b) Operation mode
- (c) Airflow volume mode
- (d) Room temperature setting
- (e) Louver auto swing/stop
However, the stop position (4-position) is cancelled so that it returns to Position (1).
- (f) “Remote control function items” which have been set with the administrator or installation function settings
 (“Indoor function items” are saved in the memory of indoor unit.)
- (g) Weekly timer, peak-cut timer or silent mode timer settings
- (h) Remote control function setting

(4) Alert displays


If the following (a) to (c) appear, check and repair as follows.

(a) Communication check between indoor unit and remote control




- This appears if communications cannot be established between the remote control and the indoor unit.
Check whether the system is correctly connected (indoor unit, outdoor unit, remote control) and whether the power source for the outdoor unit is connected.

(b) Clock setting check

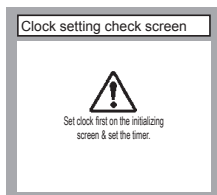

- This appears when the timer settings are done without clock setting.
Set the clock setting before the timer settings.

(c) Misconnection

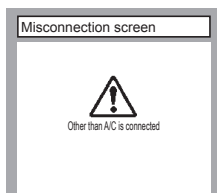

- This appears when something other than the air-conditioner has been connected to the remote control.
Check the location to which the remote control is connected.

Model RC-E5

(1) Switching sequence of the operation mode switches of remote control



(2) CPU reset

This functions when “CHECK” and “ESP” buttons on the remote control are pressed simultaneously. Operation is same as that of the power source reset.

(3) Power failure compensation function (Electric power source failure)

- This becomes effective if “Power failure compensation effective” is selected with the setting of remote control function.
- Since it memorizes always the condition of remote control, it starts operation according to the contents of memory no sooner than normal state is recovered after the power failure. Although the auto swing stop position and the timer mode are cancelled, the weekly timer setting is restored with the holiday setting for all weekdays.

After recovering from the power failure, it readjusts the clock and resets the holiday setting for each weekday so that the setting of weekly timer becomes effective.

- Content memorized with the power failure compensation are as follows.

Note (1) Items (f), (g) and (h) are memorized regardless whether the power failure compensation is effective or not while the setting of silent mode is cancelled regardless whether the power failure compensation is effective or not.

- (a) At power failure – Operating/stopped


If it had been operating under the off timer mode, sleep timer mode, the state of stop is memorized. (Although the timer mode is cancelled at the recovery from power failure, the setting of weekly timer is changed to the holiday setting for all weekdays.)

- (b) Operation mode
- (c) Airflow volume mode
- (d) Room temperature setting
- (e) Louver auto swing/stop

However, the stop position (4-position) is cancelled so that it returns to Position (1).


- (f) “Remote control function items” which have been set with the remote control function setting (“Indoor function items” are saved in the memory of indoor unit.)
- (g) Upper limit value and lower limit value which have been set with the temperature setting control
- (h) Sleep timer and weekly timer settings (Other timer settings are not memorized.)

[Parts layout on remote control PCB]

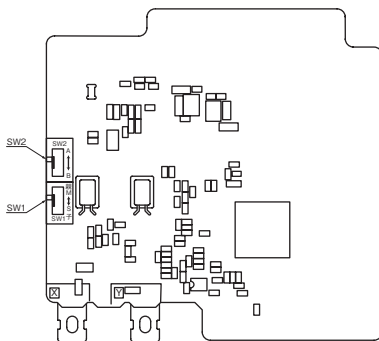

Master/ slave setting when more than one remote controls are used

A maximum of two remote controls can be connected to one indoor unit (or one group of indoor units.)

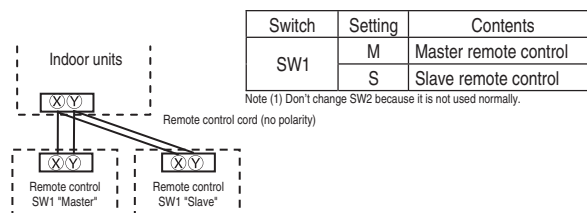

Caution


When using multiple remote controls, the following displays or settings cannot be done with the slave remote control. It is available only with the master remote control.

- ① Louver position setting (set upper or lower limit of swinging range)
- ② Setting indoor unit functions
- ③ Setting temperature range
- ④ Operation data display
- ⑤ Error data display
- ⑥ Silent mode setting
- ⑦ Test operation of drain pump
- ⑧ Remote control sensor setting

11.3 Operation control function by the indoor control

(1) Auto operation


(a) If "Auto" mode is selected by the remote control, the heating and the cooling are automatically switched according to the difference between outdoor air temperature and setting temperature and the difference between setting temperature and return air temperature. (When the switching of cooling mode ↔ heating mode takes place within 3 minutes, the compressor does not operate for 3 minutes by the control of 3-minute timer.) This will facilitate the cooling/heating switching operation in intermediate seasons and the adaptation to unmanned operation at stores, etc (ATM corner of bank).

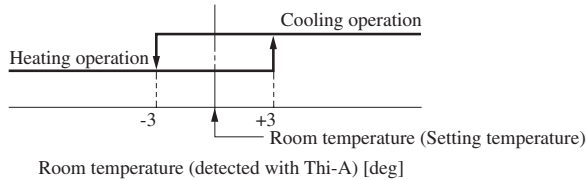

Notes (1) Temperature range of switching cooling/heating mode can be changed by RC-EX3 from ±1.0 – ±4.0.

(2) Room temperature control during auto cooling/auto heating is performed according to the room temperature setting temperature. (DIFF: ±1 deg)


(3) If the indoor heat exchanger temperature rises to 59°C or higher during heating operation, it is switched automatically to cooling operation. In addition, for 1 hour after this switching, the heating operation is not performed, regardless of the temperature shown at right.

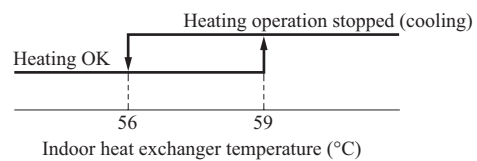

(b) The following automatic controls are performed other than (a) above.


(i) Cooling or heating operation mode is judged according to the conditions of the "Judgment based on Setting temperature + Cooling select temperature and Indoor return air temperature" and the "Judgment based on Outdoor temperature".

- 1) In "Setting temperature - Cooling select temperature < Indoor return air temperature" and "Outdoor temperature/Cooling < Outdoor return air temperature" ⇒ Operation mode: Cooling
- 2) "Setting temperature + Heating select temperature > Indoor return air temperature" and "Outdoor temperature/Heating > Outdoor air temperature" ⇒ Operation mode: Heating
- 3) The outdoor air temperature of the above judgment conditions is sampled at every 10 minutes.
- 4) In the range where the above cooling and heating zones are overlapped Forced thermostat OFF

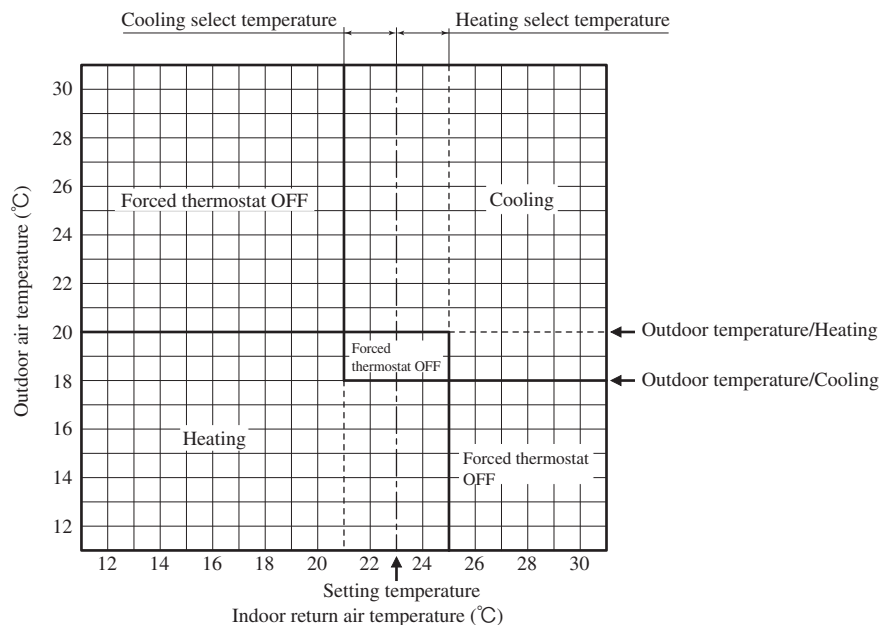

(ii) Regardless of the setting temperature, the cooling or heating operation mode is judged according to the "Judgment based on Room temperature/Cooling or Heating and Outdoor temperature/Cooling or Heating".

- 1) In case of "Room temperature/Cooling < Indoor return air temperature" and "Outdoor temperature/Cooling < Outdoor air temperature" ⇒ Operation mode: Cooling
- 2) In case of "Room temperature/Heating > Indoor return air temperature" and "Outdoor temperature /Heating > Outdoor air temperature" ⇒ Operation mode: Heating
- 3) The outdoor air temperature of the above judgment conditions is sampled at every 10 minutes.
- 4) In the range where the above cooling and heating zones are overlapped ⇒ Forced thermostat OFF

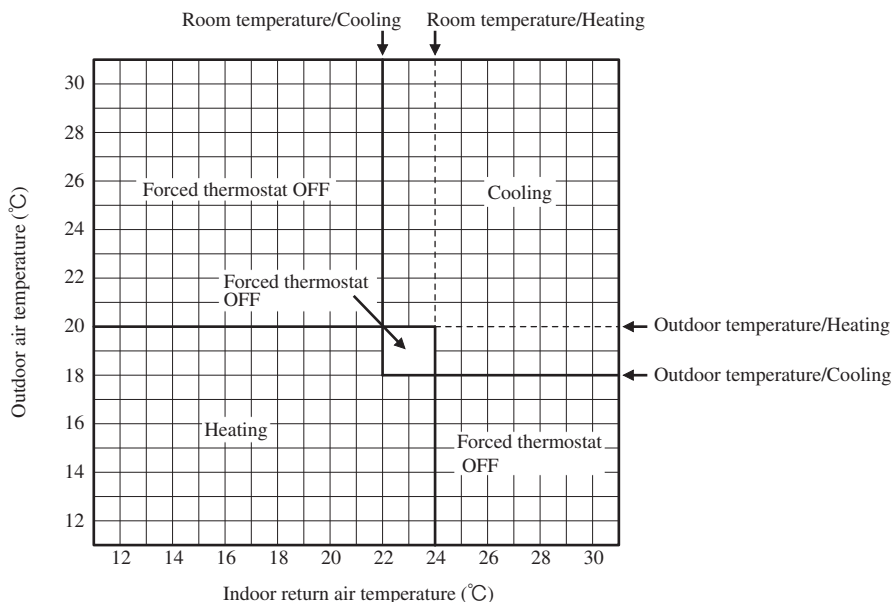

(2) Operations of functional items during cooling/heating

Operation / Functional item	Cooling		Fan	Heating			Dehumidifying
	Thermostat ON	Thermostat OFF		Thermostat ON	Thermostat OFF	Hot start (Defrost)	
Compressor	○	×	×	○	×	○	○/×
4-way valve	×	×	×	○	○	○(×)	×
Outdoor unit fan	○	×	×	○	×	○(×)	○/×
Indoor unit fan	○	○	○	○/×	○/×	○/×	○/×
Drain pump ⁽³⁾	○	× ⁽²⁾	× ⁽²⁾	○/× ⁽²⁾			Thermostat ON: ○ Thermostat OFF: × ⁽²⁾

Notes (1) ○: Operation ×: Stop ○/×: Turned ON/OFF by the control other than the room temperature control.

(2) ON during the drain motor delay control.

(3) Drain pump ON setting may be selected with the indoor unit function setting of the wired remote control.

(3) Dehumidifying (DRY) operation

Return air temperature thermistor [Thi-A (by the remote control when the remote control thermistor is enabled)] controls the indoor temperature environment simultaneously.

- (a) Operation is started in the cooling mode. When the difference between the return air temperature and the setting temperature is 2°C or less, the indoor fan tap is brought down by one tap. That tap is retained for 3 minutes after changing the indoor fan tap.
- (b) If the return air temperature exceeds the setting temperature by 3°C during dehumidifying operation, the indoor fan tap is raised. That tap is retained for 3 minutes after changing the indoor fan tap.
- (c) If the thermostat OFF is established during the above control, the indoor fan tap at the thermostat ON is retained so far as the thermostat is turned OFF.

(4) Timer operation

(a) RC-EX3

- (i) **Sleep timer**
Set the time from the start to stop of operation. The time can be selected in the range from 30 to 240 minutes (in the unit of 10-minute).
Note (1) Enable the “Sleep timer” setting from the remote control. If the setting is enabled, the timer operates at every time.
- (ii) **Set OFF timer by hour**
Set the time to stop the unit after operation, in the range from 1 to 12 hours (in the unit of hour).
- (iii) **Set ON timer by hour**
Set the time to start the unit after the stop of operation, in the range from 1 to 12 hours (in the unit of hour). It is allowed also to set simultaneously the indoor temperature, operation mode, air flow rate and warm-up enabled/disabled.
- (iv) **Set ON timer by clock**
Set the time to start operation. The time can be set in the unit of 5-minute. This setting can be activated only once or at every time. It is allowed also to set simultaneously the indoor temperature, operation mode, air flow rate and warm-up enabled/disabled.
Note (1) It is necessary to set the clock to use this timer.
- (v) **Set OFF timer by clock**
Set the time to stop operation. The time can be set in the unit of 5-minute. This setting can be activated only once or at every time.
Note (1) It is necessary to set the clock to use this timer.
- (vi) **Weekly timer**
Set the ON or OFF timer for a week. Up to 8 patterns can be set for a day. The day-off setting is provided for holidays and non-business days.
Note (1) It is necessary to set the clock to use the weekly timer.

(vii) Combination of patterns which can be set for the timer operations

	Sleep time	Set OFF timer by hour	Set ON timer by hour	Set OFF timer by clock	Set ON timer by clock	Weekly timer
Sleep time		×	×	○	○	○
Set OFF timer by hour	×		×	×	×	×
Set ON timer by hour	×	×		×	×	×
Set OFF timer by clock	○	×	×		○	×
Set ON timer by clock	○	×	×	○		×
Weekly timer	○	×	×	×	×	

Note (1) ○: Allowed ×: Not

(b) RC-E5

- (i) **Sleep timer**
Set the duration of time from the present to the time to turn off the air-conditioner.
It can be selected from 10 steps in the range from “OFF 1 hour later” to “OFF 10 hours later”. After the sleep timer setting, the remaining time is displayed with progress of time in the unit of hour.
- (ii) **OFF timer**
Time to turn OFF the air-conditioner can be set in the unit of 10 minutes.
- (iii) **ON timer**
Time to turn ON the air-conditioner can be set. Indoor temperature can be set simultaneously.
- (iv) **Weekly timer**
Timer operation (ON timer, OFF timer) can be set up to 4 times a day for each weekday.
- (v) **Timer operations which can be set in combination**

Item	Item	Timer	OFF timer	ON timer	Weekly timer
Timer			×	○	×
OFF timer	×			○	×
ON timer	○		○		×
Weekly timer	×	×	×	×	

Note (1) ○: Allowed ×: Not

(2) Since the ON timer, sleep timer and OFF timer are set in parallel, when the times to turn ON and OFF the air-conditioner are duplicated, the setting of the OFF timer has priority.

(5) Hot start (Cold draft prevention at heating)**(a) Operating conditions**

When either one of following conditions is satisfied, the hot start control is performed.

- (i) From stop to heating operation
- (ii) From cooling to heating operation
- (iii) From heating thermostat OFF to ON
- (iv) After completing the defrost operation (only on units with thermostat ON)

(b) Contents of operation**(i) Indoor fan motor control at hot start**

- 1) Within 7 minutes after starting heating operation, the fan mode is determined depending on the condition of thermostat (fan control with heating thermostat OFF).

a) Thermostat OFF

- i) Operates according to the fan control setting at heating thermostat OFF.
- ii) Even if it changes from thermostat OFF to ON, the fan continues to operate with the fan control at thermostat OFF till the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 35°C or higher.
- iii) When the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 35°C or higher, the fan operates with the set airflow volume.

b) Thermostat ON

- i) When the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 25°C or lower, the fan is turned OFF and does not operate.
- ii) When the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 25°C or higher, the fan operates with the fan control at heating thermostat OFF.
- iii) When the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 35°C or higher, the fan operates with the set airflow volume.

- c) If the fan control at heating thermostat OFF is set at the “Set airflow volume” (from the remote control), the fan operates with the set airflow volume regardless of the thermostat ON/OFF.

- 2) Once the fan motor is changed from OFF to ON during the thermostat ON, the indoor fan motor is not turned OFF even if the heat exchanger thermistor detects lower than 25°C.

Note (1) When the defrost operation signal is received, it complies with the fan control during defrost operation.

- 3) Once the hot start is completed, it will not restart even if the temperature on the heat exchanger thermistor drops.

(ii) During the hot start, the louver is kept at the horizontal position.

(iii) When the fan motor is turned OFF for 7 minutes continuously after defrost operation, the fan motor is turned ON regardless of the temperatures detected with the indoor heat exchanger thermistors (Thi-R1, R2).

(c) Ending condition

- (i) If one of following conditions is satisfied during the hot start control, this control is terminated, and the fan is operated with the set airflow volume.

- 1) Heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 35°C or higher.
- 2) It has elapsed 7 minutes after starting the hot start control.

(6) Hot keep

Hot keep control is performed at the start of the defrost operation.

(a) Control

- (i) When the indoor heat exchanger temperature (detected with Thi-R1 or R2) drops to 35°C or lower, the speed of indoor fan is changed to the lower tap at each setting.
- (ii) During the hot keep, the louver is kept at the horizontal position.

(b) Ending condition

When the indoor fan is at the lower tap at each setting, it returns to the set airflow volume as the indoor heat exchanger temperature rises to 45°C or higher.

(7) Auto swing control

Note Even if [Auto Swing] is selected, the louver position with anti draft function is fixed to position 1.

(a) RC-EX3**(i) Louver control**

- 1) To operate the swing louver when the air-conditioner is operating, press the “Direction” button on the TOP screen of remote control. The wind direction select screen will be displayed.
- 2) To swing the louver, touch the “Auto swing” button. The louver will move up and down. To fix the swing louver at a position, touch one of [1] - [4] buttons. The swing louver will stop at the selected position.
- 3) Louver operation at the power on with a unit having the louver 4-position control function
The louver swings one time automatically (without operating the remote control) at the power on.
This allows the microcomputer recognizing and inputting the louver motor (LM) position.



(ii) Automatic louver level setting during heating

At the hot start and the heating thermostat OFF, regardless whether the auto swing switch is operated or not (auto swing or louver stop), the louver takes the level position (in order to prevent blowing of cool wind). The louver position display LCD continues to show the display which has been shown before entering this control.

(iii) Louver free stop control

If you touch the “Menu” → “Service setting” → “R/C function settings” buttons one after another on the TOP screen of remote control, the “Upper/lower flap control” screen is displayed. If the free stop is selected on this screen, the louver motor stops upon receipt of the stop signal from the remote control. If the auto swing signal is received from the remote control, the auto swing will start from the position before the stop.

(b) RC-E5**(i) Louver control**

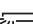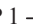
- 1) Press the “LOUVER” button to operate the swing louver when the air-conditioner is operating.
“SWING ” is displayed for 3 seconds and then the swing louver moves up and down continuously.
- 2) To fix the swing louver at a position, press one time the “LOUVER” button while the swing louver is moving so that four stop positions are displayed one after another per second.
When a desired stop position is displayed, press the “LOUVER” button again. The display stops, changes to show the “STOP 1 ” for 5 seconds and then the swing louver stops.
- 3) Louver operation at the power on with a unit having the louver 4-position control function
The louver swings one time automatically (without operating the remote control) at the power on.
This allows inputting the louver motor (LM) position, which is necessary for the microcomputer to recognize the louver position.

Note (1) If you press the “LOUVER” button, the swing motion is displayed on the louver position LCD for 10 second. The display changes to the “SWING ” display 3 seconds later.

(ii) Automatic louver level setting during heating

At the hot start with the heating thermostat OFF, regardless whether the auto swing switch is operated or not (auto swing or louver stop), the louver takes the level position (In order to prevent the cold start). The louver position display LCD continues to show the display which has been shown before entering this control.


(iii) Louver-free stop control

When the louver-free stop has been selected with the indoor function of wired remote control “ POSITION”, the louver motor stops when it receives the stop signal from the remote control. If the auto swing signal is received from the remote control, the auto swing will start from the position where it was before the stop.

Note (1) When the indoor function of wired remote control “ POSITION” has been switched, switch also the remote control function “ POSITION” in the same way.

(8) Thermostat operation**(a) Cooling**


- (i) Thermostat is operated with the room temperature control.
 (ii) Thermostat is turned ON or OFF relative to the set room temperature as shown below.

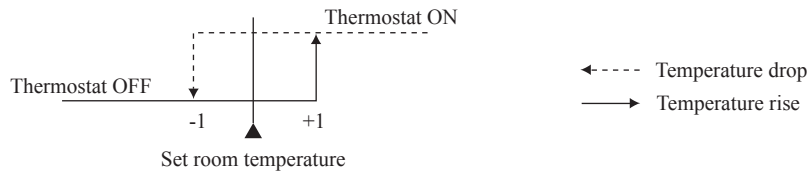

- (iii) Thermostat is turned ON when the room temperature is in the range of $-1 < \text{Set temperature} < +1$ at the start of cooling operation (including from heating to cooling).

(b) Heating

- (i) Thermostat is operated with the room temperature control.
 (ii) Thermostat is turned ON or OFF relative to the set room temperature as shown below.

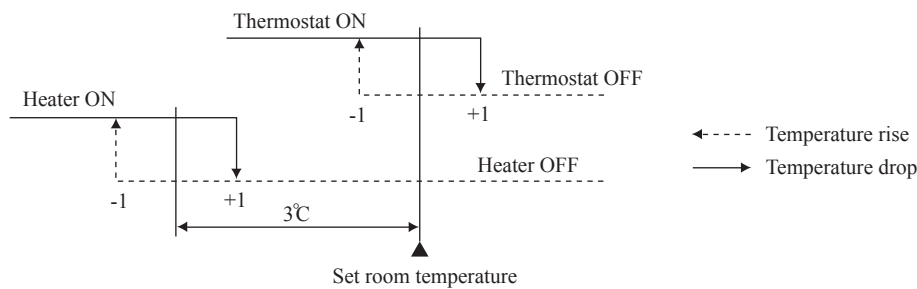

- (iii) Thermostat is turned ON when the room temperature is in the range of $-1 < \text{Set point} < +1$ at the start of heating operation (including from cooling to heating).

(c) Fan control during heating thermostat OFF

- (i) Following fan controls during the heating thermostat OFF can be selected with the indoor function setting of the wired remote control.
- ① Low fan speed (Factory default), ② Set fan speed, ③ Intermittence, ④ Fan OFF
- (ii) When the “Low fan speed (Factory default)” is selected, the following taps are used for the indoor fans.
- For DC motor : ULo tap
- (iii) When the “Set fan speed” is selected, it is operated with the set fan speed also in the thermostat OFF condition.
- (iv) If the “Intermittence” is selected, following controls are performed:
- 1) If the thermostat is turned OFF during the heating operation, the indoor fan stops.
 - 2) Indoor fan OFF is fixed for 5 minutes. After the 5 minutes, the indoor fan is operated at ULo for 2 minutes. In the meantime the louver is controlled at level.
 - 3) After operating at ULo for 2 minutes, the indoor fan moves to the state of 1) above.
 - 4) If the thermostat is turned ON, it moves to the hot start control.
 - 5) When the heating thermostat is turned OFF, the remote control displays the temperature detected at the fan stop and revises the temperature later when the indoor fan changes from ULo to stop.
The remote control uses the operation data display function to display temperatures and updates values of temperature even when the indoor fan is turned OFF.
 - 6) When the defrosting starts while the heating thermostat is turned OFF or the thermostat is turned OFF during defrost operation, the indoor fan is turned OFF. (Hot keep or hot start control takes priority.) However, the suction temperature is updated at every 7-minute.
 - 7) When the heating thermostat is turned ON or the operation is changed to another mode (including stop), this control is stopped immediately, and the operating condition is restored.
- (v) When the “Fan OFF” is selected, the fan on the indoor unit of which the thermostat has been turned OFF, is turned OFF. The same occurs also when the remote control sensor is effective.

(d) Fan control during cooling thermostat OFF

- (i) Following fan controls during the cooling thermostat OFF can be selected with the indoor function setting of the wired remote control.
 - ① Low fan speed, ② Set fan speed (Factory default), ③ Intermittence, ④ Fan OFF
- (ii) When the “Low fan speed” is selected, the following taps are used for the indoor fans.
 - For DC motor : ULo tap
- (iii) When the “Set fan speed” is selected, it is operated with the set fan speed also in the thermostat OFF condition.
- (iv) If the “Intermittence” is selected, following controls are performed:
 - 1) If the thermostat is turned OFF during the cooling operation, the indoor fan stops.
 - 2) Indoor fan OFF is fixed for 5 minutes. After the 5 minutes, the indoor fan is operated at ULo for 2 minutes.
 - 3) After operating at ULo for 2 minutes, the indoor fan moves to the state of 1) above.
 - 4) If the thermostat is turned ON, the fan starts operation at set fan speed.
 - 5) When the cooling thermostat is turned OFF, the remote control displays the temperature detected at the fan stop and revises the temperature later when the indoor fan changes from ULo to stop.
By using operation data display function at wireless remote control, the temperature as displayad and the value is updated including the fan stops.
 - 6) When the cooling thermostat is turned ON or the operation is changed to another mode (including stop), this control is stopped immediately, and the operating condition is restored.
- (v) When the “Fan OFF” is selected, the fan on the indoor unit of which the thermostat has been turned OFF, is turned OFF. The same occurs also when the remote control sensor is effective.

(9) Filter sign

As the operation time (Total ON time of ON/OFF switch) accumulates to 180 hours (1), “FILTER CLEANING” is displayed on the remote control. (This is displayed when the unit is in trouble and under the central control, regardless of ON/OFF)

Note (1) Time setting for the filter sign can be made as shown below using the indoor function of wired remote control “Filter sign”. (It is set at Setting 1 at the shipping from factory.)

Filter sign setting	Function
Setting 1	Setting time: 180 h (Factory default)
Setting 2	Setting time: 600 h
Setting 3	Setting time: 1,000 h
Setting 4	Setting time: 1,000 h (Unit stop) ⁽²⁾

(2) After the setting time has elapsed, the “FILTER CLEANING” is displayed and, after operating for 24 hours further (counted also during the stop), the unit stops.

(10) Compressor inching prevention control

- (a) 3-minute timer

When the compressor has been stopped by the thermostat, remote control operation switch or anomalous condition, its restart will be inhibited for 3 minutes. However, the 3-minute timer is invalidated at the power on the electric power source for the unit.
- (b) 3-minute forced operation timer
 - (i) Compressor will not stop for 3 minutes after the compressor ON. However, it stops immediately when the unit is stopped by means of the ON/OFF switch or by when the thermister turned OFF the change of operation mode.
 - (ii) If the thermostat is turned OFF during the forced operation control of heating compressor, the louver position (with the auto swing) is returned to the level position.
Note (1) The compressor stops when it has entered the protective control.


(11) Drain pump control

- (a) This control is operated when the inverter frequency is other than 0 Hz during the cooling operation and automatic cooling and dehumidifying operations.
- (b) Drain pump ON condition continues for 5 minutes even when it enters the OFF range according to (i) above after turning the drain pump ON, and then stops. The 5-minute delay continues also in the event of anomalous stop.
- (c) The drain pump is operated with the 5-minute delay operation when the compressor is changed from ON to OFF.
- (d) Even in conditions other than the above (such as heating, fan, stop, cooling thermostat OFF), the drain pump control is performed by the drain detection.
- (e) Following settings can be made using the indoor function setting of the wired remote control.
 - (i) 标准 [Standard (in cooling & dry)] : Drain pump is run during cooling and dry.
 - (ii) 标准AND采暖 [Operate in standard & heating] : Drain pump is run during cooling, dry and heating.
 - (iii) 标准AND采暖AND送风 [Operate in heating & fan] : Drain pump is run during cooling, dry, heating and fan.
 - (iv) 标准AND送风 [Operate in standard & fan] : Drain pump is run during cooling, dry and fan.

Note (1) Values in [] are for the RC-EX3 model.

(12) Drain pump abnormalities detection

- (a) Drain detection switch is turned ON or OFF with the float switch (FS) and the timer.

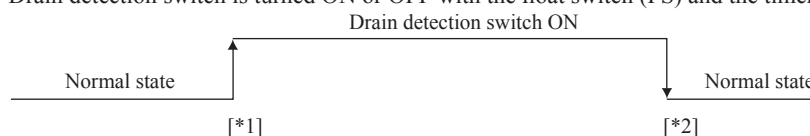

[*1] Drain detection switch is turned “ON” when the float switch “Open” is detected for 3 seconds continuously in the drain detectable space.

[*2] Drain detection switch is turned “OFF” when the float switch “Close” is detected for 10 seconds continuously.

- (i) It detects always from 30 seconds after turning the power ON.
 - 1) There is no detection of anomalous draining for 10 seconds after turning the drain pump OFF.
 - 2) Turning the drain detection switch “ON” causes to turn ON the drain pump forcibly.
 - 3) Turning the drain detection switch “OFF” releases the forced drain pump ON condition.
- (b) Indoor unit performs the control A or B depending on each operating condition.

	Indoor unit operation mode				
	Stop ⁽¹⁾	Cooling	Dry	Fan ⁽²⁾	Heating
Compressor ON		Control A			
Compressor OFF		Control B			

Note (1) Including the stop from the cooling, dehumidifying, fan and heating, and the anomalous stop
 (2) Including the “Fan” operation according to the mismatch of operation modes

- (i) Control A
 - 1) If the float switch detects any anomalous draining condition, the unit stops with the anomalous stop (displays E9) and the drain pump starts. After detecting the anomalous condition, the drain motor continues to be ON.
 - 2) It keeps operating while the float switch is detecting the anomalous condition.
- (ii) Control B

If the float switch detects any anomalous drain condition, the drain motor is turned ON for 5 minutes, and at 10 seconds after the drain motor OFF it checks the float switch. If it is normal, the unit is stopped under the normal mode or, if there is any anomalous condition, E9 is displayed and the drain motor is turned ON. (The ON condition is maintained during the drain detection.)

(13) Operation check/drain pump test run operation mode


- (a) If the power is turned on by the dip switch (SW7-1) on the indoor control PCB when electric power source is supplied, it enters the mode of operation check/drain pump test run. It is ineffective (prohibited) to change the switch after turning power on.
- (b) When the communication with the remote control has been established within 60 seconds after turning power on by the dip switch (SW7-1) ON, it enters the operation check mode. Unless the remote control communication is established, it enters the drain pump test run mode.

Note (1) To select the drain pump test run mode, disconnect the remote control connector (CNB) on the indoor control PCB to shut down the remote control communication.

- (c) Operation check mode
There is no communication with the outdoor unit but it allows performing operation in respective modes by operating the remote control.
- (d) Drain pump test run mode
As the drain pump test run is established, the drain pump only operates and during the operation protective functions by the microcomputer of indoor unit become ineffective.

(14) Cooling, dehumidifying frost protection

- (a) To prevent frosting during cooling mode or dehumidifying mode operation, the of compressor speed is reduced if the indoor heat exchanger temperature (detected with Thi-R) drops to A °C or lower at 4 minutes after the start of compressor operation. If the indoor unit heat exchanger temperature is A °C or lower after 1 minutes, the compressor speed is reduced further. If it becomes B °C or higher, the control terminates. When the indoor heat exchanger temperature has become as shown below after reducing the compressor speed, it is switched to the fan operation. For the selection of indoor fan speed, refer to item (b).
When the indoor return air detected relative humidity (detected with HS) is lower than 50%, the temperature A and B is changed as shown in the table.

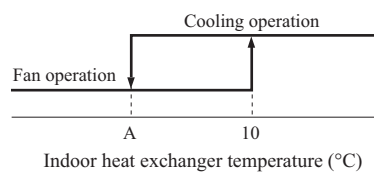

- (b) Selection of indoor fan speed
If it enters the frost prevention control during cooling operation (excluding dehumidifying), the indoor fan speed is switched.
 - (i) When the indoor return air detection temperature (detected with Thi-A) is 23°C or higher and the indoor heat exchanger temperature (detected with Thi-R) detects the compressor frequency drop start temperature A°C+1°C, of indoor fan speed is increased by 20min⁻¹.
 - (ii) If the phenomenon of (i) above is detected again after the acceleration of indoor fan, indoor fan speed is increased further by 20min⁻¹.

Note (1) Indoor fan speed can be increased by up to 2 taps.
• Compressor frequency drop start temperature

Hs > 50%

Symbol \ Item	Low	High
A	1.0	2.5
B	2.5	4.0


Hs ≤ 50%

Symbol \ Item	Low	High
A	-0.5	1.0
B	1.0	2.5

Note (1) Frost prevention temperature setting can be selected with the indoor unit function setting of the wired remote control.

(15) Heating overload protection

- (a) If the indoor heat exchanger temperature (detected with Thi-R) at 63°C or higher is detected for 2 seconds continuously, the compressor stops. When the compressor is restarted after a 3-minute delay, if a temperature at 63°C or higher is detected for 2 seconds continuously within 60 minutes after initial detection and if this is detected 5 times consecutively, the compressor stops with the anomalous stop (E8). Anomalous stop occurs also when the indoor heat exchanger temperature at 63°C or higher is detected for 6 minutes continuously.

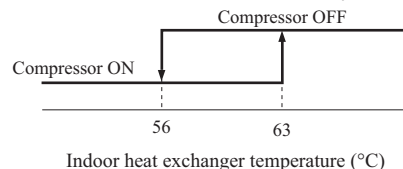

- (b) Indoor fan speed selection
If, after second detection of heating overload protection up to fourth, the indoor fan is set at Me and Lo taps when the compressor is turned ON, the indoor fan speed is increased by 1 tap.

(16) Anomalous fan motor

- (a) After starting the fan motor, if the fan motor speed is 200min⁻¹ or less is detected for 30 seconds continuously and 4 times within 60 minutes, then fan motor stops with the anomalous stop (E16).
- (b) If the fan motor fails to reach at -50 min⁻¹ less than the required speed, it stops with the anomalous stop (E20).

(17) Plural unit control – Control of 16 units group by one remote control

(a) Function

One remote control can control a group of multiple number of unit (Max. 16 indoor units). “Operation mode” which is set by the remote control can operate or stop all units in the group one after another in the order of unit No.⁽¹⁾. Thermostat and protective function of each unit function independently.


Note (1) Unit No. is set by SW2 on the indoor control PCB. Unit No. setting by SW2 is necessary for the indoor unit only. In cases of the twin, triple and double twin specification, it is necessary set for the master and the slave units. This can be selected by SW5. (All are set for the master unit at the shipping from factory.)

SW2: For setting of 0 – 9, A – F

SW5: For setting of master and slave units

(See table shown at right.)

Unit	SW5 setting	
	SW5-1	SW5-2
Master unit	OFF	OFF
Slave unit a	OFF	ON
Slave unit b	ON	OFF
Slave unit c	ON	ON

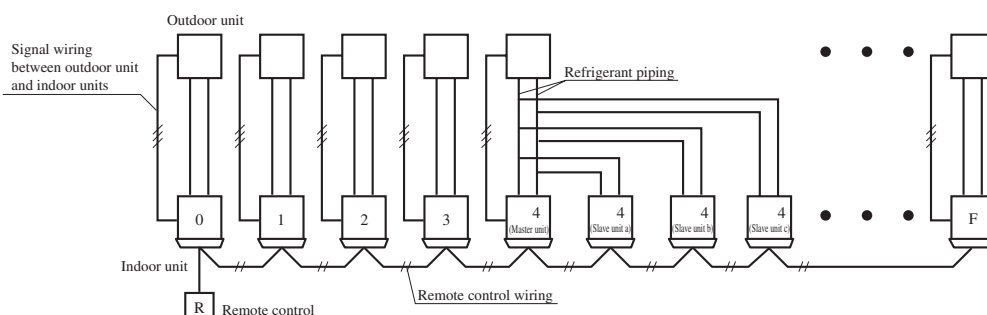

(2) Unit No. may be set at random unless duplicated, it should be better to set orderly like 0, 1, 2...., F to avoid mistake.

(b) Display to the remote control

- (i) Central or each remote control basis, heating preparation: the smallest unit No. among the operating units in the remote mode (or the center mode unless the remote mode is available) is displayed.
- (ii) Inspection display, filter sign: Any of unit that starts initially is displayed.

(c) Confirmation of connected units

- (i) In case of RC-EX3 remote control

If you touch the buttons in the order of “Menu” → “Service setting” → “Service & Maintenance” → “IU address” on the TOP screen of remote control, the indoor units which are connected are displayed.

- (ii) In case of RC-E5 remote control

Pressing “AIR CON No.” button on the remote control displays the indoor unit address. If “▲” “▼” button is pressed at the next, it is displayed orderly starting from the unit of smallest No.

(d) In case of anomaly

If any anomaly occurs on a unit in a group (a protective function operates), that unit stops with the anomalous stop but any other normal units continue to run as they are.

(e) Signal wiring procedure

Signal wiring between indoor and outdoor units should be made on each unit same as the normal wiring. For the group control, connect the remote control wiring to each indoor unit via terminal block for the remote control.

Connect the remote control wiring separately from the power source cable or wires of other electric devices (AC220V or higher).

(18) High ceiling control

When sufficient air flow rate cannot be obtained from the indoor unit which is installed at a room with high ceiling, the air flow rate can be increased by changing the fan tap. To change the fan tap, use the indoor unit function “FAN SPEED SET” on the wired remote control.

Fan tap		Indoor unit airflow setting			
		PHi2 - Hi - Me - ULo	Hi - Me - ULo	Hi - ULo	Hi - Me
FAN SPEED SET	STANDARD	PHi2 - Hi - Me - ULo	Hi - Me - ULo	Hi - ULo	Hi - Me
	HIGH SPEED1 [Setting 1]	PHi2 - PHi1 - Hi - Me	PHi1 - Hi - Me	PHi1 - Me	PHi1 - Hi
	HIGH SPEED2 [Setting 2]	PHi2 - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me

Notes (1) Factory default is STANDARD.

(2) At the hot-start and heating thermostat OFF, or other, the indoor fan is operated at the low speed tap of each setting.

(3) This function is not able to be set with wireless remote controls or simple remote control (RCH-E3)

(4) Values in [] are for the RC - EX3 models.


(19) Abnormal temperature thermistor (return air/indoor heat exchanger) broken wire/short-circuit detection

- (a) Broken wire detection
When the return air temperature thermistor detects -50°C or lower or the heat exchanger temperature thermistor detect -50°C or lower for 5 seconds continuously, the compressor stops. After a 3-minute delay, the compressor restarts but, if it is detected again within 60 minutes after the initial detection for 6 minutes continuously, stops again (the return air temperature thermistor: E7, the heat exchanger temperature thermistor: E6).
- (b) Short-circuit detection
If the heat exchanger temperature thermistor detects 70°C or higher for 5 seconds continuously at 2 minutes and 20 seconds after the compressor ON during cooling operation, the compressor stops (E6).

(20) External input/output control (CnT or CnTA)

External input/output connectors are provided on the indoor unit control PCB, and each input/output is possible to be changed by RC-EX3.

Be sure to connect the wired remote control to the indoor unit. Remote operation with CnT/CnTA only is not possible.

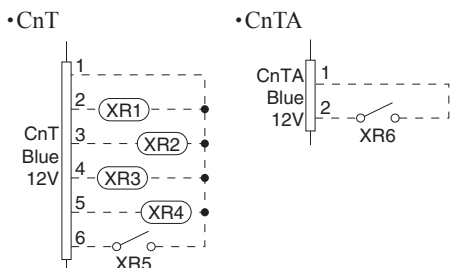

Input/Output	Connector	Factory default setting	RC-EX3 function name
Output	CnT-2 (XR1)	Operation output	External output 1
	CnT-3 (XR2)	Heating output	External output 2
	CnT-4 (XR3)	Compressor ON output	External output 3
	CnT-5 (XR4)	Inspection(Error) output	External output 4
"Input (Volt-free contact)"	CnT-6 (XR5)	Remote operation input	External input 1
	CnTA (XR6)	Remote operation input	External input 2

■ Priority order for combinations of CnT and CnTA input.

		CnTA					
		① Operation stop level	② Operation stop pulse	③ Operation permission/prohibition	④ Operation permission/prohibition pulse	⑤ Cooling/heating selection level	⑥ Cooling/heating selection pulse
CnT	① Operation stop level	CnT ①	CnT ①	CnT ① + CnTA ②	CnT ①	CnT ① / CnTA ⑤	CnT ① / CnTA ⑥
	② Operation stop pulse	CnT ②	CnT ②	CnT ② + CnTA ③	CnT ②	CnT ② / CnTA ⑤	CnT ② / CnTA ⑥
	③ Operation permission/prohibition level	CnT ③ > CnTA ①	CnT ③ > CnTA ②	CnT ③ + CnTA ③	CnT ③	CnT ③ / CnTA ⑤	CnT ③ / CnTA ⑥
	④ Operation permission/prohibition pulse	CnT ④	CnT ④	CnT ④ + CnTA ③※	CnT ④	CnT ④ / CnTA ⑤	CnT ④ / CnTA ⑥
	⑤ Cooling/heating selection level	CnT ⑤ / CnTA ①	CnT ⑤ / CnTA ②	CnT ⑤ / CnTA ③※	CnT ⑤ / CnTA ④	CnT ⑤	CnT ⑤
	⑥ Cooling/heating selection pulse	CnT ⑥ / CnTA ①	CnT ⑥ / CnTA ②	CnT ⑥ / CnTA ③	CnT ⑥ / CnTA ④	CnT ⑥	CnT ⑥

Note (1) Following operation commands are accepted when the operation prohibition is set with CnTA as indicated with *.

Individual operation command from remote control, test run command from outdoor unit and operation command from option device, CnT input.

Reference: Explanation on the codes and the combinations of codes in the table above

1. In case of CnT "Number", the CnT "Number" is adopted and CnTA is invalidated.
 2. In case of CnTA "Number", the CnTA "Number" is adopted and CnT is invalidated.
 3. In case of CnT "Number"/CnTA "Number", the CnT "Number" and the CnTA "Number" become independent functions each other.
 4. In case of CnT "Number" + CnTA "Number", the CnT "Number" and the CnTA "Number" become competing functions each other.
 5. In case of CnT "Number" > CnTA "Number", the function of CnT "Number" supersedes that of CnTA "Number".
 6. In case of CnT "Number" < CnTA "Number", the function of CnTA "Number" supersedes that of CnT "Number".
- (The "Number" above means ① - ⑥ in the table.)

(a) Output for external control (remote display)

Indoor unit outputs the following signal for operation status monitoring.

	Output name	Condition
1	Operation output	During operation
2	Heating output	During heating operation
3	Compressor ON output	During compressor operation
4	Inspection(Error) output	When anomalous condition occurs.
5	Cooling output	During cooling operation
6	Fan operation output 1	When indoor unit's fan is operating
7	Fan operation output 2	When indoor unit's fan is operating, and fan speed is higher than Hi speed.
8	Fan operation output 3	When indoor unit's fan is operating, and fan speed is Lower than Me speed.
9	Defrost/oil return output	When indoor unit receive defrost/oil return signal from the outdoor unit.
10	Ventilation output	When "Venti.ON" is selected from remote control
11	Free cooling output	When the ambient temp. is between 10 - 18 C in cooling and fan operation
12	Indoor unit overload alarm output	Refer to "IU overload alarm"


(b) Input for external control

The external input for the indoor unit can be selected from the following input.

	Input name	Content
1	Run/Stop	Refer to [(20) (c) Remote operation input]
2	Permission/Prohibition	Refer to [(19) Operation permission/prohibition]
3	Cooling/Heating	Refer to [(23) Selection of cooling/heating external input function]
4	Emergency stop	Indoor/outdoor units stop the operation, and [E63] is displayed.
5	Setting temperature shift	Set temperature is shifted by +2/-2C in cooling/heating.
6	Forced thermo-OFF	Unit goes thermo off.
7	Temporary stop	Refer to [(22) Temporary stop input]
8	Silent mode	Outdoor unit silent mode is activate.

(i) In case of “Level input” setting (Factory default)

Input signal to CnT-6 or CnTA is OFF→ON unit ON
 Input signal to CnT-6 or CnTA is ON→OFF unit OFF
 Operation is not inverted.

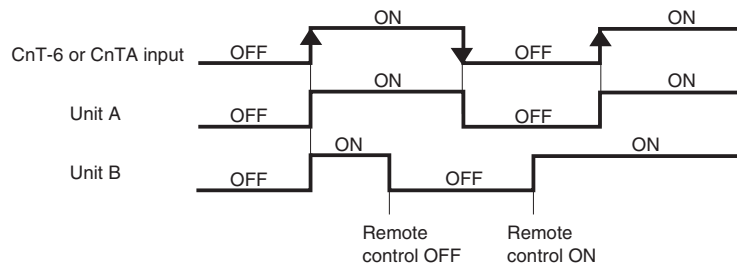


Note (1) The latest operation has priority

It is available to operate/stop by remote control or central control

(ii) In case of “Pulse input” setting (Local setting)


It is effective only when the input signal to CnT-6 or CnTA is changed OFF→ON, and at that time unit operation [ON/OFF] is inverted.

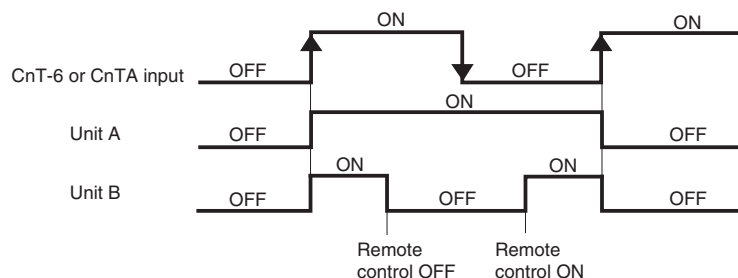

(c) Remote operation

(i) In case of multiple units (Max. 16 indoor units group) are connected to one wired remote control

When the R/C function setting of wired remote control for “External control set” is changed from “Individual (Factory default)” to “For all units”, all units connected in one wired remote control system can be controlled by external operation input.

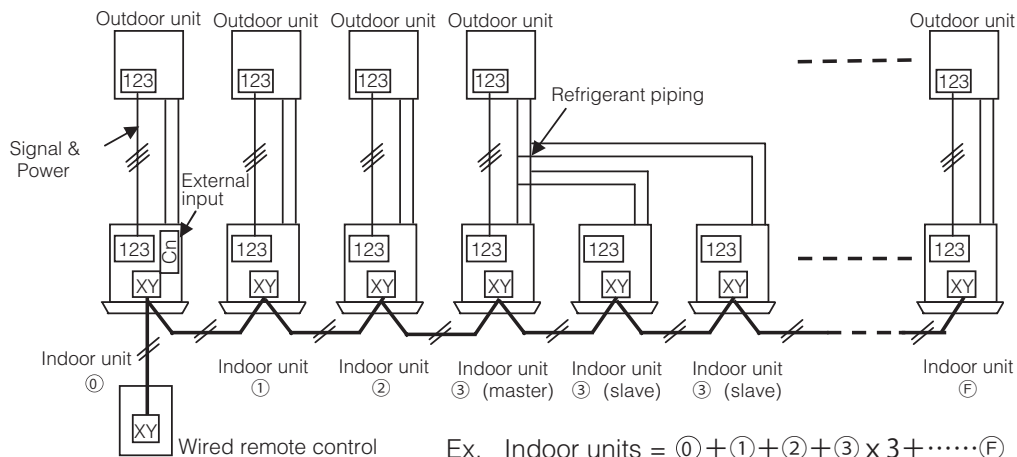

Ex. Indoor units = ① + ① + ② + ③ x 3 + ⑥ ≤ 16 units

CnT-6 or CnTA	Individual operation (Factory default)		All units operation (Local setting)	
	ON	OFF	ON	OFF
	Only the unit directly connected to the remote control can be operated.	Only the unit directly connected to the remote control can be stopped operation.	All units in one remote control system can be operated.	All units in one remote control system can be stopped operation.
	Unit ① only	Unit ① only	Units ①—⑤	Units ①—⑤


When more than one indoor unit (Max. 16 indoor units) are connected in one wired remote control system:

- (1) In case of "Individual control", external input to CnT-6 or CnTA is effective for only the unit ① .
- (2) In case of "All units operation", all units in one remote control system can be controlled by external input to CnT-6 or CnTA on the indoor unit ① .
External input to CnT-6 or CnTA on the other indoor unit is also effective.

(21) Operation permission/prohibition

(In case of adopting card key switches or commercially available timers)

When the indoor function setting of wired remote control for “Operation permission/prohibition” is changed from “Invalid (Factory default)” to “Valid”, following control becomes effective.

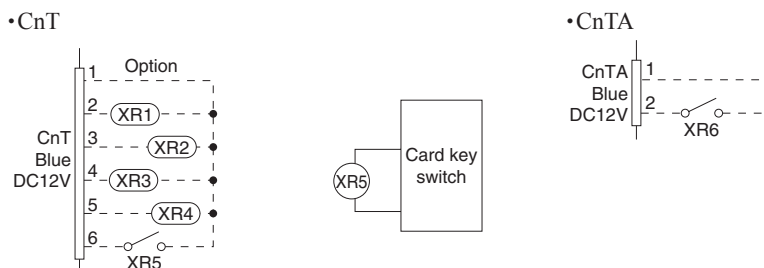

CnT-6 or CnTA	Normal operation (Factory default)		Operation permission/prohibition mode “Valid” (Local setting)	
	ON	OFF	ON	OFF
	Operation	Stop	Operation permission*1	Operation prohibition (Unit stops)

*1 **Only the “LEVEL INPUT” is acceptable for external input**, however when the indoor function setting of “Level input (Factory default)” or “Pulse input” is selected by the function for “External input” of the wired remote control, operation status will be changed as follows.

In case of “Level input” setting	In case of “Pulse input” setting
Unit operation from the wired remote control becomes available*(1)	Unit starts operation *(2)

* (1) In case that “Operation permission/prohibition mode” setting is “Valid” and “External input” setting is “Level input (Factory default)”;


- ① When card key switch is ON (CnT-6 or CnTA ON: Operation permission), start/stop operation of the unit from the wired remote control becomes available.
- ② When card key switch is OFF (CnT-6 or CnTA OFF: Operation prohibition), the unit stops operation in conjunction with OFF signal, and start/stop operation of the unit from the wired remote control becomes unavailable.

* (2) In case that “Operation permission/prohibition mode” setting is “Valid” and “External input” setting is “Pulse input (Local setting)”;

- ① When card key switch is ON (Operation permission), the unit starts operation in conjunction with ON signal. and also start/stop operation of the unit from the wired remote control becomes available.
- ② When card key switch is OFF (Operation prohibition), the unit stops operation in conjunction with OFF signal, and start/stop operation of the unit from the wired remote control becomes unavailable.


(3) This function is invalid only at “Center mode” setting done by central control.

a) In case of CnT ① operation stop level > CnTA ③ operation permission/prohibition level

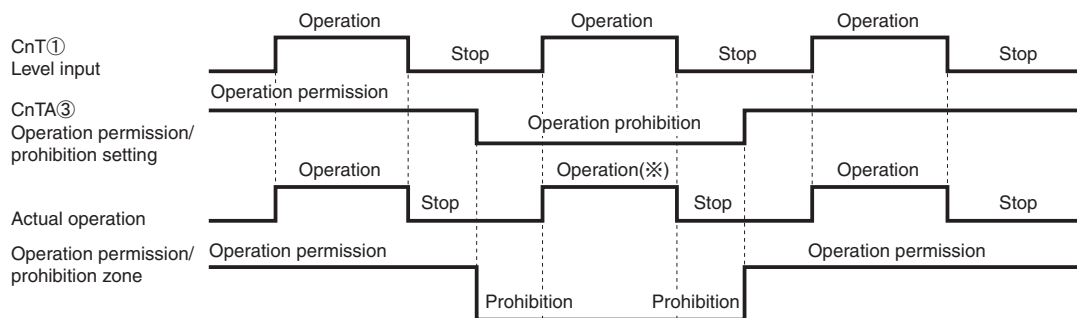


(*) CnT level input supersedes CnTA operation prohibition.

(b) In case of CnT ③ operation permission/prohibition level + CnTA ③ operation permission/prohibition level

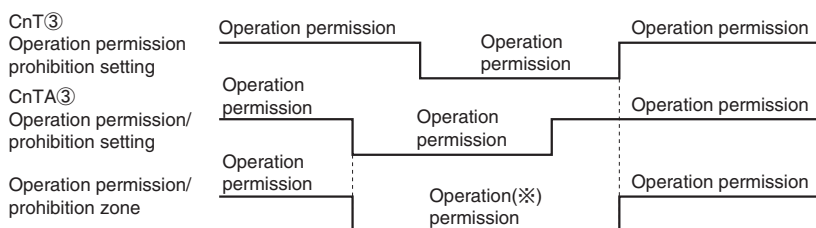


(*) Operation prohibition zone is determined by the OR judgment between CnT operation prohibition zone and CnTA operation prohibition zone.

(c) In case of CnT ③ operation permission/prohibition level > CnTA ② operation/stop pulse

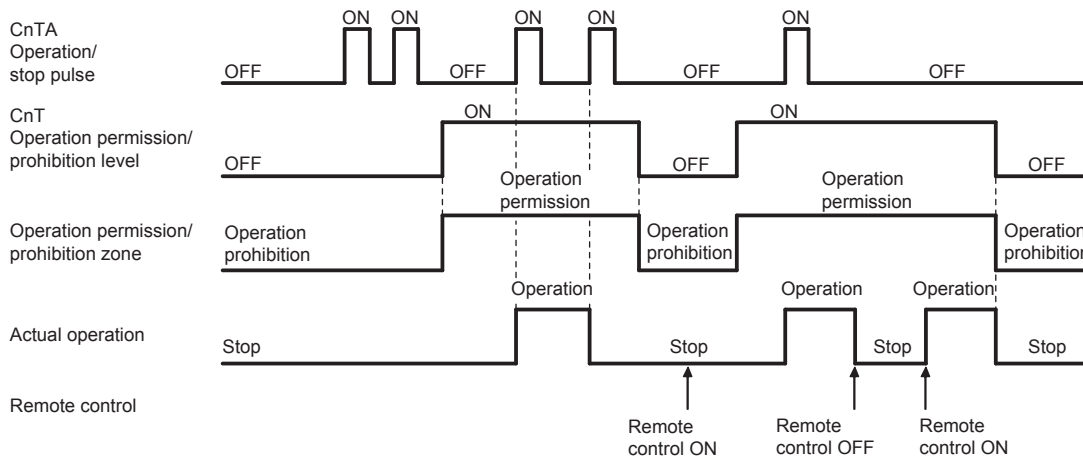

Note (1) If it is prohibited by CnT, all "Operation" and "Stop" commands are not accepted.

(d) In case of CnT ② operation/stop pulse + CnTA ③ operation permission/prohibition level

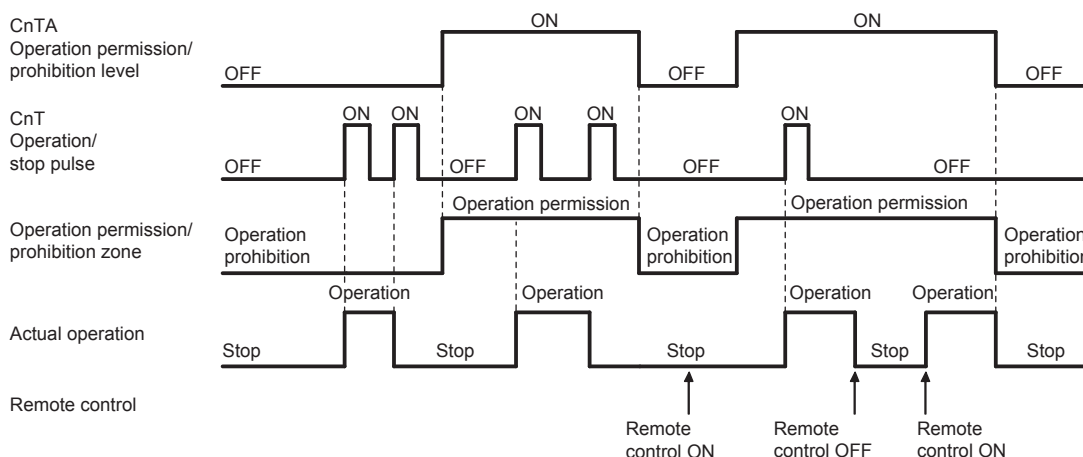


(22) Temporary stop input

In case of temporary stop, operation lamp of remote control lights, but indoor/outdoor unit stop the operation.

(a) In case of “level input” setting (Factory default)


Input signal to CnT-6 or CnTA is OFF → ON : Temporary stop

Input signal to CnT-6 or CnTA is OFF → ON : Normal operation

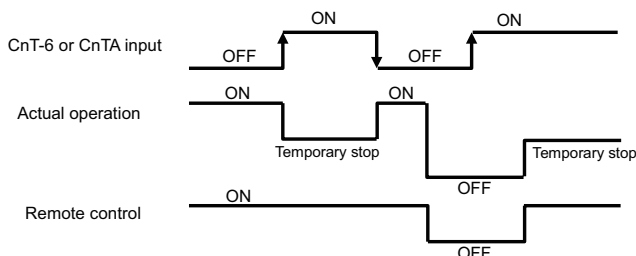

(b) In case of “pulse input” setting (Local setting)

It is effective only when the input signal is changed OFF→ON, and “temporary stop/normal operation” is inverted.

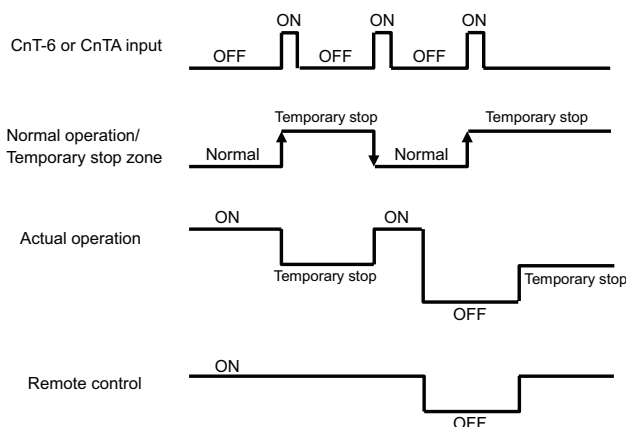

(23) Selection of cooling/heating external input function

- (a) When “External input 1 setting: Cooling/heating” is set by the indoor unit function from remote control, the cooling or heating is selected with CnT-6 or CnTA.
- (b) When the external input 1 method selection: Level input is set by the indoor unit function:
 - CnT-6 or CnTA: OPEN → Cooling operation mode
 - CnT-6 or CnTA: CLOSE → Heating operation mode
- (c) When the external input 1 method selection: Pulse input is set by the indoor unit function:

If the external input is changed OPEN → CLOSE, operation modes are inverted (Cooling → Heating or Heating → Cooling).
- (d) If the cooling/heating selection signal is given by the external input, the operation mode is transmitted to the remote control.

■ Selection of cooling/heating external input function

External input selection	External input method	Operation	
External input selection Cooling/heating selection	⑤ Level	External terminal input (CnT or CnTA)	
		Cooling/heating	
		Cooling/heating (Competitive)	
	⑥ Pulse	External terminal input (CnT or CnTA)	
		Cooling/heating	
		Cooling/heating (Competitive)	


Notes (1) Regarding the priority order for combinations of CnT and CnTA, refer to Page 127.

(24) Fan control at heating startup

- (a) Starting conditions
At the start of heating operation, if the difference of setting temperature and return air temperature is 5°C or higher after the end of hot start control, this control is performed.
- (b) Contents of control
 - (i) Sampling is made at each minute and, when the indoor heat exchanger temperature (detected with Thi-R) is 37°C or higher, present number of revolutions of indoor fan speed is increased by 10min⁻¹.
 - (ii) If the indoor heat exchanger temperature drops below 37°C at next sampling, present number of revolutions of indoor fan speed is reduced by 10min⁻¹.
- (c) Ending conditions
Indoor fan speed is reduced to the setting airflow volume when the compressor OFF is established and at 30 minutes after the start of heating operation.

(25) Room temperature detection temperature compensation during heating

With the standard specification, the compressor is turned ON/OFF with the thermostat setting temperature. When the thermostat is likely to turn OFF earlier because the unit is installed at the ceiling where warm air tends to accumulate, the setting can be changed with the wired remote control indoor unit function “※ SP OFFSET”. The compressor and the heater are turned ON/OFF at one of the setting temperature +3, +2 or +1°C in order to improve the feeling of heating. The setting temperature, however, has the upper limit of 30°C.

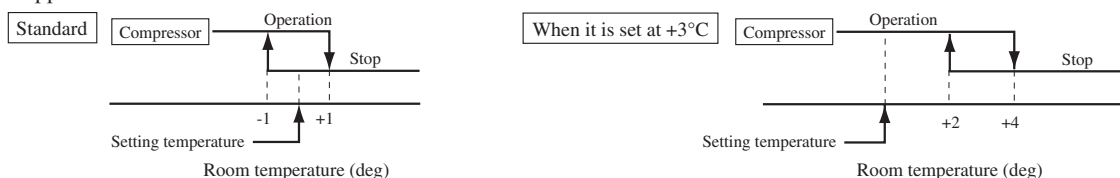

(26) Return air temperature compensation

This is the function to compensate the deviation between the detection temperature by the return air temperature thermistor and the measured temperature after installing the unit.

- (a) It is adjustable in the unit of 0.5°C with the wired remote control indoor unit function “RETURN AIR TEMP”.
 - +1.0°C, +1.5°C, +2.0°C • -1.0°C, -1.5°C, -2.0°C
 - (b) Compensated temperature is transmitted to the remote control and the compressor to control them.
- Note (1) The detection temperature compensation is effective on the indoor unit thermistor only.

(27) High power operation (RC-EX3 only)

It operates at with the set temperature fixed at 16°C for cooling, 30°C for heating and maximum indoor fan speed for 15 minutes maximum.

(28) Energy-saving operation (RC-EX3 only)

It operates with the setting temperature fixed at 28°C for cooling, 22°C for heating or 25°C for auto. When fan control in cooling/heating thermo-OFF setting is “Set fan speed”, fan speed during thermo-OFF is changed to “Low”. (Maximum capacity is restricted at 80%.)

(29) Warm-up control (RC-EX3 only)

Operation will be started 5 to 60 minutes before use according to the forecast made by the microcomputer which calculates when the operation should be started in order to warm up the indoor temperature near the setting temperature at the setting time of operation start.

(30) Home leave mode (RC-EX3 only)

When the unit is not used for a long period of time, the room temperature is maintained at a moderate level, avoiding extremely hot or cool temperature.

- (a) Cooling or heating is operated according to the outdoor temperature (factory setting 35°C for cooling, 0°C for heating) and the setting temperature. (factory setting 33°C for cooling, 10°C for heating)
- (b) Setting temperature and indoor fan speed can be set by RC-EX3.

(31) Auto temperature setting (RC-EX3 only)

Setting temperature is adjusted automatically at the adequate temperature the center setting temperature is 24°C by correcting the outdoor air temperature.

(32) Fan circulator operation (RC-EX3 only)

When the fan is used for circulation, the unit is operated as follows depending on the setting with the remote control.

- (a) If the invalid is selected with the remote control, the fan is operated continuously during the fan operation. (normal fan mode)
- (b) If the valid is selected with the remote control, the fan is operated or stopped when on the difference of the remote control temperature sensor and the return air temperature sensor becomes bigger than 3°C.

(33) The operation judgment is executed every 5 minutes (RC-EX3 only)

Setting temperature T_s is changed according to outdoor temperature
This control is valid with cooling and heating mode. (Not auto mode)

- (a) Operate 5 minutes forcedly.
- (b) Setting temperature is adjusted every 10 minutes.
 - (i) Cooling mode.
 $T_s = \text{outdoor temperature} - \text{offset value}$
 - (ii) Heating mode.
 $T_s = \text{outdoor temperature} + \text{offset value}$
- (c) If the return air temperature lower than 18°C in cooling or return air temperature becomes higher than 25°C in heating, unit goes thermostat OFF.

(34) Auto fan speed control (RC-EX3 only)

In order to reach the room temperature to the set temperature as quickly as possible, the airflow rate is increased when the set temperature of thermostat differs largely from the return air temperature. According to temperature difference between set temperature and return air temperature, indoor fan tap are controlled automatically.

- Auto 1: Changes the indoor fan tap within the range of Hi ↔ Me ↔ Lo.
- Auto 2: Changes the indoor fan tap within the range of P-Hi ↔ Hi ↔ Me ↔ Lo.

(35) Indoor unit overload alarm (RC-EX3 only)

If the following condition is satisfied at 30 minutes after starting operation, RC-EX3 shows maintenance code "M07" and the signal is transmitted to the external output (CnT-2-5).

- Cooling, Dry, Auto(Cooling) : Indoor air temperature = Set room temperature by remote control + Alarm temperature difference
 - Heating, Auto(Heating) : Indoor air temperature = Set room temperature by remote control - Alarm temperature difference
- Alarm temperature difference is selectable between 5 to 10°C.

If the following condition is satisfied or unit is stopped, the signal is disappeared.

- Cooling, Dry, Auto(Cooling) : Indoor air temperature = Set room temperature + Alarm temperature difference -2°C
- Heating, Auto(Heating) : Indoor air temperature = Set room temperature - Alarm temperature difference +2°C

(36) Peak-cut timer (RC-EX3 only)

Power consumption can be reduced by restricting the maximum capacity.

Set the [Start time], the [End time] and the capacity limit % (Peak-cut %).

- 4-operation patterns per day can be set at maximum.
- The setting time can be changed by 5-minutes interval.
- The selectable range of capacity limit % (Peak-cut %) is from 0% to 40-80% (20% interval).
- Holiday setting is available.

(37) Motion sensor control (RC-EX3 only)

The sensor determines the presence of people and the amount of activity, and the following controls are done by the motion sensor. Following settings are necessary to activate motion sensor control.


- (a) Infrared (motion) sensor setting: Installation setting of remote control
The indoor unit which is set to "Enable" become valid.
- (b) Infrared (motion) sensor control: Energy-saving setting of remote control
The function which is set to "Enable" become valid.
 - (i) Power saving control
The set temperature is adjusted according to the presence of people and their amount of activity detected by the infrared sensor.
 - (ii) Auto-off control
When no activity is detected for 1 hour, unit will go stand-by mode. Unit will re-start operation automatically by activity detection during the stand-by mode.

1.10.4 Operation control function by the outdoor control

(I) Models SRC40-60


(1) Defrost operation

- (a) Starting conditions (Defrost operation can be started only when all of the following conditions are satisfied.)
- (i) After start of heating operation
When it elapsed 35 minutes. (Accumulated compressor operation time)
 - (ii) After end of defrost operation
When it elapsed 35 minutes. (Accumulated compressor operation time)
 - (iii) Outdoor heat exchanger sensor (TH1) temperature
When the temperature has been below -5°C for 3 minutes continuously.
 - (iv) The difference between the outdoor air sensor (TH2) temperature and the outdoor heat exchanger sensor temperature
 - The outdoor air temperature $\geq -2^{\circ}\text{C}$: 7°C or higher
 - $-15^{\circ}\text{C} \leq$ The outdoor air temperature $< -2^{\circ}\text{C}$: $4/15 \times$ The outdoor air temperature $+ 7^{\circ}\text{C}$ or higher
 - The outdoor air temperature $< -15^{\circ}\text{C}$: -5°C or higher

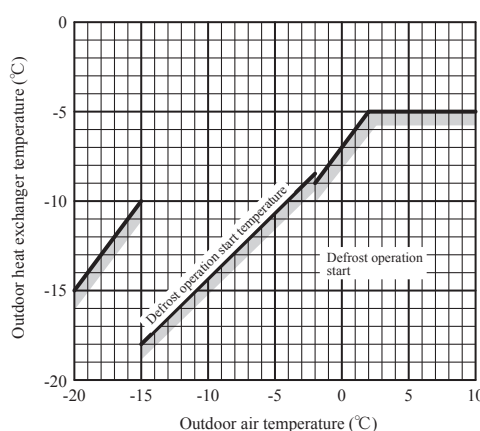

- (b) Ending conditions (Operation returns to the heating cycle when either one of the following is satisfied.)
- (i) Outdoor heat exchanger sensor (TH1) temperature: 10°C or higher
 - (ii) Continued operation time of defrost operation \rightarrow For more than 18 minutes.

• Defrost operation

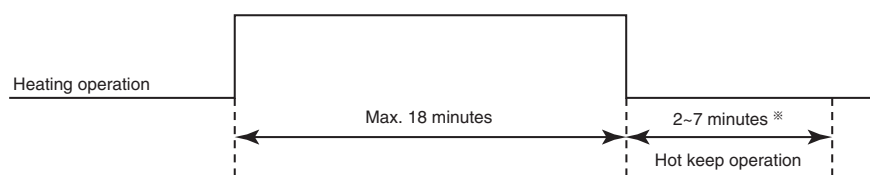


※Depends on an operation condition, the time can be longer than 7 minutes.

(2) Cooling overload protective control

(a) Operating conditions

When the outdoor air temperature (TH2) has become continuously for 30 seconds at 41°C or more with the compressor running, the lower limit speed of compressor is brought up.

Outdoor air temperature	41°C or more	47°C or more
Lower limit speed	30 rps	40 rps

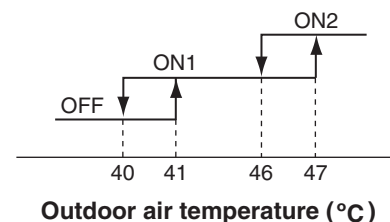

(b) Detail of operation

The lower limit of compressor speed is set to 30 or 40 rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 30 or 40 rps. However, when the thermostat OFF, the speed is reduced to 0 rps.

(c) Reset conditions

When either of the following condition is satisfied.

- (i) The outdoor air temperature is lower than 40°C.
- (ii) The compressor speed is 0 rps.

(3) Cooling high pressure control

(a) Purpose

Prevents anomalous high pressure operation during cooling.


(b) Director

Outdoor heat exchanger sensor (TH1).

(c) Detail of operation

Outdoor air temperature(TH2)	A	B	C
TH2 ≥ 32°C	53	58	63
TH2 < 32°C	51	53	56

(Example) Fuzzy

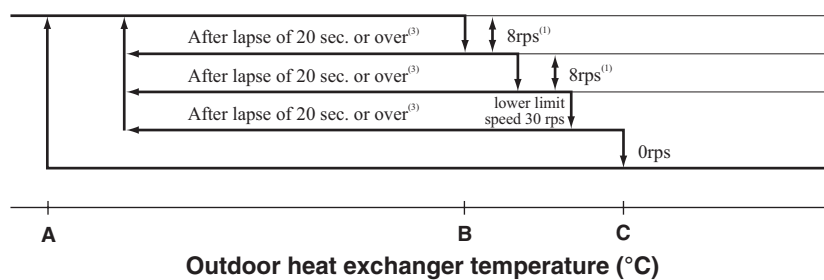

- Notes
- (1) When the outdoor heat exchanger temperature is in the range of A-C°C, the speed is reduced by 8 rps at each 20 seconds.
 - (2) When the temperature is 63°C or higher, the compressor is stopped.
 - (3) When the outdoor heat exchanger temperature is in the range of A-C°C, if the compressor speed is been maintained and the operation has continued for more than 20 seconds at the same speed, it returns to the normal cooling operation.

(4) Cooling low outdoor temperature protective control

(a) Operating conditions


When the outdoor air temperature (TH2) is C°C or lower continues for 20 seconds while the compressor speed is other than 0 rps.

(b) Detail of operation

- (i) The lower limit of the compressor speed is set to 45 (35) rps and even if the speed becomes lower than 45 (35) rps, the speed is kept to 45 (35) rps. However, when the thermostat OFF, the speed is reduced to 0 rps.
- (ii) The upper limit of the compressor speed is set to 60 (75) rps and even if the calculated result becomes higher than that after fuzzy calculation, the speed is kept to 60 (75) rps.

Note (1) Values in () are for outdoor air temperature is C°C

ON (Upper limit 60 rps
Lower limit 45 rps)

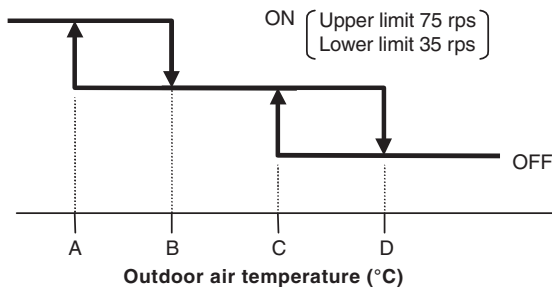

● Values of A, B, C, D

	Outdoor air temperature (°C)			
	A	B	C	D
First time	9	11	22	25
After the seconds times	16	19	25	28

(c) Reset conditions

When either of the following condition is satisfied.

- (i) The outdoor air temperature (TH2) is D °C or higher.
- (ii) The compressor speed is 0 rps.

(5) Heating high pressure control

(a) Starting condition

When the indoor heat exchanger temperature (Thi-R) has risen to a specified temperature while the compressor is turned on.

(b) Compressor speed is controlled according to the zones of indoor heat exchanger temperature as shown by the following table.

	Thi-R<P1	P1≤Thi-R<P2	P2≤Thi-R<P3	P3≤Thi-R
Protection control speed (NP)	Normal	Retention	NP-4rps	NP-8rps
Sampling time (s)	Normal	10	10	10

Unit:°C

NP	Thi-R	P1	P2	P3
NP<50		45	52	54.5
50≤NP<115		45	52	57
115≤NP<120		45-43	52-50	57-55
120≤NP		43	50	55

(6) Heating overload protective control

(a) Operating condition

When the outdoor air temperature (TH2) is 13°C or higher continues for 30 seconds while the compressor speed is other than 0 rps.


(b) Detail of operation

- (i) Taking the upper limit of compressor speed range at 90(75)rps, if the output speed obtained with the fuzzy calculation exceeds the upper limit, the upper limit value is maintained.
- (ii) The lower limit of compressor speed is set to 30(40)rps and even if the calculated result lower than that after fuzzy calculation, the speed is kept to 30(40)rps. However, when the thermostat OFF, the speed is reduced to 0 rps.
- (iii) Inching prevention control is activated and inching prevention control is carried out with the minimum speed set at 30(40)rps.

Note (1) Values in () are for outdoor air temperature at 17°C.

(c) Reset condition

The outdoor air temperature (TH2) is lower than 11°C.

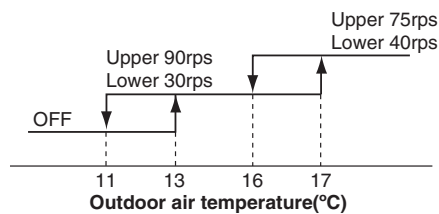


(7) Heating low outdoor temperature protective control

(a) Operating condition

When the outdoor air temperature (TH2) is 4°C or lower continues for 30 seconds while the compressor speed is other than 0 rps.

(b) Detail of operation

The lower limit compressor speed is change as shown in the figure below.

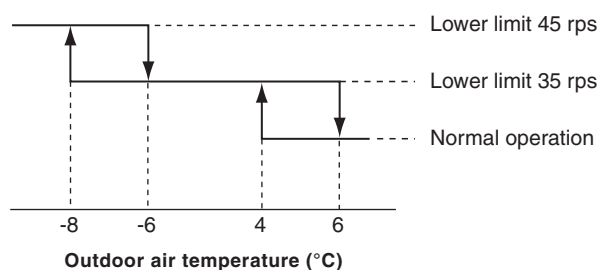

(c) Reset conditions

When either of the following condition is satisfied.

- (i) The outdoor air temperature (TH2) is higher than 6°C.
- (ii) The compressor speed is 0 rps.

(8) Compressor overheat protection


(a) Purpose

It is designed to prevent deterioration of oil, burnout of motor coil and other trouble resulting from the compressor overheat.

(b) Detail of operation

(i) Speeds are controlled with temperature detected by the sensor mounted on the discharge pipe.

(Example) Fuzzy

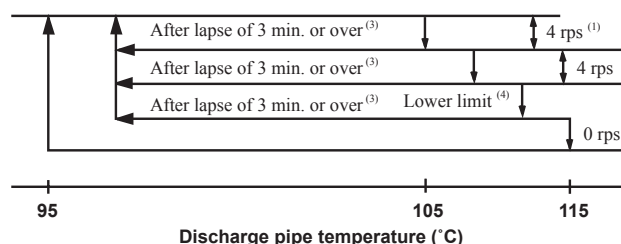

- Notes (1) When the discharge pipe temperature is in the range of 105-115°C, the speed is reduced by 4 rps.
 (2) When the discharge pipe temperature is raised and continues operation for 20 seconds without changing, then the speed is reduced again by 4 rps.
 (3) If the discharge pipe temperature is in the range of 95-105 even when the compressor speed is maintained for 3 minutes when the temperature is in the range of 95-105°C, the speed is raised by 1 rps and kept at that speed for 3 minutes. This process is repeated until the command speed is reached.
 (4) Lower limit speed

Model \ Item	Cooling	Heating
Lower limit speed	25 rps	32 rps

(ii) If the temperature of 115°C is detected by the sensor on the discharge pipe, then the compressor will stop immediately. When the discharge pipe temperature drops and the time delay of 3 minutes is over, the unit starts again within 1 hour but there is no start at the third time.

(9) Current safe

(a) Purpose

Current is controlled not to exceed the upper limit of the setting operation current.

(b) Detail of operation

- (i) Input current to the converter is monitored with the current sensor fixed on the printed circuit board of the outdoor unit and, if the operation current value reaches the limiting current value, the compressor speed is reduced.
 (ii) If the mechanism is actuated when the compressor speed is less than 30 rps, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(10) Current cut

(a) Purpose

Inverter is protected from overcurrent.

(b) Detail of operation

Output current from the inverter is monitored with a shunt resistor and, if the current exceeds the setting value, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(11) Outdoor unit failure

This is a function for determining when there is trouble with the outdoor unit during air-conditioning.

The compressor is stopped if any one of the following in item (a), (b) is satisfied. Once the unit is stopped by this function, it is not restarted.

- (a) When the input current is measured at 1 A or less for 3 continuous minutes or more.
 (b) If the outdoor unit sends a 0 rps signal to the indoor unit 3 times or more within 20 minutes of the power being turned on.

(12) Serial signal transmission error protection

(a) Purpose

Prevents malfunction resulting from error on the indoor ↔ outdoor signals.

(b) Detail of operation

- (i) If the compressor is operating and a serial signal cannot be received from the indoor control with outdoor control having serial signals continues for 7 minute and 35 seconds, the compressor is stopped.
 (ii) After the compressor has been stopped, it will be restarted after the compressor start delay if a serial signal can be received again from the indoor control.

(13) Rotor lock

If the motor for the compressor does not turn after it has been started, it is determined that a compressor lock has occurred and the compressor is stopped.

(14) Outdoor fan motor protection

If the outdoor fan motor has operated at 75 min⁻¹ or under for more than 30 seconds, the compressor and fan motor are stopped.

(15) Outdoor fan control at low outdoor temperature

(a) Cooling

(i) Operating condition

When the outdoor air temperature (TH2) is 22°C or lower continues for 30 seconds while the compressor speed is other than 0 rps.

(ii) Detail of operation

After the outdoor fan operates at A speed for 60 seconds; the corresponding outdoor heat exchanger.

● Value of A

	Outdoor fan
Outdoor air temperature > 10°C	2nd speed
Outdoor air temperature ≤ 10°C	1st speed

- 1) Outdoor heat exchanger temperature ≤ 21°C
After the outdoor fan speed drops (down) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is lower than 21°C, gradually reduce the outdoor fan speed by 1 speed. (Lower limit 1st speed)
- 2) 21°C < Outdoor heat exchanger temperature ≤ 38°C
After the outdoor fan speed maintains at A speed for 20 seconds; if the outdoor heat exchanger temperature is 21°C-38°C, maintain outdoor fan speed.
- 3) Outdoor heat exchanger temperature > 38°C
After the outdoor fan speed rises (up) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is higher than 38°C, gradually increase outdoor fan speed by 1 speed. (Upper limit 3rd speed)

(iii) Reset conditions

When either of the following conditions is satisfied.

- 1) The outdoor air temperature (TH2) is 25°C or higher.
- 2) The compressor command speed is 0 rps.

(b) Heating

(i) Operating condition

When the outdoor air temperature (TH2) is 4°C or lower continues for 30 seconds while the compressor speed is other than 0 rps.

(ii) Detail of operation

The outdoor fan is stepped up by 2 speed step at each 20 seconds. (Upper limit 8th speed)

(iii) Reset conditions

When either of the following conditions is satisfied.

- 1) The outdoor air temperature (TH2) is 6°C or higher.
- 2) The compressor speed is 0 rps.

(16) Refrigeration cycle system protection

(a) Starting conditions

- (i) When 5 minutes (Heating : 9 minutes) have elapsed after the compressor ON or the completion of the defrost control.
- (ii) Other than the defrost control.
- (iii) When, after satisfying the conditions of (i) and (ii) above, the compressor speed, indoor air temperature (Thi-A) and indoor heat exchanger temperature (Thi-R) have satisfied the conditions in the following table for 5 minutes.

Operation mode	Compressor speed (N)	Indoor air temperature (Thi-A)	Indoor air temperature (Thi-A)/ Indoor heat exchanger temperature (Thi-R)
Cooling	40 ≤ N	10 ≤ Thi-A ≤ 40	Thi-4 < Thi-R
Heating(1)	40 ≤ N	0 ≤ Thi-A ≤ 40	Thi < Thi-A+4

Note (1) Except that the fan speed is HI in heating operation and silent mode control.

(b) Contents of control

- (i) When the conditions of (a) above are satisfied, the compressor stops.
- (ii) Error stop occurs when the compressor has stopped 3 times within 60 minutes.

(c) Reset condition

When the compressor has been turned OFF.

(II) Models FDC71-140

(1) Determination of compressor speed (Frequency)

Required frequency

- (a) Cooling/dehumidifying operation Unit: rps

Model		FDC71	FDC100	FDC125	FDC140
Max. required frequency	Usual operation	88	75	95(92)	95(92)
	Silent mode, outdoor air temperature $\leq 15^{\circ}\text{C}$	80	50	60	70
Min. required frequency		20	20	20	20

Note (1) Value in () are for the 3 phase models.

- (b) Heating operation Unit: rps

Model		FDC71	FDC100	FDC125	FDC140
Max. required frequency	Usual operation	112	100	120	120
	Silent mode	90	60	70	70
Min. required frequency		20	20	20	20

- (c) If the indoor fan speed becomes “Me” or “Lo”, Max required frequency goes down accordingly depending on indoor unit model.

- (d) Max. required frequency under high outdoor air temperature in cooling mode.

Maximum required frequency is selected according to the outdoor air temperature (Tho-A).

Unit: rps

Model		FDC71	FDC100	FDC125	FDC140
Max. required frequency	Outdoor air temperature is 40°C or higher	76	75	75	75
	Outdoor air temperature is 46°C or higher	62	70	70	70

- (e) Max. required frequency under outdoor air temperature in heating mode.

Maximum required frequency is selected according to the outdoor air temperature (Tho-A).

Unit: rps

Model		FDC71	FDC100	FDC125	FDC140
Max. required frequency	Outdoor air temperature is 18°C or higher	76	75	80	85

- (f) Selection of max. required frequency by heat exchanger temperature.

- (i) Maximum required frequency is selected according to the outdoor heat exchanger temperature (Tho-R) during cooling/dehumidifying or according to the indoor heat exchanger temperature (Thi-R) during heating mode.

- (ii) When there are 3 indoor heat exchanger temperatures (Thi-R), whichever the highest applies,

Unit: rps

Model			FDC71	FDC100	FDC125	FDC140
Max. required frequency	Cooling/dehumidifying	Outdoor heat exchanger temperature is $56(61)^{\circ}\text{C}$ or higher	60	75	95 [92]	95 [92]
	Heating	Indoor heat exchanger temperature is $56(61)^{\circ}\text{C}$ or higher	60	100	100	100

Notes (1) Value in () are for the FDC71 model.


(2) Value in [] are for the 3 phase models.


- (g) When any of the controls from (a) to (f) above may duplicate, whichever the smallest value among duplicated controls is taken as the maximum required frequency.

- (h) During heating, it is operated with the maximum required frequency until the indoor heat exchanger temperature becomes 40°C or higher.

(2) Compressor start control

- (a) Compressor starts upon receipt of the thermostat ON signal from the indoor unit.

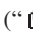- (b) However, at initial start after turning the power source breaker, it may enter the standby state for maximum 30 minutes (“ PREPARATION” is displayed on the remote control) in order to prevent the oil loss in the compressor.

If the cooling/dehumidifying/heating operation is selected from the remote control when the outdoor unit is in the standby state, “ PREPARATION” is displayed for 3 seconds on the remote control.

(3) Compressor soft start control

(a) Compressor protection start I

[Control condition] Normally, the compressor operation frequency is raised in this start pattern.

[Control contents] (i) Starts with the compressor's target frequency at **A** rps.

However, when the outdoor air temperature (Tho-A) is 35°C or higher during cooling/dehumidifying or the indoor return air temperature (Thi-A) is 25°C or higher during heating, it starts at **C** rps.

(ii) At 30 seconds after the start of compressor, its target frequency changes to **B** rps and the compressor is operated for 2 - 4 minutes with its operation frequency fixed at **B** rps.

Model	Operation mode	A rps	B rps	C rps
FDC71	Cooling/Dehumidifying	42	42	40
	Heating	62	62	40
FDC100	Cooling/Dehumidifying	45	45	25
	Heating	45	45	25
FDC125, 140	Cooling/Dehumidifying	45	45	25
	Heating	45	45	25

(b) Compressor protection start III

[Control condition] Number of compressor starts is only 1 counted after the power source breaker ON.

[Control contents] Operates by selecting one of following start patterns according to the operation mode and the outdoor air temperature (Tho-A).

(i) Low frequency operation control during cooling/dehumidifying

[Control condition] Upon establishing the conditions of compressor protection start III, the low frequency operation control is performed during cooling/dehumidifying.

[Control contents] 1) Starts with the compressor's target frequency at **A** rps. When the outdoor air temperature (Tho-A) is 35°C or higher, it starts at **C** rps.

2) At 30 seconds after the compressor start, the compressor's target frequency is changed to **B** rps and the compressor's operation frequency is fixed for 10 minutes.

Model	Operation mode	A rps	B rps	C rps
FDC71	Cooling/Dehumidifying	42	42	40
FDC100	Cooling/Dehumidifying	45	45	25
FDC125, 140	Cooling/Dehumidifying	45	45	25

(ii) Low frequency operation control during heating

[Control condition] When the conditions of compressor protection start III are established and one of following conditions 1) is satisfied, the low number of revolutions operation control is performed during heating.

1) At 30 minutes or more after turning the power source breaker on.

[Control contents] 1) Starts the compressor with its target frequency at **A** rps. However, when the indoor return air temperature (Thi-A) is 25°C or higher, it start at **C** rps.

2) At 30 seconds after the start of compressor, the compressor's target frequency is changed to **B** rps and the compressor's operation frequency is fixed for 10 minutes.

Model	Operation mode	A rps	B rps	C rps
FDC71	Heating	42	42	40
FDC100	Heating	45	45	25
FDC125, 140	Heating	45	45	25

(4) Outdoor fan control

(a) Outdoor fan tap and fan motor speed

Unit: min⁻¹

Model	Mode	Fan motor tap						
		① speed	② speed	③ speed	④ speed	⑤ speed	⑥ speed	⑦ speed
FDC71	Cooling/Dehumidifying	200	400	600	710	810	850	950
	Heating	200	400	600	710	810	850	950
FDC100	Cooling/Dehumidifying	200	370	560	640	745	870	910
	Heating	200	370	560	650	830	870	910
FDC125, 140	Cooling/Dehumidifying	200	370	560	640	745	870	910
	Heating	200	370	560	650	830	870	910

(b) Fan tap control during cooling/defumidifying operation

Fan taps are selected depending on the outdoor heat exchanger temperature (Tho-R1, R2) and the outdoor air temperature (Tho-A).



Note (1) It is detected by Tho-R1 or R2, whichever the higher.

• Silent mode only

	(A) zone	(B) zone	(C) zone	(D) zone
(a) zone	Tap 5(6)	Tap 5(6)	Tap 5(6)	Tap 4
(b) zone	Tap 5(6)	Tap 5(6)	Tap 4(6)	Tap 3
(c) zone	Tap 4	Tap 4	Tap 3	Tap 2
(d) zone	Tap 3	Tap 3	Tap 2	Tap 1

	(A) zone	(B) zone	(C) zone	(D) zone
(a) zone	Tap 5	Tap 5	Tap 5	Tap 4
(b) zone	Tap 5	Tap 5	Tap 3	Tap 3
(c) zone	Tap 4	Tap 3	Tap 3	Tap 2
(d) zone	Tap 3	Tap 3	Tap 2	Tap 1

Note (1) Value in () are for the model FDC71.

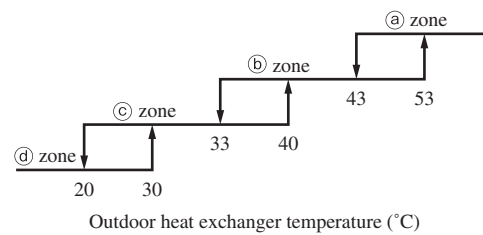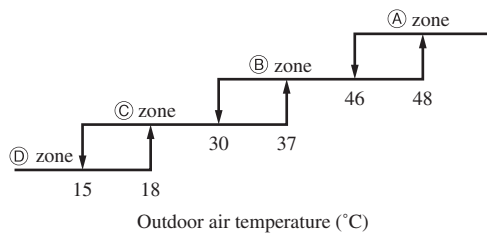

(c) Fan tap control during heating operation

Fan taps are selected depending on the outdoor heat exchanger temperature (Tho-R1, R2) and the outdoor air temperature (Tho-A).



Note (1) It is detected by Tho-R1 or R2, whichever the lower.

• Silent mode only

	(A) zone	(B) zone	(C) zone
(a) zone	Tap 3	Tap 3	Tap 4
(b) zone	Tap 3	Tap 4(5)	Tap 5
(c) zone	Tap 4	Tap 5	Tap 6

	(A) zone	(B) zone	(C) zone
(a) zone	Tap 3	Tap 3	Tap 3
(b) zone	Tap 3	Tap 3	Tap 5
(c) zone	Tap 4	Tap 5	Tap 6


Note (1) Value in () is for the model FDC71.

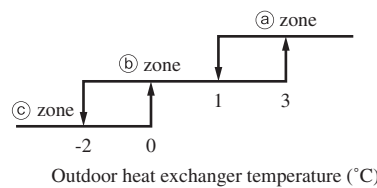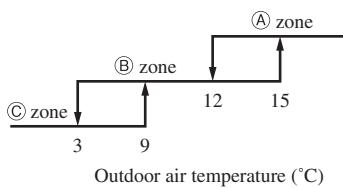

(d) Outdoor fan control at cooling low outdoor air

- (i) When all the following conditions are established after the start of compressor, the following control is implemented. If the outdoor air temperature (Tho-A) is in the zone (B) in the cooling/defumidifying mode, it has elapsed 20 seconds from the start of outdoor fan and the outdoor fan is at the tap 1 speed, the outdoor fan speed is controlled according to the outdoor heat exchanger temperature (Tho-R1, R2).

Note (1) It is detected with Tho-R1 or R2, whichever the higher.

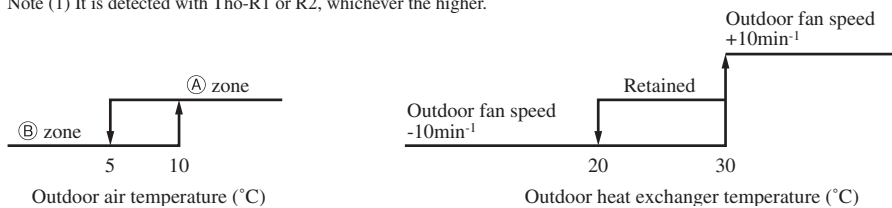

- (ii) The outdoor heat exchanger temperature is detected always and, when the number of revolutions of the outdoor fan speed has been increased or decreased, there is no change of fan speed for 20 seconds.
- (iii) Range of the outdoor fan speed under this control is as follows.
 - 1) Lower limit: 130min⁻¹
 - 2) Upper limit: 500min⁻¹
- (iv) As any of the following conditions is established, this control terminates.
 - 1) When the outdoor air temperature is in the zone (A) and the outdoor heat exchanger temperature at 30°C or higher is established for 40 seconds or more continuously.
 - 2) When the outdoor fan speed is 500min⁻¹ and the outdoor heat exchanger temperature at 30°C or higher is established for 40 seconds or more continuously.
 - 3) When the outdoor heat changer temperature at 45°C or higher is established for 40 seconds or more.

(e) Outdoor fan control by the power transistor radiator fin temperature

When all the following conditions are established later than 3 minutes after the start of compressor, the following control is implemented.

- (i) Cooling/dehumidifying
 - 1) Outdoor air temperature (Tho-A) ≥ 33°C
 - 2) Compressor’s actual frequency ≥ **A** rps
 - 3) Power transistor radiator fin temperature ≥ **C** °C
- (ii) Heating
 - 1) Outdoor air temperature (Tho-A) ≥ 16°C
 - 2) Compressor’s actual frequency ≥ **B** rps
 - 3) Power transistor radiator fin temperature ≥ **C** °C
- (iii) Control contents
 - 1) Raises the outdoor fan tap by 1 tap.
 - 2) When the sampling is for 60 minutes and the value of power transistor radiator fin temperature (Tho-P) is as follows.
 - a) When the power transistor radiator fin temperature (Tho-P) ≥ **C** °C, the outdoor fan tap is raised by 1 speed further.
 - b) When **C** °C > power transistor radiator fin temperature (Tho-P) ≥ **D** °C, present outdoor fan tap is maintained.
 - c) When the power transistor radiator fin temperature (Tho-P) ≥ **D** °C, the outdoor fan tap is dropped by 1 speed.
- (iv) Ending conditions

When the operation under the condition of item 2), c) above and with the outdoor fan tap, which is determined by the item (b) is detected 2 times consecutively.

- Compressor’s frequency and power transistor radiator fin temperature


Item Model	A	B	C	D
FDC71	60	70	80	75
FDC100	65	65	72	68
FDC125, 140	65	65	72	68

(f) Caution at the outdoor fan start control (3 phase model only)

When the outdoor fan is running at 400min⁻¹ before operating the compressor, it may operate with the compressor only, without starting up the outdoor fan this is normal.

(g) Snow protection fan control

If the dip switch (SW3-2) on the outdoor control PCB is turned ON, the outdoor fan is operated for 30 seconds at 4 tap speed once in every 10 minutes depending on the outdoor air temperature (detected with Tho-A) in the stop mode or anomalous stop mode.

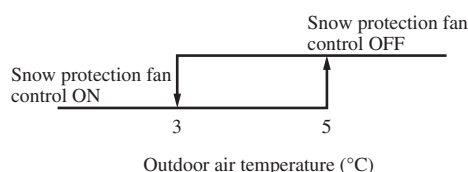


(5) Defrost operation

(a) Starting conditions

If all of the following defrost conditions A or conditions B are satisfied, the defrost operation starts.

(i) Defrost conditions A

- 1) Cumulative compressor operation time after the end of defrost operation has elapsed 37 [45] minutes, and the cumulative compressor operation time after the start of heating operation (remote control ON) has elapsed 30 minutes.
- 2) After 5 minutes from the compressor ON
- 3) After 5 minutes from the start of outdoor fan
- 4) After satisfying all above conditions, if temperatures of the outdoor heat exchanger temperature thermistor (Tho-R1, R2) and the outdoor air temperature thermistor (Tho-A) become lower than the defrost operation starting temperature as shown by the right figure for 15 seconds continuously, or the suction gas saturation temperature (SST) and the outdoor air temperature (Tho-A), which are obtained from the value detected by the low pressure sensor (LPT) stay for 3 minutes within the range below the defrost operation start temperature as shown by the right figure. However, it excludes for 10 minutes after the start of compressor and the outdoor air temperature is as shown by the lower figure.

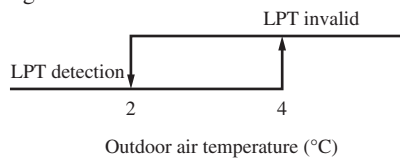

Note (1) Figures in [] is for model FDC71.

(ii) Defrost conditions B


- 1) When previous defrost ending condition is the time out of defrost operation and it is in the heating operation after the cumulative compressor operation time after the end of defrost operation has become 30 minutes.
- 2) After 5 minutes from the start of compressor
- 3) After 5 minutes from the start of outdoor fan

(b) Ending conditions


When any of the following conditions is satisfied, the heating operation starts.

- (i) When it has elapsed 8 minutes and 20 seconds after the start of defrost operation. (After 10 minutes and 20 seconds for model FDC71)
- (ii) When the outdoor heat exchanger temperatures (Tho-R1, R2), whichever the lower, becomes 12°C (model FDC71: 16°C) or higher for 10 seconds continuously.


Model FDC71-140

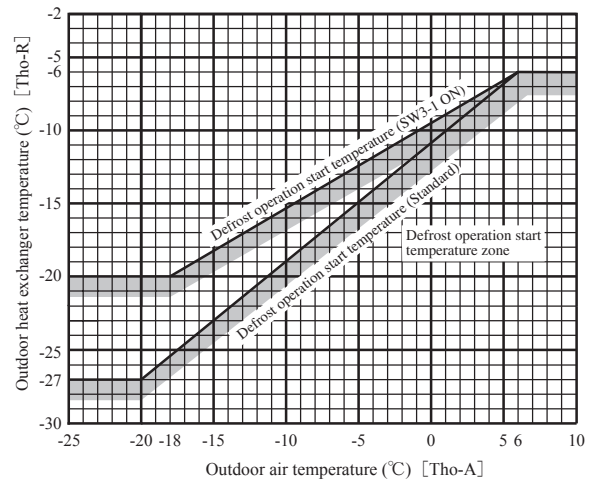

Model FDC71

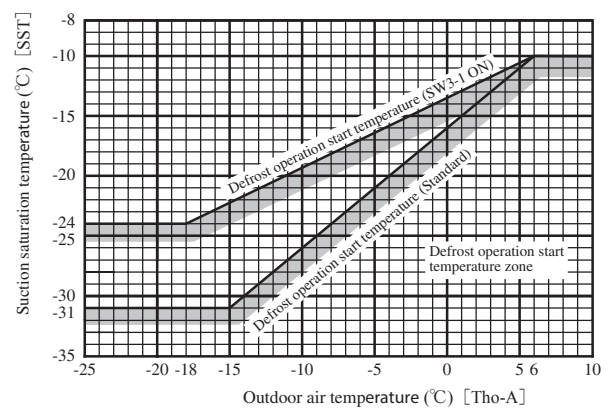

Model FDC100-140

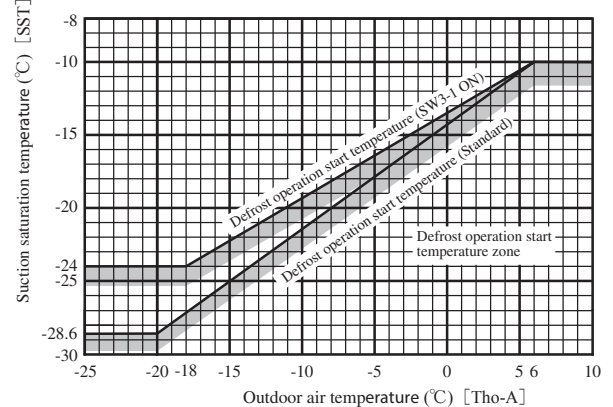

(c) Switching of defrost control with SW3-1


- (i) If SW3-1 on the outdoor control PCB is turned to ON, it becomes easier to enter the defrost operation. Use this when installing a unit at snowing regions.
 - (ii) Control contents
 - 1) It allows entering the defrost operation under the defrost condition A when the cumulative heating operation time becomes 30 minutes. It is 37 [45] minutes at SW3-1 OFF (Factory default).
 - 2) It allows entering the defrost operation under the defrost condition B when the cumulative heating operation time becomes 25 minutes. It is 30 minutes at SW3-1 OFF (Factory default).
 - 3) It allows the defrost operation with the outdoor heat exchanger temperature (Tho-R) and suction pressure saturation temperature (SST) being higher than normal.
- Note (1) Figures in [] is for model FDC71.

(6) Protective control/anomalous stop control by compressor's number of revolutions

(a) Compressor discharge pipe temperature protection


(i) Protective control

As the discharge pipe temperature (detected with Tho-D) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of discharge pipe temperature.

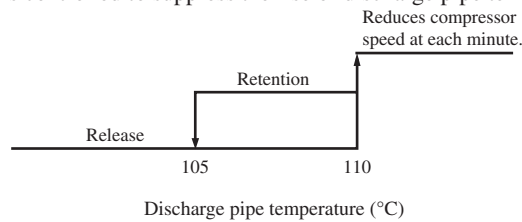

(ii) Anomalous stop control

- 1) If the discharge pipe temperature (detected with Tho-D) exceeds the setting value, the compressor stops.
- 2) When it is detected 2 times within 60 minutes or after continuous 60 minutes, including the stop of compressor, E36 is displayed on the remote control and it enters the anomalous stop mode.

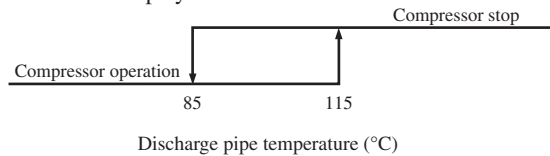


(iii) Reset of anomalous stop mode

As it drops to the reset value of 85°C or lower for 45 minutes continuously, it becomes possible to restart from the remote control.

(b) Cooling high pressure protection

(i) Protective control


- 1) When the outdoor air temperature (Tho-A) is 40°C or higher and the outdoor heat exchanger temperature (Tho-R) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of high pressure.
- 2) Control value A is updated to an optimum value automatically according to the operating conditions.

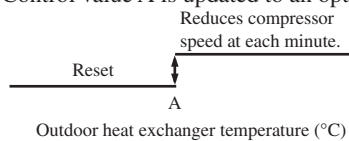

Control value A
54-60°C

(ii) Anomalous stop control

- 1) As the outdoor heat exchanger temperature (Tho-R) exceeds the setting value, the compressor stops.
- 2) If it is detected 5 times within 60 minutes or 65°C or higher continues for 60 minutes, including the stop of compressor, E35 is displayed on the remote control and it enters the anomalous stop mode.

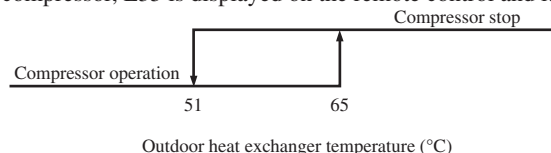


(iii) Reset of anomalous stop mode

As it reaches the reset value of 51°C or lower, it becomes possible to restart from the remote control.

(c) Heating high pressure protection


- (i) Protective control
 - 1) As the indoor heat exchanger temperature (Thi-R) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of high pressure.
 - 2) Control value A is updated to an optimum value automatically according to the operating conditions.

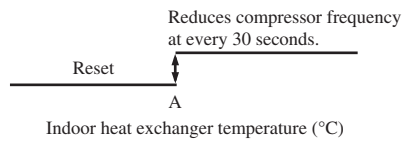

Model	Existing piping adaptation switch: SW5-1 (SW8-1: model FDC71)	
	OFF (Shipping)	ON
FDC71	52-58	46-52
FDC100-140	48-54	

Note (1) Adaptation to existing piping is at ON.

- (ii) Anomalous stop control
Operation control function by the indoor unit control - See the heating overload protection, page 125.
- (iii) Adaptation to existing piping, stop control
If the existing piping adaptation switch, SW5-1 (model FDC71: SW8-1), is turned ON, the compressor stops to protect existing piping when the indoor heat exchanger temperature (Thi-R) exceeds the setting value.

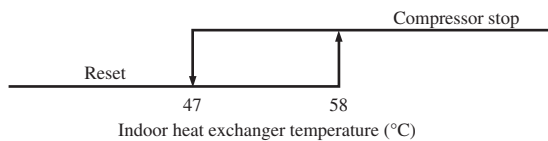


(d) Anomaly detection control by the high pressure switch (63H1)

- (i) If the pressure rises and operates the high pressure switch (opens at 4.15MPa/closes at 3.15MPa), the compressor stops.
- (ii) Under any of the following conditions, E40 is displayed and it enters the anomalous stop mode.
 - 1) When it occurs 5 times within 60 minutes that pressure rises and the compressor is stopped by 63H1.
 - 2) When 63H1 has been in the open state for 60 minutes continuously, including the stop of compressor.

(e) Low pressure control


- (i) Protective control
If the value detected by the low pressure sensor (LPT) exceeds the setting value, the compressor speed (frequency) is controlled to restrain the drop of pressure.

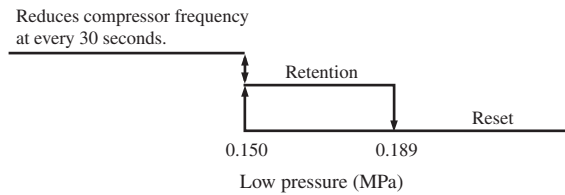

- (ii) Anomalous stop control
 - 1) When a value detected by the low pressure sensor (LPT) satisfies any of the following conditions, the compressor stops to run for its protection.
 - a) When the low pressure drops to 0.079MPa or under for 15 seconds continuously.
 - b) At 10 minutes after the start of compressor, the suction overheat becomes 30°C and the low pressure becomes 0.15MPa or under for 60 seconds continuously.
 - 2) E49 is displayed under any of the following conditions and it enters the anomalous stop mode.
 - a) When the low pressure drops 3 times within 60 minutes and the compressor stops under any of the above conditions.
 - b) When a value detected with the low pressure sensor becomes 0.079MPa or under for 5 minutes, including the stop of compressor.
 - 3) However, when the control condition 1. a) is established during the compressor protection start III, E49 is displayed at initial stop and it enters the anomalous stop mode.


(f) Compressor pressure ratio protection control (Model FDC100 – 140 only)

- (i) During heating operation, if the indoor heat exchanger temperature (Thi-R) and low pressure sensor (LPT) exceed the setting values at 10 minutes after the start of compressor, the compressor speed (frequency) is controlled to protect the compressor.
- (ii) This control is not performed during the outdoor fan ON and for 10 minutes from the start of outdoor fan.
- (iii) This control is not performed during defrost operation and at 10 minutes after the reset of defrost operation.
- (iv) When there are 2 indoor heat exchanger temperatures (Thi-R), the highest temperature is detected.

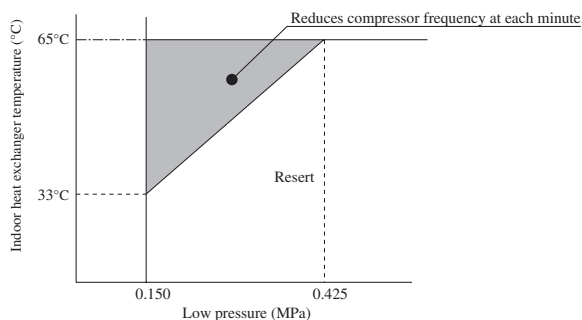


(g) Over-current protection current safe controls I, II

Detecting the outdoor inverter input (primary) current and the output (secondary) current, if the current values exceed setting values, the compressor speed (frequency) is controlled to protect the inverter.

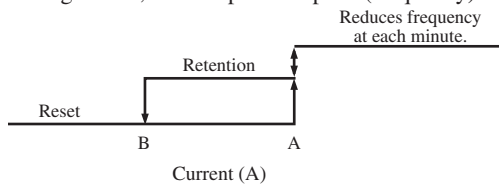

(Fig. C) The control value "A" and the reset value vary depending on the compressor speed.

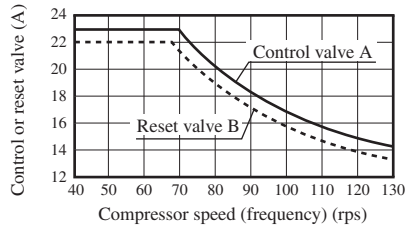


Model	Cooling		Heating		
	Control value A	Reset value B	Control value A	Reset value B	
Primary current side	FDC71	15.0	14.0	16.0	15.0
	FDC100	11.0 (23.0)	10.0 (22.0)	11.0 (23.0)	10.0 (22.0)
	FDC125, 140	11.0 (23.0)	10.0 (22.0)	11.0 (25.0)	10.0 (24.0)
Secondary current side	FDC71	13.0	12.0	13.0	12.0
	FDC100	11.5 (Fig.C)	10.5 (Fig.C)	11.5 (Fig.C)	10.5 (Fig.C)
	FDC125, 140	11.5 (Fig.C)	10.5 (Fig.C)	11.5 (Fig.C)	10.5 (Fig.C)

Note (1) Value in () are for the single phase models.

(h) Power transistor temperature protection

(i) Protective control

If the power transistor temperature (detected with TIP) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of power transistor temperature.

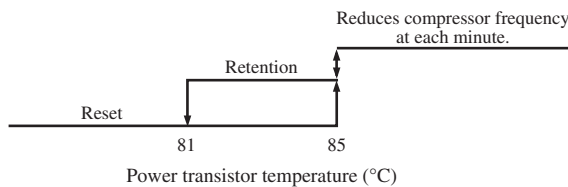

(i) Anomalous power transistor current


- (i) Prevents over-current on the inverter. If the current value in the power transistor exceeds the setting value, the compressor stops.
- (ii) If the current value in the power transistor exceeds the specified value and the compressor stops 4 times within 30 minutes, E42 is displayed on the remote control and it enters the anomalous stop mode.

(j) Anomalous inverter PCB

If the power transistor detects any anomaly for 15 minutes, including the stop of compressor, E51 is displayed on the remote control and it enters the anomalous stop mode.

(k) Anti-frost control by the compressor frequency control

- (i) If the indoor heat exchanger temperature (detected with Thi-R) exceeds the setting value at 4 minutes after the start of compressor, the compressor speed (frequency) is controlled to initiate the anti-frost control of indoor heat exchanger.
- (ii) When there are 2 indoor heat exchanger temperatures (Thi-R), the lowest temperature is detected.

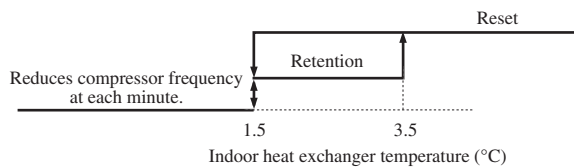

- (iii) Regarding the anti-frost control by the operation stop, refer to the operation control function by the indoor control and the cooling, dehumidifying frost prevention of page 125.

(l) Dewing prevention control

[Control condition] During cooling and dehumidifying operation, if all the following conditions are established, the compressor speed (frequency) is reduced to prevent dewing and water splash.

- (i) Cooling electronic expansion valve aperture (EEVC) is 500 pulses.
- (ii) Suction overheat is 10°C or higher.
- (iii) Compressor speed (frequency) is **A** rps or higher.

[Control contents] (i) When the suction overheat is 10°C or higher, the compressor speed (frequency) is reduced at each 1 minute.

- (ii) Compressor speed (frequency) does not rise till the cooling expansion valve becomes 460 pulses.

Model	A rps
FDC71	42
FDC100-140	60

- (iii) This control takes **A** rps as its lower limit so that compressor speed is not controlled when it is less than **A** rps.

(m) Refrigerant quantity shortage protection

Under the compressor protection start III control during cooling and dehumidifying operations, the following control is performed by detecting the indoor heat exchanger temperature (Thi-R) and the indoor return air temperature (Thi-A).

[Control condition] When the state that the indoor heat exchanger temperature (Thi-R) does not become lower than the indoor return air temperature (Thi-A) by 4°C or more continues for 1 minute.

[Control contents] It judges that the flowing of refrigerant in to the indoor unit is insufficient so that the compressor is stopped and E57 is displayed on the remote control.

(n) Broken wire detection on temperature thermistor and low pressure sensor

- (i) Outdoor heat exchanger thermistor, outdoor air thermistor and low pressure sensor
If the following is detected for 5 second continuously within 2 minutes to 2 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop.

Note (1) During defrosting and for 3 minutes after the end of defrosting, it is not detected.

- Outdoor heat exchanger thermistor: -50°C or lower
- Outdoor air temperature thermistor: -45°C or lower
- Low pressure sensor: 0V or under or 4.0V or over

- (ii) Discharge pipe temperature thermistor, suction pipe temperature thermistor
If the following is detected for 5 second continuously within 10 minutes to 10 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop.

Note (1) During defrosting and for 3 minutes after the end of defrosting, it is not detected.

- Discharge pipe temperature thermistor: -10°C or lower
- Suction pipe temperature thermistor: -50°C or lower

(o) Fan motor error

- (i) If the fan speed of 100min⁻¹ or under is detected for 30 second continuously under the outdoor fan control (with the operation command of fan tap at ① speed or higher), the compressor stops.
- (ii) When the fan motor speed drops to 100min⁻¹ or under 5 times within 60 minutes and the compressor stops, it enters the anomalous stop mode with E48 displayed on the remote control.

(p) Anomalous stop by the compressor start stop

- (i) When it fails to shift to the compressor DC motor's rotor position deflection operation at 5 seconds after establishing the compressor start condition, the compressor stops temporarily and restarts 3 minutes later.
- (ii) If it fails to shift to the position detection operation again at second time, it judges the anomalous compressor start and stops the compressor by the anomalous stop (E59).

(7) Silent mode

- (a) As “Silent mode start” signal is received from the remote control, it operates by dropping the outdoor fan tap and the compressor speed (frequency).
- (b) For details, refer to items (1) and (4) above.

(8) Test run

- (a) It is possible to operate from the outdoor unit using the dip switch on the outdoor control PCB.

SW3-3 (SW5-3)	ON	SW3-4 (SW5-4)	OFF	Cooling test run
			ON	Heating test run
	OFF	Normal and end of test run		

Make sure to turn SW3-3 (SW5-3) to OFF after the end of operation.

Note (1) Value in () are for the model FDC71.

- (b) Test run control

- (i) Operation is performed at the maximum compressor speed (frequency), which is determined for each model.
- (ii) Each protective control and error detection control are effective.
- (iii) If SW3-4 (SW5-4) is switched during test run, the compressor is stopped for once by the stop control and the cooling/heating operation is switched.

Note (1) Value in () is for the model FDC71.

- (iv) Setting and display of remote control during test run

Mode \ Item	Contents of remote control setting/display
Cooling test run	Setting temperature of cooling is 5°C.
Heating test run	Setting temperature of heating (preparation) is 30°C.

(9) Pump-down control

Turning ON the pump-down switch SW1 (SW9) for 2 seconds during the operation stop or anomalous stop (excluding the thermostat OFF), the pump-down operation is performed. (This is invalid when the indoor unit is operating. This is effective even when the indoor unit is stopped by the anomalous stop or the power source is turned OFF.)

Note (1) Value in () is for the model FDC71.

(a) Control contents

- (i) Close the service valve at the liquid side. (It is left open at the gas side.)
- (ii) Compressor is started with the target speed (frequency) at FDC71:62, FDC100. 125, 140:45 rps in the cooling mode.
- (iii) Red and green lamps (LED) flash continuously on the outdoor control PCB.
- (iv) Each of protection and error detection controls, excluding the low pressure control, anti-frost control and dewing prevention control, is effective.
- (v) Outdoor unit fan is controlled as usual.
- (vi) Electronic expansion valve is fully opened.

(b) Control ending conditions

Stop control is initiated depending on any of the following conditions.

- (i) Low pressure of 0.087MPa or lower is detected for 5 seconds continuously.
 - 1) Red LED: Light, Green LED: Flashing, Remote control: Displays stop.
 - 2) It is possible to restart when the low pressure is 0.087MPa or higher.
 - 3) Electronic expansion valve (cooling/heating) is kept fully open.
- (ii) Stop by the error detection control
 - 1) Red LED: Keeps flashing, Green LED: Flashing
 - 2) Restart is prohibited. To return to normal operation, reset the power source.
 - 3) Electronic expansion valve (cooling/heating) is left fully open.
- (iii) When the cumulative operation time of compressor under the pump-down control becomes 5 minutes.
 - 1) Red LED: Stays OFF, Green LED: Flashing, Remote control: Stop
 - 2) It is possible to pump-down again.
 - 3) Electronic expansion valve (cooling/heating) is left fully open.

Note (1) After the stop of compressor, close the service valve at the gas side.

Caution: Since pressing the pump-down switch cancels communications with the indoor unit, the indoor unit and the remote control display “Transmission error – E5”. This is normal.

(10) Base heater ON/OFF output control (Option)

(a) Base heater ON conditions


When all of following conditions are met, the base heater is turned ON.

- Outdoor air temperature (detected with Tho-A) is 3°C or lower.
- In the heating mode
- When the compressor is turned ON

(b) Base heater OFF conditions

When either one of following conditions is met, the base heater is turned OFF.

- Outdoor air temperature (detected with Tho-A) is 5°C or higher.
- When the compressor stop has been detected for 30 minutes continuously
- In the cooling or dehumidifying mode

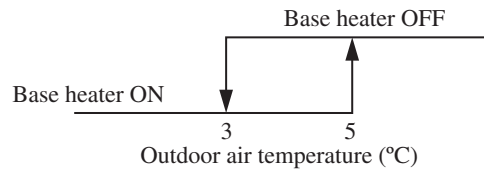

1.11 MAINTENANCE DATA

1.11 Diagnosing of microcomputer circuit

(1) Selfdiagnosis function

(a) Check indicator table

Whether a failure exists or not on the indoor unit and outdoor unit can be know by the contents of remote control error code, indoor/outdoor unit green LED (power pilot lamp and microcomputer normality pilot lamp) or red LED (check pilot lamp).

(i) Indoor unit

Error code	Remote control		Indoor control PCB		Outdoor control PCB		Location of trouble	Description of trouble	Repair method	Reference page
	Red LED	Red LED	Green LED (1)	Red LED	Green LED (1)					
No-indication	Stays OFF	Stays OFF	Keeps flashing	Stays OFF	Keeps flashing	—	• Normal operation	—	—	
		Stays OFF	Stays OFF	2-time flash	Stays OFF	Indoor unit power source	• Power OFF, broken wire/blown fuse, broken transformer wire	Repair	202	
		* 3-time flash	Keeps flashing	Stays OFF	Keeps flashing	Remote control wires	• Poor connection, breakage of remote control wire * For wire breaking at power ON, the LED is OFF.	Repair	203	
				Remote control	• Defective remote control PCB	Replacement of remote control				
WAIT or INSPECT I/U	Stays OFF	Keeps flashing	2-time flash	Keeps flashing	Indoor-outdoor units connection wire	• Poor connection, breakage of indoor-outdoor units connection wire	Repair	204-216		
					Remote control	• Improper setting of master and slave by remote control				
E1	Stays OFF	* Keeps flashing	Stays OFF	Keeps flashing	Remote control wires (Noise)	• Poor connection of remote control signal wire (White) * For wire breaking at power ON, the LED is OFF	Repair	218		
					Remote control indoor control PCB	• Intrusion of noise in remote control wire * Defective remote control or indoor control PCB (defective communication circuit)?				
E5	2-time flash	Keeps flashing	2-time flash	Keeps flashing	Indoor-outdoor units connection wire	• Poor connection of wire between indoor-outdoor units during operation (disconnection, loose connection) • Anomalous communication between indoor-outdoor units by noise, etc.	Repair	219		
					(Noise)	• CPU-runaway on outdoor control PCB				
					Outdoor control PCB	* Occurrence of defective outdoor control PCB on the way of power source (defective communication circuit)?				
E6	2-time flash	Keeps flashing	Stays OFF	Keeps flashing	Outdoor control PCB	• Defective outdoor control PCB on the way of power source	Replacement	220		
					Fuse	• Blown fuse				
E7	1-time flash	Keeps flashing	Stays OFF	Keeps flashing	Indoor heat exchanger temperature thermistor	• Defective indoor heat exchanger temperature thermistor (defective element, broken wire, short-circuit) • Poor contact of temperature thermistor connector	Replacement, repair of temperature thermistor	221		
					Indoor control PCB	* Defective indoor control PCB (Defective temperature thermistor input circuit)?				
E8	1-time flash	Keeps flashing	Stays OFF	Keeps flashing	Indoor return air temperature thermistor	• Defective indoor return air temperature thermistor (defective element, broken wire, short-circuit) • Poor contact of temperature thermistor connector	Replacement, repair of temperature thermistor	222		
					Indoor control PCB	* Defective indoor control PCB (Defective temperature thermistor input circuit)?				
E9	1-time flash	Keeps flashing	Stays OFF	Keeps flashing	Installation or operating condition	• Heating over-load (Anomalously high indoor heat exchanger temperature)	Replacement	223		
					Indoor heat exchanger temperature thermistor	• Defective indoor heat exchanger temperature thermistor (short-circuit)				
					Indoor control PCB	* Defective indoor control PCB (Defective temperature thermistor input circuit)?				
E10	1-time flash	Keeps flashing	Stays OFF	Keeps flashing	Drain trouble	• Defective drain pump (DM), broken drain pump wire, disconnected connector	Replacement, repair of DM	224		
					Float switch	• Anomalous float switch operation (malfunction)				
					Indoor control PCB	* Defective indoor control PCB (Defective float switch input circuit) * Defective indoor control PCB (Defective DM drive output circuit)?				
					Option	• Defective optional parts (At optional anomalous input setting)				
E11	Keeps flashing	Keeps flashing	Stays OFF	Keeps flashing	Address setting error	• Address setting error of indoor units	Repair	225		
E14	3-time flash	Keeps flashing	Stays OFF	Keeps flashing	Indoor unit No. setting	• No master is assigned to slaves.	Repair	226		
					Remote control wires	• Anomalous remote control wire connection, broken wire between master and slave units				
E16	1(2)-time flash	Keeps flashing	Stays OFF	Keeps flashing	Indoor fan motor	• Defective indoor fan motor	Replacement, repair	227		
					Indoor power PCB	• Defective indoor power PCB				
E18	1-time flash	Keeps flashing	Stays OFF	Keeps flashing	Address setting error	• Address setting error of master and slave indoor units	Repair	228		
E19	1-time flash	Keeps flashing	Stays OFF	Keeps flashing	Indoor control PCB	• Indoor unit operation check error	Repair	229		
E20	1(2)-time flash	Keeps flashing	Stays OFF	Keeps flashing	Indoor fan motor	• Indoor motor rotation speed anomaly	Replacement, repair	230		
					Indoor power PCB	• Defective indoor power PCB				
E21	1-time flash	Keeps flashing	Stays OFF	Keeps flashing	Panel switch detection	• Defective panel switch operation	Repair	231		
E28	Stays OFF	Keeps flashing	Stays OFF	Keeps flashing	Remote control temperature thermistor	• Broken wire of remote control temperature thermistor	Repair	232		

Note (1) Normal indicator lamp (Indoor, outdoor units: Green) extinguishes (or lights continuously) only when CPU is anomalous. It keeps flashing in any trouble other than anomalous CPU.

(2) * mark in the description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

(ii) Outdoor unit

1) SRC40-60ZSX-S, FDC71-100VNP

Remote control		Indoor control PCB		Outdoor control PCB	Location of trouble	Description of trouble	Repair method	Reference page
Error code	Red LED	Red LED	Green LED	Red LED (2)				
E35	Stays OFF	Keeps flashing	2-time flash	Installation, operation status	• Higher outdoor heat exchanger temperature	Repair	233	
				Outdoor heat exchanger temperature sensor	• Defective outdoor heat exchanger temperature sensor	Replacement, repair of temperature sensor		
				Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB		
E36	Stays OFF	Keeps flashing	5-time flash	Installation, operation status	• Higher discharge temperature	Repair	235	
				Discharge pipe temperature sensor	• Defective discharge pipe temperature sensor	Replacement, repair of temperature sensor		
				Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB		
E37	Stays OFF	Keeps flashing	8-time flash	Outdoor heat exchanger temperature sensor	• Defective outdoor heat exchanger temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	236	
				Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB		
E38	Stays OFF	Keeps flashing	8-time flash	Outdoor air temperature sensor	• Defective outdoor air temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	237	
				Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB		
E39	Keeps flashing	Stays OFF	Keeps flashing	8-time flash	Discharge pipe temperature sensor	• Defective discharge pipe temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	388
					Outdoor control PCB	*• Defective outdoor control PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
E40	Stays OFF	Keeps flashing	4-time flash	Installation, operation status	Service valve (gas side) closing operation (Except FDC100 model)	Replacement	239	
E42	Stays OFF	Keeps flashing	1-time flash	Outdoor control PCB, compressor	• Current cut (Anomalous compressor over-current)	Replacement of PCB	243•244	
				Installation, operation status	• Service valve closing operation	Repair		
E47	Stays OFF	Keeps flashing	2-time flash	Outdoor control PCB	• Defective active filter	Repair PCB replacement	246	
E48	Stays OFF	Keeps flashing	ON	Outdoor fan motor	• Defective outdoor fan motor	Replacement	248	
				Outdoor control PCB	• Defective outdoor control PCB			
E51	Stays OFF	Keeps flashing	1-time flash	Power transistor error (outdoor control PCB)	• Power transistor error	Replacement of PCB	252	
E57	Stays OFF	Keeps flashing	2-time flash	Operation status	• Shortage in refrigerant quantity	Repair	258	
				Installation status	• Service valve closing operation	Service valve opening check		
E58	Stays OFF	Keeps flashing	3-time flash	• Overload operation • Overcharge • Compressor locking	• Current safe stop	Replacement	260	
E59	Stays OFF	Keeps flashing	2-time flash	Compressor, outdoor control PCB	• Anomalous compressor startup	Replacement	261	
E60	Stays OFF	Keeps flashing	7-time flash	Compressor	• Anomalous compressor rotor lock	Replacement	266	
WAIT or INSPECT I/U		Stays OFF	Keeps flashing	6-time flash	Indoor-outdoor connection wire	• Poor connection, breakage of indoor-outdoor unit connection wire	Repair	—

Note (1) * mark in the description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

(2) This LED is installed on models SRC40-60 and FDC71, 90.

2) FDC71-140VNX, 100-140VSX
FDC100-140VN, 100-140VS

Remote control		Indoor control PCB		Outdoor control PCB		Outdoor inverter PCB	Location of trouble	Description of trouble	Repair method	Reference page
Error code	Red LED	Red LED	Green LED (1)	Red LED	Green LED (1)	Yellow LED				
E35		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Installation or operating condition	• Higher outdoor heat exchanger temperature	Repair	234
							Outdoor heat exchanger temperature thermistor	• Defective outdoor heat exchanger temperature thermistor	Replacement of temperature thermistor	
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E36		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Installation or operating condition	• Higher discharge temperature	Repair	235
							Discharge pipe temperature thermistor	• Defective discharge pipe temperature thermistor	Replacement, repair of temperature thermistor	
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E37		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	Keeps flashing	Outdoor heat exchanger temperature thermistor	• Defective outdoor heat exchanger temperature thermistor, broken wire or poor connector connection	Replacement, repair of temperature thermistor	236
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E38		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Outdoor air temperature thermistor	• Defective Outdoor air temperature thermistor, broken wire or poor connector connection	Replacement, repair of temperature thermistor	237
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E39		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Discharge pipe temperature thermistor	• Defective discharge pipe temperature thermistor, broken wire or poor connector connection	Replacement, repair of temperature thermistor	238
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E40		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Installation or operating condition	• Rising high pressure (Operation of 63H1) • Service valve closing operation	Repair	240
							Outdoor control PCB	* Defective outdoor control PCB (Defective 63H input circuit)?	Replacement of PCB	
E41		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	6-time flash	Inverter PCB or radiator fin	• Power transistor overheat	Replacement of PCB or Repair	241
E42		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	1-time flash	Outdoor control PCB compressor	• Current cut (Anomalous compressor over-current)	Replacement of PCB	243•244
							Installation or operating condition	• Service valve closing operation	Repair	
E45		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	Keeps flashing	Outdoor control PCB	• Anomalous outdoor control PCB communication	Replacement of PCB	245
							Inverter PCB	• Anomalous inverter PCB communication		
E47		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	7-time flash	Inverter PCB activefilter	• Defective inverter PCB (Model FDC 71 only) Defective active filter of control.	Replacement	247
E48		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Outdoor fan motor	• Anomalous outdoor fan motor	Replacement, repair	249
							Outdoor control PCB	* Defective outdoor control PCB (Defective motor input circuit)?	Replacement of PCB	
E49		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	Keeps flashing	Installation or operating condition	• Low pressure error • Service valve closing operation	Repair	250•251
							Low pressure sensor	• Anomalous low pressure, broken wire of low pressure sensor or poor connector connection	Replacement, repair of sensor	
							Outdoor control PCB	* Defective outdoor control PCB (Defective sensor input circuit)?	Replacement of control PCB	
E51		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	6-time flash	Inverter PCB	• Anomalous inverter PCB	Replacement of PCB	253
E53		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Suction pipe temperature thermistor	• Defective suction pipe temperature thermistor, broken wire or poor connector connection	Replacement, repair of temperature thermistor	255
							Outdoor control PCB	* Defective outdoor PCB (Defective thermistor input circuit)?	Replacement of control PCB	
E54		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	Keeps flashing	Low pressure sensor	• Defective low pressure sensor	Replacement of sensor	256
							Outdoor control PCB	• Defective outdoor control PCB (Defective sensor input circuit)?	Replacement of control PCB	
E57		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Operation status	• Shortage in refrigerant quantity	Repair	259
							Installation status	• Service valve closing operation	Service valve opening check	
E59		Stays OFF	Keeps flashing	5 time flash	Keeps flashing	Stays OFF	Compressor inverter PCB	• Anomalous compressor startup	Replacement	262•263

Note (1) * mark in the description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

3) FDC200, 250VSA

Remote control		Indoor control PCB		Outdoor control PCB		Outdoor inverter PCB	Location of trouble	Description of trouble	Repair method	Reference page
Error code	Red LED	Red LED	Green LED (1)	Red LED	Green LED (1)	Yellow LED				
E35		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Installation or operating condition	• Higher outdoor heat exchanger temperature	Repair	234
							Outdoor heat exchanger temperature thermistor	• Defective outdoor heat exchanger temperature thermistor	Replacement of temperature thermistor	
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E36		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Installation or operating condition	• Higher discharge temperature	Repair	235
							Discharge pipe temperature thermistor	• Defective discharge pipe temperature thermistor	Replacement, repair of temperature thermistor	
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E37		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	Keeps flashing	Outdoor heat exchanger temperature thermistor	• Defective outdoor heat exchanger temperature thermistor, broken wire or poor connector connection	Replacement, repair of temperature thermistor	236
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E38		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Outdoor air temperature thermistor	• Defective outdoor air temperature thermistor, broken wire or poor connector connection	Replacement, repair of temperature thermistor	237
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E39		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Discharge pipe temperature thermistor	• Defective discharge pipe temperature thermistor, broken wire or poor connector connection	Replacement, repair of temperature thermistor	238
							Outdoor control PCB	* Defective outdoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB	
E40		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Installation or operating condition	• Rising high pressure (Operation of 63H1) • Service valve closing operation	Repair	240
							Outdoor control PCB	* Defective outdoor control PCB (Defective 63H input circuit)?	Replacement of PCB	
E41		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	2-time or 8-time flash	Inverter PCB or radiator fin	• Power transistor overheat	Replacement of PCB or Repair	242
E42		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	1-time or 9-time flash	Outdoor control PCB compressor	• Current cut (Anomalous compressor over-current)	Replacement of PCB	243•244
							Installation or operating condition	• Service valve closing operation	Repair	
E45		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Outdoor control PCB	• Anomalous outdoor control PCB communication	Service valve opening check	245
							Inverter PCB	• Anomalous inverter PCB communication	Replacement of PCB	
E48		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	Keeps flashing	Outdoor fan motor	• Anomalous outdoor fan motor	Replacement, repair	249
							Outdoor control PCB	* Defective outdoor control PCB (Defective motor input circuit)?	Replacement of PCB	
E49		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Installation or operating condition	• Low pressure error • Service valve closing operation	Repair	250•251
							Low pressure sensor	• Anomalous low pressure, broken wire of low pressure sensor or poor connector connection	Replacement, repair of sensor	
							Outdoor control PCB	* Defective outdoor control PCB (Defective sensor input circuit)?	Replacement of control PCB	
E51		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	2-time or 8-time flash	Inverter PCB	• Anomalous inverter PCB	Replacement of PCB	254
E53		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Suction pipe temperature thermistor	• Defective suction pipe temperature thermistor, broken wire or poor connector connection	Replacement, repair of temperature thermistor	255
							Outdoor control PCB	* Defective outdoor PCB (Defective thermistor input circuit)?	Replacement of control PCB	
E54		Stays OFF	Keeps flashing	1-time flash	Keeps flashing	Keeps flashing	Low pressure sensor	• Defective low pressure sensor	Replacement of sensor	256
							Outdoor control PCB	• Defective outdoor control PCB (Defective sensor input circuit)?	Replacement of control PCB	
E55		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Compressor under dome temperature thermistor	• Defective compressor under dome temperature thermistor (Model FDC250 only)	Replacement of temperature thermistor	257
							Outdoor control PCB	• Defective outdoor control PCB (Defective thermistor input circuit)? (Model FDC250 only)	Replacement of control PCB	
E57		Stays OFF	Keeps flashing	1-time flash	Keeps flashing		Operation status	• Shortage in refrigerant quantity	Repair	259
							Installation status	• Service valve closing operation	Service valve opening check	
E59		Stays OFF	Keeps flashing	5-time flash	Keeps flashing	4-time flash	Compressor inverter PCB	• Anomalous compressor startup	Replacement	264•265

Note (1) * mark in the description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

(iii) Option control in-use

Error code	Indoor unit control PCB			Outdoor unit control PCB		Description of trouble	Repair method
	Red LED	Red LED	Green LED	Red LED	Green LED		
E75	Keeps flashing	Stays OFF	Keeps flashing	Stays OFF	Keeps flashing	• Communication error (Defective communication circuit on the main unit of SC-SL2N-E or SC-SL4-E) etc.	Replacement



(iv) Display sequence of error codes or inspection indicator lamps**■ Occurrence of one kind of error**

Displays are shown respectively according to errors.

■ Occurrence of plural kinds of error

Section	Category of display
Error code on remote control	<ul style="list-style-type: none"> • Displays the error of higher priority (When plural errors are persisting) <p style="text-align: center;"><i>E 1 > E 5 > > E 10 > E 32 > > E 60</i></p> <ul style="list-style-type: none"> • Displays the present errors. (When a new error has occurred after the former error was reset.)
Red LED on indoor control PCB	
Red LED on outdoor control PCB	

■ Error detecting timing

Section	Error description	Error code	Error detecting timing
Indoor	Drain trouble (Float switch activated)	<i>E 9</i>	Whenever float switch is activated after 30 second had past since power ON.
	Communication error at initial operation	“  WAIT  ”	No communication between indoor and outdoor units is established at initial operation.
	Remote control communication circuit error	<i>E 1</i>	Communication between indoor unit and remote control is interrupted for mote than 2 minutes continuously after initial communication was established.
	Communication error during operation	<i>E 5</i>	Communication between indoor and outdoor units is interrupted for mote than 2 minutes continuously after initial communication was established.
	Excessive number of connected indoor units by controlling with one remote control	<i>E 10</i>	Whenever excessively connected indoor units is detected after power ON.
	Return air temperature thermistor anomaly	<i>E 7</i>	-50°C or lower is detected for 5 seconds continuously within 60 minutes after initial detection of this anomalous temperature.
	Indoor heat exchanger temperature thermistor anomaly	<i>E 6</i>	-50°C or lower is detected for 5 seconds continuously within 60 minutes after initial detection of this anomalous temperature. Or 70°C or higher is detected for 5 seconds continuously
Outdoor	Outdoor air temperature thermistor anomaly	<i>E 38</i>	-45(-55)°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. Or -45(-55)°C or lower is detected for 5 seconds continuously within 20 seconds after compressor ON.
	Outdoor heat exchanger temperature thermistor anomaly	<i>E 37</i>	-50(-55)°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. Or -50(-55)°C or lower is detected for 5 seconds continuously within 20 seconds after compressor ON.
	Discharge pipe temperature thermistor anomaly	<i>E 39</i>	-10(-25)°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature.
	Suction pipe temperature thermistor anomaly	<i>E 53</i>	-50°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature.
	Low pressure sensor anomaly	<i>E 54</i>	0V or lower or 4.0V or higher is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous pressure.
	Compressor under dome temperature thermistor anomaly	<i>E 55</i>	-50°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature.

Note (1) Value in () are for the models SRC40-60, FDC71-100VNP.

■ **Error log and reset**


Error indicator	Memorized error log	Reset
Remote control display	• Higher priority error is memorized.	• Stop the unit by pressing the ON/OFF switch of remote control. • If the unit has recovered from anomaly, it can be operated.
Red LED on indoor control PCB	• Not memorized.	
Red LED on outdoor control PCB	• Memorizes a mode of higher priority.	

■ **Resetting the error log**

- Resetting the memorized error log in the remote control
Holding down “CHECK” button, press “TIMER” button to reset the error log memorized in the remote control.
- Resetting the memorized error log in the indoor unit
The remote control transmits error log erase command to the indoor unit when “VENTI” button is pressed while holding down “CHECK” button.
Receiving the command, the indoor unit erase the log and answer the status of no error.

(2) **Troubleshooting procedure**

When any trouble has occurred, inspect as follows. Details of respective inspection method will be described on later pages.

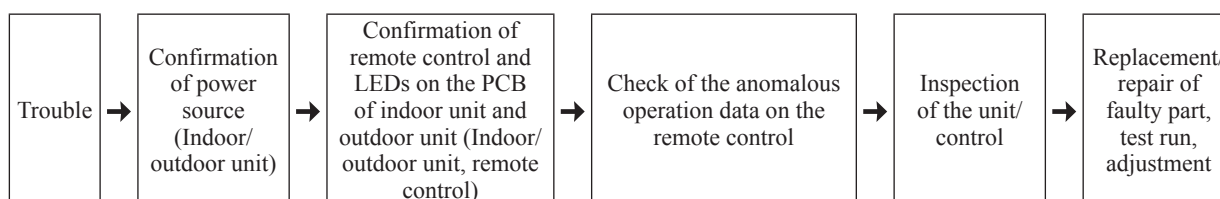

(3) **Troubleshooting at the indoor unit**

With the troubleshooting, find out any defective part by checking the voltage (AC, DC), resistance, etc. at respective connectors at around the indoor PCB, according to the inspection display or operation status of unit (the compressor does not run, fan does not run, the 4-way valve does not switch, etc.), and replace or repair in the unit of following part.

(i) **Replacement part related to indoor PCB's**



Control PCB, temperature thermistor (return air, indoor heat exchanger), remote control switch, transformer and fuse
Note (1) With regard to parts of high voltage circuits and refrigeration cycle, judge it according to ordinary inspection methods.

(ii) **Instruction of how to replace indoor control PCB**

SAFETY PRECAUTIONS	
<ul style="list-style-type: none"> • Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the replacement in order to protect yourself. • The precautionary items mentioned below are distinguished into two levels, WARNING and CAUTION. Both mentions the important items to protect your health and safety so strictly follow them by any means. 	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> WARNING Wrong installation would cause serious consequences such as injuries or death. </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> CAUTION Wrong installation might cause serious consequences depending on circumstances. </div> <ul style="list-style-type: none"> • After completing the replacement, do commissioning to confirm there are no anomaly.
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;"> WARNING</p> <ul style="list-style-type: none"> • Replacement should be performed by the specialist. If you replace the PCB by yourself, it may lead to serious trouble such as electric shock or fire. • Replace the PCB correctly according to these instructions. Improper replacement may cause electric shock or fire. • Shut off the power before electrical wiring work. Start the work after elapsing 1 minutes or more from power off. Replacement during the applying the current would cause the electric shock, unit failure or improper running. It would cause the damage of connected equipment such as fan motor, etc. • Fasten the wiring to the terminal securely, and hold the cable securely so as not to apply unexpected stress on the terminal. Loose connections or hold could result in abnormal heat generation or fire. • Check the connection of wiring to PCB correctly before turning on the power, after replacement. Defectiveness of replacement may cause electric shock or fire. </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;"> CAUTION</p> <ul style="list-style-type: none"> • In connecting connector onto the PCB, connect not to deform the PCB. It may cause breakage or malfunction. • Insert connector securely, and hook stopper. It may cause fire or improper running. • Bundle the cables together so as not to be pinched or be tensioned. It may cause malfunction or electric shock for disconnection or deformation. </div>	

- 1) Replace the control PCB
 - a) Unscrew terminal (Arrow A) of the "E1" wiring (yellow/green) that is connected to PCB.
 - b) Replace the PCB only after all the wirings connected to the connector are removed.
 - c) Fix the board such that it will not pinch any of the wires.
 - d) Switch setting must be same setting as that of the removed PCB.
 - e) Reconnect the all wirngs to the PCB, that was removed in 2.
 - f) Rescrew the terminal (Arrow A) of the "E1" wiring, that was removed in 1.
 - g) When there is no wire to connect to CNWR, connect the supplied jumper-connector. (Refer to Fig.2)
If nothing is connected to CNWR, it doesn't work even when power is turned on.

2) Control PCB (※Parts mounting are different by the kind of PCB.)

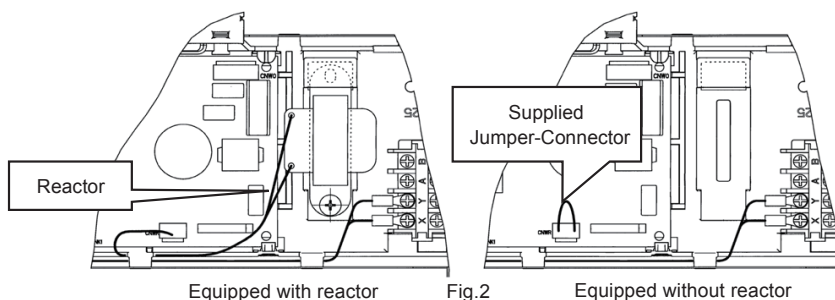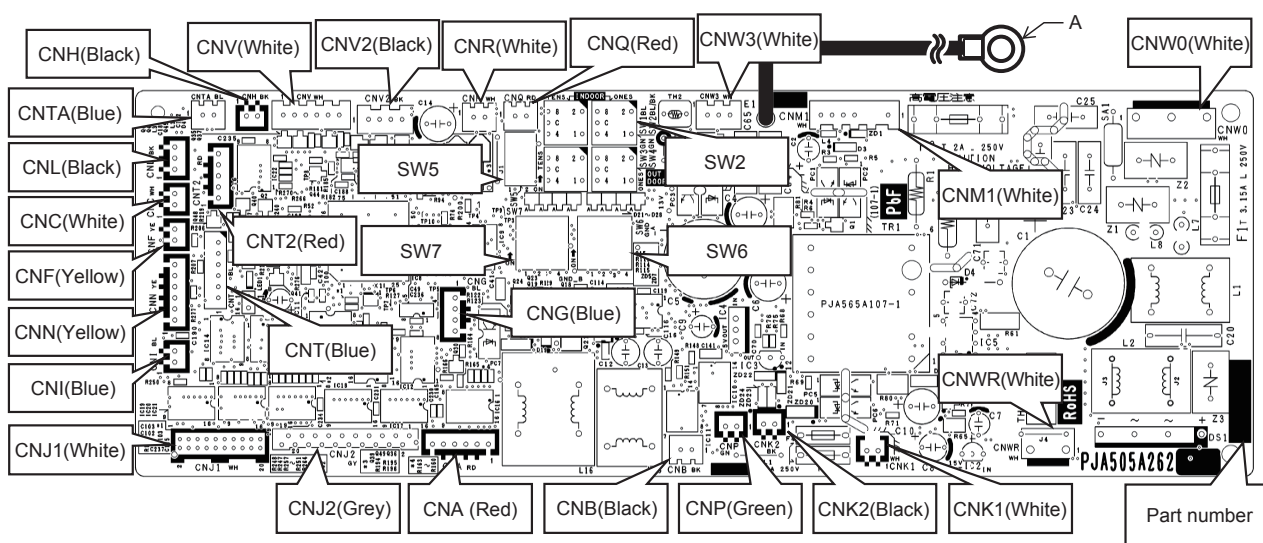

PSC012D050A

●DIP switch setting list

Switches	Description		Default setting		Remarks
SW2	Address No. setting at plural indoor units control by 1 R/C		0		0-F
SW5-1	Master/Slave setting	Master*/Slave	OFF		See table 2
SW5-2			OFF		
SW6-1	Model selection		As per model		See table 1
SW6-2					
SW6-3					
SW6-4					
SW7-1	Test run, drain motor	Normal*/Test run	OFF	Normal	
SW7-2	Reserved		OFF		Keep OFF
SW7-3	Reserved		OFF		Keep OFF
SW7-4	Reserved		OFF		Keep OFF
JSL1	Superlink terminal spare	Normal*/switch to spare	With		

* Default setting

Table 1: Indoor unit model selection with SW6-1-SW6-4

Switches	40V	50V	60V	71V	100V	125V	140V
SW6-1	ON	ON	ON	ON	ON	OFF	ON
SW6-2	ON	OFF	ON	OFF	ON	OFF	OFF
SW6-3	OFF	ON	ON	OFF	OFF	ON	ON
SW6-4	OFF	OFF	OFF	ON	ON	ON	ON

Table 2: Indoor unit Master/Slave setting with SW5-1,SW5-2

Switches	SW5-1	SW5-2
Master	OFF	OFF
Slave1	OFF	ON
Slave2	ON	OFF
Slave3	ON	ON

(4) Troubleshooting at the outdoor unit

When troubleshooting the outdoor unit, firstly assess the overview of malfunction and try to presume the cause and the faulty part by checking the error code displayed on the remote control and flashing pattern of indicator lamps (Red LED and Green LED), and then proceed further inspection and remedy it.

Self-diagnosis system by microcomputer on indoor and outdoor PCB can assist to find the cause of malfunction smoothly by making a diagnosis of not only the anomaly of microcomputer, but also the anomaly in power source system, installation space, overload resulting from improper charging amount of refrigerant and etc.

Unless the power is reset, the error log is saved in memory and the inspection indicator lamps on outdoor PCB keep flashing after automatical recovering from malfunction.

After automatical recovering from malfunction, if any another error mode which has a higher priority than the previous error saved in memory occurs, it is overwritten in memory and is displayed.

[Reset of power source]

Be sure to avoid electrical shock, when replacing or checking the outdoor control PCB, because some voltage is still retained in the electrolytic capacitor on the PCB even after shutting down the power source to the outdoor unit.

Be sure to start repairing work, after confirming that the Red LED or Green LED on the PCB has been extinguished for more than 10 seconds after more than 3 minutes had been passed since power shut down, and reconfirming that voltage has been discharged sufficiently by measuring the voltage (DC) between both terminals of electrolytic capacitor (C58) (Measurement of voltage may be disturbed by the moisture-proof coating. In such case, remove the coating and measure it by taking care of avoiding electrical shock)

(a) Module of part to be replaced for outdoor unit control

Outdoor control PCB, Inverter PCB, Temperature thermistor (of outdoor heat exchanger, discharge pipe, outdoor air, IPM, suction pipe and under dome), Fuses (for power source and control PCB), Noise filter, Capacitor and Reactor.

(b) Replacement procedure of outdoor control PCB

Precautions for Safety	
<ul style="list-style-type: none"> • Since the following precaution is the important contents for safety, be sure to observe them. WARNING and CAUTION are described as follows: 	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> WARNING</div>	Indicates an imminently hazardous situation which will result in death or serious injury if proper safety procedures and instructions are not adhered to.
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> CAUTION</div>	Indicates a potentially hazardous situation which may result in minor or moderate injury if proper safety procedures and instructions are not adhered to.
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> WARNING</div>	
<ul style="list-style-type: none"> • Securely replace the PCB according to this procedure. If the PCB is incorrectly replaced, it will cause an electric shock or fire. • Be sure to check that the power source for the outdoor unit is turned OFF before replacing the PCB. The PCB replacement under current-carrying will cause an electric shock or fire. • After finishing the PCB replacement, check that wiring is correctly connected with the PCB before power distribution. If the PCB is incorrectly replaced, it will cause an electric shock or fire. 	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> CAUTION</div>	
<ul style="list-style-type: none"> • Band the wiring so as not to tense because it will cause an electric shock. 	

PCA012D049A

(i) Model FDC71VNX

- 1) Replace the PCB after elapsing 3 minutes from power OFF.
(Be sure to measure voltage (DC) between T26 and T27 on inverter PCB, and check that the voltage is discharged sufficiently(10V or less).(Refer to Fig.2))
- 2) Disconnect the connectors from the control PCB.
- 3) Match the switches setting (SW4) with the former PCB.
- 4) Connect the connectors to the control PCB.(Confirm the connectors are not half inserted.)

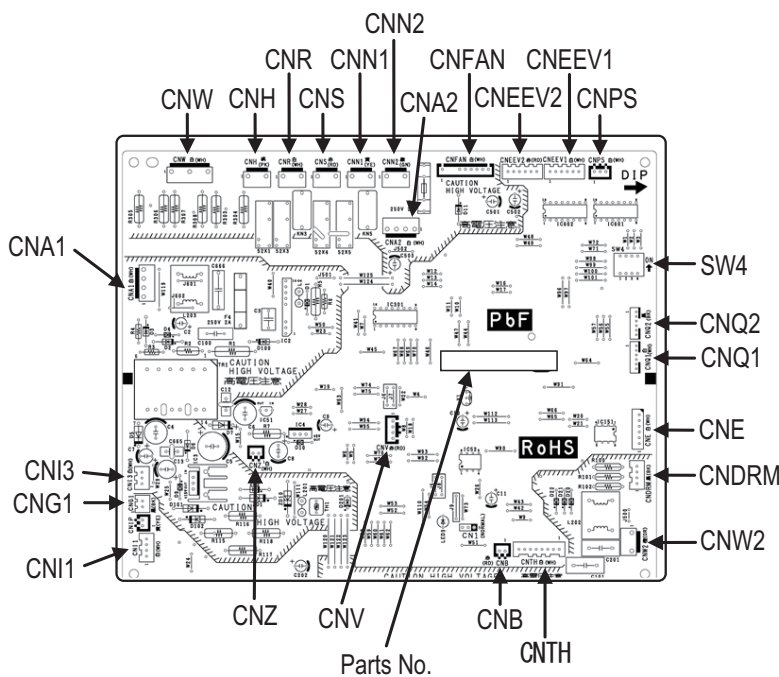


Fig.1 Parts arrangement view

After elapsing 3 minutes from power OFF

Voltage measurement point (T26 (red), T27 (blue))


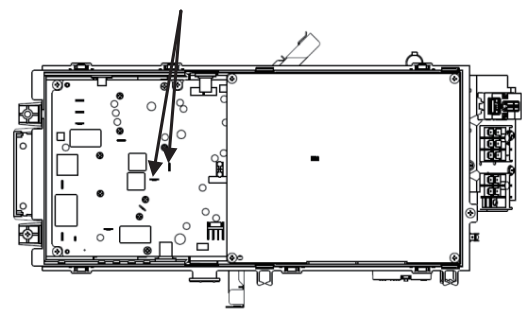


Fig.2 Position of terminal

*Presence and shape of electric component may vary according to model.

Connectors are not half inserted

(ii) Models FDC100VNX, 125VNX, 140VNX, 100VN, 125VN, 140VN
FDC100VSX, 125VSX, 140VSX, 100VS, 125VS, 140VS



- 1) Replace the PCB after elapsing 3 minutes from power OFF.
(**Be sure to measure voltage (DC)** on both capacitor terminals located in control back, and **check that the voltage is discharged sufficiently.**)
- 2) Disconnect the connectors from the control PCB.
- 3) Disconnect the white wiring passing through CT1 on the PCB before replacing the PCB.
- 4) Match the setting switches (SW3-5, JSW) with the former PCB.
- 5) Tighten up a screw after passing white wiring through CT1 of the changed.
- 6) Connect the connectors with the control PCB referring to the parts arrangement of Fig.1.
(Confirm the **connectors are not half inserted.**)

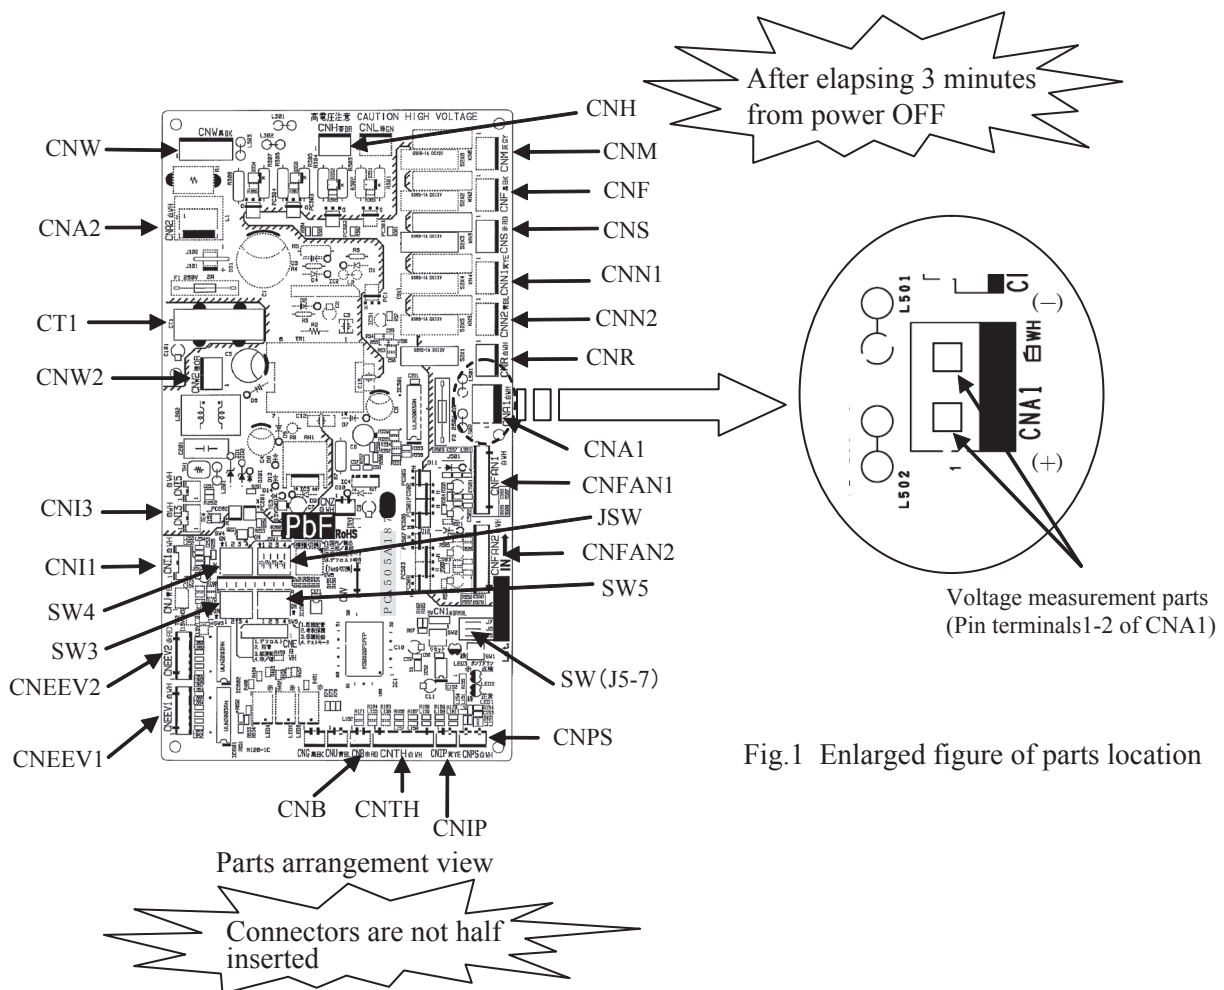


Fig.1 Enlarged figure of parts location

PCA012D050

(iii) Models FDC200VSA, 250VSA

Replace the control PCB according to the following procedure.

- (i) Replace the PCB **after elapsing 3 minutes from power OFF.**
- (ii) Measurement was done on both ends of connector (CNA1) during measurement, **the voltage(DC) might charged the electrolytic capacitor, be sure that the voltage is discharged sufficiently. (Refer to Fig.2)**
- (iii) Disconnect the connectors from the control PCB.
- (iv) Disconnect the white or blue wiring passing through CT1 on the PCB before replacing the PCB.
- (v) Match the setting switches (SW3-5,7, JSW1) with the former PCB.
- (vi) Tighten up a screw after passing white or blue wiring through CT1 of the changed.
- (vii) Please connect the connectors with the same place. **(Confirm the connectors are not half inserted.)**

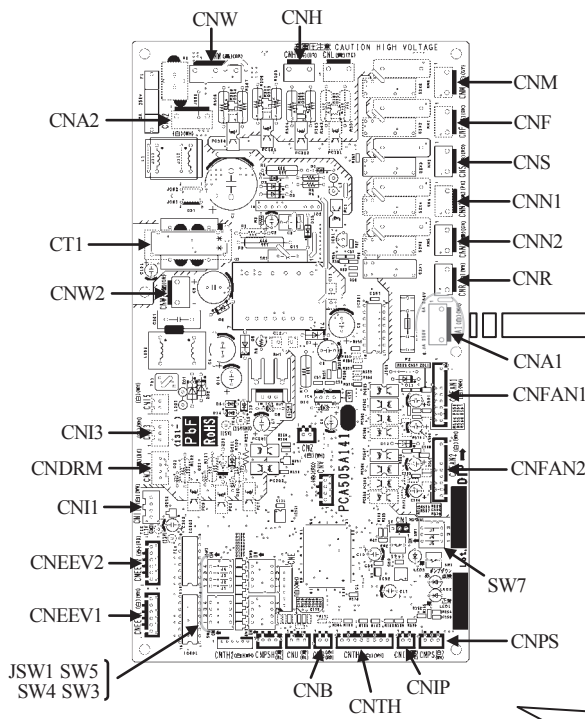


Fig.1 Parts arrangement view


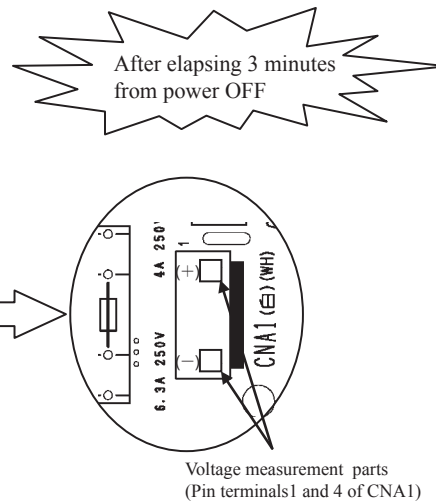


Fig.2 Enlarged figure of parts location

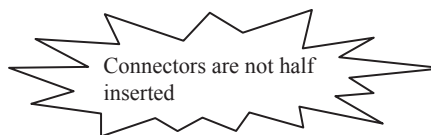

(iv) Models FDC71VNP, 90VNP

PSC012D029

Replace the PCB(Main) according to the following procedures.

- 1) Replace the PCB (Main) after checking that the red LED (LED1) on the PCB (Main) goes out for 10 seconds or more after elapsing 3 minutes or more from power OFF. (Refer to Fig.1)
- 2) Open the lid, and measure DC voltage on both edges of electrolytic capacitor C58 and check that the voltage is discharged sufficiently. (Refer to Fig.2) (Since the capacitor is coated with prevention-of-moisture coating, the voltage may be hard to be measured. Remove the coating before measuring if required, taking care of an electric shock.)
- 3) Remove the PCB (Main) (Refer to Step.1 and Step.2), and disconnect the harness connected to the reactor, terminal block, etc., and disconnect the connectors connected to the PCB (Main) before exchanging the PCB. (Refer to Step.3) (Harness to be able to band together after PCB exchange with tie wrap bands.)
- 4) Connect the harness and connectors with the PCB (Main) and the PCB (Sub). (Confirm the **connectors are not half inserted.**)

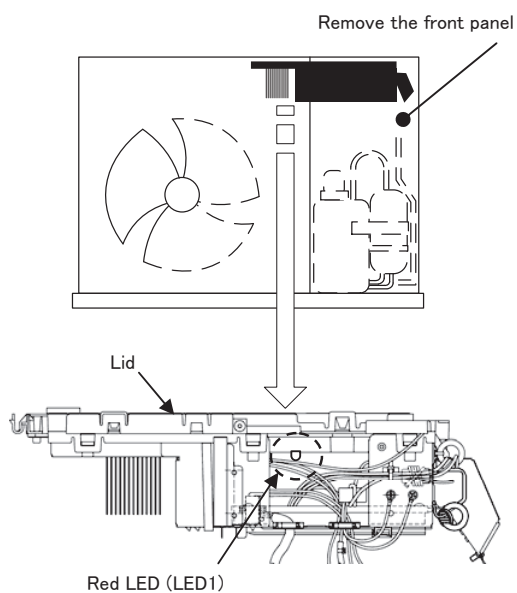


Fig.1 Location of LED

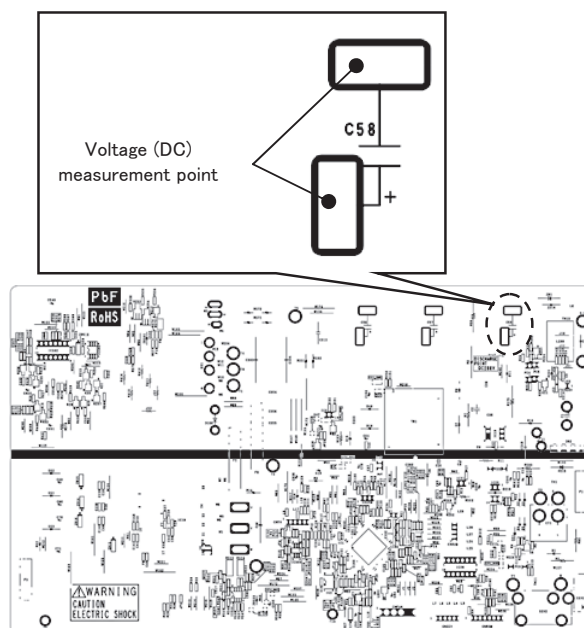


Fig.2 Voltage measurement point (Solder face of PCB (Main))

Step.1 After removing the screws, raises the PCB (Main) as shown in the Fig.3.

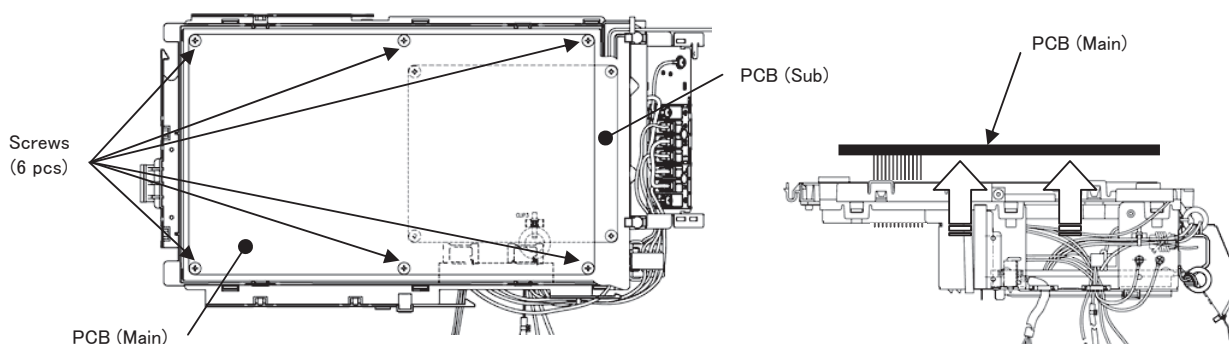


Fig.3 Upside view and removal method of PCB(Main)

Step.2 Disconnect the connectors and remove the band (when there is a band) as shown in the Fig.4-1 and Fig.4-2.

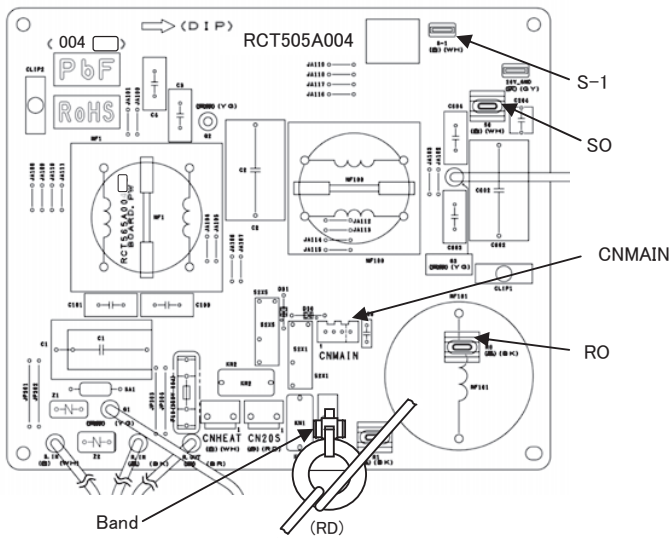


Fig.4-1 Parts arrangement view (PCB (Sub))

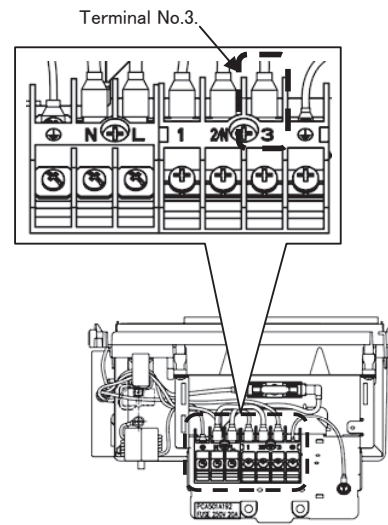


Fig.4-2 Terminal block side view

Step.3 Disconnect the connectors from PCB (Main).

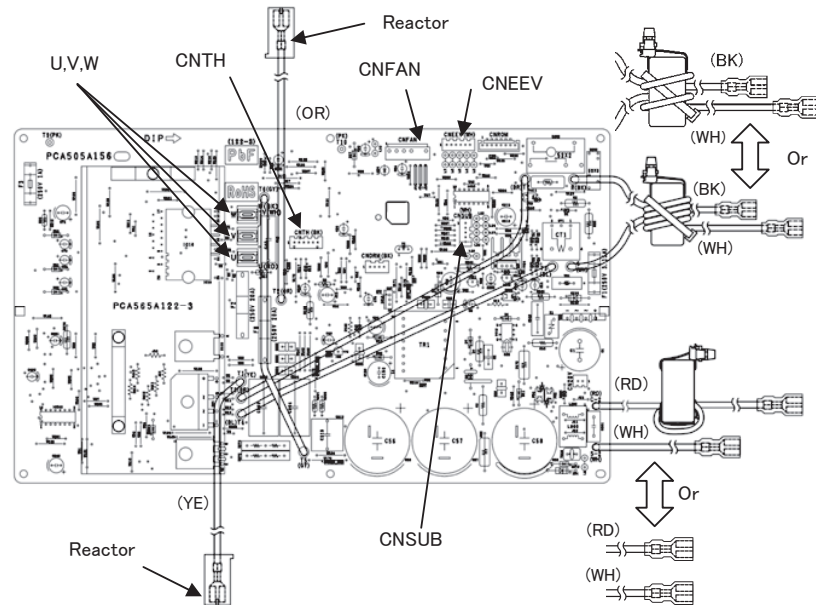


Fig.5 Parts arrangement view (Parts face of PCB (Main))

(c) Outdoor inverter PCB replacement procedure

Precautions for Safety	
<ul style="list-style-type: none"> • Since the following precaution is the important contents for safety, be sure to observe them. WARNING and CAUTION are described as follows: 	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> WARNING </div>	Indicates an imminently hazardous situation which will result in death or serious injury if proper safety procedures and instructions are not adhered to.
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> CAUTION </div>	Indicates a potentially hazardous situation which may result in minor or moderate injury if proper safety procedures and instructions are not adhered to.
WARNING	
<ul style="list-style-type: none"> • Securely replace the PCB according to this procedure. If the PCB is incorrectly replaced, it will cause an electric shock or fire. • Be sure to check that the power source for the outdoor unit is turned OFF before replacing the PCB. The PCB replacement under current-carrying will cause an electric shock or fire. • After finishing the PCB replacement, check that wiring is correctly connected with the PCB before power distribution. If the PCB is incorrectly replaced, it will cause an electric shock or fire. 	
CAUTION	
<ul style="list-style-type: none"> • Band the wiring so as not to tense because it will cause an electric shock. 	

Replace the inverter PCB according to the following procedure.

(i) Model FDC71VNX

PCA012D067B

- 1) Replace the PCB **after elapsing 3 minutes from power OFF.**
(High voltage is retained on the capacitor after turning the power off. It is very dangerous to touch the PCB in this condition.)
In the situation that harnesses are connected to inverter PCB **be sure to measure voltage (DC)** between T26 and T27 on inverter PCB, and **check that the voltage is discharged sufficiently.** (Refer to Fig.2).
- 2) Disconnect the connectors and faston terminals from the inverter PCB as shown in Fig. 1.
- 3) Match the setting of switches (JSW10, 11) of new PCB with former PCB.
- 4) Remove the harness bands (3 places) from the control unit, then remove the fixing screws (4 places) from the radiator. (Refer to Fig.3)
- 5) Remove the inverter PCB with radiator from the control unit, and exchange the inverter PCB with radiator. Be careful not to pinch the wiring at the time of exchanging.
- 6) Fix the radiator to the control unit by screws. After exchanging the inverter PCB, reconnect the connectors, faston terminals and the harnesses as before. (Confirm that the **connectors are not half inserted.**)
- 7) Attach the harness bands (3 places), then reconnect the harnesses as before.
- 8) Install the harness clip on the inverter PCB as shown in Fig.4, and fix the harness.


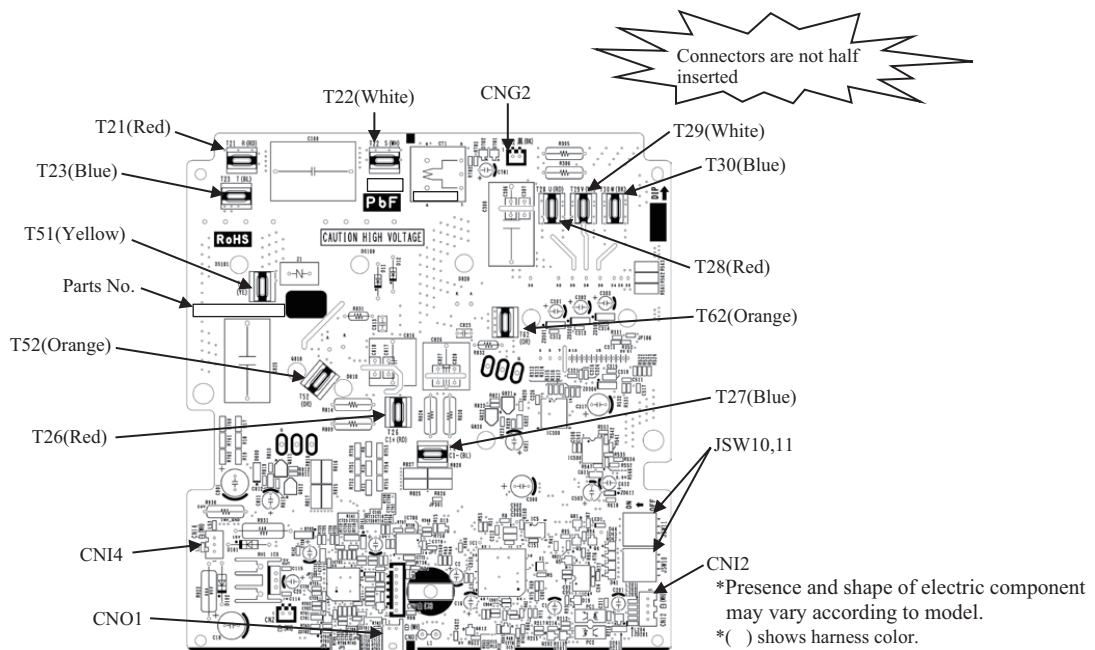


Fig.1 Parts arrangement view of inverter PCB

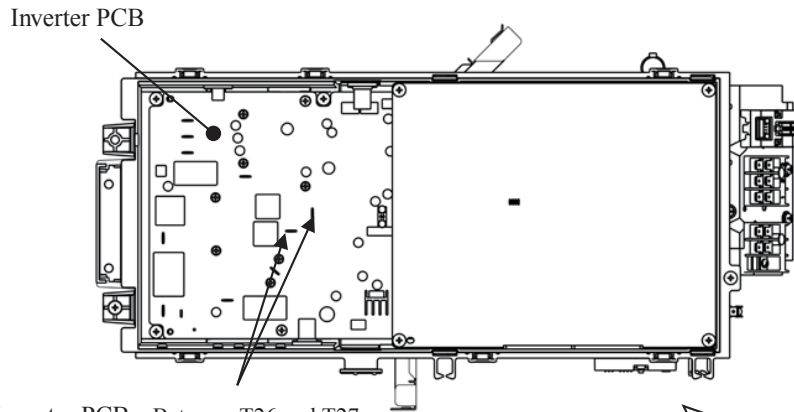

Power source for inverter PCB : Between T26 and T27

Check that the voltage is discharged sufficiently.

*Presence and shape of electric component may vary according to model.



Fig.2 Voltage measurement points

Remove the harness bands from control unit after removing the harnesses from harness bands.

*Presence and shape of electric component may vary according to model.



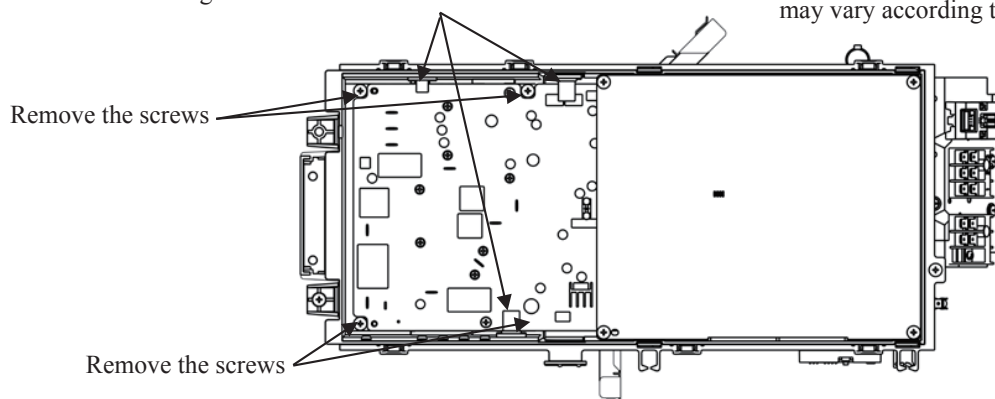


Fig.3 Target places where harness bands and screws are removed

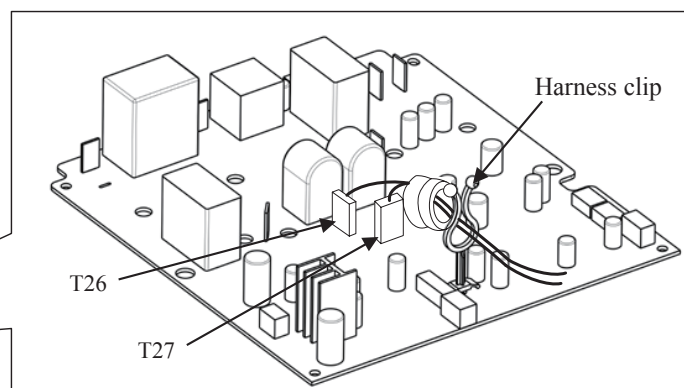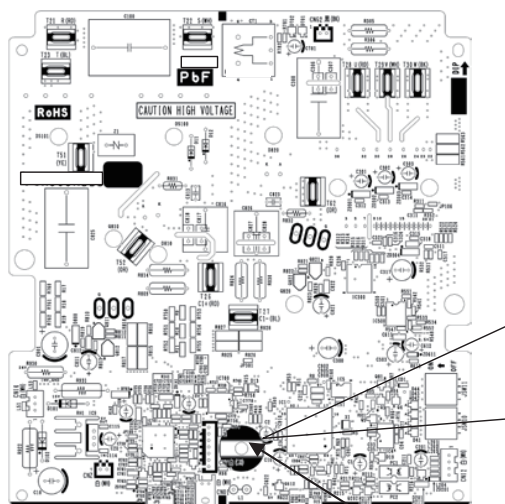


Hole for harness clip installation

*Presence and shape of electric component may vary according to model.

Fig.4 Fix the harness on the harness clip

(ii) **Models FDC100VNX, 125VNX, 140VNX**
100VN, 125VN, 140VN



- 1) Replace the PCB **after elapsing 3 minutes from power OFF.**
(Be sure to measure voltage (DC) on both capacitor terminals located in control back, and **check that the voltage is discharged sufficiently.**(Refer to Fig.1))
- 2) Take off the connection of inverter PCB terminal block connector and remove the screw of power transistor then remove the PCB. Wipe off the silicon grease neatly on the control's radiation heat fins.
- 3) Match the setting switches (JSW10,11) of new PCB with the former PCB.
- 4) Before installing the power transistor on the new PCB,Apply uniformly a bundled of silicon grease first on the surface of power transistor.Make sure it is applied to prevent damage on power transistor.
- 5) Tighten the screw of power transistor on inverter PCB and connect the terminal block.Confirm the connection and don't use soldering in the connection.Tighten properly the power transistor with a screw and make sure there is no slack.Power transistor can be damage if not properly tighten.(Recommended power transistor tightening torque:0.98 – 1.47N·m)

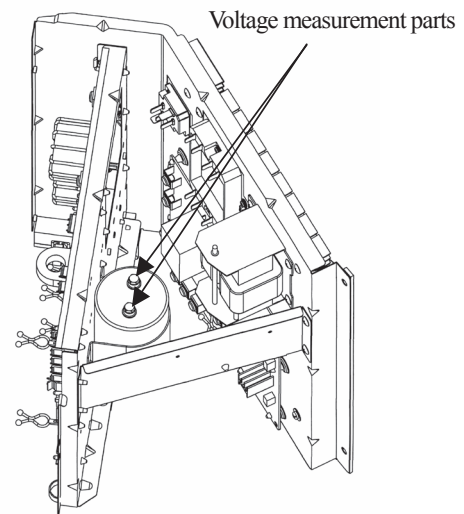
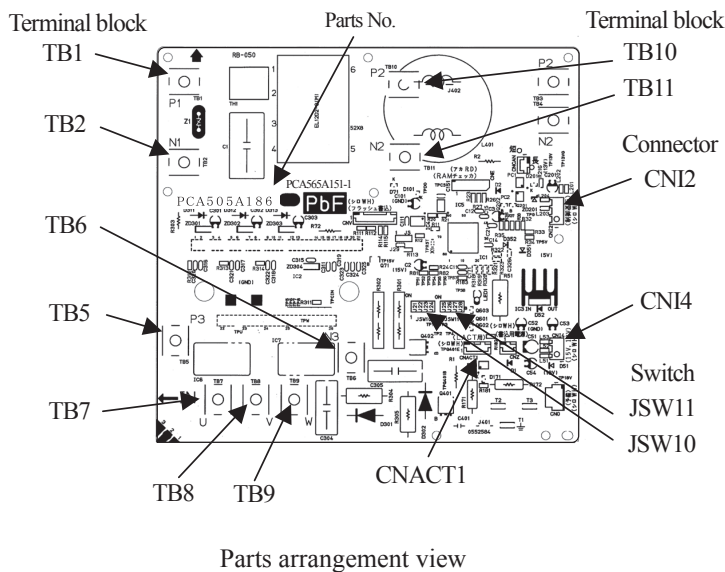



Table. 1 Switch setting
 Models FDC100VNX, 125VNX, 140VNX

JSW10	-1	OFF	JSW11	-1	OFF
	-2	OFF		-2	OFF
	-3	OFF		-3	ON
	-4	OFF		-4	ON

Models FDC100VN, 125VN, 140VN

JSW10	-1	OFF	JSW11	-1	ON
	-2	ON		-2	OFF
	-3	OFF		-3	OFF
	-4	OFF		-4	OFF

(iii) Models FDC100VSX, 125VSX, 140VSX
100VS, 125VS, 140VS



- 1) Replace the PCB **after elapsing 3 minutes from power OFF.**
(Be sure to measure voltage (DC) on both capacitor terminals located in control back, and **check that the voltage is discharged sufficiently.**(Refer to Fig.1))
- 2) Take off the connection of inverter PCB terminal block connector and remove the screw of power transistor then remove the PCB. Wipe off the silicon grease neatly on the control's radiation heat fins.
- 3) Match the setting switches (JSW10,11) of new PCB with the former PCB.
- 4) Before installing the power transistor on the new PCB, Apply uniformly a bundled of silicon grease first on the surface of power transistor. Make sure it is applied to prevent damage on power transistor.
- 5) Tighten the screw of power transistor on inverter PCB and connect the terminal block. Confirm the connection and don't use soldering in the connection. Tighten properly the power transistor with a screw and make sure there is no slack. Power transistor can be damage if not properly tighten. (Recommended power transistor tightening torque: 0.98 – 1.47N·m)

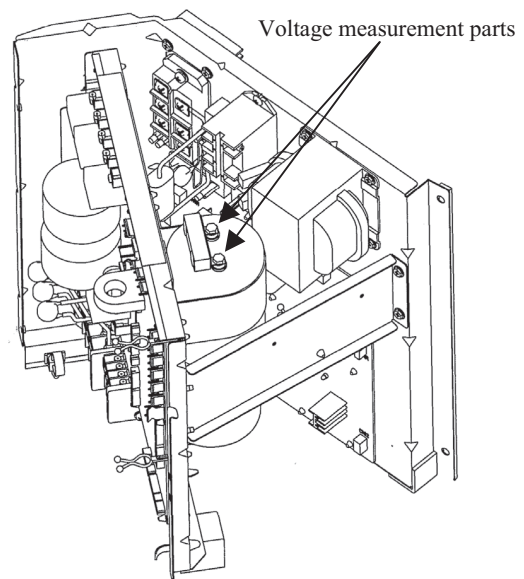
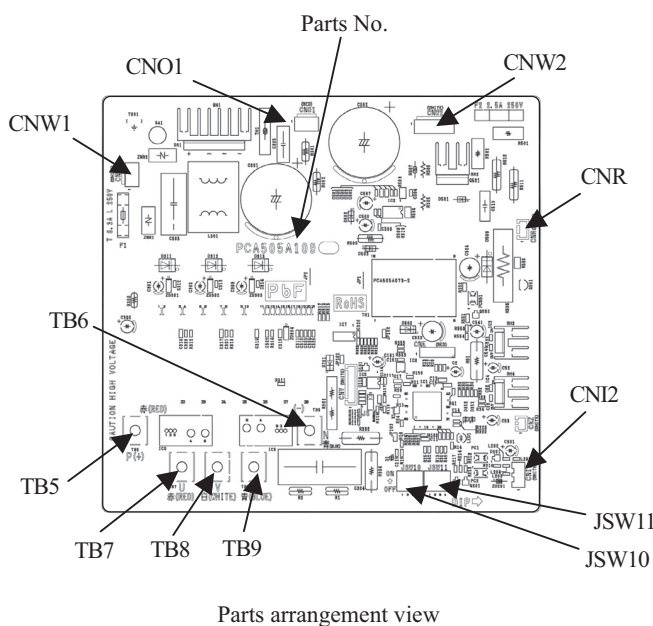


Table. 1 Switch setting

Models FDC100VSX, 125VSX, 140VSX

JSW10	-1	OFF	JSW11	-1	ON
	-2	OFF		-2	OFF
	-3	OFF		-3	ON
	-4	OFF		-4	ON

Models FDC100VS, 125VS, 140VS

JSW10	-1	OFF	JSW11	-1	OFF
	-2	ON		-2	OFF
	-3	OFF		-3	ON
	-4	OFF		-4	OFF

(iv) Model FDC200VSA

PCA012D063

Replace the inverter PCB (Fig.1) according to the following procedure.

- 1) Replace the inverter PCB after elapsing 3 minutes from power OFF.
 (Be sure to measure voltage (DC) of two places ((A) power source for fan motor (DC), (B) power source for inverter), and check that the voltage is discharged sufficiently.(Refer to Fig.2))
- 2) Take off the wirings and connectors of inverter PCB, the screws of power transistor. Then remove the PCB from the control. Wipe off the silicon grease neatly on the control's radiation fins.
- 3) Match the setting of switches (JSW10, 11) of new PCB with the former PCB.
- 4) Before installing the new PCB to the control, apply the bundled silicon grease uniformly on the surface of power transistor, and all use it up at that time. The power transistor can be damaged, if the silicon grease is not applied.
- 5) Tighten the screws of power transistor on inverter PCB and reconnect the wirings and connectors to inverter PCB. After connection, confirm the screws are tightened and connectors are not half inserted.
However, tighten the power transistor with the screws according to recommended tightening torque after tightening the screws temporarily once.
Power transistor can be damage if not tightened according to this procedure.
 (Temporary tightening torque:0.20 – 0.44N·m, Recommended tightening torque:0.98 – 1.47 N·m)


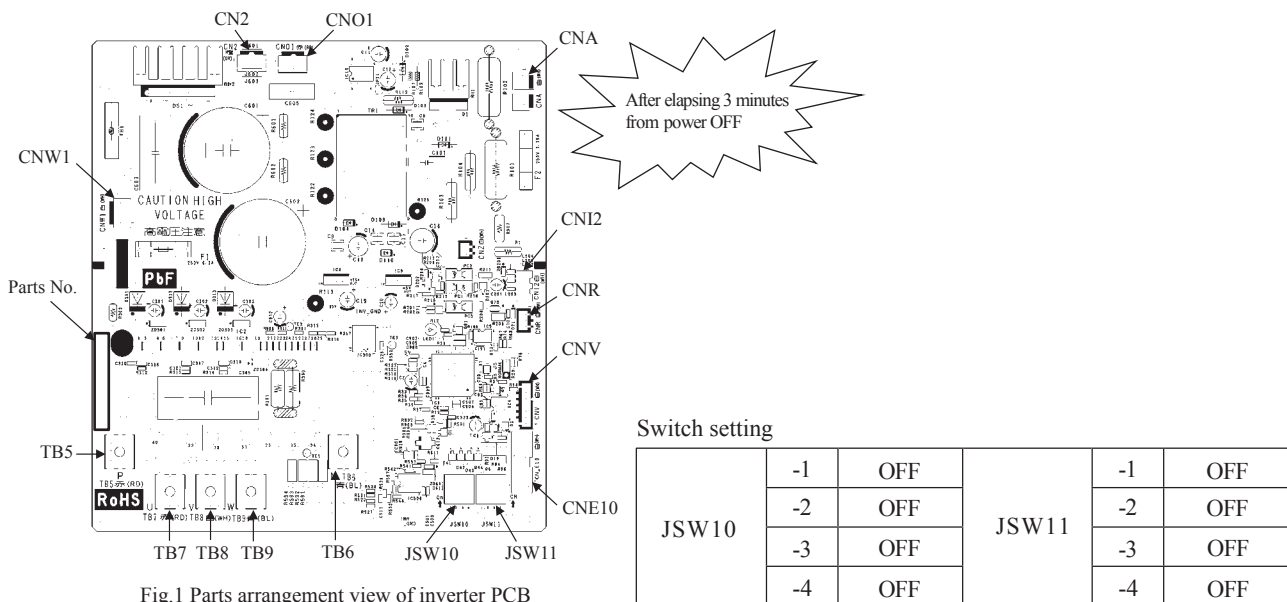


Fig.1 Parts arrangement view of inverter PCB


(A) Voltage measurement points for fan motor (DC)
 : CNA1, 1pin(+) – 4pin(-)

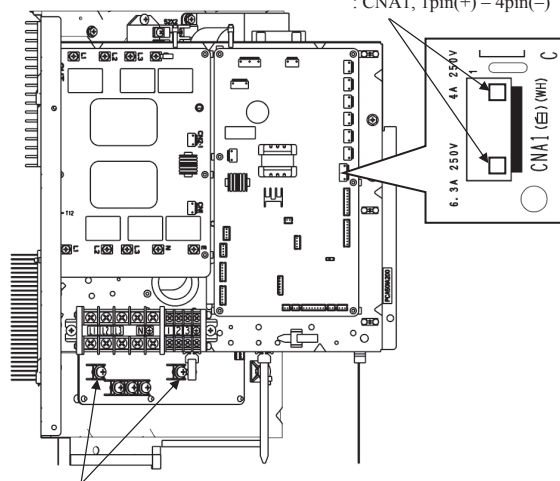

(B) Voltage measurement points for inverter
 : TB5(+) – TB6(-)

Fig.2 Voltage measurement points

(V) Model FDC250VSA



Replace the inverter PCB (Fig.1) according to the following procedure.

- 1) Replace the PCB **after elapsing 3 minutes from power OFF.**
- 2) In the situation that harnesses are connected to control PCB, **be sure to measure voltage (DC) of two places ((A), (B))** and check that **the voltage is discharged sufficiently.** (Refer to Fig.2)
- 3) Remove the harnesses from bands, clips and connectors on the control PCB. Then, remove the appointed screws (4 places) of a controller. (Refer to Fig.3)
- 4) Open main layer and **measure voltage (DC) of a place (C)** and check that **the voltage is discharged sufficiently.** (Refer to Fig.4)
- 5) Disconnect connectors from the inverter PCB (Refer to Fig.1), remove a snubber capacitor (Refer to Fig.4) and harnesses (“P”, “N”, “U”, “V” and “W”), and exchange the inverter PCB then. In the situation of being opening main layer, do not press the controller from above. It will cause the product deformation or injury.
- 6) Match the setting of switches (JSW10, 11) of new PCB with former PCB.
- 7) After exchanging the inverter PCB, install the snubber capacitor to power transistor (Refer to Fig.5), and reconnect the connectors and the harnesses as before. (Confirm the **connectors are not half inserted.**)

Be careful not to pinch the wiring at the time of closing main layer. The wiring is damaged, and it will cause a short circuit or fire.


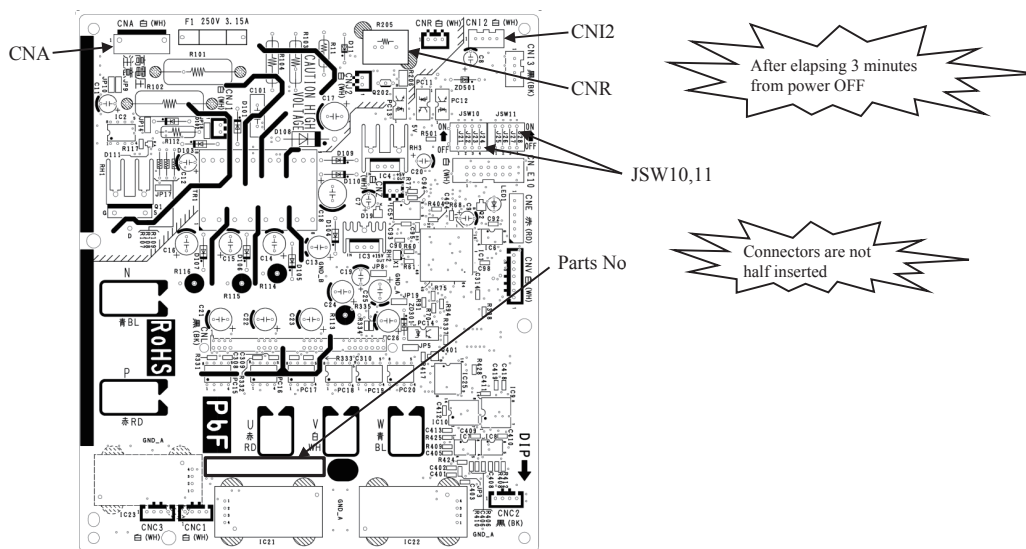


Fig.1 Parts arrangement view of inverter PCB

(A) Power source for control PCB : CNA1, 1 - 3 pinor CNA2, 1 - 4 pin

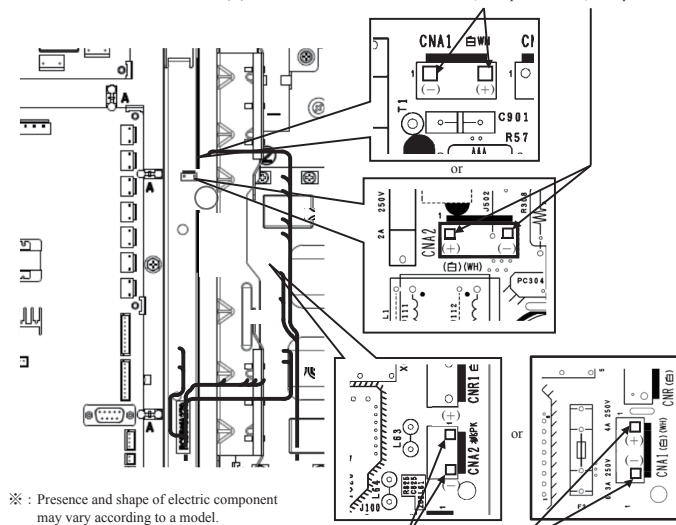

(B) Power source for fan motor (DC) : CNA2, 1 - 3 pinor CNA1, 1 - 4 pin

Fig.2 Voltage measurement points

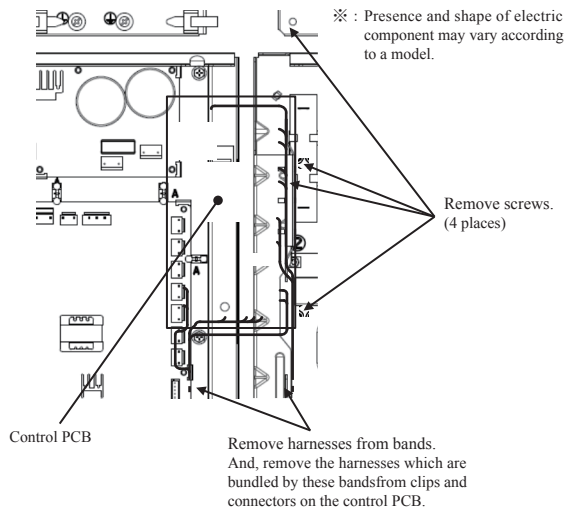


Fig.3 Target places which are removed harnesses and screws


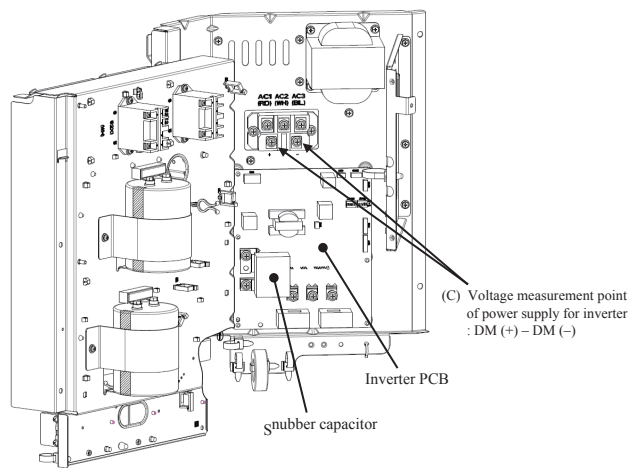


Fig.4 Installation place of inverter PCB

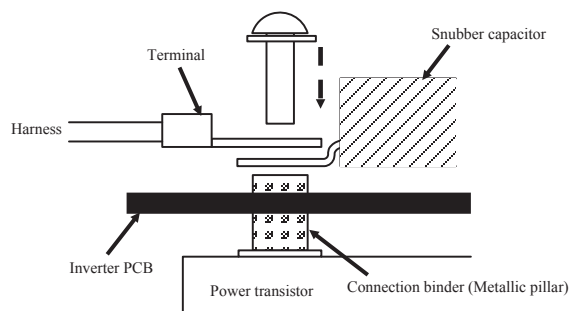

Procedure on tightening harness (Snubber capacitor) and power transistor with screw.
 A metallic connection binder is set in each hole of the inverter PCB of "P", "N", "U", "V", and "W" beforehand.
 Then tighten the harness (Snubber capacitor) and the power transistor with the screw together.
 (Set the harness wires to be fixed to "U" and "W" with screws in respective holes after passing them through IC21 and 22.)
 (Connect the snubber capacitor with "P" and "N".)

Fig.5 Installation method to power transistor

● DIP switch setting list (Outdoor unit)

Models FDC71, 100, 125, 140VNX, 100, 125, 140VSX

(1) Control PCB

(a) Model FDC71VNX

Switches	Description		Default setting		Remarks
SW3-1	Defrost condition	Normal*/Cold region	OFF	Normal	
SW3-2	Snow protection control	Normal*/Snow protection	OFF	Normal	
SW3-3	Model selection	Cooling only/Heat pump*	OFF	Heat pump	Keep OFF
SW3-4	Defrost prohibition time	ON: 37min*/OFF: 45min	ON	37min.	
SW4-1	Model selection	Domestic/Overseas*	ON	Overseas	Keep ON
SW4-2	Model selection	3-phase/Single phase*	ON	Single phase	Keep ON
SW4-3	Reserved		OFF		Keep OFF
SW4-4	Reserved		OFF		Keep OFF
SW5-1	Model selection		OFF		Keep OFF
SW5-2	Model selection		OFF		Keep OFF
SW5-3	Test run SW	Normal*/Test run	OFF	Normal	
SW5-4	Test run mode	Cooling*/Heating	OFF	Cooling	
SW7-1	Reserved		OFF		Keep OFF
SW7-2	Reserved		OFF		Keep OFF
SW7-3	Reserved		OFF		Keep OFF
SW8-1	Reserved		OFF		Keep OFF
SW8-2	Reserved		OFF		Keep OFF
SW8-3	Reserved		OFF		Keep OFF
SW9	Pump down operation	Normal*/Pump down	OFF	Normal	

* Default setting

(b) Models FDC100, 125, 140VNX, 100, 125, 140VSX

Switches	Description		Default setting		Remarks
SW1	Pump down operation	Normal*/Pump down	OFF	Normal	
JSW1-1	Model selection		As per model		See table 1
JSW1-2					
JSW1-3					
JSW1-4					
SW3-1	Defrost condition	Normal*/Cold region	OFF	Normal	
SW3-2	Snow protection control	Normal*/Snow protection	OFF	Normal	
SW3-3	Test run SW	Normal*/Test run	OFF	Normal	
SW3-4	Test run mode	Cooling*/Heating	OFF	Cooling	
SW4-1	Model selection	Domestic/Overseas*	ON	Overseas	See table 1
SW4-2	Model selection	3-phase/Single phase	As per model		See table 1
SW4-3	Reserved		OFF		Keep OFF
SW4-4	Reserved		ON		Keep ON
SW5-1	Reserved		OFF		Keep OFF
SW5-2	Reserved		OFF		Keep OFF
SW5-3	Reserved		OFF		Keep OFF
SW5-4	Reserved		OFF		Keep OFF

* Default setting

Table 1: Outdoor unit model selection with JSW1-1-JSW1-4 and SW4-1-SW4-2

Switches	FDC100VNX	FDC100VSX	FDC125VNX	FDC125VSX	FDC140VNX	FDC140VSX
JSW1-1	OFF	OFF	ON	ON	OFF	OFF
JSW1-2	OFF	OFF	OFF	OFF	ON	ON
JSW1-3	OFF	OFF	OFF	OFF	OFF	OFF
JSW1-4	OFF	OFF	OFF	OFF	OFF	OFF
SW4-1	ON	ON	ON	ON	ON	ON
SW4-2*	ON	OFF	ON	OFF	ON	OFF

* 3-phase: OFF/Single phase: ON

(2) Inverter PCB

Switches	FDC71VNX	FDC100, 125, 140VNX	FDC100, 125, 140VSX
	Single phase models	Single phase models	3-phase models
JSW10-1	OFF	OFF	OFF
JSW10-2	OFF	OFF	OFF
JSW10-3	OFF	OFF	OFF
JSW10-4	OFF *	OFF *	OFF *
JSW11-1	ON	OFF	ON
JSW11-2	ON	OFF	OFF
JSW11-3	ON	ON	ON
JSW11-4	ON	ON	ON

* When checking inverter PCB of FDC71 – 140 models with inverter checker, turn JSW10-4 ON.

(Regarding the checking method of inverter PCB with inverter checker, refer to page 164, 166, 167 for details)

Models FDC100, 125, 140VN, 100, 125, 140VS**(1) Control PCB**

Switches	Description		Default setting		Remarks
SW1	Pump down operation	Normal*/Pump down	OFF	Normal	
JSW1-1	Model selection		As per model		See table 1
JSW1-2					
JSW1-3					
JSW1-4					
SW3-1	Defrost condition	Normal*/Cold region	OFF	Normal	
SW3-2	Snow protection control	Normal*/Snow protection	OFF	Normal	
SW3-3	Test run SW	Normal*/Test run	OFF	Normal	
SW3-4	Test run mode	Cooling*/Heating	OFF	Cooling	
SW4-1	Model selection	Domestic*/Overseas*	ON	Overseas	See table 1
SW4-2	Model selection	3-phase/Single phase	As per model		See table 1
SW4-3	Reserved		OFF		Keep OFF
SW4-4	Reserved		OFF		Keep OFF
SW5-1	Reserved		OFF		Keep OFF
SW5-2	Reserved		OFF		Keep OFF
SW5-3	Reserved		OFF		Keep OFF
SW5-4	Reserved		OFF		Keep OFF

* Default setting

Table 1: Outdoor unit model selection with JSW1-1-JSW1-4 and SW4-1-SW4-2

Switches	FDC100VN	FDC100VS	FDC125VN	FDC125VS	FDC140VN	FDC140VS
JSW1-1	OFF	OFF	ON	ON	OFF	OFF
JSW1-2	OFF	OFF	OFF	OFF	ON	ON
JSW1-3	OFF	OFF	OFF	OFF	OFF	OFF
JSW1-4	OFF	OFF	OFF	OFF	OFF	OFF
SW4-1	ON	ON	ON	ON	ON	ON
SW4-2*	ON	OFF	ON	OFF	ON	OFF

* 3-phase: OFF/Single phase: ON

(2) Inverter PCB

Switches	FDC100, 125, 140VN	FDC100, 125, 140VS
	Single phase models	3-phase models
JSW10-1	OFF	OFF
JSW10-2	ON	ON
JSW10-3	OFF	OFF
JSW10-4	OFF *	OFF *
JSW11-1	ON	OFF
JSW11-2	OFF	OFF
JSW11-3	OFF	ON
JSW11-4	OFF	OFF

* When checking inverter PCB of FDC100-140 models with inverter checker, turn JSW10-4 ON.

(Regarding the checking method of inverter PCB with inverter checker, refer to page 166, 167 for details)

Models FDC200, 250VSA**(1) Control PCB**

Switches	Description		Default setting		Remarks
SW1	Pump down operation	Normal*/Pump down	OFF	Normal	
JSW1-1	Model selection		As per model		See table 1
JSW1-2					
JSW1-3					
JSW1-4					
SW3-1	Defrost condition	Normal*/Cold region	OFF	Normal	
SW3-2	Snow protection control	Normal*/Snow protection	OFF	Normal	
SW3-3	Test run SW	Normal*/Test run	OFF	Normal	
SW3-4	Test run mode	Cooling*/Heating	OFF	Cooling	
SW4-1	Model selection	Domestic/Overseas*	ON	Overseas	See table 1
SW4-2	Model selection	3-phase/Single phase	As per model		See table 1
SW4-3	Reserved		OFF		Keep OFF
SW4-4	Reserved		OFF		Keep OFF
SW5-1	Utilization of existing piping control	Normal*/Existing piping control	OFF		Keep OFF
SW5-2	Reserved		OFF		Keep OFF
SW5-3	Reserved		OFF		Keep OFF
SW5-4	Reserved		OFF		Keep OFF
SW7-1	Silent mode setting	Capacity priority/Silent priority	ON	Silent priority	
SW7-2	Reserved		ON		Keep ON
SW7-3	Anti frost control	Invalid/Valid	ON	Valid	

* Default setting

Table 1: Outdoor unit model selection with JSW1-1-JSW1-4 and SW4-1-SW4-2

Switches	FDC200	FDC250
JSW1-1	ON	OFF
JSW1-2	ON	OFF
JSW1-3	OFF	ON
JSW1-4	OFF	OFF
SW4-1	ON	ON
SW4-2	OFF	OFF

(2) Inverter PCB

Switches	FDC200	FDC250
JSW10-1	OFF	OFF
JSW10-2	OFF	ON
JSW10-3	OFF	OFF
JSW10-4	OFF *	OFF *
JSW11-1	OFF	OFF
JSW11-2	OFF	OFF
JSW11-3	OFF	OFF
JSW11-4	OFF	OFF

* When checking inverter PCB of FDC200, 250 models with inverter checker, turn JSW10-4 ON.

(Regarding the checking method of inverter PCB with inverter checker, refer to page 168, 169 for details)

(5) Check of anomalous operation data with the remote control

(a) In case of RC-EX3 remote control

[Operating procedure]

① On the TOP screen, touch the buttons in the order of “Menu” → “Service setting” → “Service & Maintenance” → “Service password” → “Set” → “Error display” → “Error history”.

② When only one indoor unit is connected to the remote control, followings will be displayed.

1. When there is any anomaly: “Loading. Wait a while” is displayed, followed by the operation data at the occurrence of anomaly

Contents of display

- Error code
- Number and data item

2. When there is no anomaly: “No anomaly” is displayed, and this mode is terminated.

③ When two or more indoor units are connected to the remote control, followings will be displayed.

1. When there is any anomaly: If the unit having anomaly is selected on the “Select IU” screen, “Loading. Wait a while” is displayed, followed by the operation data at the occurrence of anomaly.

Contents of display

- Indoor unit No.
- Error code
- Number and data item

2. When there is no anomaly: “No anomaly” is displayed, and this mode is terminated.

Note (1) When the number of connected units cannot be shown in a page, select “Next”.

④ If you press [RUN/STOP] button, the display returns to the TOP screen.

⊙ **If you touch “Back” button on the way of setting, the display returns to the last precious screen.**

Note (1) When two remote controls are used to control indoor units, the check of anomaly operation data can be made on the master remote control only. (It cannot be operated from the slave remote control.)

■ Anomaly operation data (Corresponding data may not be provided depending on models. Such items will not be displayed.)

Number	Data Item
01	Mode (Operation Mode)
02	SET TEMP (Set Temperature)
03	RETURN AIR (Return Air Temperature)
04	SENSOR (Remote Control Thermistor Temperature)
05	THI-R1 (Indoor Heat Exchanger Thermistor / U Bend)
06	THI-R2 (Indoor Heat Exchanger Thermistor /Capillary)
07	THI-R3 (Indoor Heat Exchanger Thermistor /Gas Header)
08	I/U FANSPEED (Indoor Unit Fan Speed)
09	DEMAND Hz (Frequency Requirements)
10	ANSWER Hz (Response Frequency)
11	I/U EEV P (Pulse of Indoor Unit Expansion Valve)
12	TOTAL I/U RUN H (Total Running Hours of The Indoor Unit)
13	SUPPLY AIR (Supply Air Temperature)
21	OUTDOOR (Outdoor Air Temperature)
22	THO-R1 (Outdoor Heat Exchanger Thermistor)
23	THO-R2 (Outdoor Heat Exchanger Thermistor)
24	COMP Hz (Compressor Frequency)
25	HP MPa (High Pressure)
26	P MPa (Low Pressure)
27	Td (Discharge Pipe Temperature)
28	COMP BOTTOM (Comp Bottom Temperature)
29	CT AMP (Current)
30	TARGET SH (Target Super Heat)
31	SH (Super Heat)
32	TDSH (Discharge Pipe Super Heat)
33	PROTECTION No. (Protection State No. of The Compressor)
34	O/U FANSPEED (Outdoor Unit Fan Speed)
35	63H1 (63H1 On/Off)
36	DEFROST (Defrost Control On/Off)
37	TOTAL COMP RUN H (Total Running Hours of The Compressor)
38	O/U EEV1 P (Pulse of The Outdoor Unit Expansion Valve EEVC)
39	O/U EEV2 P (Pulse of The Outdoor Unit Expansion Valve EEVH)

**●Details of Compressor protection status No. 33
Models FDC71, 100, 125, 140VNX, 100, 125, 140VSX**

No.	Contents of display	Reference page
"0"	Normal	
"1"	Discharge pipe temperature protection control	P.144, (6).(a).(i)
"2"	Discharge pipe temperature anomaly	P.144, (6).(a).(ii)
"3"	Current safe control of inverter primary current	P.146, (6).(g)
"4"	High pressure protection control	P.144, (6).(b).(i), P.145, (6).(c).(i)
"5"	High pressure anomaly	P.144, (6).(b).(ii)
"6"	Low pressure protection control	P.145, (6).(c).(i)
"7"	Low pressure anomaly	P.145, (6).(c).(ii)
"8"	Anti-frost prevention control	P.146, (6).(k)
"9"	Current cut	P.146, (6).(g)
"10"	Power transistor protection control	P.146, (6).(h)
"11"	Power transistor anomaly (Overheat)	P.146, (6).(i)
"12"	Compression ratio control	P.145, (6).(f)
"13"	Spare	
"14"	Dewing prevention control	P.147, (6).(l)
"15"	Current safe control of inverter secondary current	P.146, (6).(g)
"16"	Stop by compressor rotor lock	
"17"	Stop by compressor startup failure	P.147, (6).(p)

Note(1) Operation data display on the remote control.
 • Data is displayed until canceling the protection control.
 • In case of multiple protections controlled, only the younger No. is displayed.

Note(2) Common item.
 ① In heating mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "4" is displayed.
 ② In cooling and dehumidifying mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "8" is displayed.

Models FDC100, 125, 140VN, 100, 125, 140VS

No.	Contents of display	Reference Page
"0"	Normal	
"1"	Discharge pipe temperature protection control	P.356, (6).(a).(i)
"2"	Discharge pipe temperature anomaly	P.356, (6).(a).(ii)
"3"	Current safe control of inverter primary current	P.357, (6).(g)
"4"	High pressure protection control	P.356, (6).(b).(i), (c).(i)
"5"	High pressure anomaly	P.356, (6).(b).(ii)
"6"	Low pressure protection control	P.357, (6).(c).(i)
"7"	Low pressure anomaly	P.357, (6).(c).(ii)
"8"	Anti-frost prevention control	P.358, (6).(k)
"9"	Current cut	P.357, (6).(g)
"10"	Power transistor protection control	P.358, (6).(h)
"11"	Power transistor anomaly (Overheat)	P.358, (6).(i)
"12"	Compression ratio control	P.357, (6).(f)
"13"	Spare	
"14"	Dewing prevention control	P.358, (6).(l)
"15"	Current safe control of inverter secondary current	P.357, (6).(g)
"16"	Stop by compressor rotor lock	
"17"	Stop by compressor startup failure	P.359, (6).(p)

Note(1) Operation data display on the remote control.
 •Data is dispalyed until canceling the protection control.
 •In case of multiple protections controlled, only the younger No. is displayed.
 Note(2) Common item.
 ① In heating mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "4" is displayed.
 ② In cooling and dehumidifying mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "8" is displayed.

Models FDC200, 250VSA

No.	Contents of display	Reference page
"0"	Normal	
"1"	Discharge pipe temperature protection control	P.365, (6).(a).(i)
"2"	Discharge pipe temperature anomaly	P.365, (6).(a).(ii)
"3"	Current safe control of inverter primary current	P.367, (6).(g)
"4"	High pressure protection control	P.365, (6).(b).(i), P.366, (6).(c).(i)
"5"	High pressure anomaly	P.365, (6).(b).(ii)
"6"	Low pressure protection control	P.366, (6).(c).(i)
"7"	Low pressure anomaly	P.366, (6).(c).(ii)
"8"	Anti-frost prevention control	P.367, (6).(k)
"9"	Current cut	P.367, (6).(g)
"10"	Power transistor protection control	P.367, (6).(h)
"11"	Power transistor anomaly (Overheat)	P.367, (6).(i)
"12"	Compression ratio control	P.366, (6).(f)
"13"	Spare	
"14"	Dewing prevention control	P.368, (6).(l)
"15"	Current safe control of inverter secondary current	P.367, (6).(g)
"16"	Stop by compressor rotor lock	
"17"	Stop by compressor startup failure	P.368, (6).(p)

Note(1) Operation data display on the remote control.
 •Data is dispalyed until canceling the protection control.
 •In case of multiple protections controlled, only the younger No. is displayed.
 Note(2) Common item.
 ① In heating mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "4" is displayed.
 ② In cooling and dehumidifying mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "8" is displayed.

Models FDC71, 90VNP

No.	Contents of display	Reference page
"0"	Normal	
"1"	Discharge pipe temperature protection control	P424, (11). (b). (i)
"2"	Discharge pipe temperature anomaly	P424, (11). (b). (ii)
"3"	Current safe control of inverter primary current	P424, (12)
"4"	High pressure protection control	P422, (6). (c), P423, (8), (b)
"5"	High pressure anomaly	P424, (11)
"8"	Anti-frost prevention control	
"9"	Current cut	P425, (13)
"11"	Power transistor anomaly (Overheat)	
"12"	Compression ratio control	
"13"	Spare	
"14"	Dewing prevention control	
"15"	Current safe control of inverter secondary current	
"16"	Stop by compressor rotor lock	
"17"	Stop by compressor startup failure	

Note(1) Operation data display on the remote control.
 •Data is dispalyed until canceling the protection control.
 •In case of multiple protections controlled, only the younger No. is displayed.
 Note(2) Common item.
 ① In heating mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "4" is displayed.
 ② In cooling and dehumidifying mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "8" is displayed.

Model FDC100VNP

No.	Contents of display	Reference page
"0"	Normal	
"1"	Discharge pipe temperature protection control	P432, (12). (b). (i)
"2"	Discharge pipe temperature anomaly	P432, (12). (b). (ii)
"3"	Current safe control of inverter primary current	P432, (13)
"4"	High pressure protection control	P430, (6). (c), P431, (8), (b)
"5"	High pressure anomaly	P432, (12)
"6"	Low pressure protection control	P430.(7), P432, (11)
"8"	Anti-frost prevention control	
"9"	Current cut	P433, (14)
"13"	Spare	
"15"	Current safe control of inverter secondary current	
"16"	Stop by compressor rotor lock	
"17"	Stop by compressor startup failure	

Note(1) Operation data display on the remote control.
 •Data is dispalyed until canceling the protection control.
 •In case of multiple protections controlled, only the younger No. is displayed.
 Note(2) Common item.
 ① In heating mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "4" is displayed.
 ② In cooling and dehumidifying mode.
 During protection control by the command signal for reducing compressor frequency from indoor unit, No. "8" is displayed.

(b) In case of RC-E5 remote control

Operation data can be checked with remote control unit operation.

- ① Press the **CHECK** button.
The display change “OPER DATA ▾”
- ② Press the **(SET)** button while “OPER DATA ▾” is displayed.
- ③ When only one indoor unit is connected to remote control, “DATA LOADING” is displayed (blinking indication during data loading).
Next, operation data of the indoor unit will be displayed. Skip to step ⑦.
- ④ When plural indoor units is connected, the smallest address number of indoor unit among all connected indoor unit is displayed.

[Example]:

“SELECT I/U” (blinking 1 seconds) → “I/U000 ▲” blinking.

- ⑤ Select the indoor unit number you would like to have data displayed with the **▲** **▼** button.
- ⑥ Determine the indoor unit number with the **(SET)** button.
(The indoor unit number changes from blinking indication to continuous indication)
“I/U000” (The address of selected indoor unit is blinking for 2 seconds.)
↓
“DATA LOADING” (A blinking indication appears while data loaded.)
Next, the operation data of the indoor unit is indicated.

- ⑦ Upon operation of the **▲** **▼** button, the current operation data is displayed in order from data number 01.
The items displayed are in the above table.

*Depending on models, the items that do not have corresponding data are not displayed.


- ⑧ To display the data of a different indoor unit, press the **AIR CON No.** button, which allows you to go back to the indoor unit selection screen.
- ⑨ Pressing the **ON/OFF** button will stop displaying data.
Pressing the **(RESET)** button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.
- ⊙ If two (2) remote controls are connected to one (1) inside unit, only the master control is available for trial operation and confirmation of operation data. (The slave remote control is not available.)

● **Details of Compressor protection status No. 33**

Refer to page 174 and 175.

Number		Data Item
01		(Operation Mode)
02	SET TEMP	(Set Temperature)
03	RETURN AIR	(Return Air Temperature)
04	SENSOR	(Remote Control Thermistor Temperature)
05	THI-R1	(Indoor Heat Exchanger Thermistor / U Bend)
06	THI-R2	(Indoor Heat Exchanger Thermistor /Capillary)
07	THI-R3	(Indoor Heat Exchanger Thermistor /Gas Header)
08	I/U FANSPEED	(Indoor Unit Fan Speed)
09	DEMAND Hz	(Frequency Requirements)
10	ANSWER Hz	(Response Frequency)
11	I/U EEV P	(Pulse of Indoor Unit Expansion Valve)
12	TOTAL I/U RUN H	(Total Running Hours of The Indoor Unit)
21	OUTDOOR	(Outdoor Air Temperature)
22	THO-R1	(Outdoor Heat Exchanger Thermistor)
23	THO-R2	(Outdoor Heat Exchanger Thermistor)
24	COMP Hz	(Compressor Frequency)
25	HP MPa	(High Pressure)
26	LP MPa	(Low Pressure)
27	Td	(Discharge Pipe Temperature)
28	COMP BOTTOM	(Comp Bottom Temperature)
29	CT AMP	(Current)
30	TARGET SH	(Target Super Heat)
31	SH	(Super Heat)
32	TDSH	(Discharge Pipe Super Heat)
33	PROTECTION No.	(Protection State No. of The Compressor)
34	O/U FANSPEED	(Outdoor Unit Fan Speed)
35	63H1	(63H1 On/Off)
36	DEFROST	(Defrost Control On/Off)
37	TOTAL COMP RUN H	(Total Running Hours of The Compressor)
38	O/U EEV1 P	(Pulse of The Outdoor Unit Expansion Valve EEVC)
39	O/U EEV2 P	(Pulse of The Outdoor Unit Expansion Valve EEVH)

(6) Power transistor module (including the driver PCB) inspection procedure

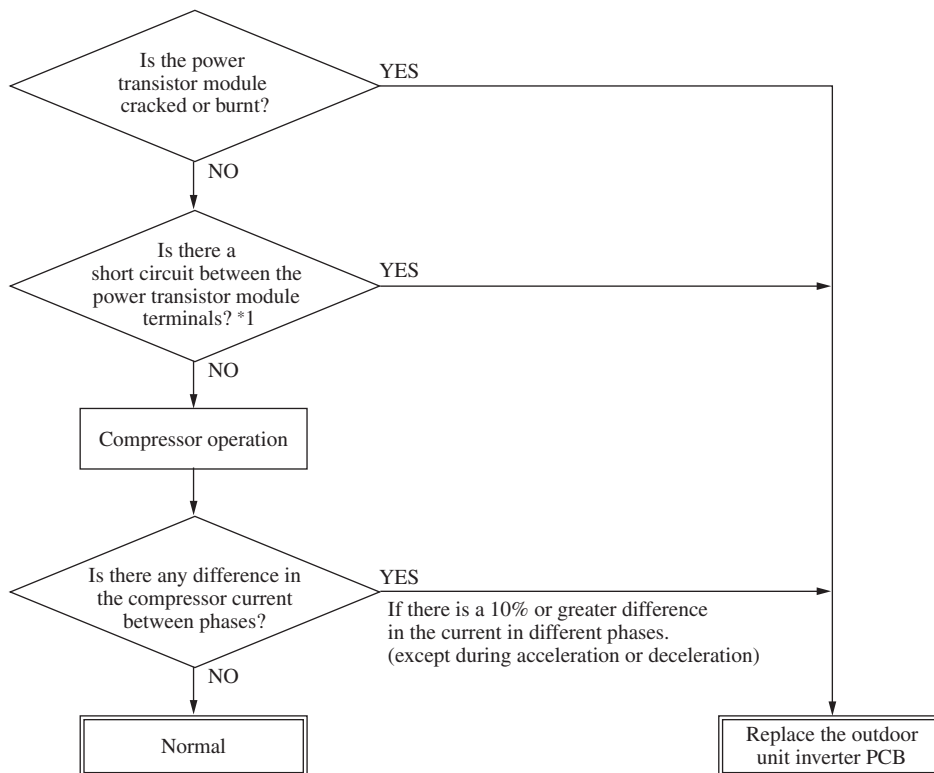

***1 Power transistor module terminal short circuit check procedure**

Disconnect the compressor wiring, then conduct a short circuit check.

P-U, P-V, P-W

N-U, N-V, N-W

Check between the P-N terminals.

Bring the tester probes in contact with the following places on each terminal.

P: Power transistor P terminal,

N: Power transistor N terminal,

U: End of red harness to compressor

V: End of white harness to compressor

W: End of black or blue harness to compressor

Check for a power transistor short circuit.

- When you do not have a diagnostic checker for judging if the inverter is defective, measure between the terminals of the power transistor parts, judge whether the power transistor is defective or not.
- Disconnect the compressor, then measure with the control incorporated.

Models FDC71-140VNX, 100-140VSX

100-140VN, 100-140VS

Tester		Normal values (Ω)	
Terminal (+)	Terminal (-)	Model FDC71	Model FDC100-140
P	N	0 - (Numerical value rises.)	Approx. 1 M Approx. 300-400
N	P		
P	U	Several M (Numerical value rises.)	0
P	V		
P	W		
N	U	Approx. 650 k	Approx. 1.2 M
N	V		
N	W		
U	P	Approx. 670 k	Approx. 1.3 M
V	P	Approx. 4.4 M	
W	P	Approx. 4.4 M	
U	N	Approx. 650 k	0
V	N	Approx. 4.8 M	
W	N	Approx. 4.9 M	

If the measured values range from 0 - several kW, there is a possibility that the elements are damaged, so replace the power transistor parts.

Models FDC200, 250VSA

Tester		Normal values (Ω)	
Terminal (+)	Terminal (-)	Model FDC200	Model FDC250
P	N	Scores of M	Scores of M
N	P	Approx. 4.5M	Approx. 8.9M
P	U	Scores of M	Scores of M
P	V		
P	W		
N	U	Approx. 130k	Approx. 4.6M
N	V		
N	W		
U	P	Approx. 4.5M	Approx. 4.8M
V	P		
W	P		
U	N	Approx. 6.7M	Scores of M
V	N	Approx. 6.0M	
W	N	Approx. 5.7M	

If the measured values range from 0 - several kW, there is a possibility that the elements are damaged, so replace the power transistor parts.

Models FDC71-100VNP

Tester		Normal values (Ω)	Diode mode (V)
Terminal (+)	Terminal (-)		
P	N	A few of M Ω (Not short)	—
N	P		
P	U		
P	V		
P	W		
N	U		
N	V		Approx. 0.4V
N	W		
U	P		
V	P		
W	P		
U	N		
V	N		—
W	N		

If the measured values range from 0 - several k Ω , there is a possibility that the elements are damaged, so replace the power transistor parts.

(7) Inverter checker for diagnosis of inverter output

**Models SRC40, 50, 60ZMX-S, FDC71, 100, 125, 140VNX,100, 125, 140VSX
FDC100, 125, 140VN, 100, 125, 140VS, 200, 250VSA, FDC100VNP**

● Checking method

(a) Models SRC40-60, FDC100VNP


(i) Setup procedure of checker.

- 1) Power OFF (Turn off the breaker).
- 2) Remove the terminal cover of compressor and disconnect the wires (U, V, W) from compressor.
- 3) Connect the wires U (Red), V (White) and W (Black) of the checker to the terminal of disconnected wires (U, V, W) from compressor respectively.

(ii) Operation for judgment.

- 1) Power ON and start check operation on cooling or heating mode.
- 2) Check ON/OFF status of 6 LED's on the checker.
- 3) Judge the PCB by ON/OFF status of 6 LED's on the checker.

ON/OFF status of LED	If all of LED are ON/OFF according to following pattern	If all of LED stay OFF or some of LED are ON/OFF
Control PCB	Normal	Anomalous

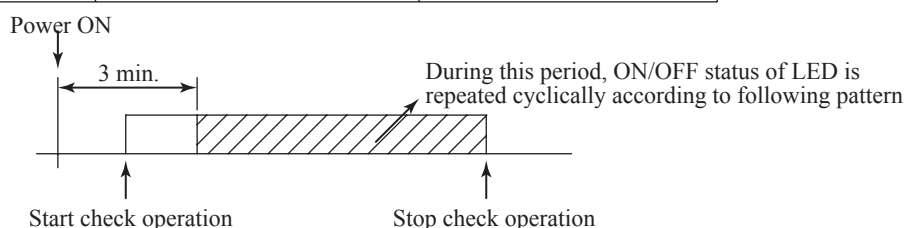

4) Stop check operation within about 2minutes after starting check operation.

(b) Models FDC71-250


(i) Setup procedure of checker.

- 1) Power OFF (Turn off the breaker).
- 2) Remove the terminal cover of compressor and disconnect the wires (U, V, W) from compressor.
- 3) Connect the wires U (Red), V (White) and W (Black) of checker to the terminal of disconnected wires (U, V, W) from compressor respectively.

(ii) Operation for judgment.


- 1) Power ON after JSW10-4 on outdoor inverter PCB was turned ON.
- 2) After 15 seconds since power has turned ON, LED start ON/OFF for 5 seconds cyclically and it repeats 10 times.
- 3) Check ON/OFF status of 6 LED's on the checker.
- 4) Judge the PCB by ON/OFF status of 6 LED's on the checker.

ON/OFF status of LED	If all of LED are ON/OFF according to following pattern	If all of LED stay OFF or some of LED are ON/OFF
Inverter PCB	Normal	Anomalous

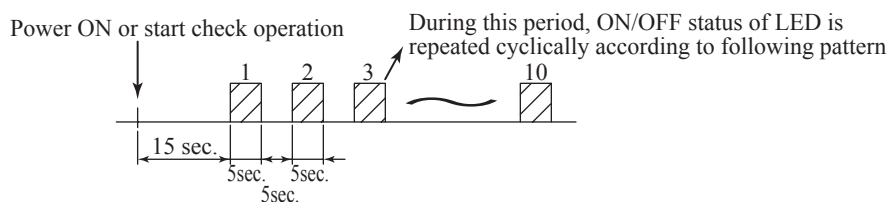


5) Be sure to turn off JSW10-4 on outdoor inverter PCB, after finishing the check operation.

<Inverter checker>

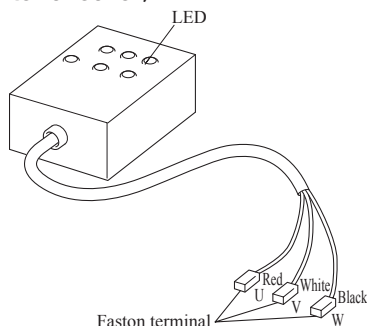

LED ON/OFF pattern

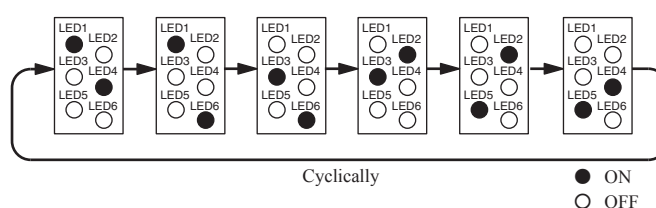

Connect to the terminal of the wires which are disconnected from compressor.

(c) Models FDC71, 90VNP


(i) Setup procedure of checker.

- 1) Power OFF (Turn off the breaker).
- 2) Remove the terminal cover of compressor and disconnect the wires (U, V, W) from compressor.
- 3) Connect the wires U (Red), V (White) and W (Black) of checker to the terminal of disconnected wires (U, V, W) from compressor respectively.
- 4) Connect the short connector to CNROM on the main PCB.

(ii) Operation for judgment.


- 1) Power ON.
- 2) After 15 seconds since power has turned ON, LED start ON/OFF for 5 seconds cyclically and it repeats 10 times.
- 3) Check ON/OFF status of 6 LED's on the checker.
- 4) Judge the PCB by ON/OFF status of 6 LED's on the checker.

ON/OFF status of LED	If all of LED are ON/OFF according to following pattern	If all of LED stay OFF or some of LED are ON/OFF
Control PCB	Normal	Anomalous

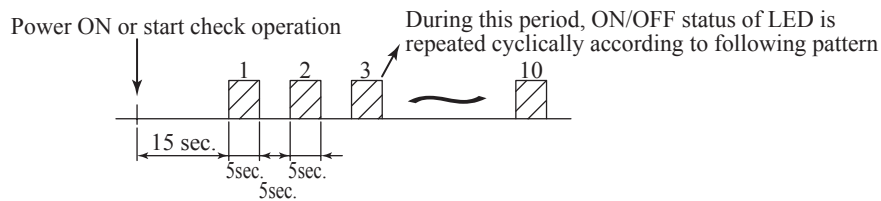


- 5) Be sure to disconnect the connector from CNROM, after finishing the check operation.


<Inverter Checker>

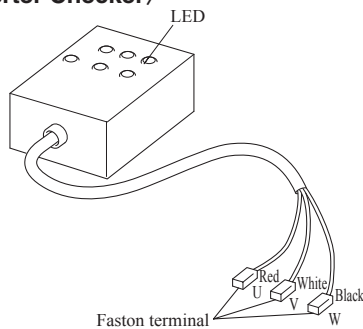

LED ON/OFF pattern

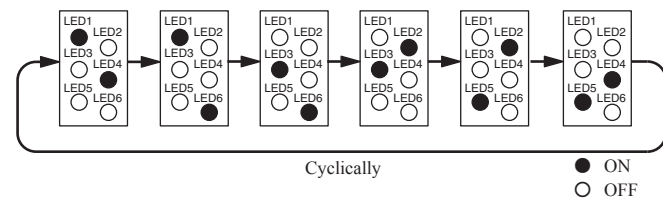

Connect to the terminal of the wires which are disconnected from compressor.

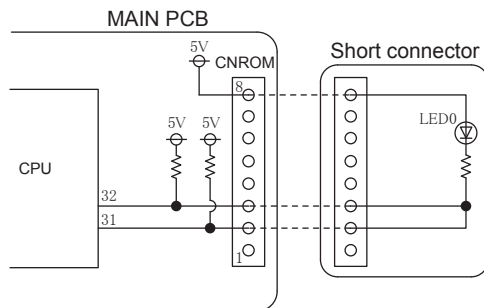

(8) Outdoor unit control failure diagnosis circuit diagram

Models SRC40ZSX-S, 50ZSX-S, 60ZSX-S

● Outdoor unit check points

⚠ CAUTION – HIGH VOLTAGE

High voltage is produced in the control box. Don't touch electrical parts in the control box for 5 minutes after the unit is stopped.

Color symbol

Mark	Color
BK	Black
BL	Blue
RD	Red
WH	White
YE	Yellow
Y/G	Yellow/Green


◆ Voltage check in PCB.

The normal range is as follows.

Display	Voltage range
① DC280V	DC230V - DC310V
② DC 20V	DC 18V - DC 22V
③ DC 13V	DC 12V - DC 14V
④ DC 15V	DC 14V - DC 16V
⑤ DC 5V	DC 4V - DC 6V
⑥ DC 2.5V	DC 2.3V - DC 2.5V


◆ Power source and serial signal inspection.

- ① to ④ : AC 220/230/240V
- ① to ②/N : AC 220/230/240V
- ②/N to ③ : Normal if the voltage oscillates between DC 0 and approx. 20V

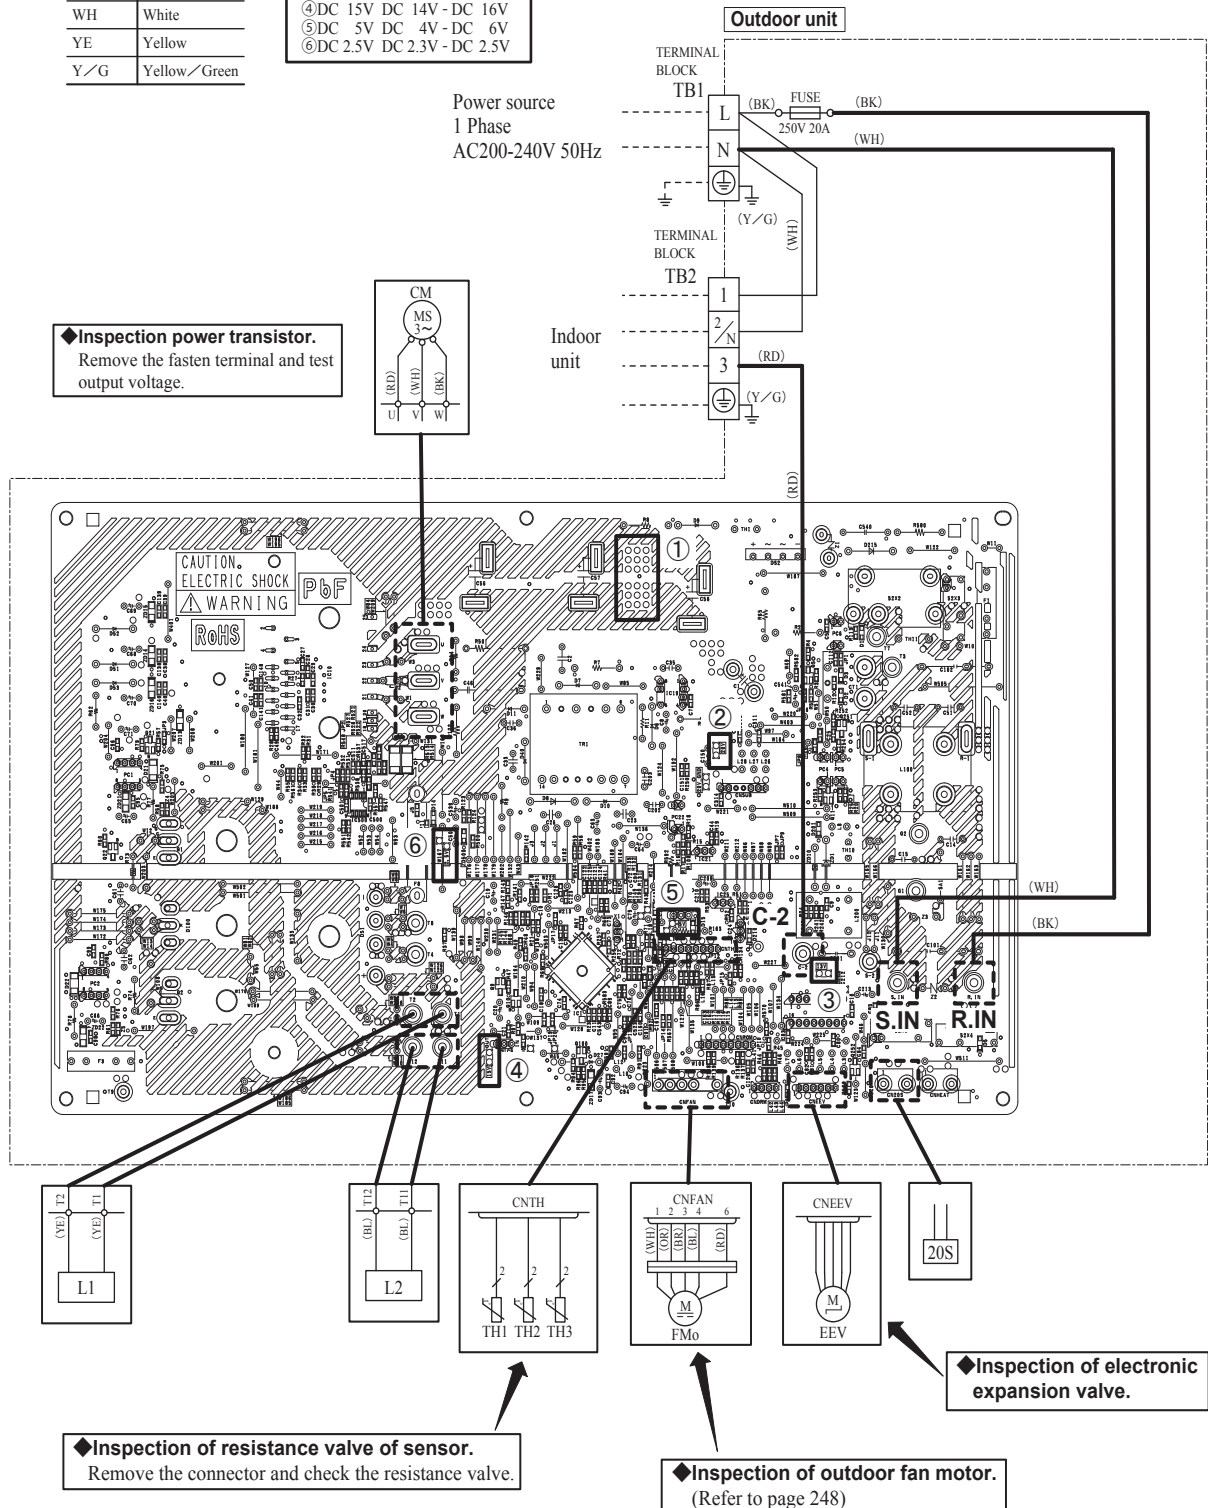

Model FDC71VNX


- Outdoor unit check points
Check items with the *mark when the power is ON.

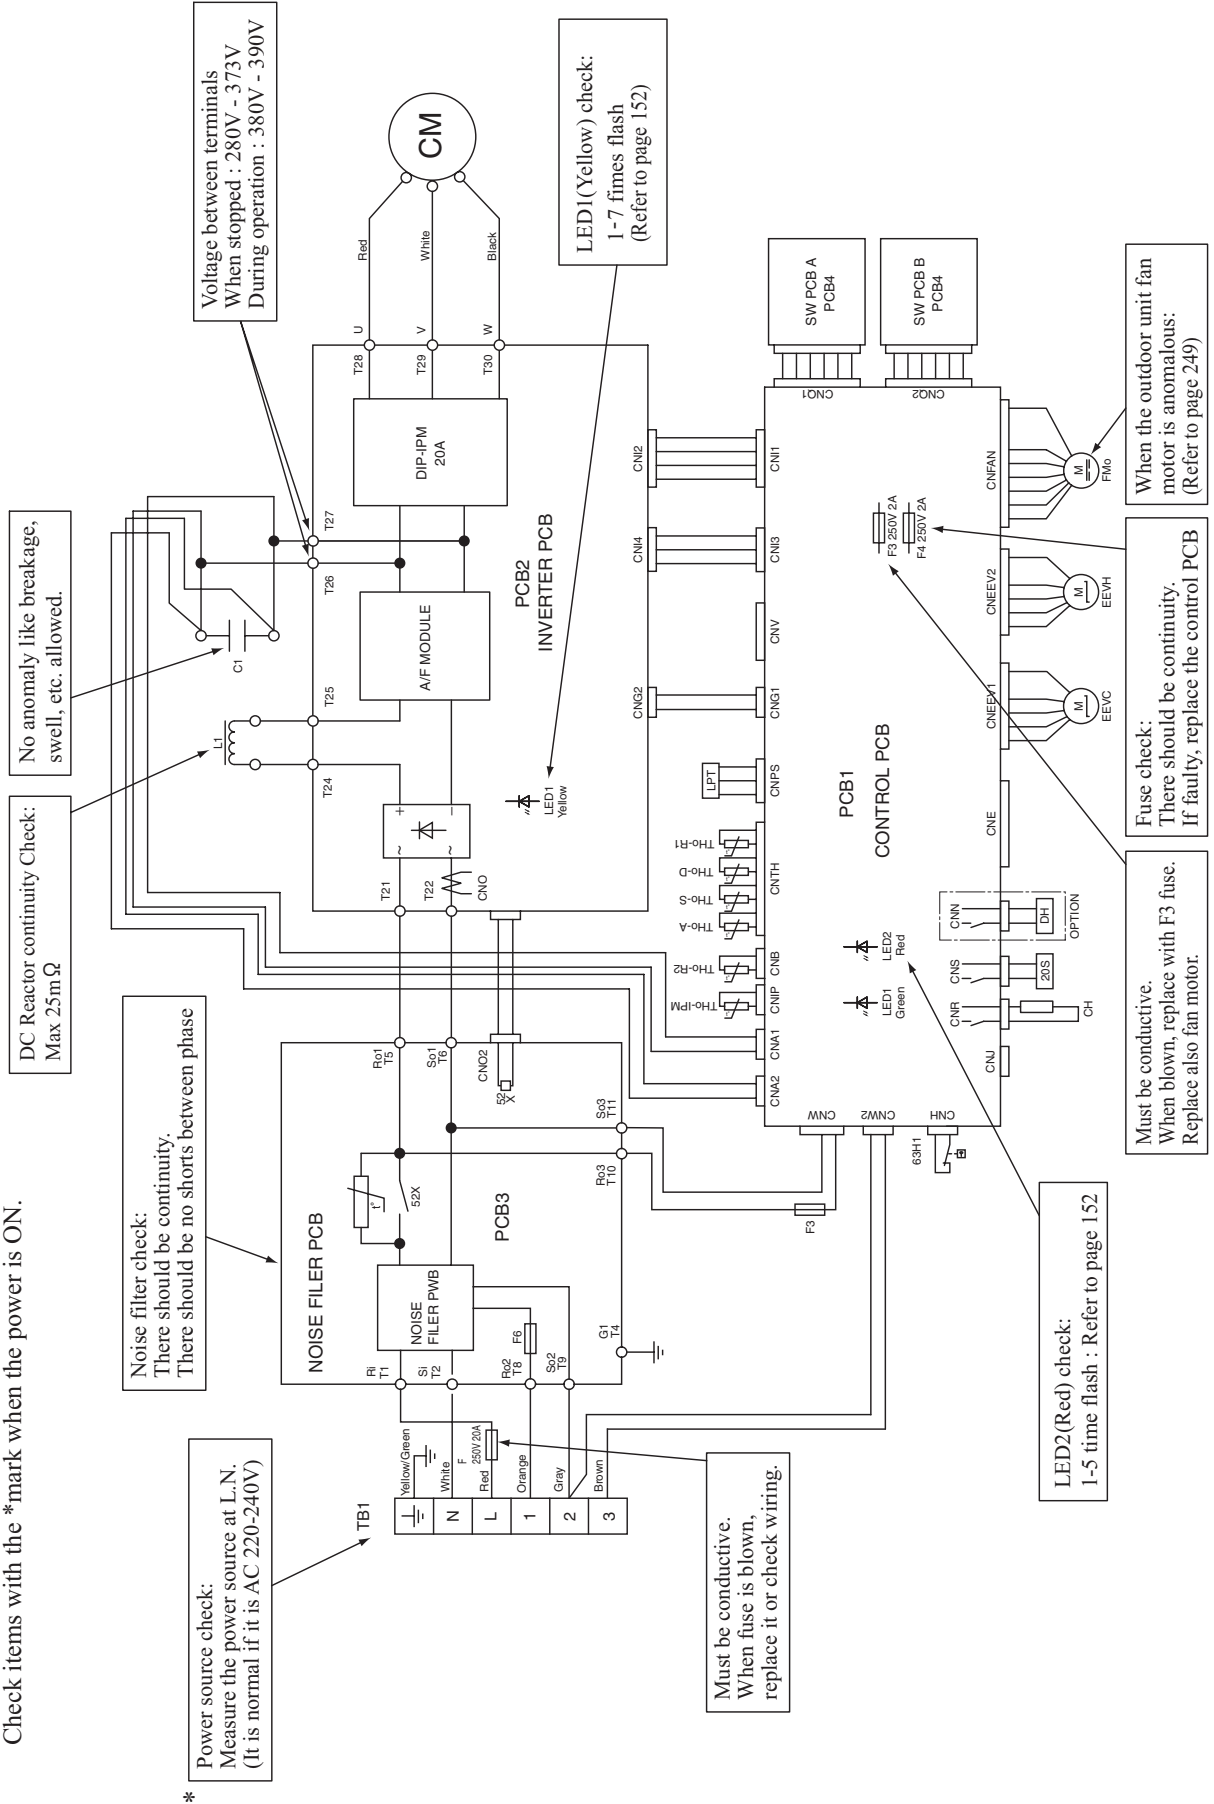

Models FDC100VNX, 125VNX, 140VNX

● Outdoor unit check points

Check items with the *mark when the power is ON.

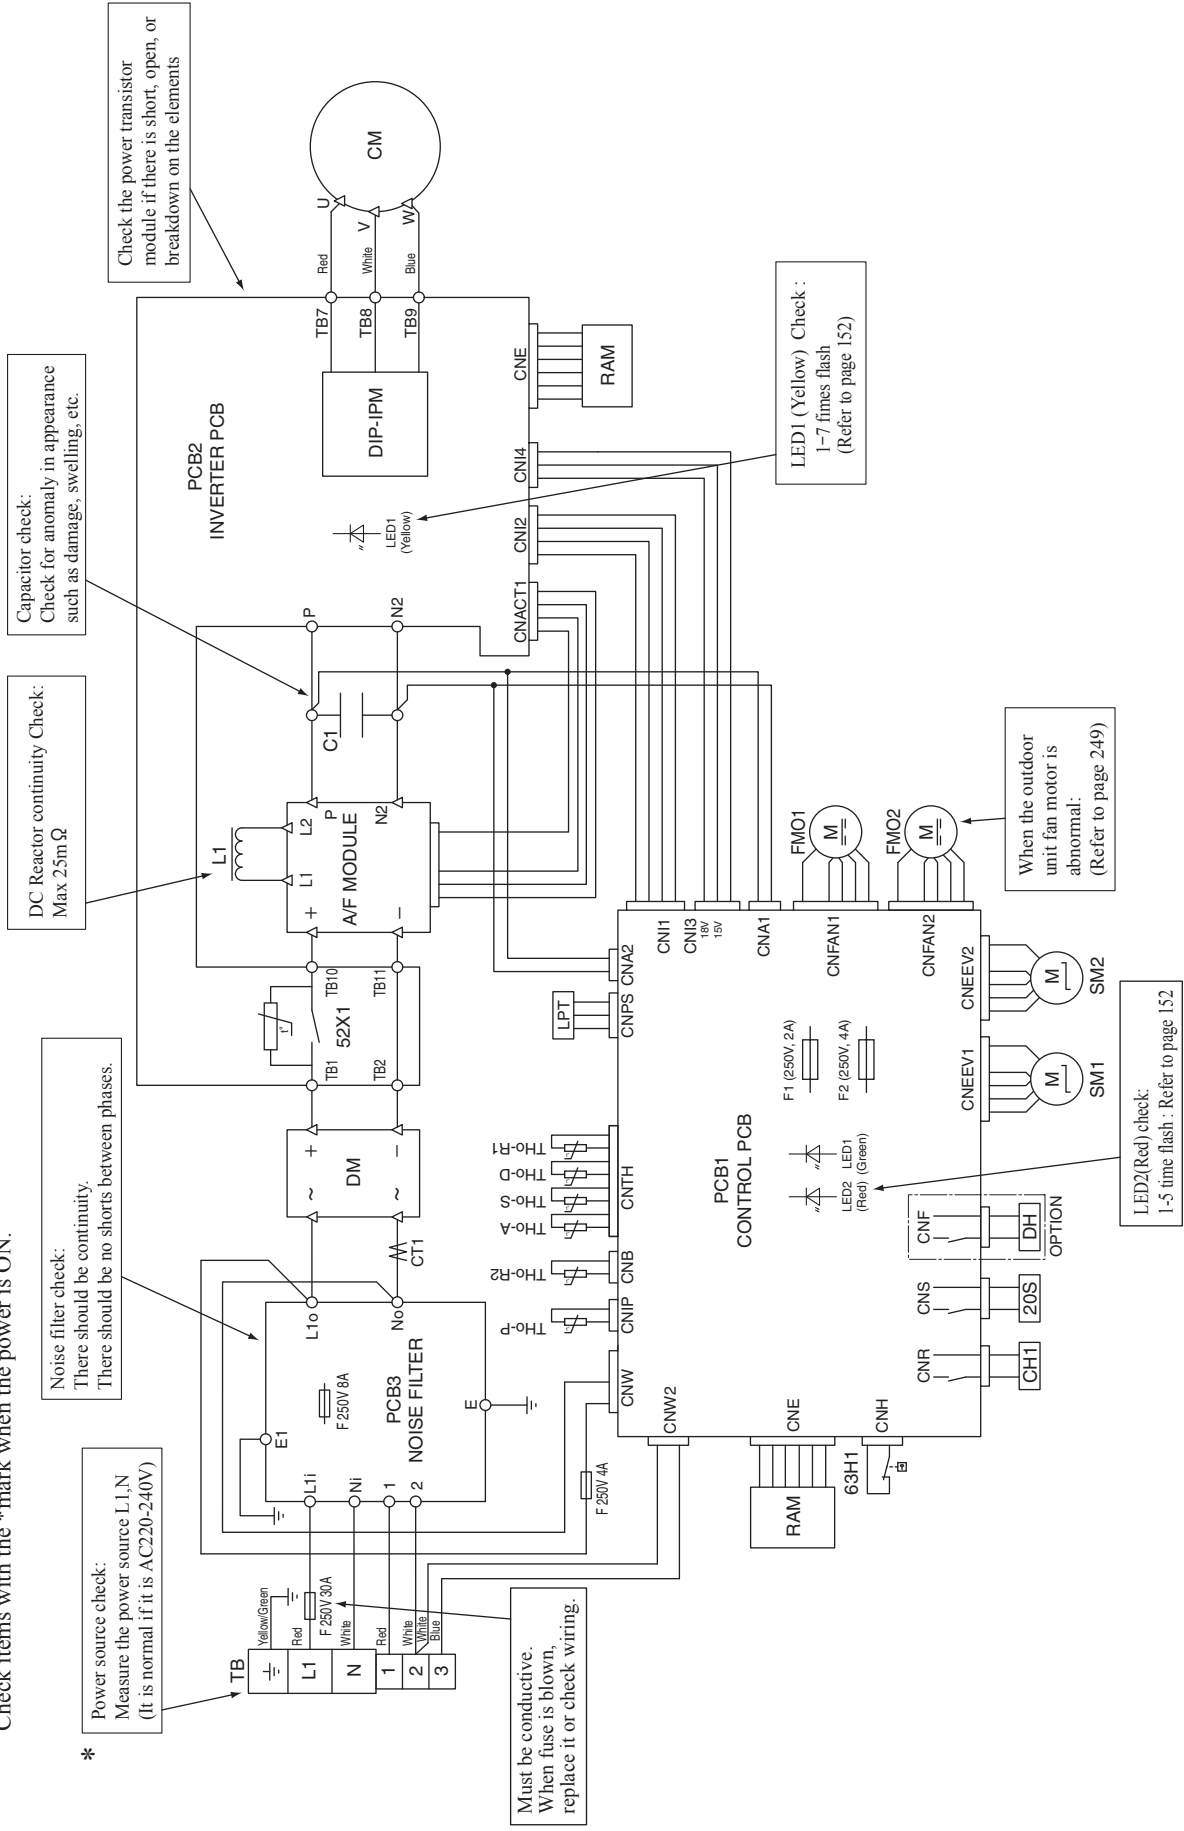

Capacitor check:
Check for anomaly in appearance
such as damage, swelling, etc.

DC Reactor continuity Check:
Max 25mΩ

Noise filter check:
There should be continuity.
There should be no shorts between phases.

* Power source check:
Measure the power source L1LN
(It is normal if it is AC220-240V)

Check the power transistor
module if there is short, open, or
breakdown on the elements

Must be conductive.
When fuse is blown,
replace it or check wiring.

LED1 (Yellow) Check :
1-7 times flash
(Refer to page 152)


When the outdoor
unit fan motor is
abnormal:
(Refer to page 249)

LED2(Red) check:
1-5 time flash : Refer to page 152

Models FDC100VSX, 125VSX, 140VSX

● Outdoor unit check points

Check items with the *mark when the power is ON.

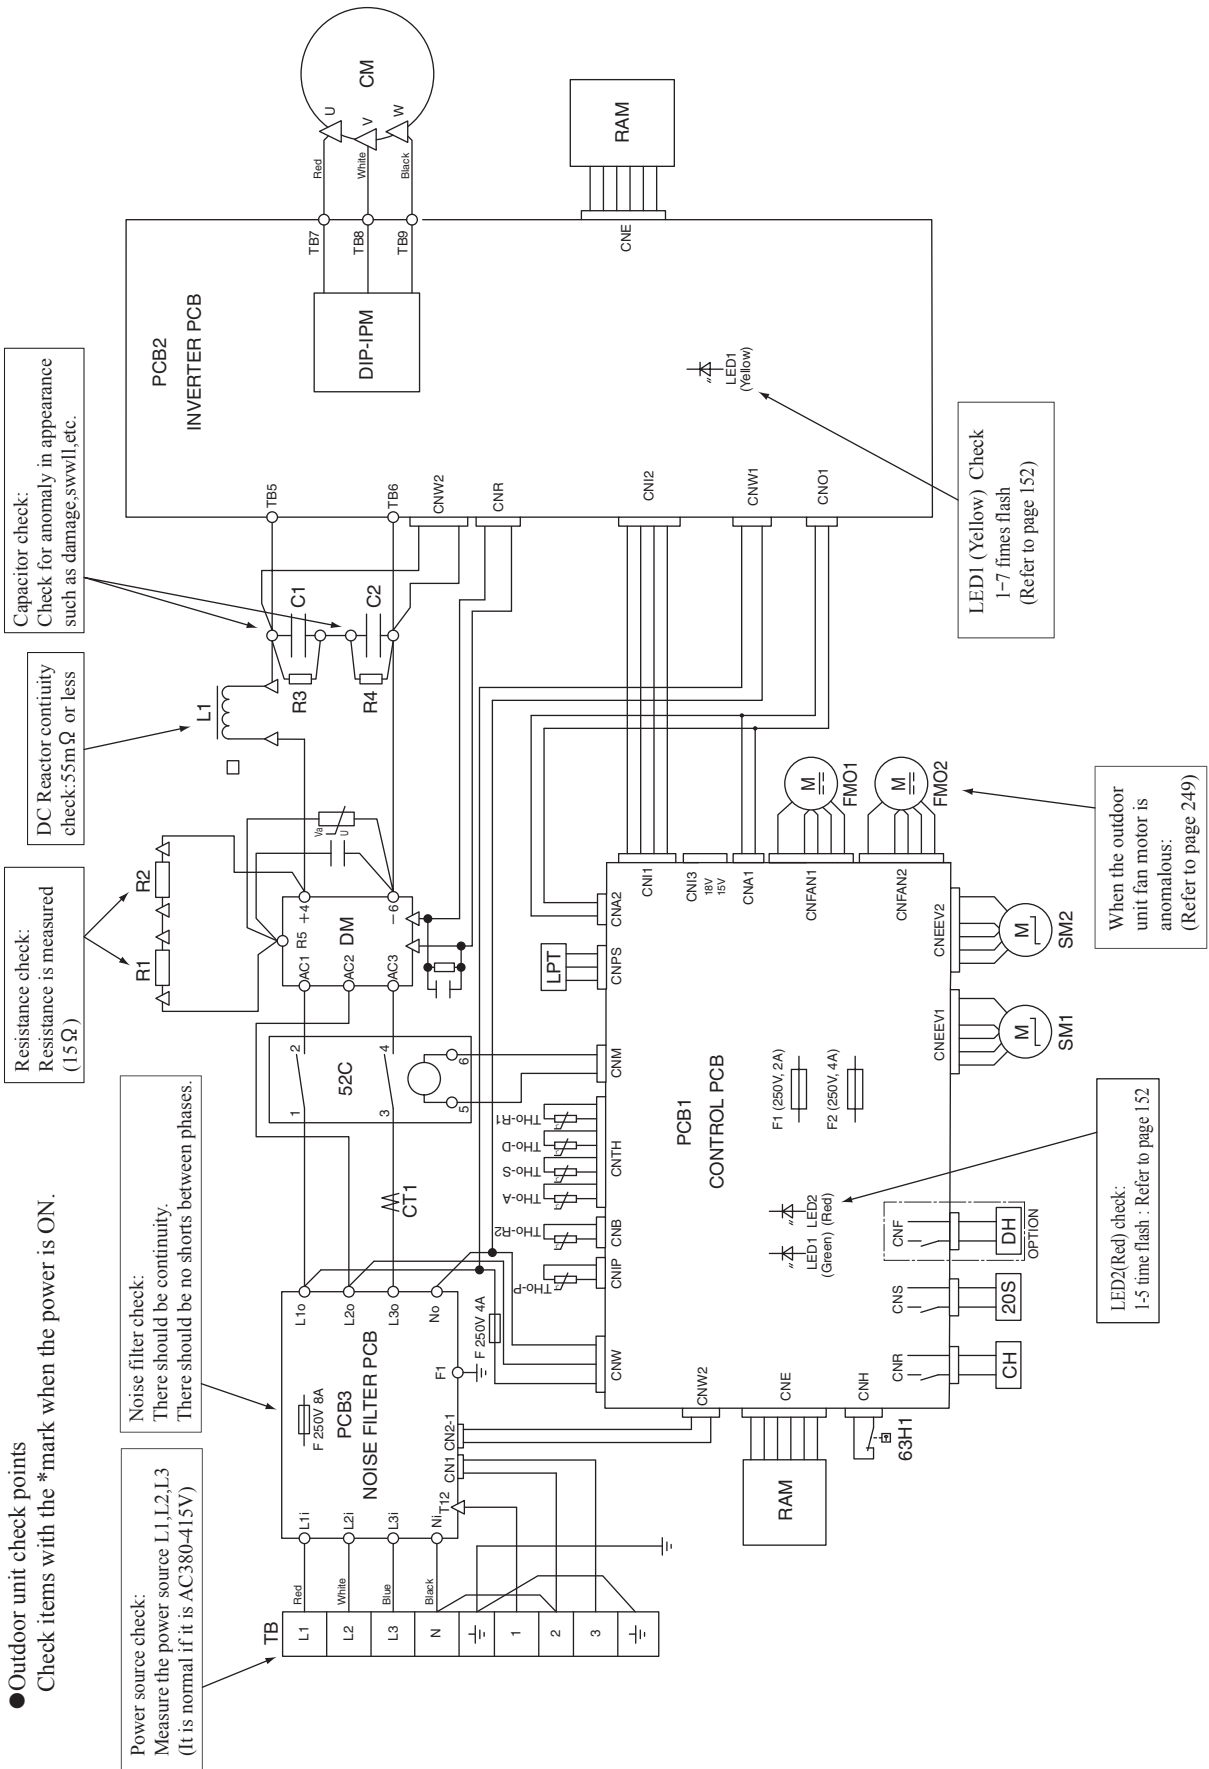

Capacitor check:
Check for anomaly in appearance
such as damage,swell,etc.

DC Reactor continuity
check:55mΩ or less

Resistance check:
Resistance is measured
(1.5 Ω)

Noise filter check:
There should be continuity.
There should be no shorts between phases.

Power source check:
Measure the power source L1,L2,L3
(It is normal if it is AC380-415V)

LED1 (Yellow) Check
1-7 times flash
(Refer to page 152)


When the outdoor
unit fan motor is
anomalous:
(Refer to page 249)

LED2(Red) check:
1-5 time flash : Refer to page 152

Models FDC100VN, 125VN, 140VN

Outdoor unit check points

Check items with the * mark when the power is ON.

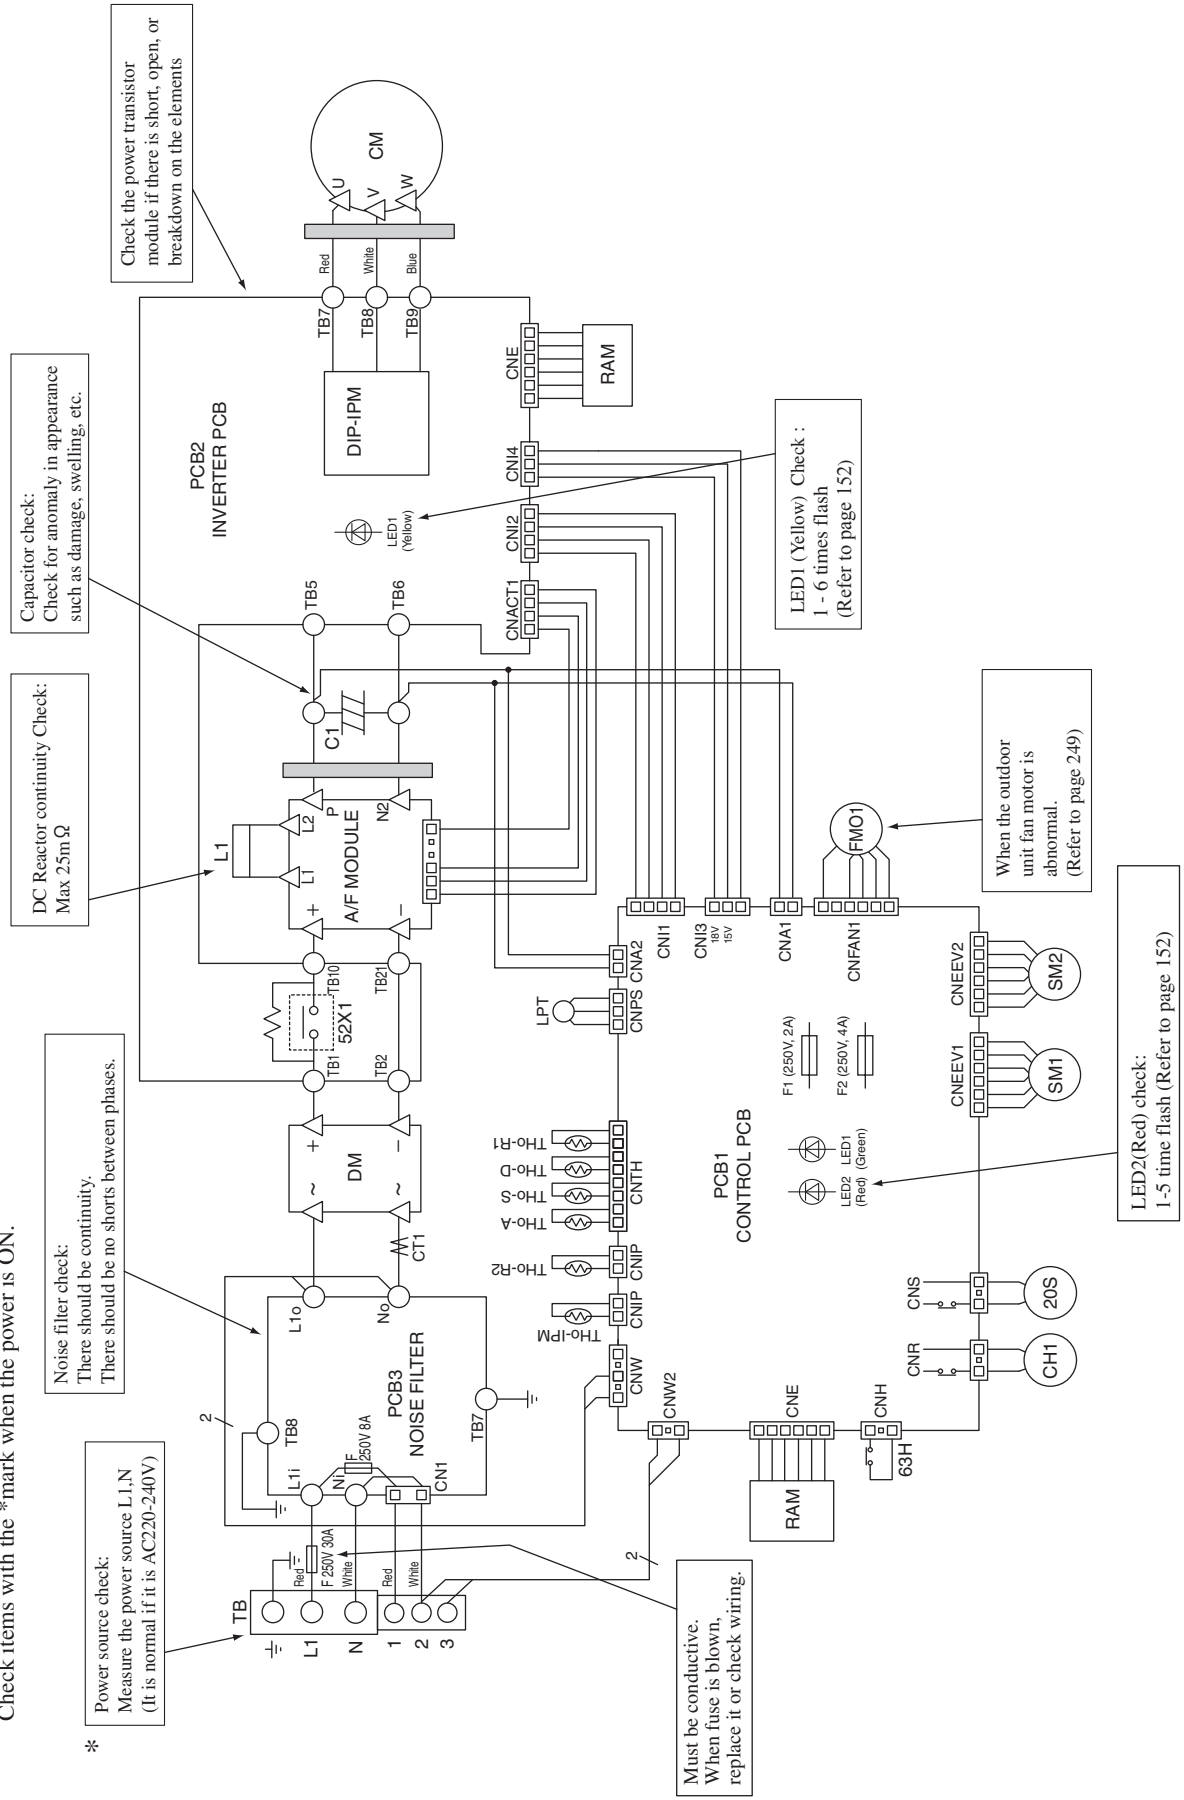

Models FDC100VS, 125VS, 140VS

Outdoor unit check points

Check items with the *mark when the power is ON.


Resistance check:
Resistance is measured (15Ω)

DC Reactor continuity check: 55mΩ or less

Capacitor check:
Check for anomaly in appearance such as damage, swelling, etc.

Power source check:
Measure the power source L1, L2, L3 (It is normal if it is AC380-415V)

Noise filter check:
There should be continuity. There should be no shorts between phases.

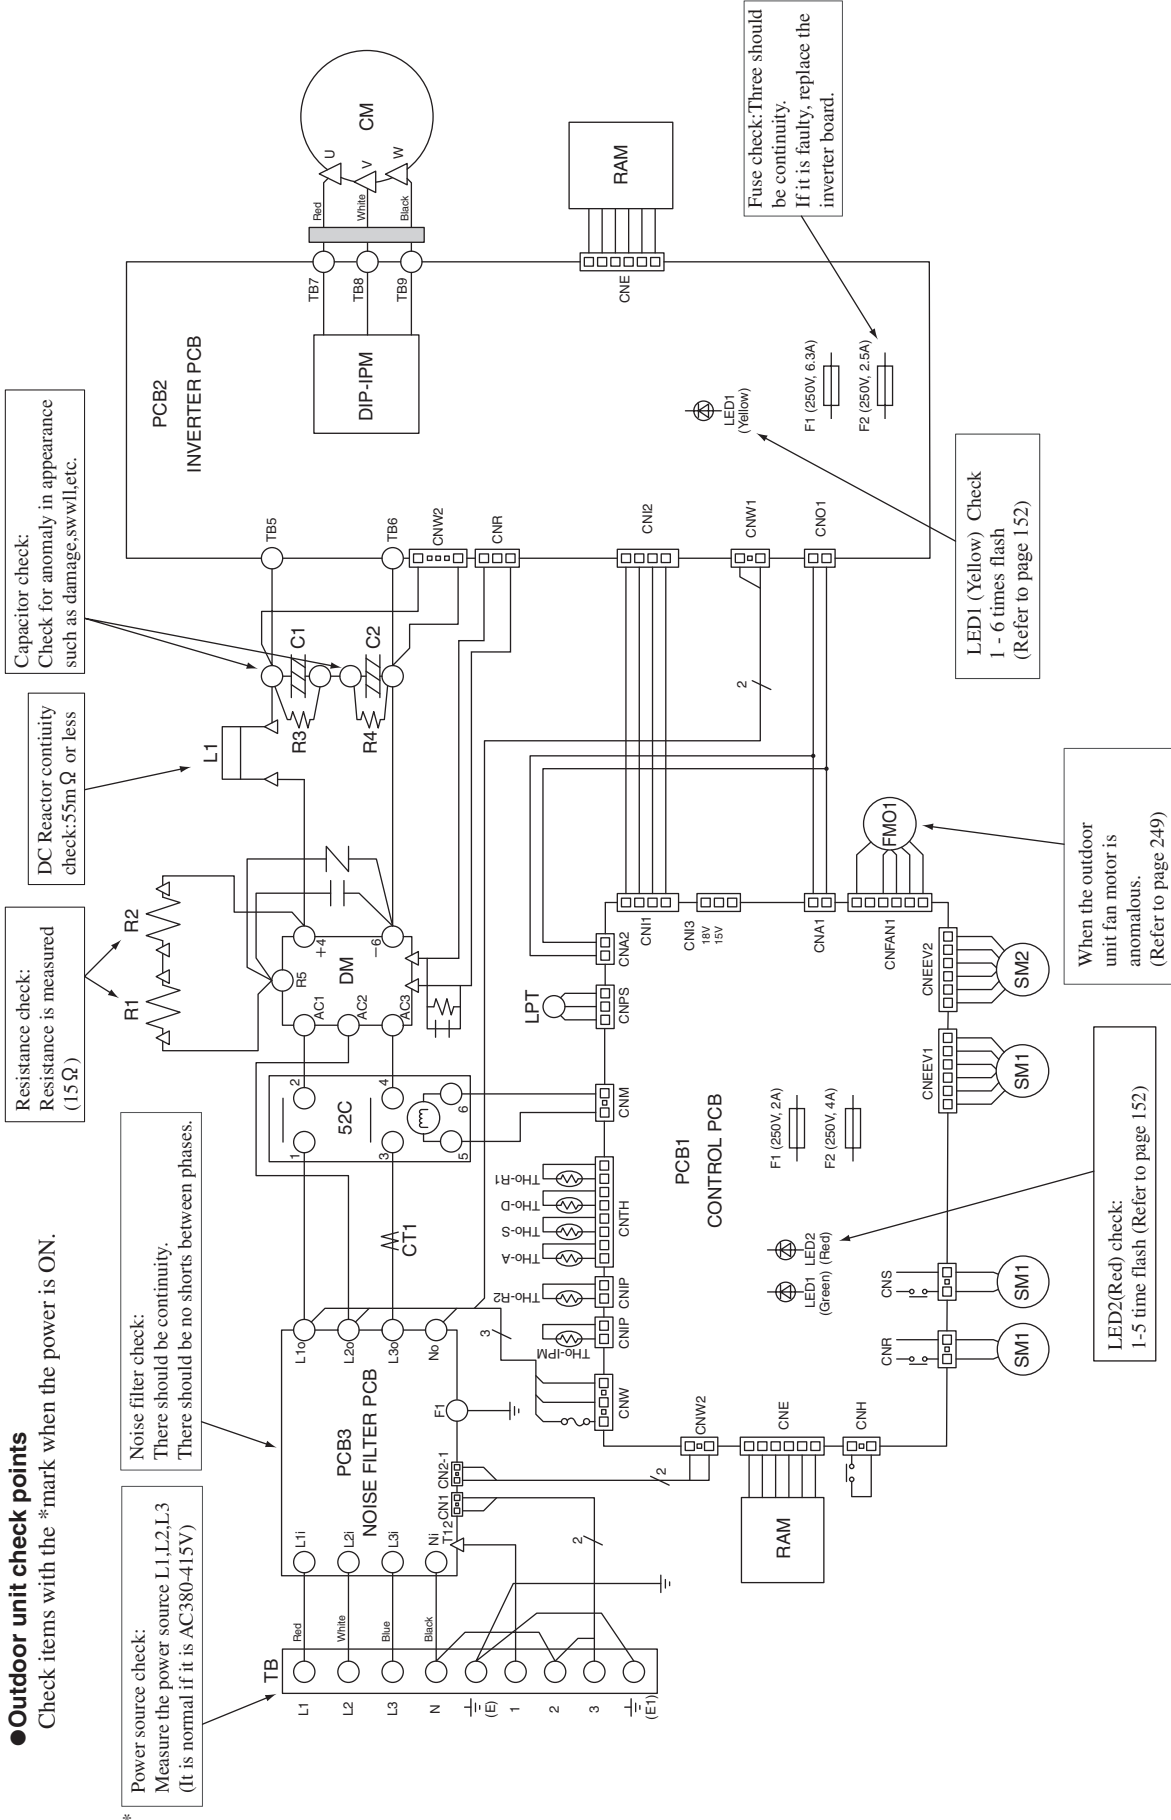

Fuse check: Three should be continuity. If it is faulty, replace the inverter board.

LED1 (Yellow) Check
1 - 6 times flash (Refer to page 152)


When the outdoor unit fan motor is anomalous. (Refer to page 249)

LED2(Red) check:
1-5 time flash (Refer to page 152)

Model FDC200VSA

Outdoor unitcheck points


Check items with the *mark when the power is ON.

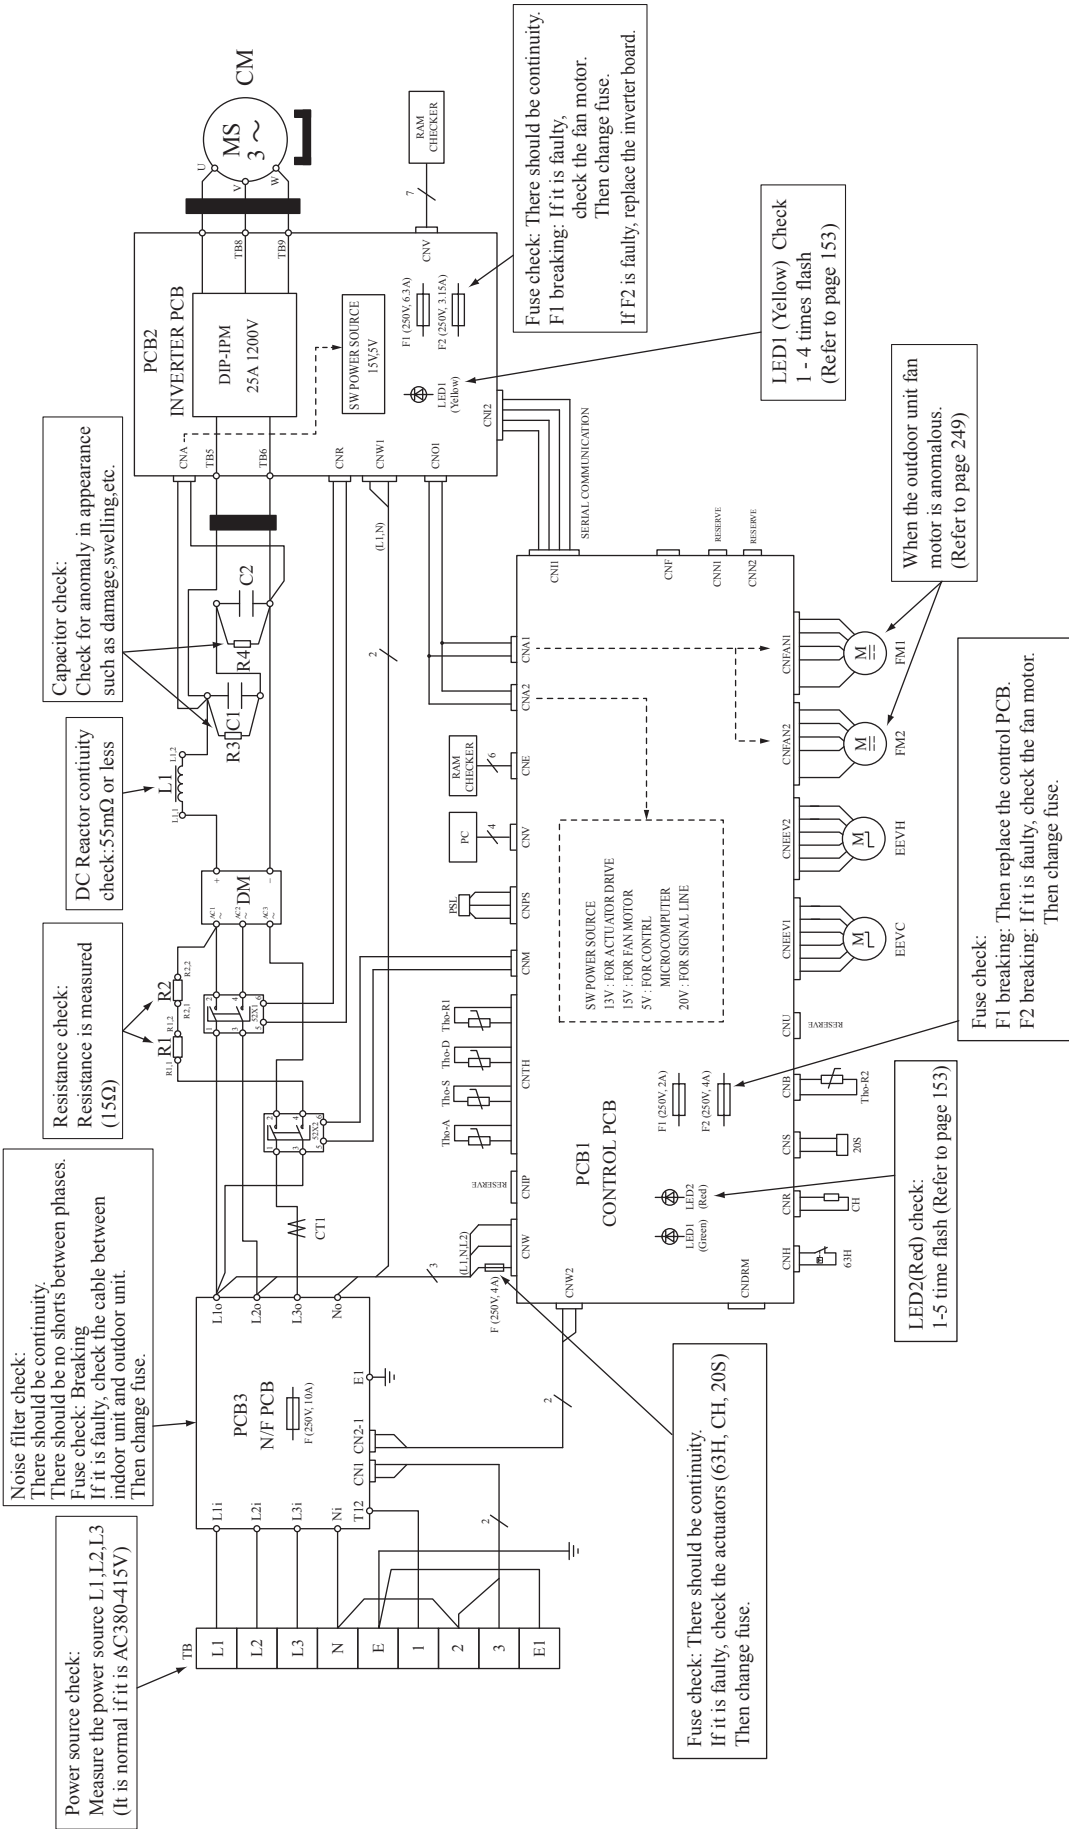

Model FDC250VSA

Outdoor unit check points

Check items with the *mark when the power is ON.

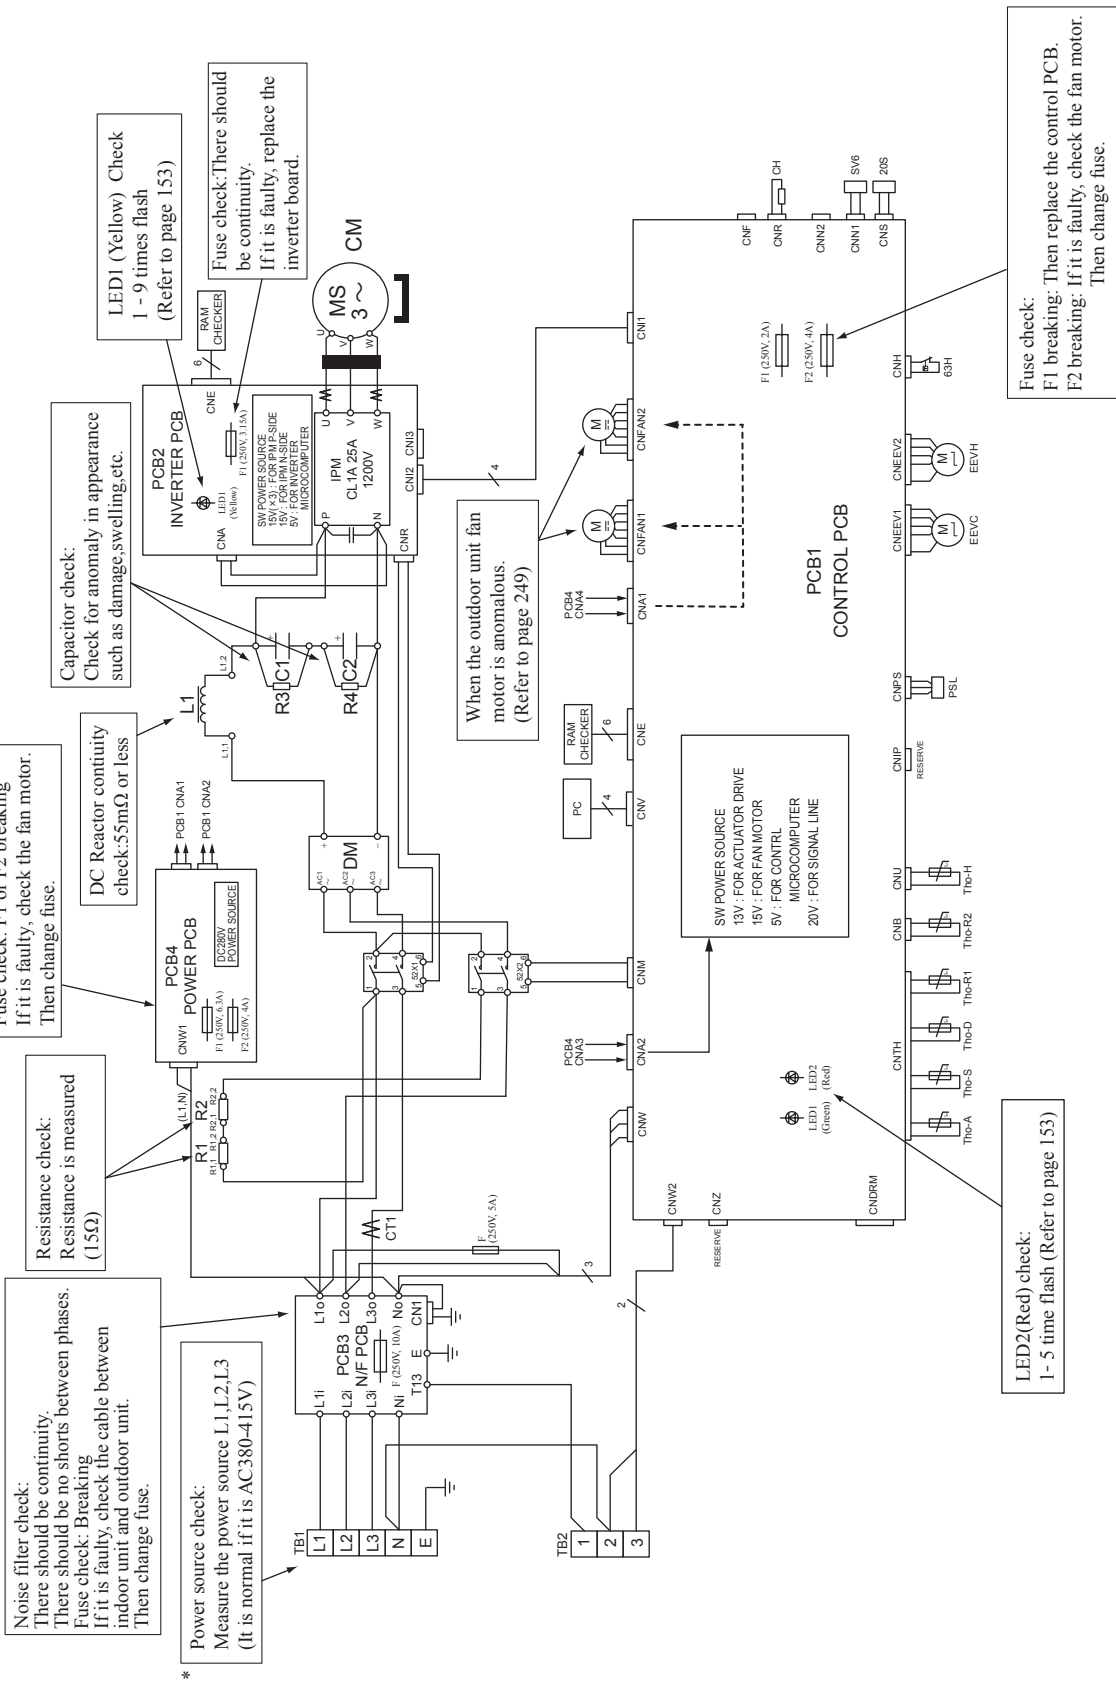


Model FDC71VNP

- Check point of outdoor unit

⚠ CAUTION- HIGH VOLTAGE
 High voltage is produced in the control box. Don't touch electrical parts in the control box for 5 minutes after the unit is stopped.

Color symbol

BK	Black
BR	Brown
OR	Orange
RD	Red
WH	White
Y	Yellow
YG	Yellow Green

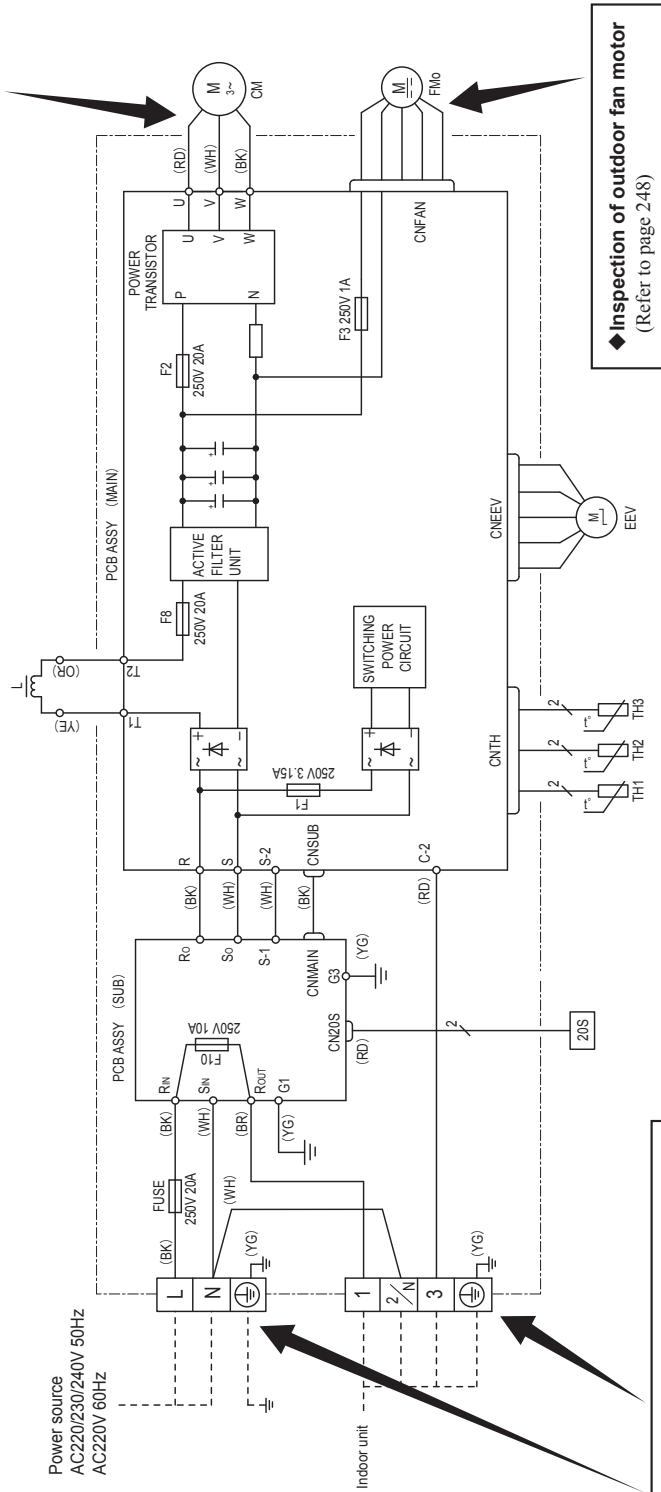

◆ **Inspection power transistor**
 Remove the fasten terminal and test output voltage

◆ **Inspection of outdoor fan motor**
 (Refer to page 248)

◆ **Power source and serial signal inspection**
 ① to ⑧: AC 220/230/240V
 ① to ②(N): AC220/230/240V
 ②(N) to ③: Normal if the voltage oscillates between DC 0 and approx. 20V

Model FDC90VNP


● **Check point of outdoor unit**

⚠ CAUTION- HIGH VOLTAGE

High voltage is produced in the control box. Don't touch electrical parts in the control box for 5 minutes after the unit is stopped.

Color symbol

BK	Black
BR	Brown
OR	Orange
RD	Red
WH	White
Y	Yellow
YG	Yellow Green

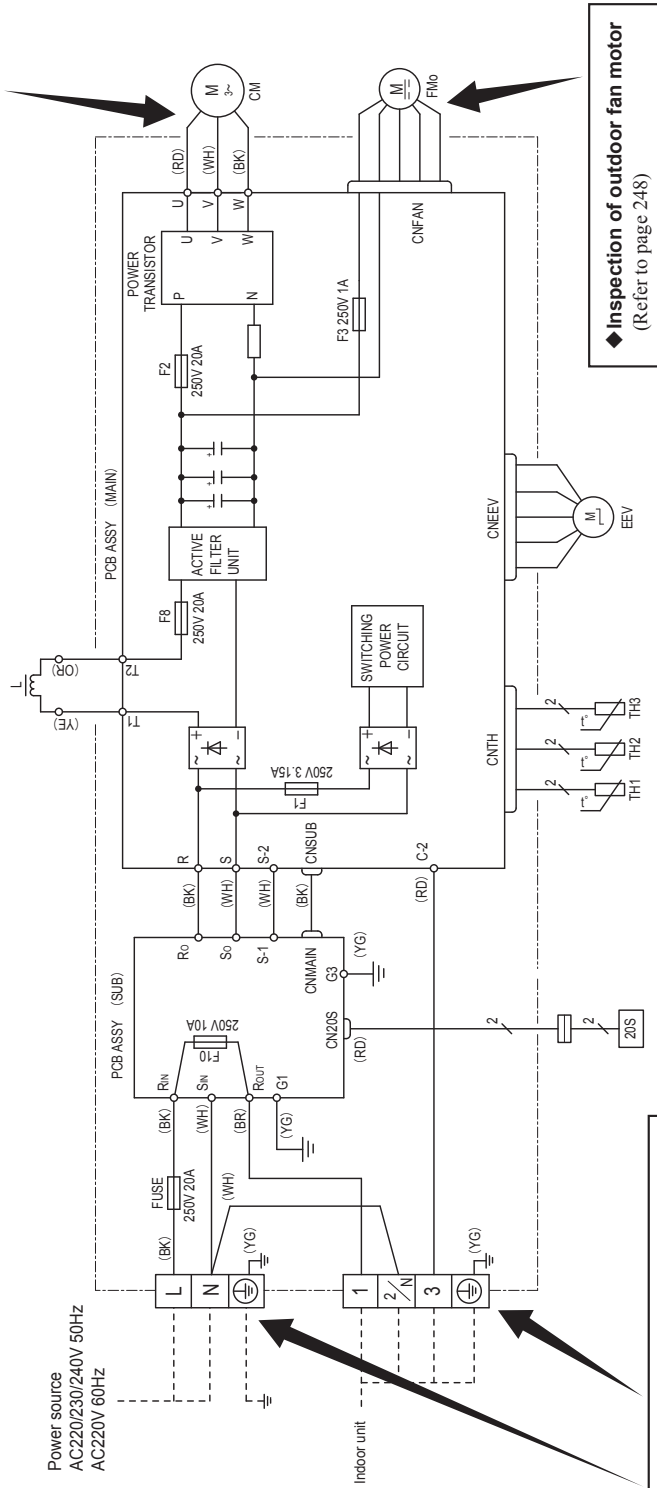

◆ **Inspection power transistor**
Remove the fasten terminal and test output voltage

◆ **Inspection of outdoor fan motor**
(Refer to page 248)

◆ **Power source and serial signal inspection**
 ① to ③: AC 220/230/240V
 ① to ②(N): AC 220/230/240V
 ②(N) to ③: Normal if the voltage oscillates between DC 0 and approx. 20V

Model FDC100VNP

● **Check point of outdoor unit**

⚠ CAUTION – HIGH VOLTAGE

High voltage is produced in the control box. Don't touch electrical parts in the control box for 5 minutes after the unit is stopped.

Color symbol

Mark	Color
BK	Black
BL	Blue
RD	Red
WH	White
YE	Yellow
Y/G	Yellow/Green


◆ **Voltage check in PCB**

The normal range is as follows.

Display	Voltage range
① DC280V	DC230V - DC310V
② DC 20V	DC 18V - DC 22V
③ DC 13V	DC 12V - DC 14V
④ DC 15V	DC 14V - DC 16V
⑤ DC 5V	DC 4V - DC 6V
⑥ DC 2.5V	DC 2.3V - DC 2.5V


◆ **Inspection power transistor**

Remove the fasten terminal and test output voltage.



◆ **Power source and serial signal inspection**

- ① to ② : AC220/230/240V
- ① to ②/N : AC220/230/240V
- ②/N to ③ : Normal if the voltage oscillates between DC 0 and approx. 20V

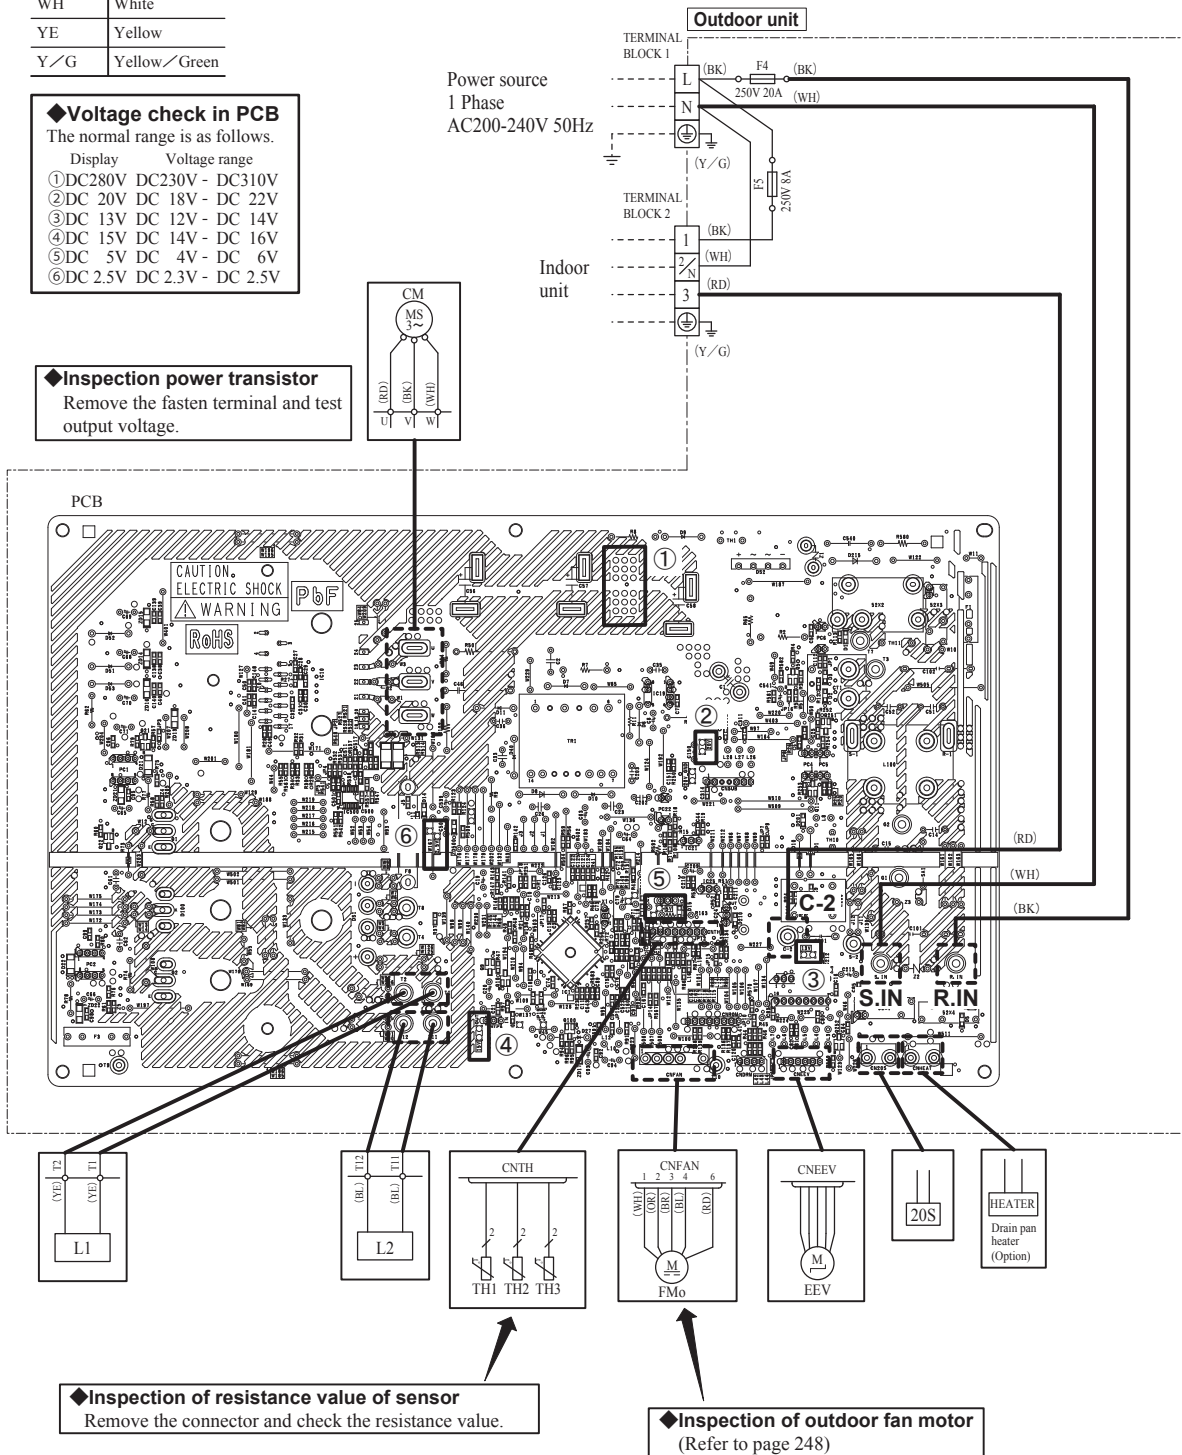

◆ **Inspection of resistance value of sensor**
Remove the connector and check the resistance value.

◆ **Inspection of outdoor fan motor**
(Refer to page 248)

1.11.2 Troubleshooting flow

(1) List of troubles

Models SRC40, 50, 60ZSX-S, FDC71, 100, 125, 140VNX, 100, 125, 140VSX

FDC100, 125, 140VN, 100, 125, 140VS

Remote controller display	Description of trouble	Reference page
None	Operates but does not cool.	195
None	Operates but does not heat.	196
None	Earth leakage breaker activated	197
None	Excessive noise/vibration (1/3)	198
None	Excessive noise/vibration (2/3)	199
None	Excessive noise/vibration (3/3)	200
None	Louver motor failure	201
None	Power source system error (Power source to indoor control PCB)	202
None	Power source system error (Power source to remote control)	203
INSPECT I/U	INSPECT I/U (When 1 or 2 remote controls are connected)	204
INSPECT I/U	INSPECT I/U (Connection of 3 units or more remote controls)	205
🔊 WAIT 🔊	Communication error at initial operation (Models SRC40-60 only)	206-208
🔊 WAIT 🔊	Communication error at initial operation (Models FDC71-140 only)	209-211
None	No display	217
E1	Remote control communication circuit error	218
E5	Communication error during operation	219
E6	Indoor heat exchanger temperature thermistor anomaly	220
E7	Return air temperature thermistor anomaly	221
E8	Heating overload operation	222
E9	Drain trouble	223
E10	Excessive number of connected indoor units (more than 17 units) by controlling with one remote control	224
E11	Address setting error of indoor units	225
E14	Communication error between master and slave indoor units	226
E16	Indoor fan motor anomaly	227
E18	Address setting error of master and slave indoor units	228
E19	Indoor unit operation setting error	229
E20	Indoor fan motor rotation speed anomaly	230
E21	Defective panel switch operation	231
E28	Remote control temperature thermistor anomaly	232
E35	Cooling overload operation (Models SRC40-60 only)	233
E35	Cooling overload operation (Models FDC71-140 only)	234
E36	Discharge pipe temperature error	235
E37	Outdoor heat exchanger temperature thermistor anomaly	236
E38	Outdoor air temperature thermistor anomaly	237
E39	Discharge pipe temperature thermistor anomaly	238
E40	Service valve (gas side) closing operation (Models SRC40-60 only)	239
E40	High pressure error (63H1 activated) (Models FDC71-140 only)	240
E41	Power transistor overheat (Models FDC71-140 only)	241
E42	Current cut	243 • 244
E45	Communication error between inverter PCB and outdoor control PCB (Models FDC71-140 only)	245
E47	Active filter voltage error (Models SRC40-60 only)	246
E47	Inverter PCB A/F module anomaly (Model FDC71 only)	247
E48	Outdoor fan motor anomaly (Models SRC40-60 only)	248
E48	Outdoor fan motor anomaly (Models FDC71-140 only)	249
E49	Low pressure error or low pressure sensor anomaly (Models FDC71-140 only)	250 • 251
E51	Power transistor anomaly (Models SRC40-60 only)	252
E51	Inverter and fan motor anomaly (Models FDC71-140 only)	253
E53	Suction pipe temperature thermistor anomaly (Models FDC71-140 only)	255
E54	Low pressure sensor anomaly (Models FDC71-140 only)	256
E57	Insufficient refrigerant amount or detection of service valve closure (Models SRC40-60 only)	258
E57	Insufficient refrigerant amount or detection of service valve closure (Models FDC71-140 only)	259

E58	Current safe stop (Models SRC40-60 only)	260
E59	Compressor startup failure (Models SRC40-60 only)	261
E59	Compressor startup failure (Models FDC71-140 only)	262 • 263
E60	Compressor rotor lock error (Models SRC40-60 only)	266

Models FDC200, 250VSA

Remote control display	Description of trouble	Reference page
None	Operates but does not cool.	195
None	Operates but does not heat.	196
None	Earth leakage breaker activated	197
None	Excessive noise/vibration (1/3)	198
None	Excessive noise/vibration (2/3)	199
None	Excessive noise/vibration (3/3)	200
None	Louver motor failure	201
None	Power source system error (Power source to indoor control PCB)	202
None	Power source system error (Power source to remote control)	203
INSPECT I/U	INSPECT I/U (When 1 or 2 remote controls are connected)	204
INSPECT I/U	INSPECT I/U (Connection of 3 units or more remote controls)	205
🔊 WAIT 🔊	Communication error at initial operation	212 • 213
None	No display	217
E1	Remote control communication circuit error	218
E5	Communication error during operation	219
E6	Indoor heat exchanger temperature thermistor anomaly	220
E7	Return air temperature thermistor anomaly	221
E8	Heating overload operation	222
E9	Drain trouble	223
E10	Excessive number of connected indoor units (more than 17 units) by controlling with one remote control	224
E11	Address setting error of indoor units	225
E14	Communication error between master and slave indoor units	226
E16	Indoor fan motor anomaly	227
E18	Address setting error of master and slave indoor units	228
E19	Indoor unit operation setting error	229
E20	Indoor fan motor rotation speed anomaly	230
E21	Defective panel switch operation	231
E28	Remote control temperature thermistor anomaly	232
E35	Cooling overload operation	234
E36	Discharge pipe temperature error	235
E37	Outdoor heat exchanger temperature thermistor anomaly	236
E38	Outdoor air temperature thermistor anomaly	237
E39	Discharge pipe temperature thermistor anomaly	238
E40	High pressure error (63H1 activated)	240
E41	Power transistor overheat	242
E42	Current cut	243 • 244
E45	Communication error between inverter PCB and outdoor control PCB	245
E48	Outdoor fan motor anomaly	249
E49	Low pressure error or low pressure sensor anomaly	250 • 251
E51	Inverter or power transistor anomaly	254
E53	Suction pipe temperature thermistor anomaly	255
E54	Low pressure sensor anomaly	256
E55	Compressor under dome temperature thermistor anomaly (Model FDC250 only)	257
E57	Insufficient refrigerant amount or detection of service valve closure	259
E59	Compressor startup failure	264 • 265

Models FDC71, 90, 100VNP

Remote control display	Description of trouble	Reference page
None	Operates but does not cool.	195
None	Operates but does not heat.	196
None	Earth leakage breaker activated	197
None	Excessive noise/vibration (1/3)	198
None	Excessive noise/vibration (2/3)	199
None	Excessive noise/vibration (3/3)	200
None	Louver motor failure	201
None	Power source system error (Power source to indoor control PCB)	202
None	Power source system error (Power source to remote control)	203
INSPECT I/U	INSPECT I/U (When 1 or 2 remote controls are connected)	204
INSPECT I/U	INSPECT I/U (Connection of 3 units or more remote controls)	205
🔊WAIT🔊	Communication error at initial operation	214-216
E1	Remote control communication circuit error	218
E5	Communication error during operation	219
E6	Indoor heat exchanger temperature thermistor anomaly	220
E7	Return air temperature thermistor anomaly	221
E8	Heating overload operation	222
E9	Drain trouble	223
E10	Excessive number of connected indoor units (more than 17 units) by controlling with one remote control	224
E11	Address setting error of indoor units	225
E14	Communication error between master and slave indoor units	226
E16	Indoor fan motor anomaly	227
E18	Address setting error of master and slave indoor units	228
E19	Indoor unit operation check error	229
E20	Indoor fan motor rotation speed anomaly	230
E21	Defective panel switch operation	231
E28	Remote control temperature thermistor anomaly	232
E35	Cooling overload operation	233
E36	Discharge pipe temperature error	235
E37	Outdoor heat exchanger temperature sensor anomaly	236
E38	Outdoor air temperature sensor anomaly	237
E39	Discharge pipe temperature sensor anomaly	238
E40	Service valve (gas side) closing operation (Models FDC71, 90 only)	239
E42	Current cut	243 • 244
E47	Active filter voltage error	246
E48	Outdoor fan motor anomaly	248
E51	Power transistor anomaly	252
E57	Insufficient refrigerant amount or detection of service valve closure	258
E58	Current safe stop	260
E59	Compressor startup failure	261
E60	Compressor rotor lock error	266

(2) Troubleshooting

Error code Remote control: None	LED	Green	Red	Content Operates but does not cool
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models
2. Error detection method
3. Condition of error displayed
4. Presumable cause
<ul style="list-style-type: none"> • Poor compression of compressor • Faulty expansion valve operation

5. Troubleshooting				
<table border="1"> <thead> <tr> <th>Diagnosis</th> <th>Countermeasure</th> </tr> </thead> <tbody> <tr> <td> <p>Check the indoor fan operation. Check the temperature difference between return and supply air.</p> <pre> graph TD Start[Check indoor fan operation and temperature difference] --> D1{Is the temperature difference between return and supply air 10-20°C at cooling?} D1 -- YES --> D2{Does the heat load increase after installation?} D1 -- NO --> D3{Is the compressor operating?} D2 -- YES --> Box1[Mistake in model selection. Calculate heat load once more.] D2 -- NO --> CM1[It is normal. (This unit is designed to start in the soft start mode by detecting the under dome temperature of compressor when it restart after power reset.)] D3 -- NO --> D4{"⌚ WAIT ⌚" message is displayed (for 3 seconds) when performing cooling, defrosting and heating operations from the remote control.} D3 -- YES --> D5{Is the compressor rotation speed low?} D4 -- YES --> CM2[It is necessary to replace to higher capacity one or to install additional unit.] D4 -- NO --> CM3[Compressor may be stopped by the error detection control. For the contents of control, refer to anomalous stop control by controlling compressor rotation speed of microcomputer control functions.] D5 -- NO --> CM4[Inspect the followings. • Minor clogging of filter • Minor clogging of heat exchanger • Minor short-circuit • Minor shortage of refrigerant amount • Poor compression of compressor] D5 -- YES --> Box2[Check which control "Determination control of compressor rotation speed" or "Protective control by controlling compressor rotation speed" is appropriate to this phenomenon.] Box2 --> D6{Are the temperature conditions of room and outdoor air close to the rated conditions? (1)} D6 -- YES --> CM5[Considering appropriate operation control, check suspicious points. Inspect the followings for reference. • Major clogging of filter • Major clogging of heat exchanger • Major short-circuit • Major shortage of refrigerant amount • Compressor protection ON • Indoor fan tap • Valid setting of silent mode] D6 -- NO --> End[The unit is operating normally but is operating under the control for protecting compressor or other respective parts.] </pre> </td> <td> <p>It is normal. (This unit is designed to start in the soft start mode by detecting the under dome temperature of compressor when it restart after power reset.)</p> <p>It is necessary to replace to higher capacity one or to install additional unit.</p> <p>Compressor refrigerant oil protection control at starting is activated. For the contents of control, refer to the compressor start control of the microcomputer control functions.</p> <p>Compressor may be stopped by the error detection control. For the contents of control, refer to anomalous stop control by controlling compressor rotation speed of microcomputer control functions.</p> <p>Inspect the followings.</p> <ul style="list-style-type: none"> • Minor clogging of filter • Minor clogging of heat exchanger • Minor short-circuit • Minor shortage of refrigerant amount • Poor compression of compressor <p>Considering appropriate operation control, check suspicious points. Inspect the followings for reference.</p> <ul style="list-style-type: none"> • Major clogging of filter • Major clogging of heat exchanger • Major short-circuit • Major shortage of refrigerant amount • Compressor protection ON • Indoor fan tap • Valid setting of silent mode </td> </tr> </tbody> </table>	Diagnosis	Countermeasure	<p>Check the indoor fan operation. Check the temperature difference between return and supply air.</p> <pre> graph TD Start[Check indoor fan operation and temperature difference] --> D1{Is the temperature difference between return and supply air 10-20°C at cooling?} D1 -- YES --> D2{Does the heat load increase after installation?} D1 -- NO --> D3{Is the compressor operating?} D2 -- YES --> Box1[Mistake in model selection. Calculate heat load once more.] D2 -- NO --> CM1[It is normal. (This unit is designed to start in the soft start mode by detecting the under dome temperature of compressor when it restart after power reset.)] D3 -- NO --> D4{"⌚ WAIT ⌚" message is displayed (for 3 seconds) when performing cooling, defrosting and heating operations from the remote control.} D3 -- YES --> D5{Is the compressor rotation speed low?} D4 -- YES --> CM2[It is necessary to replace to higher capacity one or to install additional unit.] D4 -- NO --> CM3[Compressor may be stopped by the error detection control. For the contents of control, refer to anomalous stop control by controlling compressor rotation speed of microcomputer control functions.] D5 -- NO --> CM4[Inspect the followings. • Minor clogging of filter • Minor clogging of heat exchanger • Minor short-circuit • Minor shortage of refrigerant amount • Poor compression of compressor] D5 -- YES --> Box2[Check which control "Determination control of compressor rotation speed" or "Protective control by controlling compressor rotation speed" is appropriate to this phenomenon.] Box2 --> D6{Are the temperature conditions of room and outdoor air close to the rated conditions? (1)} D6 -- YES --> CM5[Considering appropriate operation control, check suspicious points. Inspect the followings for reference. • Major clogging of filter • Major clogging of heat exchanger • Major short-circuit • Major shortage of refrigerant amount • Compressor protection ON • Indoor fan tap • Valid setting of silent mode] D6 -- NO --> End[The unit is operating normally but is operating under the control for protecting compressor or other respective parts.] </pre>	<p>It is normal. (This unit is designed to start in the soft start mode by detecting the under dome temperature of compressor when it restart after power reset.)</p> <p>It is necessary to replace to higher capacity one or to install additional unit.</p> <p>Compressor refrigerant oil protection control at starting is activated. For the contents of control, refer to the compressor start control of the microcomputer control functions.</p> <p>Compressor may be stopped by the error detection control. For the contents of control, refer to anomalous stop control by controlling compressor rotation speed of microcomputer control functions.</p> <p>Inspect the followings.</p> <ul style="list-style-type: none"> • Minor clogging of filter • Minor clogging of heat exchanger • Minor short-circuit • Minor shortage of refrigerant amount • Poor compression of compressor <p>Considering appropriate operation control, check suspicious points. Inspect the followings for reference.</p> <ul style="list-style-type: none"> • Major clogging of filter • Major clogging of heat exchanger • Major short-circuit • Major shortage of refrigerant amount • Compressor protection ON • Indoor fan tap • Valid setting of silent mode
Diagnosis	Countermeasure			
<p>Check the indoor fan operation. Check the temperature difference between return and supply air.</p> <pre> graph TD Start[Check indoor fan operation and temperature difference] --> D1{Is the temperature difference between return and supply air 10-20°C at cooling?} D1 -- YES --> D2{Does the heat load increase after installation?} D1 -- NO --> D3{Is the compressor operating?} D2 -- YES --> Box1[Mistake in model selection. Calculate heat load once more.] D2 -- NO --> CM1[It is normal. (This unit is designed to start in the soft start mode by detecting the under dome temperature of compressor when it restart after power reset.)] D3 -- NO --> D4{"⌚ WAIT ⌚" message is displayed (for 3 seconds) when performing cooling, defrosting and heating operations from the remote control.} D3 -- YES --> D5{Is the compressor rotation speed low?} D4 -- YES --> CM2[It is necessary to replace to higher capacity one or to install additional unit.] D4 -- NO --> CM3[Compressor may be stopped by the error detection control. For the contents of control, refer to anomalous stop control by controlling compressor rotation speed of microcomputer control functions.] D5 -- NO --> CM4[Inspect the followings. • Minor clogging of filter • Minor clogging of heat exchanger • Minor short-circuit • Minor shortage of refrigerant amount • Poor compression of compressor] D5 -- YES --> Box2[Check which control "Determination control of compressor rotation speed" or "Protective control by controlling compressor rotation speed" is appropriate to this phenomenon.] Box2 --> D6{Are the temperature conditions of room and outdoor air close to the rated conditions? (1)} D6 -- YES --> CM5[Considering appropriate operation control, check suspicious points. Inspect the followings for reference. • Major clogging of filter • Major clogging of heat exchanger • Major short-circuit • Major shortage of refrigerant amount • Compressor protection ON • Indoor fan tap • Valid setting of silent mode] D6 -- NO --> End[The unit is operating normally but is operating under the control for protecting compressor or other respective parts.] </pre>	<p>It is normal. (This unit is designed to start in the soft start mode by detecting the under dome temperature of compressor when it restart after power reset.)</p> <p>It is necessary to replace to higher capacity one or to install additional unit.</p> <p>Compressor refrigerant oil protection control at starting is activated. For the contents of control, refer to the compressor start control of the microcomputer control functions.</p> <p>Compressor may be stopped by the error detection control. For the contents of control, refer to anomalous stop control by controlling compressor rotation speed of microcomputer control functions.</p> <p>Inspect the followings.</p> <ul style="list-style-type: none"> • Minor clogging of filter • Minor clogging of heat exchanger • Minor short-circuit • Minor shortage of refrigerant amount • Poor compression of compressor <p>Considering appropriate operation control, check suspicious points. Inspect the followings for reference.</p> <ul style="list-style-type: none"> • Major clogging of filter • Major clogging of heat exchanger • Major short-circuit • Major shortage of refrigerant amount • Compressor protection ON • Indoor fan tap • Valid setting of silent mode 			

Note:

Error code Remote control: None	LED	Green	Red	Content Operates but does not heat
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models
2. Error detection method
3. Condition of error displayed
4. Presumable cause
<ul style="list-style-type: none"> Faulty 4-way valve operation Poor compression of compressor Faulty expansion valve operation

5. Troubleshooting				
<table border="1"> <thead> <tr> <th>Diagnosis</th> <th>Countermeasure</th> </tr> </thead> <tbody> <tr> <td> <p>Check the indoor fan operation. Check the temperature difference between return and supply air.</p> <p>Is the temperature difference between return and supply air 10-30°C at heating?</p> <p>NO</p> <p>Is the compressor operating?</p> <p>NO</p> <p>“WAIT” message is displayed (for 3 seconds) when performing cooling, defrosting and heating operations from the remote control.</p> <p>NO</p> <p>Is the compressor rotation speed low?</p> <p>NO</p> <p>Check which control “Determination control of compressor rotation speed” or “Protective control by controlling compressor rotation speed” is appropriate to this phenomenon.</p> <p>Are the (1) temperature conditions of room and outdoor air close to the rated conditions?</p> <p>NO</p> <p>The unit is operating normally but is operating under the control for protecting compressor or other respective parts.</p> </td> <td> <p>It is normal. (This unit is designed to start in the soft start mode by detecting the under dome temperature of compressor when it restart after power reset.)</p> <p>It is necessary to replace to higher capacity one or to install additional unit.</p> <p>Compressor refrigerant oil protection control at starting is activated. For the contents of control, refer to the compressor start control of the microcomputer control functions.</p> <p>Compressor may be stopped by the error detection control. For the contents of control, refer to anomalous stop control by controlling compressor rotation speed of microcomputer control functions.</p> <p>Inspect the followings.</p> <ul style="list-style-type: none"> Minor clogging of filter Minor clogging of heat exchanger Minor short-circuit Minor shortage of refrigerant amount Poor compression of compressor <p>Considering appropriate operation control, check suspicious points. Inspect the followings for reference.</p> <ul style="list-style-type: none"> Major clogging of filter Major clogging of heat exchanger Major short-circuit Major shortage of refrigerant amount Compressor protection ON Indoor fan tap Valid setting of silent mode </td> </tr> </tbody> </table>	Diagnosis	Countermeasure	<p>Check the indoor fan operation. Check the temperature difference between return and supply air.</p> <p>Is the temperature difference between return and supply air 10-30°C at heating?</p> <p>NO</p> <p>Is the compressor operating?</p> <p>NO</p> <p>“WAIT” message is displayed (for 3 seconds) when performing cooling, defrosting and heating operations from the remote control.</p> <p>NO</p> <p>Is the compressor rotation speed low?</p> <p>NO</p> <p>Check which control “Determination control of compressor rotation speed” or “Protective control by controlling compressor rotation speed” is appropriate to this phenomenon.</p> <p>Are the (1) temperature conditions of room and outdoor air close to the rated conditions?</p> <p>NO</p> <p>The unit is operating normally but is operating under the control for protecting compressor or other respective parts.</p>	<p>It is normal. (This unit is designed to start in the soft start mode by detecting the under dome temperature of compressor when it restart after power reset.)</p> <p>It is necessary to replace to higher capacity one or to install additional unit.</p> <p>Compressor refrigerant oil protection control at starting is activated. For the contents of control, refer to the compressor start control of the microcomputer control functions.</p> <p>Compressor may be stopped by the error detection control. For the contents of control, refer to anomalous stop control by controlling compressor rotation speed of microcomputer control functions.</p> <p>Inspect the followings.</p> <ul style="list-style-type: none"> Minor clogging of filter Minor clogging of heat exchanger Minor short-circuit Minor shortage of refrigerant amount Poor compression of compressor <p>Considering appropriate operation control, check suspicious points. Inspect the followings for reference.</p> <ul style="list-style-type: none"> Major clogging of filter Major clogging of heat exchanger Major short-circuit Major shortage of refrigerant amount Compressor protection ON Indoor fan tap Valid setting of silent mode
Diagnosis	Countermeasure			
<p>Check the indoor fan operation. Check the temperature difference between return and supply air.</p> <p>Is the temperature difference between return and supply air 10-30°C at heating?</p> <p>NO</p> <p>Is the compressor operating?</p> <p>NO</p> <p>“WAIT” message is displayed (for 3 seconds) when performing cooling, defrosting and heating operations from the remote control.</p> <p>NO</p> <p>Is the compressor rotation speed low?</p> <p>NO</p> <p>Check which control “Determination control of compressor rotation speed” or “Protective control by controlling compressor rotation speed” is appropriate to this phenomenon.</p> <p>Are the (1) temperature conditions of room and outdoor air close to the rated conditions?</p> <p>NO</p> <p>The unit is operating normally but is operating under the control for protecting compressor or other respective parts.</p>	<p>It is normal. (This unit is designed to start in the soft start mode by detecting the under dome temperature of compressor when it restart after power reset.)</p> <p>It is necessary to replace to higher capacity one or to install additional unit.</p> <p>Compressor refrigerant oil protection control at starting is activated. For the contents of control, refer to the compressor start control of the microcomputer control functions.</p> <p>Compressor may be stopped by the error detection control. For the contents of control, refer to anomalous stop control by controlling compressor rotation speed of microcomputer control functions.</p> <p>Inspect the followings.</p> <ul style="list-style-type: none"> Minor clogging of filter Minor clogging of heat exchanger Minor short-circuit Minor shortage of refrigerant amount Poor compression of compressor <p>Considering appropriate operation control, check suspicious points. Inspect the followings for reference.</p> <ul style="list-style-type: none"> Major clogging of filter Major clogging of heat exchanger Major short-circuit Major shortage of refrigerant amount Compressor protection ON Indoor fan tap Valid setting of silent mode 			

Note:

Error code Remote control: None	LED	Green	Red	Content Earth leakage breaker activated
	Indoor	Stays OFF	Stays OFF	
	Outdoor	Stays OFF	Stays OFF	

<p>1. Applicable model</p> <p>All models</p>	<p>5. Troubleshooting</p> <table border="1" style="width: 100%;"> <thead> <tr> <th style="width: 50%;">Diagnosis</th> <th style="width: 50%;">Countermeasure</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;"> <pre> graph TD D1{Are OK the insulation resistance and coil resistance of compressor?} D2{Is insulation of respective harnesses OK? Is any harness bitten between pannel and casing or etc?} P1[Check the outdoor unit grounding wire/earth leakage breaker.] D1 -- NO --> C1[Replace compressor.*] D1 -- YES --> D2 D2 -- NO --> C2[Secure insulation resistance.] D2 -- YES --> P1 </pre> </td> <td style="vertical-align: top;"> <p>Replace compressor.*</p> <p>Secure insulation resistance.</p> </td> </tr> <tr> <td colspan="2" style="vertical-align: top;"> <p>3. Condition of error displayed</p> </td> </tr> <tr> <td colspan="2" style="vertical-align: top;"> <p>4. Presumable cause</p> <ul style="list-style-type: none"> • Defective compressor • Noise </td> </tr> </tbody> </table>		Diagnosis	Countermeasure	<pre> graph TD D1{Are OK the insulation resistance and coil resistance of compressor?} D2{Is insulation of respective harnesses OK? Is any harness bitten between pannel and casing or etc?} P1[Check the outdoor unit grounding wire/earth leakage breaker.] D1 -- NO --> C1[Replace compressor.*] D1 -- YES --> D2 D2 -- NO --> C2[Secure insulation resistance.] D2 -- YES --> P1 </pre>	<p>Replace compressor.*</p> <p>Secure insulation resistance.</p>	<p>3. Condition of error displayed</p>		<p>4. Presumable cause</p> <ul style="list-style-type: none"> • Defective compressor • Noise 	
Diagnosis	Countermeasure									
<pre> graph TD D1{Are OK the insulation resistance and coil resistance of compressor?} D2{Is insulation of respective harnesses OK? Is any harness bitten between pannel and casing or etc?} P1[Check the outdoor unit grounding wire/earth leakage breaker.] D1 -- NO --> C1[Replace compressor.*] D1 -- YES --> D2 D2 -- NO --> C2[Secure insulation resistance.] D2 -- YES --> P1 </pre>	<p>Replace compressor.*</p> <p>Secure insulation resistance.</p>									
<p>3. Condition of error displayed</p>										
<p>4. Presumable cause</p> <ul style="list-style-type: none"> • Defective compressor • Noise 										

Check of the outdoor unit grounding wire/earth leakage breaker

- ① Run an independent grounding wire from the grounding screw of outdoor unit to the grounding terminal on the distribution panel. (Do not connect to another grounding wire.)
- ② In order to prevent malfunction of the earth leakage breaker itself, confirm that it is conformed to higher harmonic regulation.

* Insulation resistance of compressor

- Immediately after installation or when the unit has been left for long time without power source, the insulation resistance may drop to a few MΩ because of refrigerant migrated in the compressor.

When the earth breaker is activated at lower insulation resistance, check the following points.

- ① 6 hours after power ON, check if the insulation resistance recovers to normal. (FDC71-250 only)
When power ON, crankcase heater heat up compressor and evaporate the refrigerant migrated in the compressor.
- ② Check if the earth leakage breaker is conformed to higher harmonic regulation or not.
Since the unit is equipped with inverter, it is necessary to use components conformed to higher harmonic regulation in order to prevent malfunction of earth leakage breaker.

Note:


Error code Remote control: None	LED	Green	Red	Content Excessive noise/vibration (1/3)
	Indoor	-	-	
	Outdoor	-	-	

1. Applicable model
All models

2. Error detection method

3. Condition of error displayed

- 4. Presumable cause**
- ① Improper installation work
 - Improper anti-vibration work at installation
 - Insufficient strength of mounting face
 - ② Defective product
 - Before/after shipping from factory
 - ③ Improper adjustment during commissioning
 - Excess/shortage of refrigerant, etc.

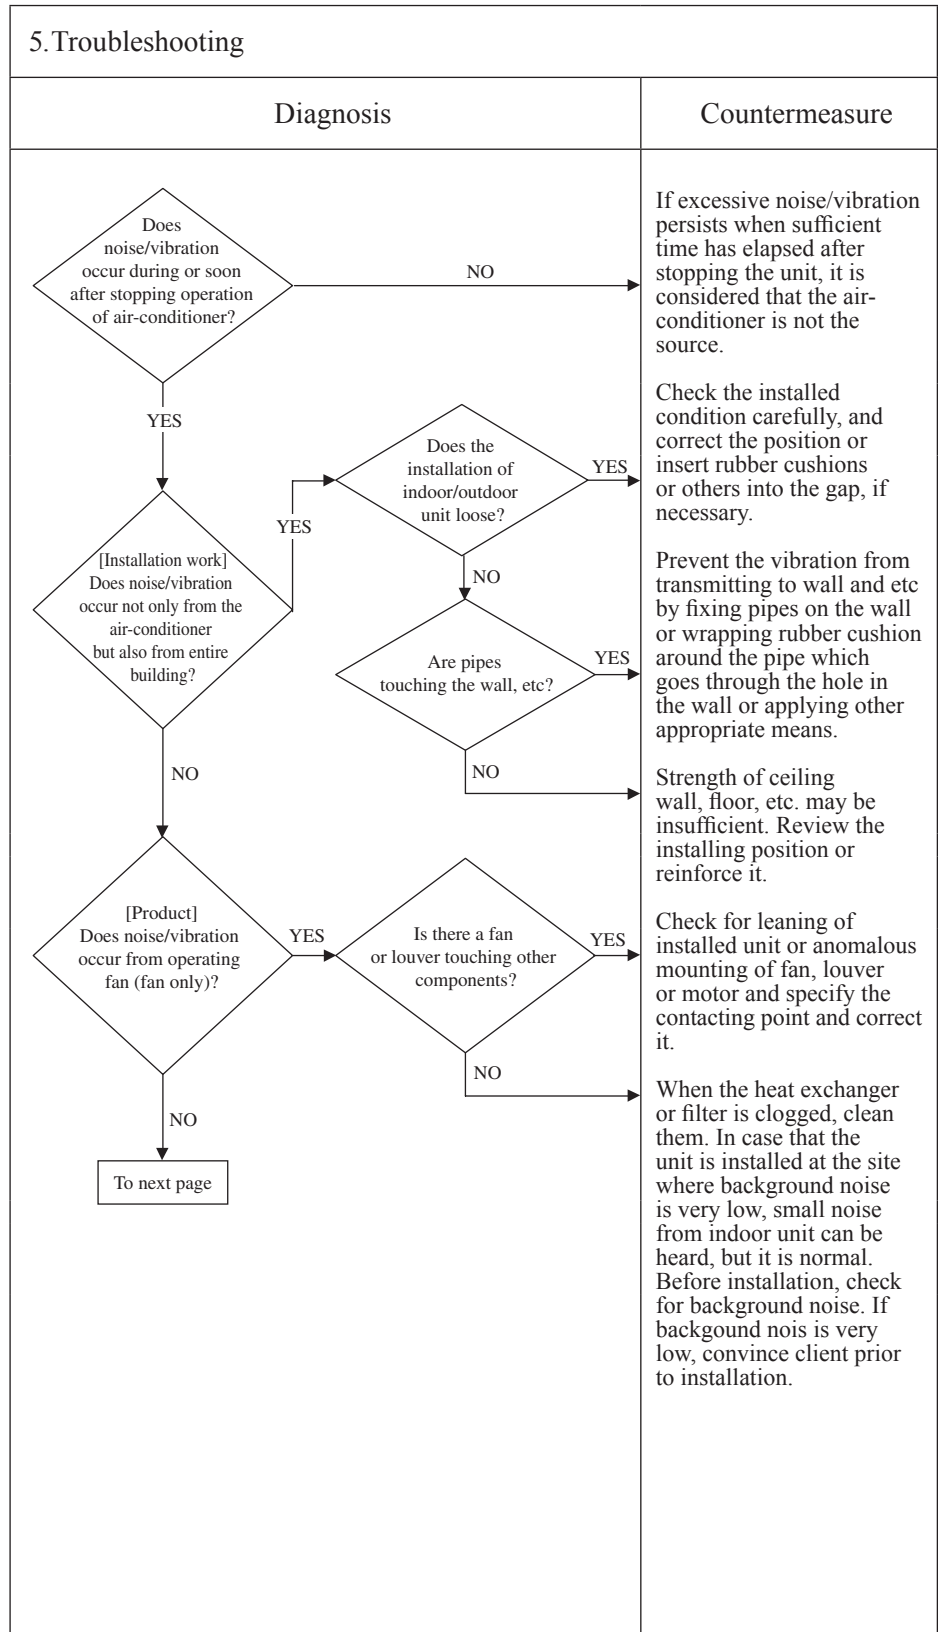

Note:

Error code Remote control: None	LED	Green	Red	Content Excessive noise/vibration (2/3)
	Indoor	—	—	
	Outdoor	—	—	

1. Applicable model All models
2. Error detection method
3. Condition of error displayed
4. Presumable cause

5. Troubleshooting	
Diagnosis	Countermeasure

Note:

Error code Remote control: None	LED	Green	Red	Content Excessive noise/vibration (3/3)
	Indoor	–	–	
	Outdoor	–	–	

<p>1. Applicable model</p> <p>All models</p>	5. Troubleshooting	
<p>2. Error detection method</p>	Diagnosis	Countermeasure
<p>3. Condition of error displayed</p>	<pre> graph TD A[From previous page] --> B{Adjustment during commissioning Does noise/vibration occur when the cooling/heating operation is in anomalous condition?} B -- YES --> C[Countermeasure] </pre>	
<p>4. Presumable cause</p>	<p>If insufficient cooling/heating problem happens due to anomalous operating conditions at cooling/heating, followings are suspicious.</p> <ul style="list-style-type: none"> • Overcharge of refrigerant • Insufficient charge of refrigerant • Intrusion of air, nitrogen, etc. <p>In such occasion, it is necessary to recover refrigerant, vacuum-dry and recharge refrigerant.</p> <p>* Since there could be many causes of noise/vibration, the above do not cover all. In such case, check the conditions when, where, how the noise/vibration occurs according to following check point.</p> <ul style="list-style-type: none"> • Indoor/outdoor unit • Cooling/heating/fan mode • Startup/stop/during operation • Operating condition (Indoor/outdoor temperatures, pressure) • Time it occurred • Operation data retained by the remote control such as compressor rotation speed, heat exchanger temperature, EEV opening degree, etc. • Tone (If available, record the noise) • Any other anomalies 	

Note:

Error code Remote control: None	LED	Green	Red	Content <h2>Louver motor failure</h2>
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models

2. Error detection method

3. Condition of error displayed

4. Presumable cause
<ul style="list-style-type: none"> • Defective LM • LM wire breakage • Faulty indoor control PCB

5. Troubleshooting	
Diagnosis	Countermeasure
<p>Check at the indoor unit side.</p> <pre> graph TD Start[Operate after waiting for more than 1 minute.] --> Q1{Does the louver operate at the power on?} Q1 -- NO --> Q2{Is LM wiring broken?} Q2 -- YES --> C1[Repair wiring.] Q2 -- NO --> Q3{Is LM locked?} Q3 -- YES --> C2[Replace LM.] Q3 -- NO --> C3[Defective indoor control PCB -> Replace.] Q1 -- YES --> Q4{Is the louver operable with the remote control?} Q4 -- YES --> C4[Normal.] Q4 -- NO --> C5[Adjust LM lever and then check again.] </pre> <p style="text-align: center;">LM: louver motor</p>	

Note:

Error code Remote control: None	LED	Green	Red	Content Power source system error (Power source to indoor control PCB)
	Indoor	Stays OFF	Stays OFF	
	Outdoor	Keeps flashing	2-time flash	

1. Applicable model
All models

2. Error detection method

3. Condition of error displayed

4. Presumable cause
<ul style="list-style-type: none"> • Misconnection or breakage of connecting wires • Blown fuse • Faulty transformer • Faulty indoor control PCB • Broken harness • Faulty outdoor control PCB (Noise filter)

5. Troubleshooting				
<table border="1"> <thead> <tr> <th>Diagnosis</th> <th>Countermeasure</th> </tr> </thead> <tbody> <tr> <td> </td> <td> Defective outdoor control PCB (Noise filter). Misconnection or breakage of connecting wires. Defective indoor control PCB → Replace. Replace FM, LM, etc. Replace fuse. Defective indoor control PCB → Replace. Open JX1. Defective indoor control PCB → Replace. </td> </tr> </tbody> </table>	Diagnosis	Countermeasure		Defective outdoor control PCB (Noise filter). Misconnection or breakage of connecting wires. Defective indoor control PCB → Replace. Replace FM, LM, etc. Replace fuse. Defective indoor control PCB → Replace. Open JX1. Defective indoor control PCB → Replace.
Diagnosis	Countermeasure			
	Defective outdoor control PCB (Noise filter). Misconnection or breakage of connecting wires. Defective indoor control PCB → Replace. Replace FM, LM, etc. Replace fuse. Defective indoor control PCB → Replace. Open JX1. Defective indoor control PCB → Replace.			

Note:

Error code Remote control: None	LED	Green	Red	Content Power source system error (Power source to remote control)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	2-time flash	

1. Applicable model
All models

2. Error detection method

3. Condition of error displayed

4. Presumable cause
<ul style="list-style-type: none"> • Remote control wire breakage/short-circuit • Defective remote control • Malfunction by noise • Broken harness • Faulty indoor control PCB

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD D1{Is the connection of the remote control's wiring OK? X (white), Y (black)} -- NO --> C[Correct.] D1 -- YES --> D2{Does the voltage between X and Y in the indoor terminal block exceed 15 VDC?} D2 -- NO --> R1[Remove wire for the remote control] D2 -- YES --> P1[Power source reset] P1 --> D3{Does resetting the power source return it to normal?} D3 -- YES --> C1[Malfunction by temporary noise.] D3 -- NO --> C2[Remote control wire breakage? Replace remote control.] R1 --> D4{Does the re-measured voltage between X and Y in the indoor terminal block exceed 15 VDC?} D4 -- YES --> C3[Remote control wire breakage? Replace remote control.] D4 -- NO --> C4[Defective indoor control PCB -> Replace.] </pre>	

Note:

Error code Remote control: INSPECT I/U	LED	Green	Red	Content INSPECT I/U (When 1 or 2 remote controls are connected)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	2-time flash	

1. Applicable model
All models
2. Error detection method
Communication between indoor unit and remote control is disabled for more than 30 minutes after the power on.
3. Condition of error displayed
Same as above
4. Presumable cause
<ul style="list-style-type: none"> • Improper setting • Surrounding environment • Defective remote control communication circuit • Faulty indoor control PCB

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD Q1{Are 2 units of remote control connected?} Q2{Is it set at the slave remote control?} Q3{Does it become normal?} Q4{Do more than one indoor units have the same address?} Q5{Are remote control wires laid along high voltage wires?} Q6{Does DM start 60 seconds later automatically.} Q1 -- YES --> S1[Set one remote control for "Master" and the other for "Slave"] S1 --> Q3 Q3 -- NO --> Q4 Q1 -- NO --> Q2 Q2 -- NO --> Q4 Q2 -- YES --> C1[Set SW1 on remote control PCB at "Master".] Q4 -- YES --> C2[Set address again. (SW2 on indoor control PCB)] Q4 -- NO --> Q5 Q5 -- YES --> C3[Separate remote control wires from high voltage wires.] Q5 -- NO --> S2[Disconnect the connecting wire ③ between the indoor and outdoor unit.] S2 --> S3[Power source reset] S3 --> Q6 Q6 -- YES --> C4[Defective indoor control PCB -> Replace.] Q6 -- NO --> C5[Defective remote control -> Change.] </pre>	

Note: If any error is detected 30 minutes after displaying “WAIT” on the remote control, the display changes to “INSPECT I/U”.

Error code Remote control: INSPECT I/U	LED	Green	Red	Content INSPECT I/U (Connection of 3 units or more remote control)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	2-time flash	

1. Applicable model
All models

2. Error detection method
Indoor unit cannot communicate for more than 30 minutes after the power on with remote control.

3. Condition of error displayed
Same as above

4. Presumable cause
<ul style="list-style-type: none"> • Improper setting • Surrounding environment • Defective remote control communication circuit • Faulty indoor control PCB • Faulty outdoor control PCB

5. Troubleshooting	
Diagnosis	Countermeasure

Note: If any error is detected 30 minutes after displaying “WAIT” on the remote control, the display changes to “INSPECT I/U”.

Error code Remote control: WAIT	LED	Green	Red	Content Communication error at initial operation (1/3) (Models SRC40-60)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	2-time flash	

1. Applicable model

Models SRC40-60


When the remote control LCD displays “ WAIT ” 2 minutes after the power on.

2. Error detection method

3. Condition of error displayed

4. Presumable cause

- Blown fuse
- Faulty outdoor sub PCB
- Connection between PCB's
- Blown fuse on single phase model
- Faulty indoor control PCB
- Defective remote control
- Broken remote control wire

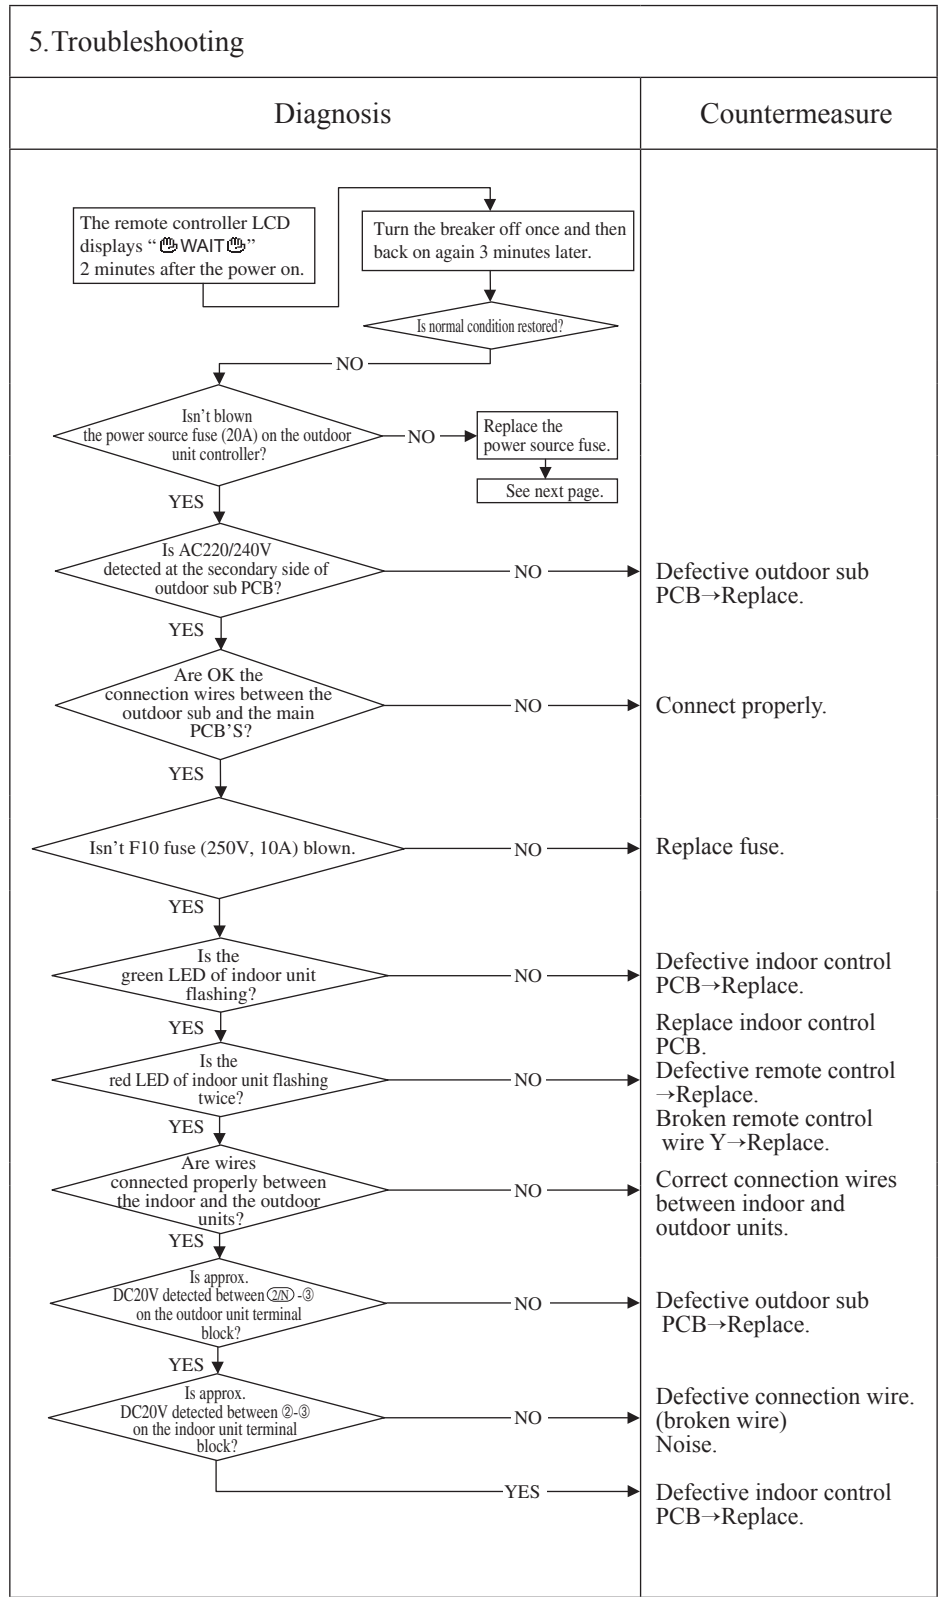

Note: If any anomaly is detected during communication, the error code E5 is displayed. (Outdoor unit red LED flashes twice.) Inspection procedure is same as above. (Excluding matters related to connection) When the power source is reset after the occurrence of E5, the LED will display “ WAIT ” if the anomaly continues. If the breaker ON/OFF is repeated in a short period of time (within 1 minute), “ WAIT ” may be displayed. In such occasion, turn the breaker off and wait for 3 minutes.

Error code Remote control: 🗄️ WAIT 🗄️	LED	Green	Red	Content Communication error at initial operation (2/3) (Models SRC40-60)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	2-time flash	

1. Applicable model	5. Troubleshooting	
Models SRC40-60 When the fuse is blown, the method to inspect inverter before replacing the power source fuse	Diagnosis	Countermeasure
2. Error detection method	<pre> graph TD Q1{Isn't there a short-circuit between phases of outdoor sub PCB?} Q2{Aren't there cracks or burning on the power resistor module or diode stack?} Q3{Isn't reactor the anomalous?} A1[Replace the outdoor sub PCB] A2[Replace the outdoor main PCB] A3[Replace the reactor.] A4[Replace fuse.] Q1 -- NO --> A1 Q1 -- YES --> Q2 Q2 -- NO --> A2 Q2 -- YES --> Q3 Q3 -- NO --> A3 Q3 -- YES --> A4 </pre>	
3. Condition of error displayed		
4. Presumable cause • Blown fuse • Faulty outdoor sub PCB • Faulty outdoor main PCB • Faulty reactor		

Note:

Error code Remote control: 🏠 WAIT 🏠	LED	Green	Red	Content Communication error at initial operation (3/3) (Models SRC40-60)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	2-time flash	

1. Applicable model


Models SRC40-60

When the remote control display is extinguished after the power on.

2. Error detection method

3. Condition of error displayed

- 4. Presumable cause**
- Blown fuse
 - Connection between PCB's
 - Blown fuse
 - Faulty indoor control PCB
 - Defective remote control
 - Wire breakage on remote control
 - Faulty outdoor sub PCB

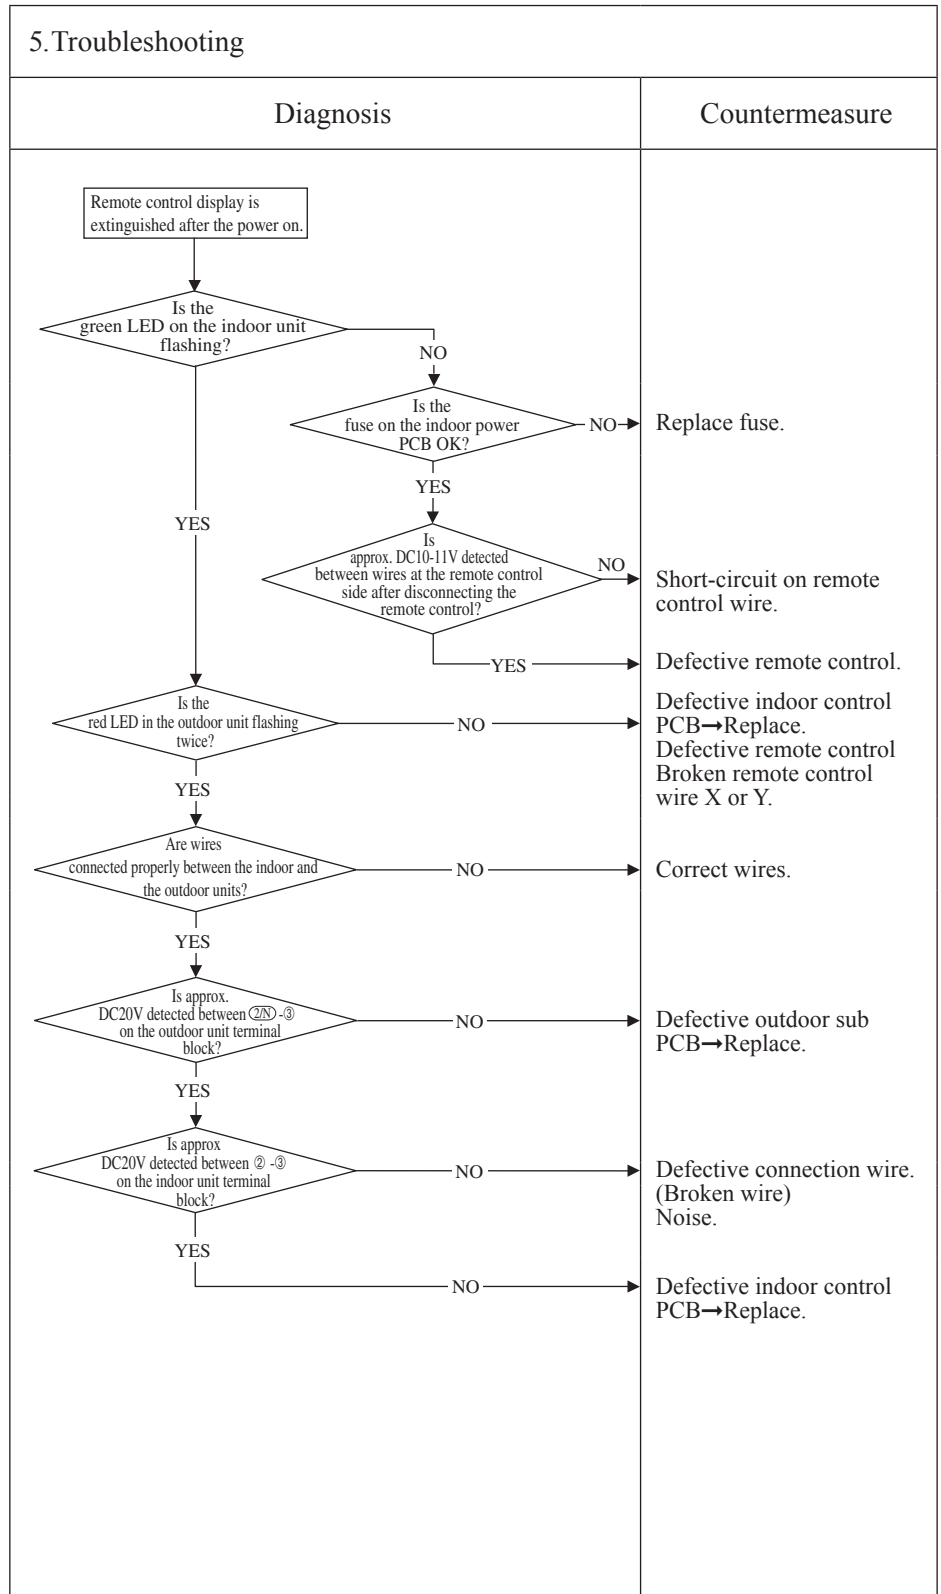

Note:


Error code Remote control: WAIT	LED	Green	Red	Content Communication error at initial operation (1/3) (Models FDC71-140)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	2-time flash	

1. Applicable model
Models FDC71-140

2. Error detection method

3. Condition of error displayed

- 4. Presumable cause**
- Faulty indoor control PCB
 - Defective remote control
 - Broken remote control wire
 - Faulty outdoor control PCB
 - Broken connection wires

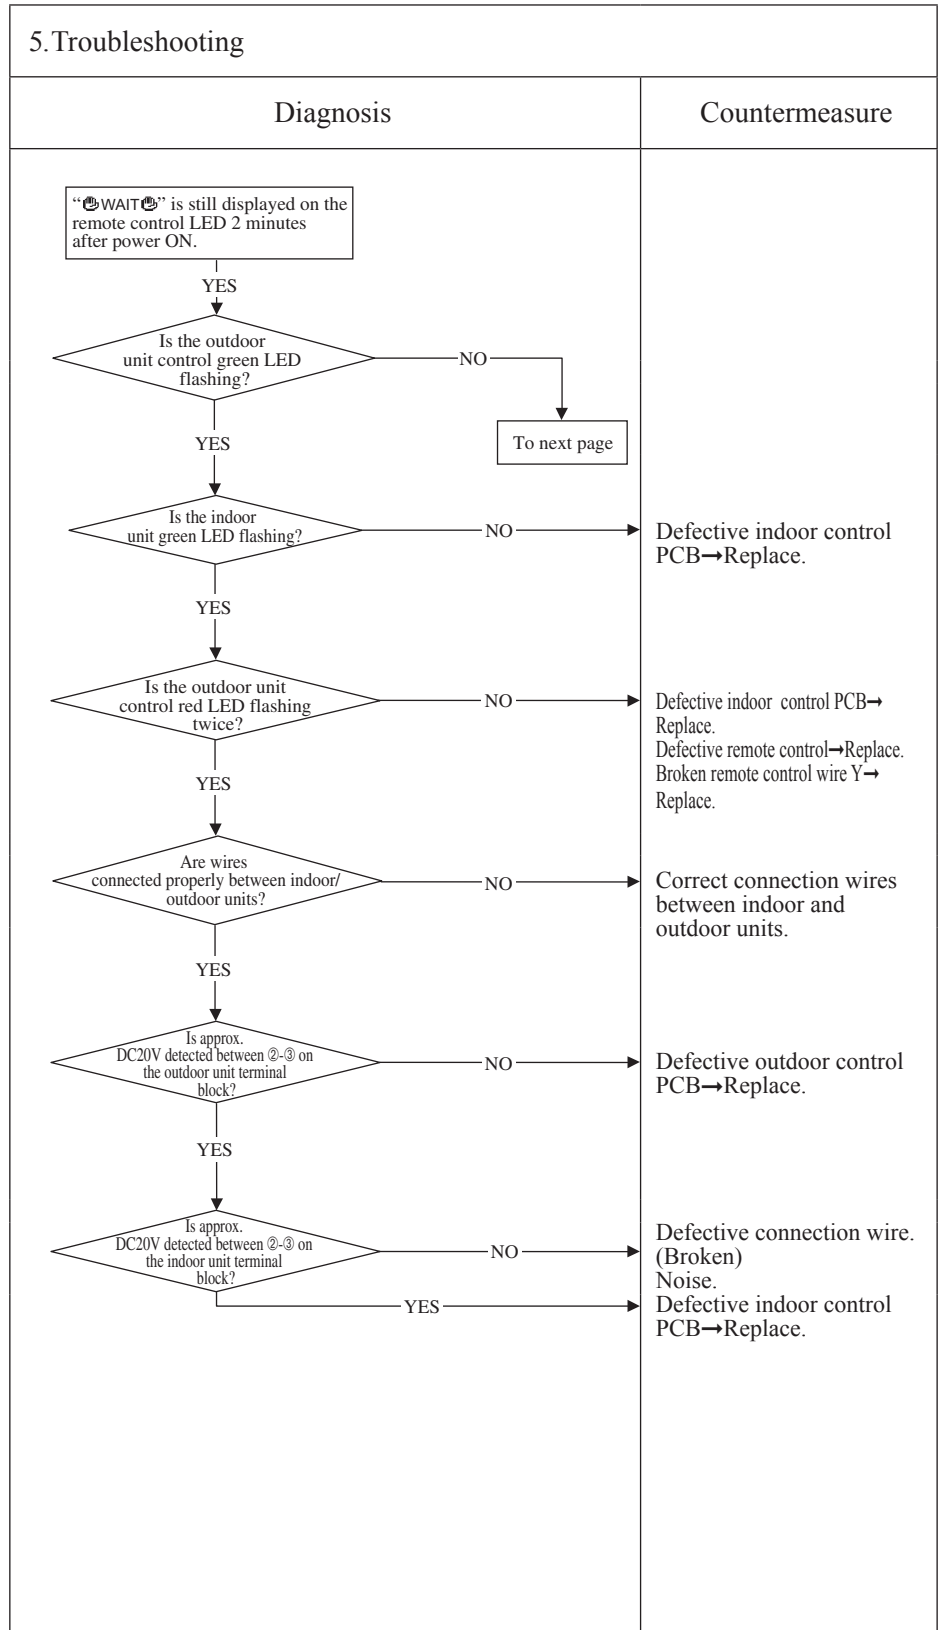

Note:

Error code Remote control: WAIT	LED	Green	Red	Content Communication error at initial operation (2/3) (Models FDC71-140)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	2-time flash	

1. Applicable model
Models FDC71-140
2. Error detection method
3. Condition of error displayed
4. Presumable cause
<ul style="list-style-type: none"> • Faulty noise filter • Faulty indoor control PCB • Faulty outdoor control PCB • Faulty inverter PCB • Faulty fan motor

5. Troubleshooting	
Diagnosis	Countermeasure
<p style="text-align: center;">Diagnosis for when the outdoor control PCB LED is turned off</p> <pre> graph TD Start[From previous page] --> Breaker[Shut down the breaker and back on again the breaker 3 minutes later.] Breaker --> Reset{Does it reset normally?} Reset -- YES --> Normal[Normal. (Malfunction by noise)] Reset -- NO --> Fuse{Isn't the outdoor unit controller power source fuse (71:20A, 100-140:30A) blown?} Fuse -- NO --> Note[Note (1) 1-phase model only] Note --> Fuse Fuse -- YES --> CheckFuse[To check method for inverter PCB before replacment of blown power source fuse.] CheckFuse --> Next[To next page] Fuse -- NO --> AC{Is AC220/240V or AC380/415V detected at the noise filter secondary side?} AC -- NO --> ReplaceFilter[Replace noise filter.] AC -- YES --> DC255{Is DC255-310V detected at CNA2?} DC255 -- NO --> CheckDiode[Check connection of diode stack and electrolytic capacitor by referring main electrical circuit diagram] DC255 -- YES --> Fuse2{Isn't fuse (250V, 2A) on the outdoor control PCB blown?} Fuse2 -- NO --> ReplacePCB1[Defective outdoor control PCB → Replace.] Fuse2 -- YES --> DC5V1{Is DC5V detected on the outdoor control PCB (Between - of CNV)?} DC5V1 -- NO --> ReplacePCB2[Defective outdoor control PCB → Replace.] DC5V1 -- YES --> Fan{Is DC5V detected if the connector of outdoor fan motor is disconnected?} Fan -- NO --> ReplaceFan[Defective outdoor fan motor] Fan -- YES --> DC5V2{Is DC5V detected if the inverter power source connector (CN12) is disconnected?} DC5V2 -- NO --> ReplacePCB3[Defective inverter PCB → Replace.] DC5V2 -- YES --> ReplacePCB4[Defective outdoor control PCB → Replace.] </pre>	

Note:


Error code Remote control: 🗄️ WAIT 🗄️	LED	Green	Red	Content Communication error at initial operation (3/3) (Models FDC71-140)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	2-time flash	

1. Applicable model
Models FDC71-140

2. Error detection method

3. Condition of error displayed

- 4. Presumable cause**
- Blown fuse
 - Faulty noise filter
 - Faulty inverter PCB
 - Faulty reactor
 - Faulty electrolytic capacitor

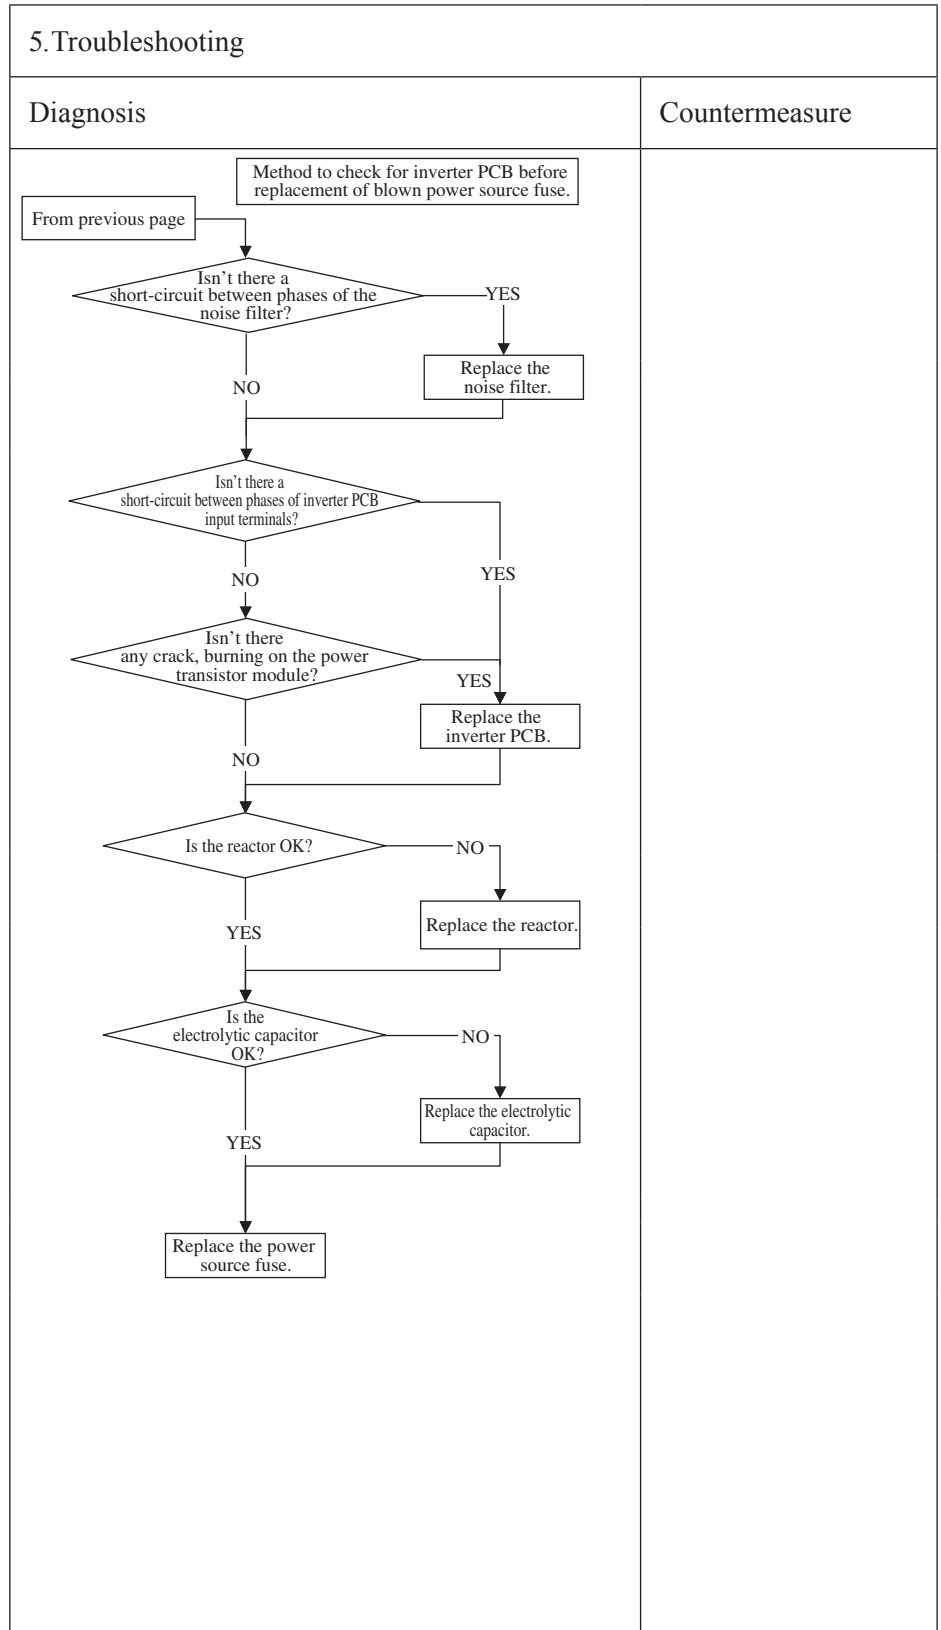

Note:


Error code Remote control: 🗄️WAIT🗄️	LED	Green	Red	Content Communication error at initial operation (1/2) (Models FDC200, 250VSA only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	2-time flash	

1. Applicable model
Models FDC200, 250VSA

2. Error detection method

3. Condition of error displayed

- 4. Presumable cause**
- Faulty indoor control PCB
 - Defective remote control
 - Broken remote control wire
 - Faulty outdoor control PCB
 - Broken connection wires

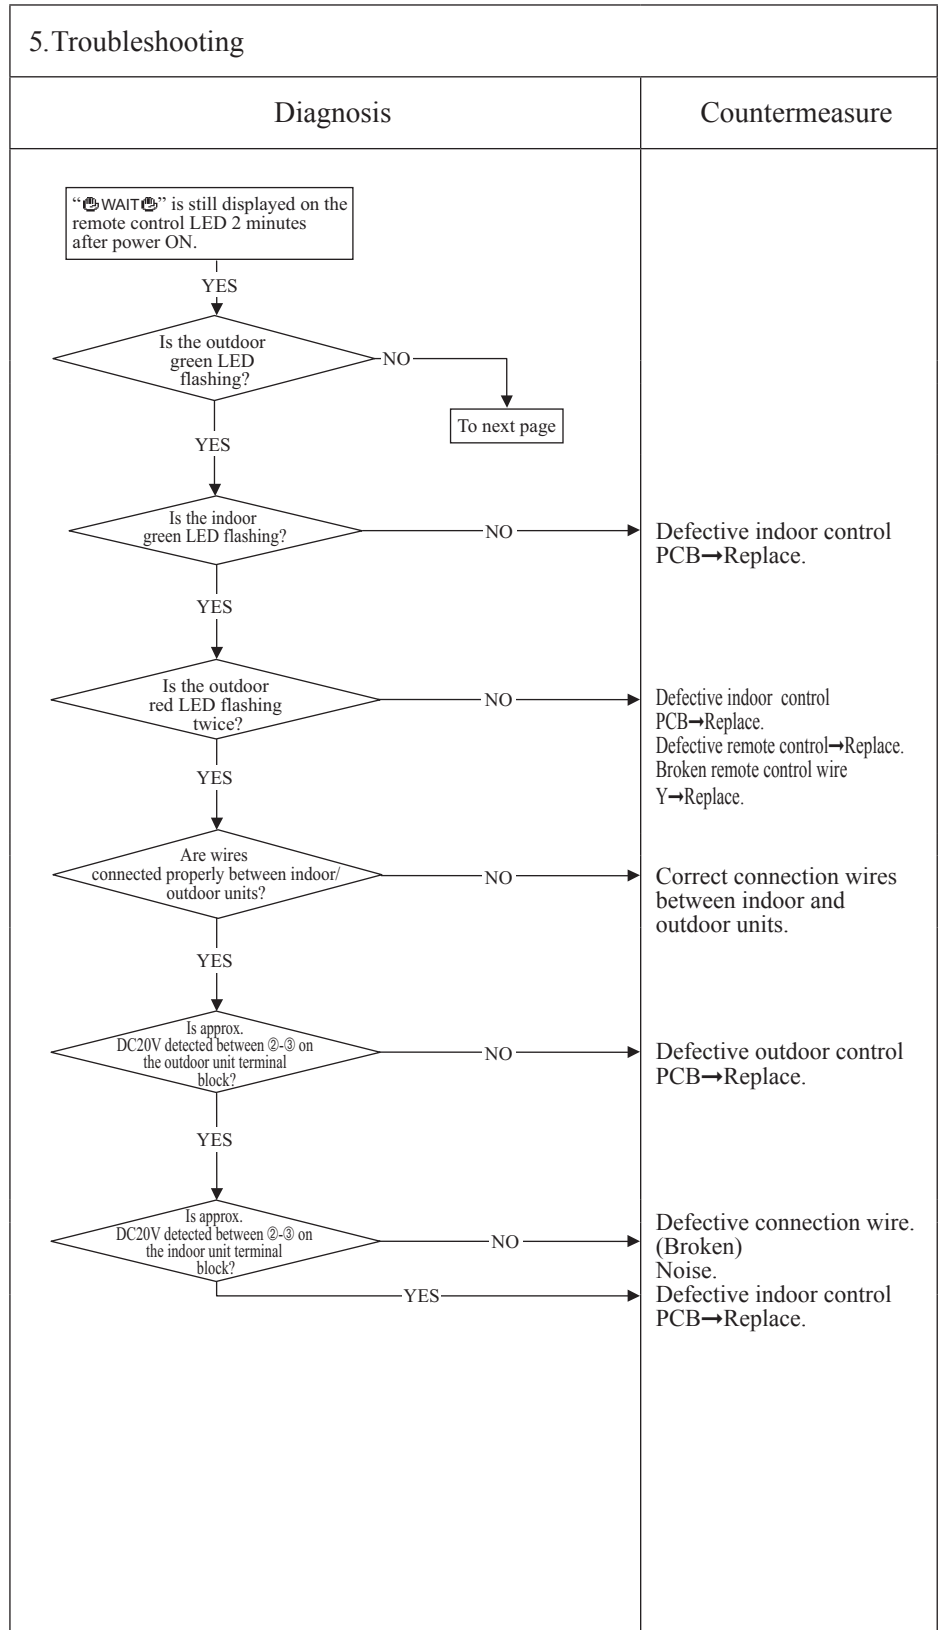

Note:

Error code Remote control: 🗄️ WAIT 🗄️	LED	Green	Red	Content Communication error at initial operation (2/2) (Models FDC200, 250VSA only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	2-time flash	

<p>1. Applicable model</p> <p>Models FDC200, 250VSA</p>	5. Troubleshooting	
<p>2. Error detection method</p>	Diagnosis	Countermeasure
<p>3. Condition of error displayed</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> Diagnosis for when the outdoor control PCB LED is turned off </div> <pre> graph TD Start[From previous page] --> Step1[Shut down the breaker and back on again the breaker 3 minutes later.] Step1 --> Dec1{Does it reset normally?} Dec1 -- YES --> C1[Normal. (Malfunction by noise)] Dec1 -- NO --> Dec2{Is AC380/415V detected at the noise filter secondary side?} Dec2 -- NO --> C2[Replace noise filter.] Dec2 -- YES --> Dec3{Is DC280/373V detected at CNA2?} Dec3 -- NO --> C3[Check connection of diode stack and electrolytic capacitor by referring main electrical circuit diagram.] Dec3 -- YES --> Dec4{Isn't fuse (250V, 2A) on the outdoor control PCB blown?} Dec4 -- NO --> C4[Defective outdoor control PCB → Replace.] Dec4 -- YES --> Dec5{Is DC5V detected on the outdoor control PCB (Between - of CNV)?} Dec5 -- NO --> C5[Defective outdoor control PCB → Replace.] Dec5 -- YES --> Dec6{Is DC5V detected if the connector of outdoor fan motor is disconnected?} Dec6 -- NO --> C6[Defective outdoor fan motor.] Dec6 -- YES --> Dec7{Is DC5V detected if the inverter power source connector (CN12) is disconnected?} Dec7 -- NO --> C7[Defective inverter PCB → Replace.] Dec7 -- YES --> C8[Defective outdoor control PCB → Replace.] </pre>	
<p>4. Presumable cause</p> <ul style="list-style-type: none"> • Faulty noise filter • Faulty indoor control PCB • Faulty outdoor control PCB • Faulty inverter PCB • Faulty fan motor 		

Note:

Error code Remote control: 🏠WAIT🏠	LED	Green	Red	Content Communication error at initial operation (1/3) (Models FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	


1. Applicable model
Models FDC71-100VNP
When the remote control LCD displays “🏠WAIT🏠” 2 minutes after the power on.

2. Error detection method

3. Condition of error displayed

4. Presumable cause

- Blown fuse
- Faulty outdoor sub PCB
- Connection between PCB's
- Faulty indoor control PCB
- Defective remote control
- Broken remote control wire

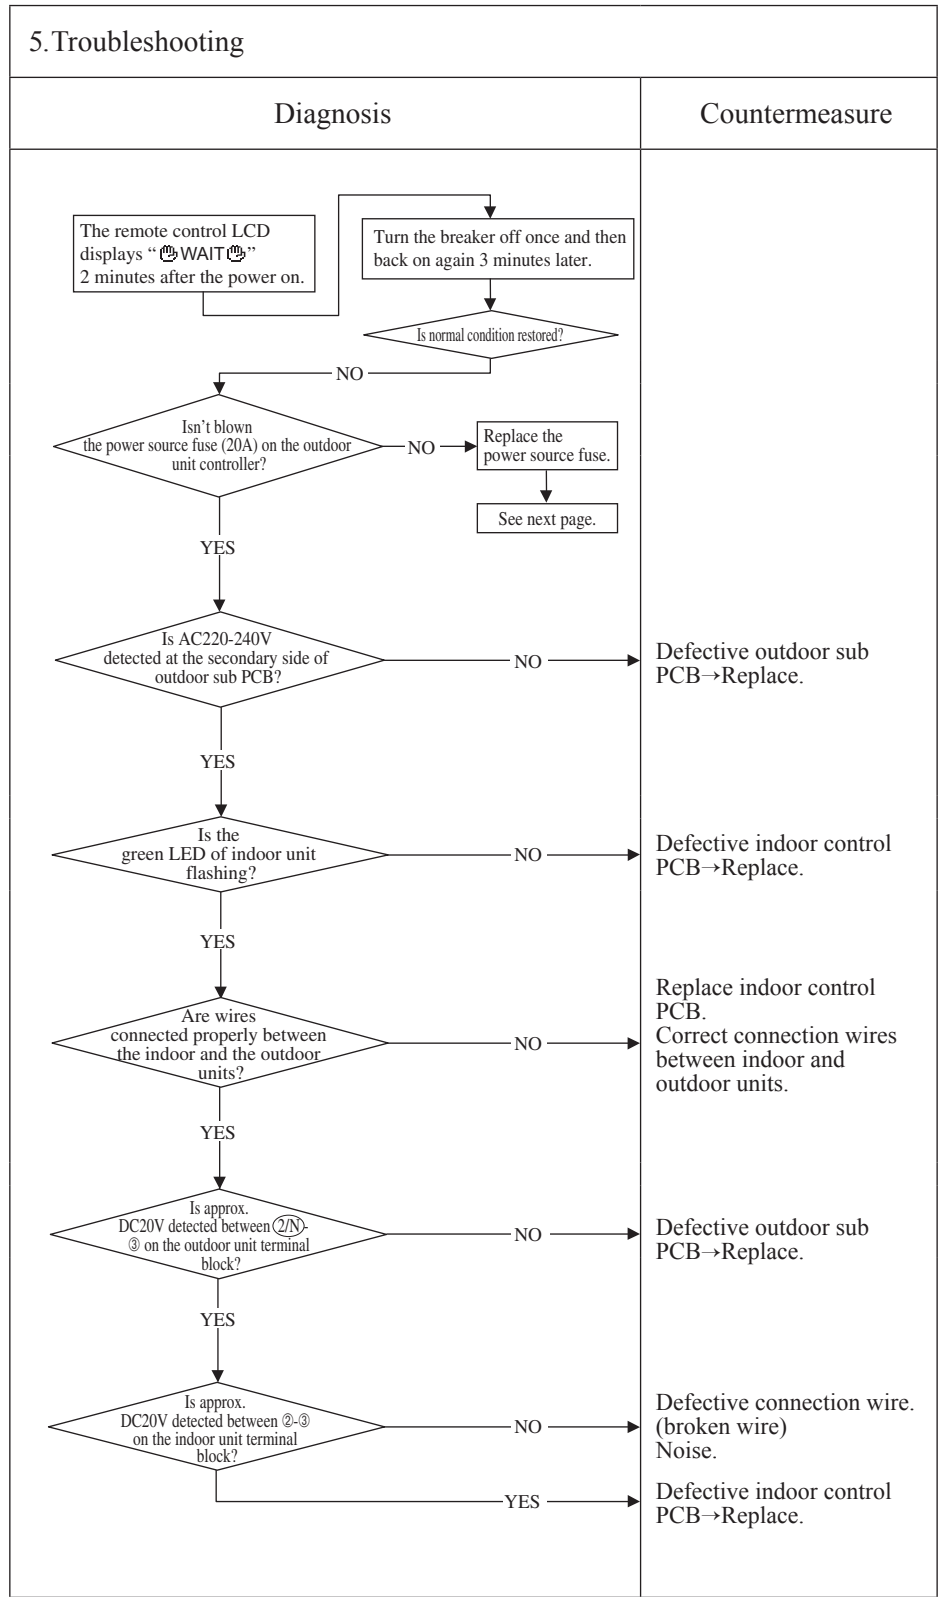

Note: If any anomaly is detected during communication, the error code E5 is displayed. Inspection procedure is same as above. (Excluding matters related to connection) When the power source is reset after the occurrence of E5, the LED will display “🏠WAIT🏠” if the anomaly continues. If the breaker ON/OFF is repeated in a short period of time (within 1 minute), “🏠WAIT🏠” may be displayed. In such occasion, turn the breaker off and wait for 3 minutes.

Error code Remote control: 🏠 WAIT 🏠	LED	Green	Red	Content Communication error at initial operation (2/3) (Models FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	


1. Applicable model
Models FDC71-100VNP
When the fuse is blown, the method to inspect outdoor PCB before replacing the power source fuse

2. Error detection method

3. Condition of error displayed

4. Presumable cause

- Blown fuse
- Faulty outdoor sub or main PCB
- Faulty reactor

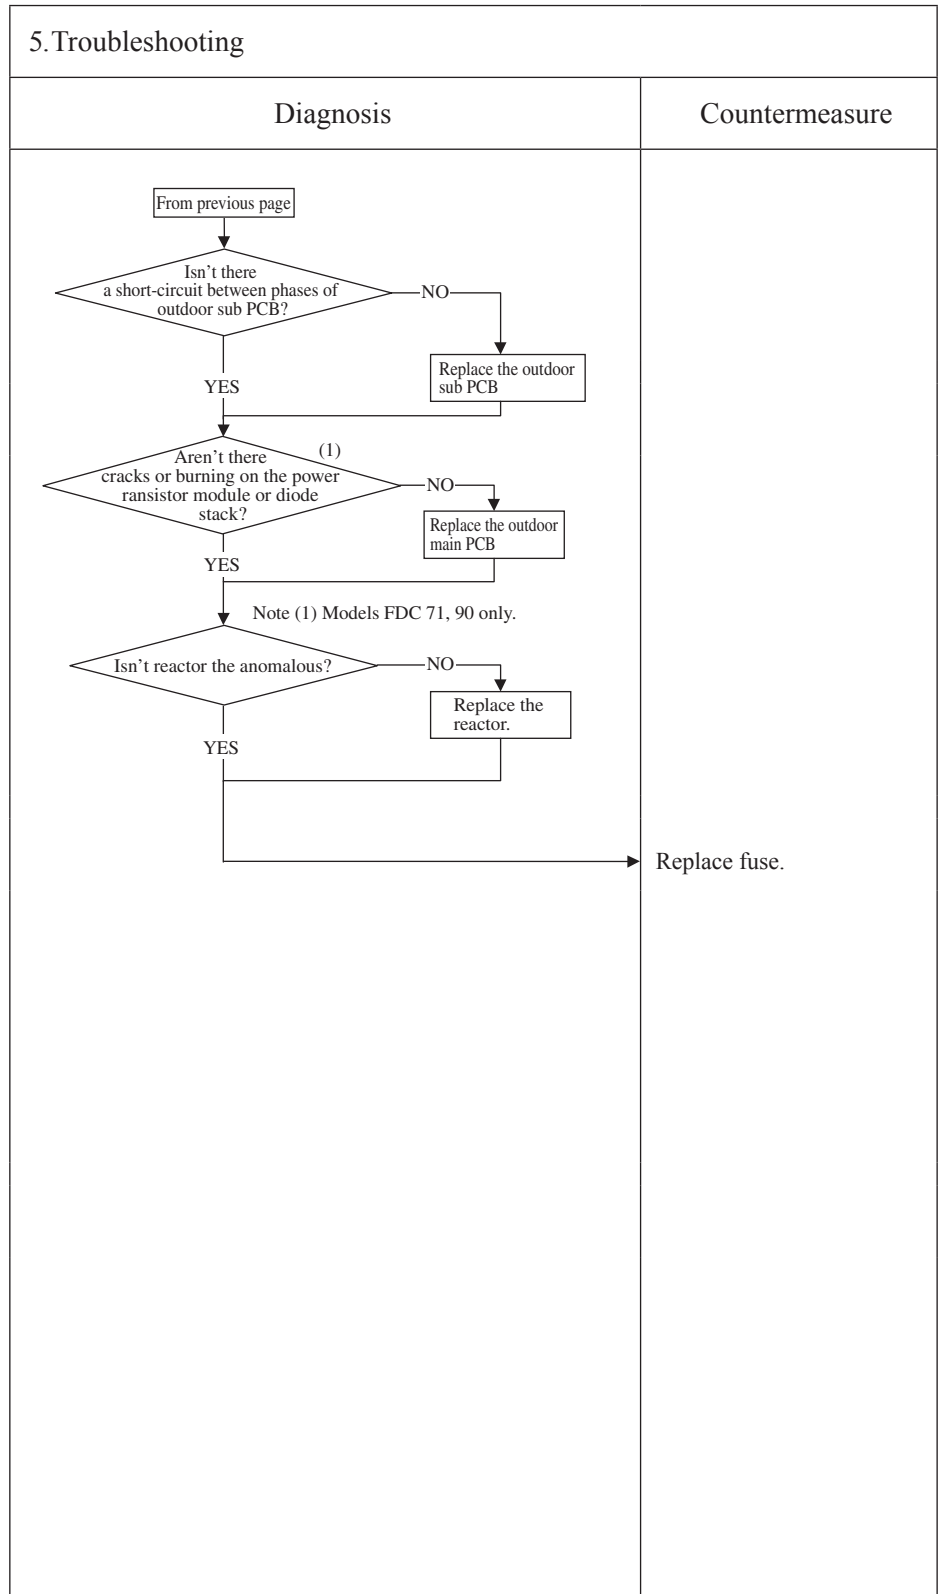

Note:

Error code Remote control: 🏠WAIT🏠	LED	Green	Red	Content Communication error at initial operation (3/3) (FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	

1. Applicable model


Models FDC71-100VNP

When the remote control display is extinguished after the power on.

2. Error detection method

3. Condition of error displayed

- 4. Presumable cause**
- Blown fuse
 - Connection between PCB's
 - Blown fuse
 - Faulty indoor control PCB
 - Defective remote control
 - Wire breakage on remote control
 - Faulty outdoor sub PCB

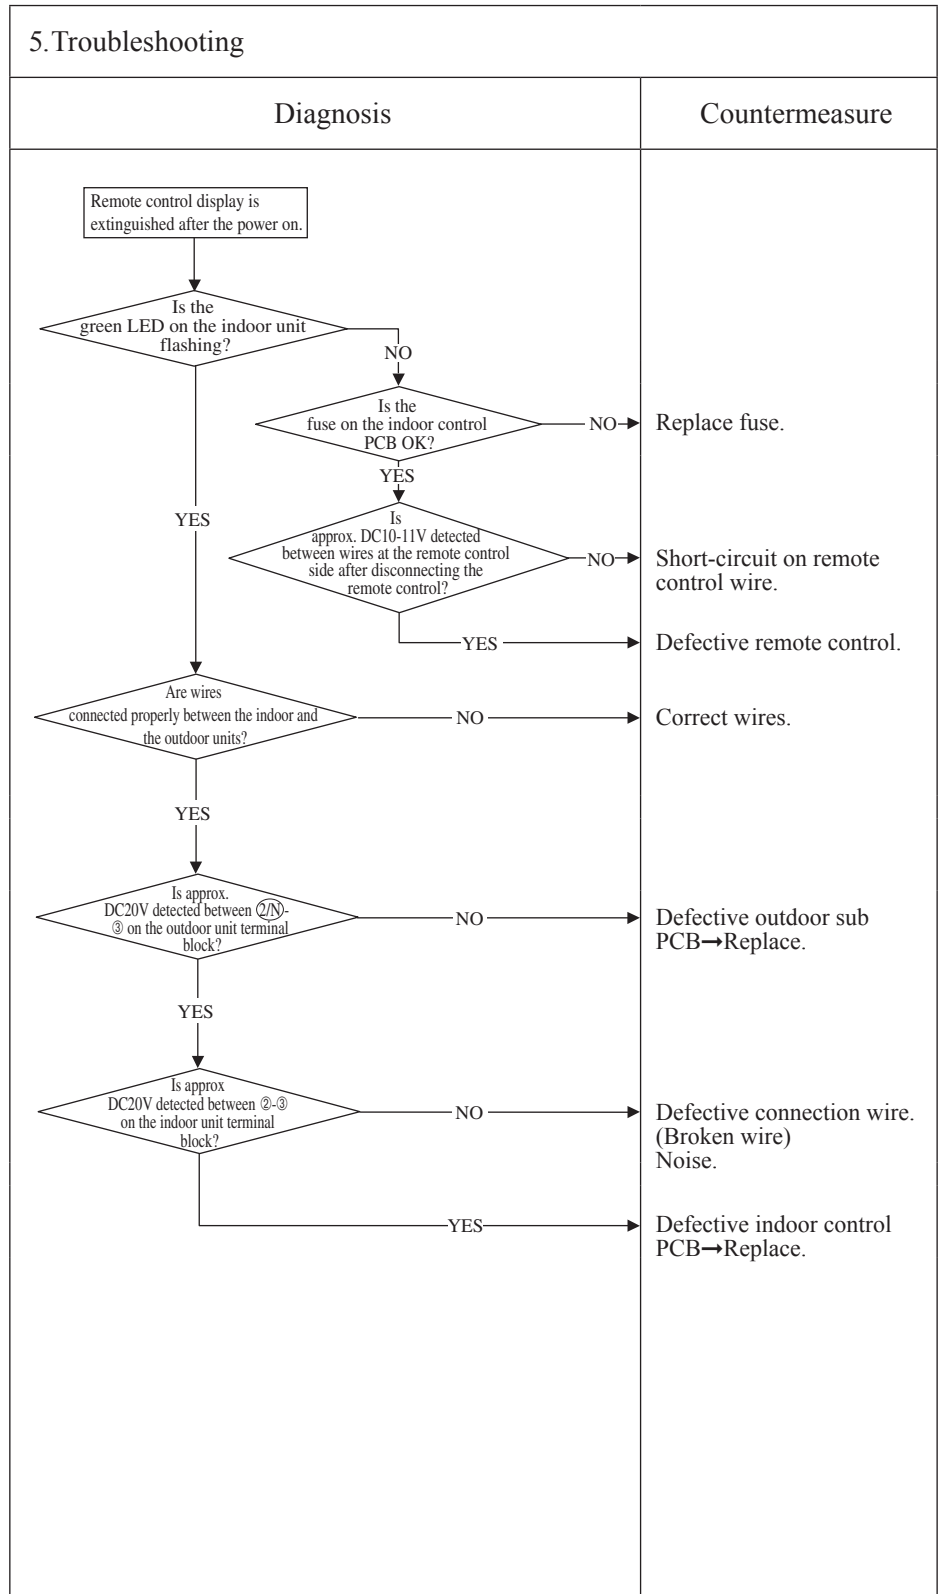

Note:

Error code Remote control: None	LED	Green	Red	Content No display
	Indoor	Stays OFF	Stays OFF	
	Outdoor	Stays OFF	Stays OFF	

1. Applicable model	5. Troubleshooting		
All models (FDC71-100VNP is removed)	Diagnosis	Countermeasure	
2. Error detection method	<pre> graph TD Start[Remote control does not display anything after the power on.] --> D1{Is DC10V or higher detected at remote control connection terminals?} D1 -- YES --> C1[Defective remote control.] D1 -- NO --> D2{Is DC10V or higher detected on remote control wires if the remote control is removed?} D2 -- YES --> C2[Defective remote control.] D2 -- NO --> D3{Are wires connected properly between the indoor/outdoor units?} D3 -- YES --> C3[Defective connecting wire. Defective remote control wire. (Short-circuit, etc.)] D3 -- NO --> C4[Defective indoor control PCB -> Replace.] </pre>		
3. Condition of error displayed			
4. Presumable cause	<ul style="list-style-type: none"> • Faulty indoor control PCB • Defective remote control • Broken remote control wire 		

Note:

Error code Remote control: E1	LED	Green	Red	Content	Remote control communication circuit error
	Indoor	Keeps flashing	Stays OFF		
	Outdoor	Keeps flashing	Stays OFF		

1. Applicable model	5. Troubleshooting	
All models	Diagnosis	Countermeasure
2. Error detection method	<pre> graph TD A{Is it possible to reset normally by the power reset?} -- YES --> B[Malfunction by noise Check peripheral environment.] A -- NO --> C[Turn SW7-1 to OFF. ON Remove the wire connecting between indoor/outdoor units.] C --> D[Power source reset] D --> E{Does the drain pump restart automatically 1 minute later?} E -- YES --> F[Defective indoor control PCB -> Replace.] E -- NO --> G[Defective remote control -> Replace.] </pre> <p>Note (1) Does the remote control still display “ WAIT ” even after 3 minutes?</p>	
3. Condition of error displayed	Same as above	
4. Presumable cause	<ul style="list-style-type: none"> • Defective communication circuit between remote control-indoor unit • Noise • Defective remote control • Faulty indoor control PCB 	

Note: If the indoor unit cannot communicate normally with the remote control for 180 seconds, the indoor control PCB starts to reset automatically.

Error code Remote control: E5	LED	Green	Red	Content Communication error during operation
	Indoor	Keeps flashing	2-time flash	
	Outdoor	Keeps flashing	See below	

1. Applicable model
All models
2. Error detection method
When normal communication between indoor and outdoor unit is interrupted for more than 2 minutes.
3. Condition of error displayed
Same as above is detected during operation.
4. Presumable cause
<ul style="list-style-type: none"> • Unit No. setting error • Broken remote control wire • Faulty remote control wire connection • Faulty outdoor control PCB

5. Troubleshooting	
Diagnosis	Countermeasure
<p>● In case that the outdoor unit red LED flashes 2-time</p> <p>Note (1) Inspect faulty connections (disconnection, looseness) on the outdoor unit terminal block.</p> <p>Is the connection of signal wires at the outdoor unit side OK?</p> <p>NO → Repair signal wires.</p> <p>YES</p> <p>Note (2) Check for faulty connection or breakage of signal wires between indoor-outdoor units.</p> <p>Is the connection of signal wires between indoor-outdoor units OK?</p> <p>NO → Repair signal wires.</p> <p>YES</p> <p>Power source reset</p> <p>Has the remote control LCD returned to normal state?</p> <p>NO → To the diagnosis of “WAIT”.</p> <p>YES → Unit is normal. (Malfunction by temporary noise, etc.)</p> <p>● In case that the outdoor unit red LED stays OFF (FDC71-100VNP is removed)</p> <p>Power source reset</p> <p>NO</p> <p>Has the remote control LCD returned to normal state?</p> <p>NO → Defective outdoor control PCB (Defective network communication circuit) → Replace.</p> <p>YES → Unit is normal. (Malfunction by temporary noise, etc.)</p>	

Note: Pressing the pump-down switch cancels communications between indoor and outdoor unit so that “communication error-E5” is displayed on indoor unit and remote control, but it is normal. (FDC71-100VNP is removed)

Error code Remote control: E6	LED	Green	Red	Content Indoor heat exchanger temperature thermistor anomaly
	Indoor	Keeps flashing	1-time flash	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models

2. Error detection method
Anomalously low temperature or high temperature (resistance) is detected on the indoor heat exchanger thermistor (Thi-R1, R2 or R3).

3. Condition of error displayed

- When the temperature thermistor detects -50°C or lower for 5 seconds continuously, the compressor stops. After 3-minutes delay, the compressor starts again automatically, but if this error occurs again within 60 minutes after the initial detection.
- Or if 70°C or higher is detected for 5 seconds continuously.

4. Presumable cause

- Defective indoor heat exchanger thermistor connector
- Indoor heat exchanger temperature thermistor anomaly
- Faulty indoor control PCB

5. Troubleshooting

Diagnosis	Countermeasure
<p>Is the connection of indoor heat exchanger temperature thermistor connector OK?</p> <p>NO →</p> <p>YES →</p> <p>Are characteristics of indoor heat exchanger temperature thermistor OK?</p> <p>NO →</p> <p>YES →</p>	<p>Correct. → Insert connector securely.</p> <p>Defective indoor heat exchanger temperature thermistor → Replace.</p> <p>Defective indoor control PCB → Replace. (Defective indoor heat exchanger temperature thermistor input circuit)</p>

(Broken wire) **Temperature-resistance characteristic**

Temperature (°C)	Resistance (kΩ)
0	~16
10	~11
20	~7
25	5
30	~4
40	~3
50	~2

(Short circuit)

Note:

Error code Remote control: E7	LED	Green	Red	Content Return air temperature thermistor anomaly
	Indoor	Keeps flashing	1-time flash	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models

2. Error detection method
Anomalously low temperature or high temperature (resistance) is detected by indoor return air temperature thermistor (Thi-A)

3. Condition of error displayed

- When the temperature thermistor detects -50°C or lower for 5 seconds continuously, the compressor stops. After 3-minute delay, the compressor starts again automatically, but if this error occurs again within 60 minutes after the initial detection.

4. Presumable cause

- Defective return air temperature thermistor connector
- Defective return air temperature thermistor
- Faulty indoor control PCB

5. Troubleshooting

Diagnosis	Countermeasure
<pre> graph TD Q1{Is the connection of return air temperature thermistor connector OK?} Q2{Are the characteristics of return air temperature thermistor OK?} C1[Correct. -> Connect connector.] C2[Defective return air temperature thermistor -> Replace.] C3[Defective indoor control PCB -> Replace. (Defective return air temperature thermistor input circuit)] Q1 -- NO --> C1 Q1 -- YES --> Q2 Q2 -- NO --> C2 Q2 -- YES --> C3 </pre>	

Temperature-resistance characteristic

Temperature (°C)	Resistance (kΩ)
0	15
10	10
20	7
25	5
30	4
40	3
50	2

Note:

Error code Remote control: E8	LED	Green	Red	Content Heating overload operation
	Indoor	Keeps flashing	1-time flash	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models

2. Error detection method
Indoor heat exchanger temperature thermistor (Thi-R1, R2, R3)

3. Condition of error displayed
When it is detected 5 times within 60 minutes from initial detection or when the overload condition is detected for 6 minutes continuously.

- 4. Presumable cause**
- Clogged air filter
 - Defective indoor heat exchanger temperature thermistor connector
 - Defective indoor heat exchanger temperature thermistor
 - Anomalous refrigerant system

5. Troubleshooting

Diagnosis	Countermeasure
<pre> graph TD A{Is the air filter clogged?} -- YES --> B[Wash.] A -- NO --> C{Is the indoor heat exchanger temperature thermistor connection OK?} C -- YES --> D{Are the characteristics of indoor heat exchanger temperature thermistor OK?} C -- NO --> E[Defective indoor heat exchanger temperature thermistor connector -> Correct.] D -- YES --> F[Check the error data with the remote control.] D -- NO --> G[Defective indoor heat exchanger temperature thermistor.] F --> H{Is the unit operating in the state of heating overload?} H -- YES --> I[Adjust.] H -- NO --> J[Check refrigerant system.] </pre>	
<p>Note (1) Judge if it is in the state of overload or not as follows.</p> <ul style="list-style-type: none"> • Is there any short-circuit of air? • Isn't there any fouling or clogging on the indoor heat exchanger? • Is the outdoor fan control normal? • Isn't the room and outdoor air temperature too high? <p>Note (2) For characteristics of indoor heat exchanger temperature thermistor, see the error display E6.</p> <p style="text-align: center;">Indoor heat exchanger temperature (°C)</p>	

Note: During heating operation; After starting compressor, compressor rotation speed is decreased by detecting indoor heat exchanger temperature (Thi-R) in order to control high pressure.

Error code Remote control: E9	LED	Green	Red	Content	Drain trouble
	Indoor	Keeps flashing	1-time flash		
	Outdoor	Keeps flashing	Stays OFF		

1. Applicable model
All models
2. Error detection method
Float switch is activated
3. Condition of error displayed
If the float switch OPEN is detected for 3 seconds continuously or if float switch connector or wire is disconnected.
4. Presumable cause
<ul style="list-style-type: none"> • Defective indoor control PCB • Float switch setting error • Humidifier drain motor interlock setting error • Option equipment setting error • Drain piping error • Defective drain motor • Disconnection of drain motor wiring

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD Start[Check the error data in the remote control.] --> Q1{Is there any overflow?} Q1 -- NO --> Q2{Is DC12V at CNI connector?} Q2 -- YES --> C1[Check float switch.] Q2 -- NO --> Q3{Is the CNI connected firmly?} Q3 -- NO --> C2[Defective indoor control PCB → Replace.] Q3 -- YES --> Q4{Is there any anomaly on the option equipment?} Q4 -- NO --> C3[Defective indoor control PCB → Replace.] Q4 -- YES --> C4[Check option equipment.] Q1 -- YES --> Q5{Is the humidifier connected?} Q5 -- YES --> Q6{Is the humidifier drain motor interlocked by the indoor unit function setting of remote control?} Q6 -- YES --> C5[Drain motor ON from the remote control] Q6 -- NO --> C6[Correct setting to "Humidifier drain motor interlock".] C5 --> Q7{Does drain motor operate?} Q7 -- NO --> Q8{Is DC12V detected at CNR connector?} Q8 -- NO --> C7[Defective indoor control PCB → Replace.] Q8 -- YES --> C8[Check wiring of drain motor.] Q7 -- YES --> Q9{Is the drain piping unclogged? Is the drain pipe slop OK?} Q9 -- NO --> C9[Correct.] Q9 -- YES --> C10[Check drain motor.] </pre>	

Note: When this error occurred at power ON, disconnection of wire or connector of the float switch is suspected. Check and correct it (or replace it, if necessary).

Error code Remote control: E10	LED	Green	Red	Content Excessive number of connected indoor units (more than 17 units) by controlling with one remote control
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model	5. Troubleshooting	
All models	Diagnosis	Countermeasure
	<pre> graph LR A{Aren't more than 17 indoor units connected to one remote control?} -- NO --> B[Defective remote control -> Replace.] A -- YES --> C[Reduce to 16 or less units.] </pre>	
2. Error detection method		
When it detects more than 17 of indoor units connected to one remote control		
3. Condition of error displayed		
Same as above		
4. Presumable cause		
<ul style="list-style-type: none"> • Excessive number of indoor units connected • Defective remote control 		

Note:

Error code Remote control: E11	LED	Green	Red	Content Address setting error of indoor units
	Indoor	Keeps flashing	Keeps flashing	
	Outdoor	Keeps flashing	Stays OFF	

<p>1. Applicable model</p> <p>All models</p>	5. Troubleshooting	
<p>2. Error detection method</p> <p>IU address has been set using the “Master IU address set” function of remote control.</p>	<p>Diagnosis</p> <pre> graph TD A[E11 occurs] --> B{Is "Master IU address set" function of remote control used?} B -- YES --> C[Countermeasure] </pre>	<p style="text-align: center;">Countermeasure</p> <ul style="list-style-type: none"> • In cases of RC-EX3 Menu → Service setting → IU settings → Select IU • In cases of RC-E5 Return address No. to “IU ...” using [▲] or [▲] button.
<p>3. Condition of error displayed</p> <p>Same as above</p>	<p>In case the wiring is below and “Mastar IU address set” is used, E11 is appeared.</p> <pre> graph TD RCR[R/C] --- IU1[IU 1] IU1 --- IU2[IU 2] IU2 --- IU3[IU 3] </pre>	
<p>4. Presumable cause</p> <p>Same as above</p>		

Note:

Error code Remote control: E14	LED	Green	Red	Content Communication error between master and slave indoor units
	Indoor	Keeps flashing	3-time flash	
	Outdoor	Keeps flashing	Stays Off	

1. Applicable model
All models

2. Error detection method
When communication error between master and slave indoor units occurs

3. Condition of error displayed
Same as above

4. Presumable cause

- Unit address setting error
- Broken remote control wire
- Defective remote control wire connection
- Defective indoor control PCB

5. Troubleshooting

Diagnosis	Countermeasure																	
<pre> graph TD D1{Is it OK the unit address setting for master and slave indoor units?} D2{Isn't the remote control wiring between indoor units defective?} D3{Is it restored by resetting the power source?} D1 -- NO --> C1[Correct unit address setting.] D1 -- YES --> D2 D2 -- YES --> C2[Correct wiring.] D2 -- NO --> D3 D3 -- NO --> C3[Defective indoor control PCB -> Replace.] D3 -- YES --> C4["• Malfunction by noise. • Check surrounding environment."] </pre>																		
<p>Note (1) Set dip switches SW5-1 and SW5-2 as shown in the following table. (Factory default setting – “Master”)</p> <table border="1"> <thead> <tr> <th rowspan="2">Dip switch</th> <th rowspan="2"></th> <th colspan="3">Indoor unit</th> </tr> <tr> <th>Master</th> <th>Slave-a</th> <th>Slave-b</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SW5-1</td> <td>SW5-1</td> <td>OFF</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>SW5-2</td> <td>OFF</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table>		Dip switch		Indoor unit			Master	Slave-a	Slave-b	SW5-1	SW5-1	OFF	OFF	ON	SW5-2	OFF	ON	OFF
Dip switch				Indoor unit														
		Master	Slave-a	Slave-b														
SW5-1	SW5-1	OFF	OFF	ON														
	SW5-2	OFF	ON	OFF														

Note:

Error code Remote control: E16	LED	Green	Red	Content Indoor fan motor anomaly
	Indoor	Keeps flashing	1-time flash	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models

2. Error detection method
Detected by rotation speed of indoor fan motor

3. Condition of error displayed
<ul style="list-style-type: none"> When actual rotation speed of indoor fan motor drops to lower than 200min⁻¹ for 30 seconds continuously, the compressor and the indoor fan motor stop. After 2-seconds, it starts again automatically, but if this error occurs 4 times within 60 minutes after the initial detection.

4. Presumable cause
<ul style="list-style-type: none"> Defective indoor control PCB Foreign material at rotational area of fan propeller Defective fan motor Dust on indoor control PCB Blown fuse External noise, surge

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD Q1{Does any foreign material intervene in rotational area of fan propeller?} -- YES --> C1[Remove foreign material.] Q1 -- NO --> Q2{Does the fan rotate smoothly when turned by hand?} Q2 -- YES --> Q3{Is DC280V detected between ①-④ of fan motor connector CNM?} Q2 -- NO --> C2[Replace the fan motor.] Q3 -- YES --> B1[Power source reset] Q3 -- NO --> Q4{Is the fuse F3 blown?} B1 --> Q5{Is it normalized?} Q4 -- YES --> C3[Replace faulty fan motor and indoor control PCB.] Q4 -- NO --> C4[Check power voltage.] Q5 -- YES --> C5[Malfunction by temporary noise.] Q5 -- NO --> C6[Replace fan motor. (If the error persists after replacing the fan motor, replace the indoor control PCB.)] </pre>	

Note:

Error code Remote control: E18	LED	Green	Red	Content Address setting error of master and slave indoor units
	Indoor	Keeps flashing	1-time flash	
	Outdoor	Keeps flashing	Stays Off	

1. Applicable model
All models

2. Error detection method
IU address has been set using the “Master IU address set” function of remote control.

3. Condition of error displayed
Same as above

4. Presumable cause
Same as above

5. Troubleshooting

Diagnosis	Countermeasure
<pre> graph TD A[E18 occurs] --> B{Is "Master IU address set" function of remote control used?} B -- YES --> C[Return address No. to "IU ..." using [▲] or [▲] button.] </pre>	<p>Return address No. to “IU ...” using [▲] or [▲] button.</p>

Note:

Error code Remote control: E19	LED	Green	Red	Content Indoor unit operation check error
	Indoor	Keeps flashing	1-time flash	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models

2. Error detection method
After indoor operation check, when the communication between indoor and outdoor unit is established and SW7-1 is still kept ON.

3. Condition of error displayed
Same as above

4. Presumable cause
Mistake in SW7-1 setting (Due to forgetting to turn OFF SW7-1 after indoor operation check)

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD Start[E19 occurs when the power ON] --> Decision{Is SW7-1 on the indoor control PCB ON?} Decision -- NO --> Countermeasure1[Defective indoor control PCB (Defective SW7) -> Replace.] Decision -- YES --> Countermeasure2[Turn SW7-1 on the indoor control PCB OFF and reset the power.] </pre>	

Note:

Error code Remote control: E20	LED	Green	Red	Content Indoor fan motor rotation speed anomaly
	Indoor	Keeps flashing	1-time flash	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models

2. Error detection method
Detected by rotation speed of indoor fan motor

3. Condition of error displayed
When the actual fan rotation speed does not reach to the speed of [required speed -50 min ⁻¹] after 2 minutes have been elapsed since the fan motor rotation speed command was output, the unit stops by detecting indoor fan motor anomaly.

4. Presumable cause
<ul style="list-style-type: none"> • Defective indoor control PCB • Foreign material at rotational area of fan propeller • Defective fan motor • Dust on indoor control PCB • Blown fuse • External noise, surge

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD Q1{Does any foreign material intervene in rotational area of fan propeller?} -- YES --> C1[Remove foreign material.] Q1 -- NO --> Q2{Does the fan rotate smoothly when turned by hand?} Q2 -- YES --> Q3{Is DC280V detected between ①-④ of fan motor connector CNM?} Q2 -- NO --> C2[Replace the fan motor.] Q3 -- YES --> PR[Power source reset] Q3 -- NO --> Q4{Is the fuse F3 blown?} PR --> Q5{Is it normalized?} Q4 -- YES --> C3[Replace faulty fan motor and indoor control PCB.] Q4 -- NO --> C4[Check power voltage.] Q5 -- YES --> C5[Malfunction by temporary noise.] Q5 -- NO --> C6[Replace fan motor. (If the error persists after replacing the fan motor, replace the indoor control PCB.)] </pre>	<p>Remove foreign material.</p> <p>Replace the fan motor.</p> <p>Check power voltage.</p> <p>Replace faulty fan motor and indoor control PCB.</p> <p>Replace fan motor. (If the error persists after replacing the fan motor, replace the indoor control PCB.)</p> <p>Malfunction by temporary noise.</p>

Note:

Error code Remote control: E21	LED	Green	Red	Content Defective panel switch operation
	Indoor	Keeps flashing	1-time flash	
	Outdoor	Keeps flashing	Stays OFF	


1. Applicable model
All models

2. Error detection method
Panel switch (PS) has detected open for more than 1 second.

3. Condition of error displayed
Same as above

- 4. Presumable cause**
- Defective panel switch
 - Disconnection of wiring
 - Defective indoor control PCB

5. Troubleshooting

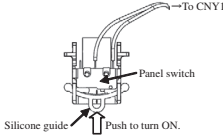Diagnosis	Countermeasure
<p>Is grill opened?</p> <p>NO</p> <p>Does matter improve if panel switch is turned ON forcibly after resetting error?</p> <p>NO</p> <p>Are connectors at right inserted properly?</p> <p>YES</p> <p>Is there continuity between ①-④ of CNV on indoor control PCB when panel switch operation is checked?</p>	<p>YES → Reset the error and close the grill.</p> <p>YES → Insufficient push on the panel switch at the internal face of grill → Attach 3 mm thick rubber sheet at the section where the panel switch touches the inside of grill. Close then the grill.</p> <p>NO → Disconnected, poorly connected connectors → Reinsert properly.</p>  <p>• Defective panel switch or incorrect panel switch wiring → Replace panel switch.</p> <p>• Broken wire between panel switch PCB (CNV) → Correct or replace wire.</p> <p>YES → Defective indoor control PCB → Replace indoor control PCB.</p>

Note:

Error code Remote control: E28	LED	Green	Red	Content Remote control temperature thermistor anomaly
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	Keeps flashing	Stays OFF	

1. Applicable model
All models


2. Error detection method
Detection of anomalously low temperature (resistance) of remote control temperature thermistor (Thc)

3. Condition of error displayed
When the temperature thermistor detects -50°C or lower for 5 seconds continuously, the compressor stops. After 3-minutes delay, the compressor starts again automatically, but if this error occurs again within 60 minutes after the initial detection.

4. Presumable cause

- Faulty connection of remote control temperature thermistor
- Defective remote control temperature thermistor
- Defective remote control PCB

5. Troubleshooting

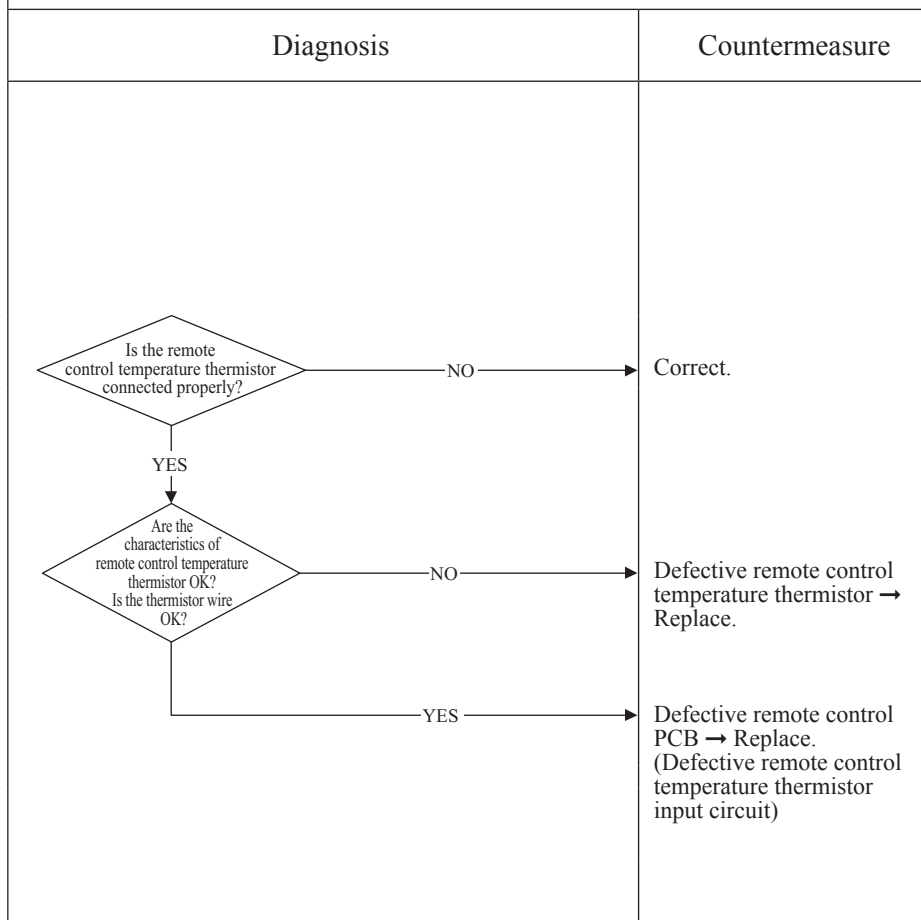

Resistance-temperature characteristics of remote control temperature thermistor (Thc)

Temperature (°C)	Resistance value (kΩ)	Temperature (°C)	Resistance value (kΩ)
0	65	30	16
1	62	32	15
2	59	34	14
4	53	36	13
6	48	38	12
8	44	40	11
10	40	42	9.9
12	36	44	9.2
14	33	46	8.5
16	30	48	7.8
18	27	50	7.3
20	25	52	6.7
22	23	54	6.3
24	21	56	5.8
26	19	58	5.4
28	18	60	5.0

Note: After 10 seconds has passed since remote control thermistor was switched from valid to invalid, E28 will not be displayed even if the thermistor harness is disconnected. At same time the thermistor, which is effective, is switched from remote control thermistor to indoor return air temperature thermistor. Even though the remote control thermistor is set to be Effective, the return air temperature displayed on remote control for checking still shows the value detected by indoor return air temperature thermistor, not by remote control temperature thermistor.

Error code Remote control: E35	LED	Green	Red	Content Cooling overload operation (Model SRC40-60, FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	2-time flash	

1. Applicable model
Model SRC40-60, FDC71-100VNP

2. Error detection method

Outdoor heat exchanger temperature (°C)
Note(1) Values in () are applicable when outdoor temperature (TH2) is lower than 32°C

3. Condition of error displayed
When anomalous outdoor heat exchanger temperature occurs 5 times within 60 minutes or 63(56)°C or higher continues for 10 minutes, including the compressor stop.

4. Presumable cause

- Defective outdoor heat exchanger temperature sensor
- Defective outdoor main PCB
- Indoor, outdoor unit installation spaces
- Short-circuit of air on indoor, outdoor units
- Fouling, clogging of heat exchanger
- Excessive refrigerant quantity

5. Troubleshooting

Diagnosis	Countermeasure
<p>* For the characteristics of outdoor heat exchanger temperature sensor, refer to E37.</p> <p>Are normal the characteristics of outdoor heat exchanger temperature sensor normal?</p> <p>NO →</p> <p>YES →</p> <p>Is the unit operating in the state of cooling overload?</p> <p>YES →</p> <p>NO →</p> <p>Is the high pressure control normal?</p> <p>NO →</p> <p>YES →</p> <p>Is the temperature (measured actually) at direction of error correct?</p> <p>NO →</p> <p>YES →</p>	<p>Replace outdoor heat exchanger temperature sensor.</p> <p>Check unit side.</p> <ul style="list-style-type: none"> • Isn't the air circulation of outdoor unit short-circuited? • Are installation spaces adequate? • Isn't there any fouling or clogging on heater exchanger? <p>Control operation check*.</p> <p>Defective outdoor main PCB → Replace.</p> <p>Excessive refrigerant amount: Recharge refrigerant by weighing proper amount on a scale.</p>

* For the contents of control, refer to the protective control by controlling compressor rotation speed and cooling high pressure protective control of micro computer control function for corresponding models.

Note:

Error code Remote control: E35	LED	Green	Red	Content Cooling overload operation (Models FDC71-250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

1.Applicable model
Models FDC71-250

2.Error detection method
For the error detection method, refer to the protective control by controlling compressor rotation speed and cooling high pressure protective control of micro computer control function for corresponding models.

3.Condition of error displayed
When outdoor heat exchanger temperature anomaly is detected 5 times within 60 minutes or this anomalous state is detected 60 minutes continuously including compressor stop.

4.Presumable cause
<ul style="list-style-type: none"> • Defective outdoor heat exchanger temperature thermistor • Defective outdoor control PCB • Indoor, outdoor unit installation spaces • Short-circuit of air on indoor, outdoor units • Fouling, clogging of heat exchanger • Excessive refrigerant amount

5.Troubleshooting	
Diagnosis	Countermeasure
<p style="text-align: right;">* For the characteristics of outdoor heat exchanger temperature thermistor, refer to E37.</p> <pre> graph TD Q1{Are the characteristics of outdoor heat exchanger temperature thermistor normal?} Q2{Is the unit operating in the state of cooling overload?} Q3{Is the high pressure control normal?} Q4{Is the temperature (measured actually) at detection of error correct?} Q1 -- NO --> C1[Replace outdoor heat exchanger temperature thermistor.] Q1 -- YES --> Q2 Q2 -- YES --> C2[Check unit side. • Isn't the air circulation of outdoor unit short-circuited? • Are installation spaces adequate? • Isn't there any fouling or clogging on heat exchanger?.] Q2 -- NO --> Q3 Q3 -- NO --> C3[Control operation check *.] Q3 -- YES --> Q4 Q4 -- NO --> C4[Defective outdoor control PCB -> Replace.] Q4 -- YES --> C5[Excessive refrigerant amount : Recharge refrigerant by weighing proper amount on a scale.] </pre>	
<p>* For the contents of control, refer to the protective control by controlling compressor rotation speed and cooling high pressure protective control of micro computer control function for corresponding models.</p>	

Note:

Error code Remote control: E36	LED	Green	Red	Content Discharge pipe temperature error
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1[5]-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

Note (1) Value in [] is for the models SRC40-60, FDC71, 90VNP.

<p>1. Applicable model</p> <p>All models</p>	<p>5. Troubleshooting</p> <table border="1"> <thead> <tr> <th>Diagnosis</th> <th>Countermeasure</th> </tr> </thead> <tbody> <tr> <td> <p>Are the characteristics of discharge pipe temperature thermistor normal?</p> <p>* For the characteristics of discharge pipe temperature, refer to E39.</p> <p>NO →</p> </td> <td>Replace discharge pipe temperature thermistor.</td> </tr> <tr> <td> <p>YES</p> <p>Is the discharge pipe temperature error persisted during cooling operation?</p> <p>YES →</p> </td> <td>Insufficient refrigerant amount : Recharge refrigerant by weighing proper amount on a scale.</td> </tr> <tr> <td> <p>NO</p> <p>Is the discharge pipe temperature control normal?</p> <p>NO →</p> </td> <td>Control operation check *.</td> </tr> <tr> <td> <p>YES</p> <p>Is the temperature (measured actually) at detection of error correct?</p> <p>NO →</p> </td> <td>Defective outdoor control PCB → Replace.</td> </tr> <tr> <td> <p>YES</p> </td> <td> <p>Check unit side:</p> <ul style="list-style-type: none"> • Isn't filter clogged?. • Are adequate indoor, outdoor unit installation spaces?. • Isn't there any short-circuit of air?. • Isn't there any fouling, clogging on indoor heat exchanger?. </td> </tr> </tbody> </table> <p>* For the contents of control, refer to the protective control by controlling compressor rotation speed and cooling high pressure protective control of micro computer control function for corresponding models.</p>	Diagnosis	Countermeasure	<p>Are the characteristics of discharge pipe temperature thermistor normal?</p> <p>* For the characteristics of discharge pipe temperature, refer to E39.</p> <p>NO →</p>	Replace discharge pipe temperature thermistor.	<p>YES</p> <p>Is the discharge pipe temperature error persisted during cooling operation?</p> <p>YES →</p>	Insufficient refrigerant amount : Recharge refrigerant by weighing proper amount on a scale.	<p>NO</p> <p>Is the discharge pipe temperature control normal?</p> <p>NO →</p>	Control operation check *.	<p>YES</p> <p>Is the temperature (measured actually) at detection of error correct?</p> <p>NO →</p>	Defective outdoor control PCB → Replace.	<p>YES</p>	<p>Check unit side:</p> <ul style="list-style-type: none"> • Isn't filter clogged?. • Are adequate indoor, outdoor unit installation spaces?. • Isn't there any short-circuit of air?. • Isn't there any fouling, clogging on indoor heat exchanger?.
Diagnosis	Countermeasure												
<p>Are the characteristics of discharge pipe temperature thermistor normal?</p> <p>* For the characteristics of discharge pipe temperature, refer to E39.</p> <p>NO →</p>	Replace discharge pipe temperature thermistor.												
<p>YES</p> <p>Is the discharge pipe temperature error persisted during cooling operation?</p> <p>YES →</p>	Insufficient refrigerant amount : Recharge refrigerant by weighing proper amount on a scale.												
<p>NO</p> <p>Is the discharge pipe temperature control normal?</p> <p>NO →</p>	Control operation check *.												
<p>YES</p> <p>Is the temperature (measured actually) at detection of error correct?</p> <p>NO →</p>	Defective outdoor control PCB → Replace.												
<p>YES</p>	<p>Check unit side:</p> <ul style="list-style-type: none"> • Isn't filter clogged?. • Are adequate indoor, outdoor unit installation spaces?. • Isn't there any short-circuit of air?. • Isn't there any fouling, clogging on indoor heat exchanger?. 												
<p>2. Error detection method</p> <p>For the error detection method, refer to the protective control by controlling compressor rotation speed and cooling high pressure protective control of micro computer control function for corresponding models.</p>													
<p>3. Condition of error displayed</p> <p>When discharge pipe temperature anomaly is detected 2 times within 60 minutes or this anomalous state is detected 60 minutes continuously including compressor stop.</p>													
<p>4. Presumable cause</p> <ul style="list-style-type: none"> • Defective outdoor control PCB • Defective discharge pipe temperature thermistor • Clogged filter • Indoor, outdoor unit installation spaces • Short-circuit of air on indoor, outdoor units • Fouling, clogging of heat exchanger 													

Note:

Error code Remote control: E37	LED	Green	Red	Content Outdoor heat exchanger temperature thermistor anomaly
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1[8]-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

Note (1) Value in [] is for the models SRC40-60, FDC71, 90VNP.

1. Applicable model
All models

2. Error detection method
Detection of anomalously low temperature (resistance) on the outdoor heat exchanger temperature thermistor

3. Condition of error displayed
<ul style="list-style-type: none"> When the temperature thermistor detects $-50(-55)^{\circ}\text{C}$ or lower for 20 seconds continuously within 2 minutes to 2 minutes 20 seconds after the compressor ON, the compressor stops. After 3-minutes delay, the compressor starts again automatically, but if this anomalous temperature is detected 3 times within 40 minutes. When $-50(-55)^{\circ}\text{C}$ or lower is detected for 5 seconds continuously within 20 second after compressor ON. <p>Note (1) Value in () are for the models SRC40-60, FDC71-100VNP.</p>

4. Presumable cause
<ul style="list-style-type: none"> Defective outdoor control PCB Broken thermistor harness or temperature sensing section Disconnected wire connection (connector)

5. Troubleshooting	
Diagnosis	Countermeasure
<p style="text-align: center;">Temperature-resistance characteristics</p>	

Note:

Error code Remote control: E38	LED	Green	Red	Content Outdoor air temperature thermistor anomaly
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1[8]-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

Note (1) Value in [] is for the models SRC40-60, FDC71-100VNP.

1. Applicable model
All models

2. Error detection method
Detection of anomalously low temperature (resistance) on outdoor air temperature thermistor

3. Condition of error displayed
<ul style="list-style-type: none"> When the temperature thermistor detects -45(-55)°C or lower for 5 seconds continuously within 2 minutes to 2 minutes 20 seconds after the compressor ON, the compressor stops. After 3-minutes delay, the compressor starts again automatically, but if this anomalous temperature is detected 3 times within 40 minutes. When -45(-55)°C or lower is detected for 5 seconds continuously within 20 second after compressor ON. <p>Note (1) Value in () are for the models SRC 40-60, FDC71-100VNP.</p>

4. Presumable cause
<ul style="list-style-type: none"> Defective outdoor control PCB Broken thermistor harness or temperature sensing section (Check molding.) Disconnected wire connection (connector)

5. Troubleshooting	
Diagnosis	Countermeasure
<ul style="list-style-type: none"> Models SRC40-60, FDC71-100VNP <p>Temperature-resistance characteristics</p>	
<ul style="list-style-type: none"> Models FDC71 - 250 <p>Temperature-resistance characteristics</p>	

Note:

Error code Remote control: E39	LED	Green	Red	Content Discharge pipe temperature thermistor anomaly
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1[8]-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

Note (1) Value in [] is for the models SRC40-60, FDC71-100VNP.

1. Applicable model
All models

2. Error detection method
Detection of anomalously low temperature (resistance) on the discharge pipe temperature thermistor

3. Condition of error displayed
When the temperature thermistor detects -10(-25)°C or lower for 5 seconds continuously within 10 minutes to 10 minutes 20 seconds after the compressor ON, the compressor stops. After 3-minutes delay, the compressor starts again automatically, but if this anomalous temperature is detected 3 times within 40 minutes. Note (1) Value in () is for the models SRC40-60, 71-100VNP.

4. Presumable cause
<ul style="list-style-type: none"> Defective outdoor control PCB Broken thermistor harness or temperature sensing section (Check molding.) Disconnected wire connection (connector)

5. Troubleshooting								
<table border="1"> <thead> <tr> <th>Diagnosis</th> <th>Countermeasure</th> </tr> </thead> <tbody> <tr> <td> <pre> graph TD Q1{Is the discharge pipe temperature thermistor connector connected properly?} -- NO --> C1[Correct connector.] Q1 -- YES --> Q2{Are the characteristics of discharge pipe temperature thermistor OK?} Q2 -- NO --> C2[Defective discharge pipe temperature thermistor -> Replace.] Q2 -- YES --> C3[Defective outdoor control PCB -> Replace. (Defective temperature thermistor input circuit)] </pre> </td> <td></td> </tr> <tr> <td> <ul style="list-style-type: none"> Models SRC40-60, FDC71-100VNP (Broken wire) Temperature-resistance characteristics </td> <td></td> </tr> <tr> <td> <ul style="list-style-type: none"> Models FDC71-250 (Broken wire) Temperature-resistance characteristics </td> <td></td> </tr> </tbody> </table>	Diagnosis	Countermeasure	<pre> graph TD Q1{Is the discharge pipe temperature thermistor connector connected properly?} -- NO --> C1[Correct connector.] Q1 -- YES --> Q2{Are the characteristics of discharge pipe temperature thermistor OK?} Q2 -- NO --> C2[Defective discharge pipe temperature thermistor -> Replace.] Q2 -- YES --> C3[Defective outdoor control PCB -> Replace. (Defective temperature thermistor input circuit)] </pre>		<ul style="list-style-type: none"> Models SRC40-60, FDC71-100VNP (Broken wire) Temperature-resistance characteristics 		<ul style="list-style-type: none"> Models FDC71-250 (Broken wire) Temperature-resistance characteristics 	
Diagnosis	Countermeasure							
<pre> graph TD Q1{Is the discharge pipe temperature thermistor connector connected properly?} -- NO --> C1[Correct connector.] Q1 -- YES --> Q2{Are the characteristics of discharge pipe temperature thermistor OK?} Q2 -- NO --> C2[Defective discharge pipe temperature thermistor -> Replace.] Q2 -- YES --> C3[Defective outdoor control PCB -> Replace. (Defective temperature thermistor input circuit)] </pre>								
<ul style="list-style-type: none"> Models SRC40-60, FDC71-100VNP (Broken wire) Temperature-resistance characteristics 								
<ul style="list-style-type: none"> Models FDC71-250 (Broken wire) Temperature-resistance characteristics 								

Note:

Error code Remote control: E40	LED	Green	Red	Content Service valve (gas side) closing operation (Models SRC40-60, FDC71, 90VNP only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	1-time flash	

1. Applicable model
Models SRC40-60, FDC71, 90VNP


2. Error detection method
If the inverter output current value exceeds the setting value within 80 seconds after the compressor ON in the heating mode, the compressor stops.

3. Condition of error displayed

- If the output current of inverter exceeds the specifications, it makes the compressor stopping. (In heating mode)
- After 3-minute delay, the compressor restarts, but if this anomaly occurs 2 times within 20 minute after the initial detection.

4. Presumable cause

- Service valve (gas side) closing
- Defective outdoor main PCB

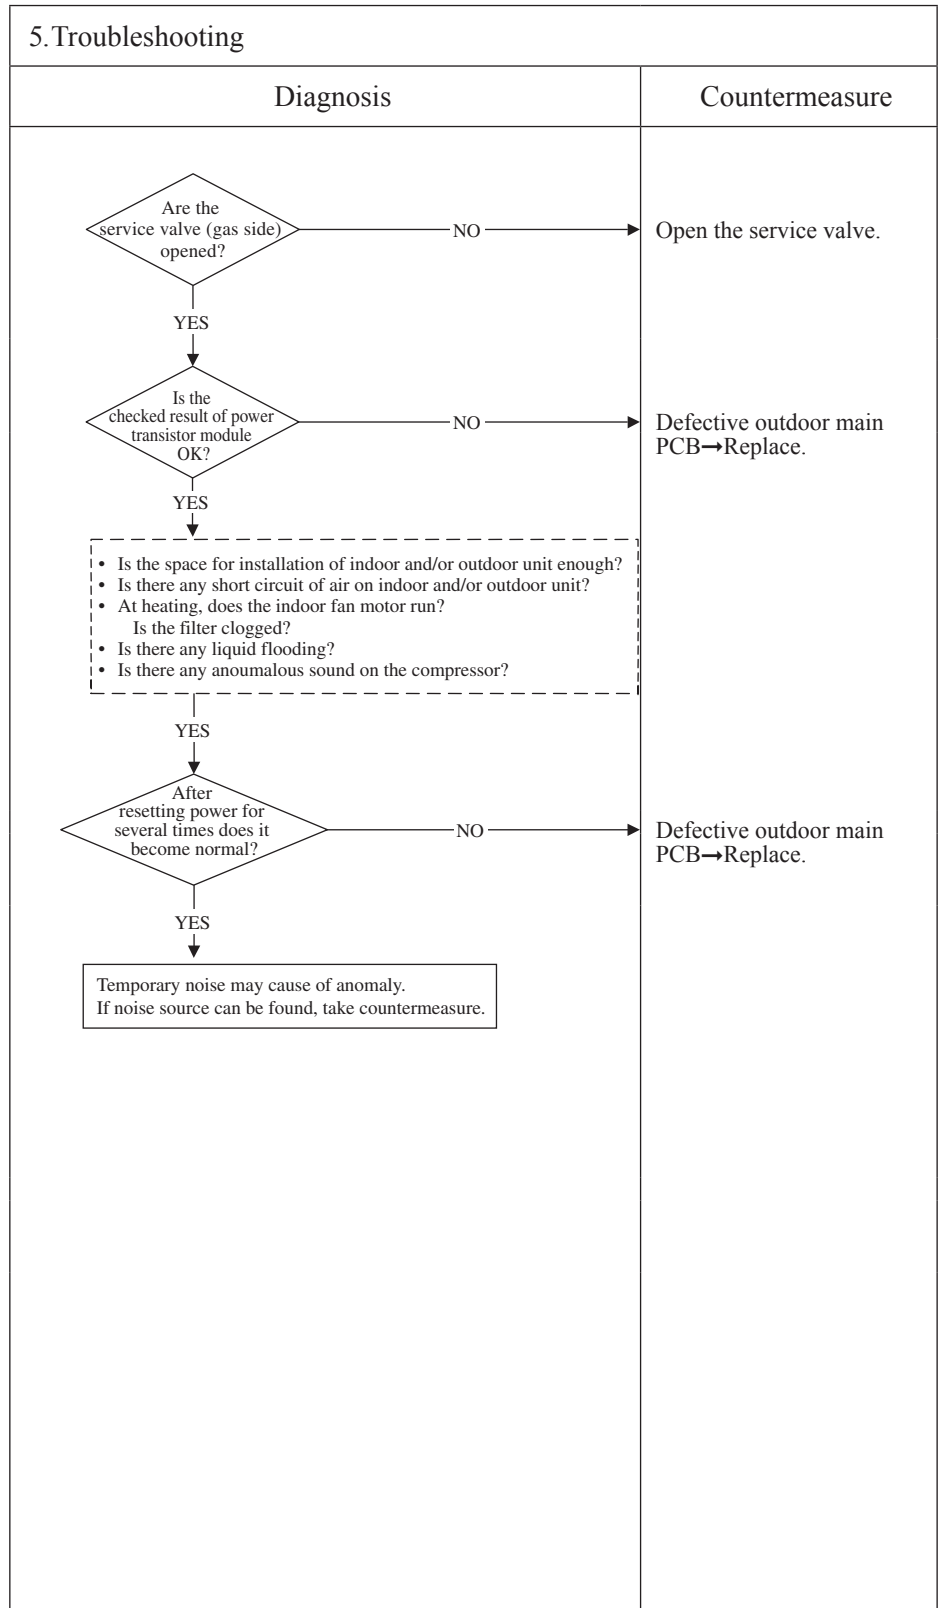

Note:

Error code Remote control: E40	LED	Green	Red	Content High pressure error (63H1 activated) (Models FDC71-250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

1. Applicable model
Models FDC71-250

2. Error detection method
When the high pressure switch 63H1 is activated.

3. Condition of error displayed
If 63H1 turns OFF (opened), the compressor stops. After 3-minutes delay, the compressor restarts. If this anomaly occurs 5 times within 60 minutes or continues for 60 minutes continuously.

4. Presumable cause
<ul style="list-style-type: none"> • Short circuit of air flow, disturbance of air flow and clogging filter at outdoor heat exchanger/Breakdown of fan motor • Defective outdoor control PCB • Defective 63H1 connector • Defective electronic expansion valve connector • Closed service valve • Mixing of non-condensing gas (nitrogen, etc.)

5. Troubleshooting	
Diagnosis	Countermeasure
<p>If the power source breaker is turned OFF and ON too quickly, E40 may be displayed. (This is normal.)</p> <p>Is the service valve fully opened?</p> <p>NO → Open the service valve.</p> <p>YES</p> <p>Has 63H1 activated?</p> <p>NO → Is 63H1 connector connected properly?</p> <p>NO → Correct 63H1 connector.</p> <p>YES</p> <p>Is the electronic expansion valve connector connection OK?</p> <p>NO → Correct electronic expansion valve connector.</p> <p>YES → Defective outdoor control PCB → Replace. (Defective 63H1 input circuit)</p> <p>If any anomaly exists on the electronic expansion valve connector connection, the power source must be reset.</p> <p>On operation of 63H1</p> <p>1. During cooling</p> <ul style="list-style-type: none"> • Is the outdoor fan motor running? • Isn't any short-circuit of air on the outdoor unit? • Are sufficient return air/supply air space secured? <p>2. During heating</p> <ul style="list-style-type: none"> • Isn't the indoor heat exchanger temperature thermistor disconnected from the thermistor casing? • Isn't the filter clogged? <p>* Under the condition of overcharging refrigerant, 63H1 may activate due to delay of starting the preventive control by compressor speed control, because detected heat exchanger temperature, which conducts compressor speed control, becomes lower than normal condition due to excess sub-cooling degree.</p>	

Note: In the protective control range for compressor startup (initial startup after power ON), even if 63H1 is activated only once (63H1 turns OFF), immediately the error is displayed.

Error code Remote control: E41	LED	Green	Red	Content Power transistor overheat (Models FDC71-140 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED 6-time flash		

1.Applicable model
Models FDC71-140

2.Error detection method
When less than DC14V of the output voltage is detected between ② and ③ on CNI3, E41 is displayed. (See "Note" mentioned below)

3.Condition of error displayed
Seme as above.

4.Presumable cause
<ul style="list-style-type: none"> • Inverter PCB anomaly • Outdoor fan motor anomaly • Outdoor control PCB anomaly • Noise filter PCB anomaly

5.Troubleshooting	
Diagnosis	Countermeasure
<p>• Single phase models (FDC71-140VNX, 100-140VN)</p> <pre> graph TD Q1{Is DC15V detected between ② and ③ on CNI3? (1) (2)} Q1 -- YES --> C1[Replace inverter PCB . If not solved, replace Noise filter PCB as well.] Q1 -- NO --> N1[Note(1) Under anomalous conditions, the voltage becomes less than DC14V.] N1 --> Q2{Is DC15V detected after disconnecting outdoor fan motor? (1)} Q2 -- YES --> C2[Replace outdoor fan motor.] Q2 -- NO --> C3[Replace outdoor control PCB . If not solved, replace inverter PCB as well.] </pre> <p>Note(2) How to check the voltage between ② and ③ of CNI3? ⇒See E51</p> <p>• 3-phase models (FDC100-140VSX, 100-140VS) E41⇒Replace inverter PCB.</p>	

Note: The "Single phase models" of inverter PAC have no function to output the signal for the power transistor overheat. However since the power source for the power transistor and the outdoor fan motor is in the same line, when the anomaly of the outdoor fan motor occurs, E41 is displayed.

Error code Remote control: E41	LED	Green	Red	Content
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED 2-time flash or 8-time flash ⁽¹⁾		

Power transistor overheating
(Models FDC200, 250VSA only)

Note (1) 8-time flash FDC250 model only.

<p>1.Applicable model</p> <p>Model FDC200, 250VSA</p>	<p>5.Troubleshooting</p>	
<p>2.Error detection method</p> <p>When anomalously high temperature is detected by power transistor.</p>	<p>Diagnosis</p>	<p>Countermeasure</p> <p>OK</p> <p>Replace power transistor.</p> <p>Fix properly.</p> <p>Defective inverter PCB → Replace.</p> <p>OK</p>
<p>3.Condition of error displayed</p> <p>Anomalously high temperature of power transistor is detected 5 times within 60 minutes.</p>		
<p>4.Presumable cause</p> <ul style="list-style-type: none"> • Inverter PCB anomaly • Outdoor fan motor anomaly • Improperly fixing of power transistor to radiator fin • Inadequate installation space of outdoor unit 		

Note:

Error code Remote control: E42	LED	Green	Red	Content Current cut (1/2)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED 1-time flash or 9-time flash ⁽¹⁾		

Note (1) 9-time flash is for the FDC250 model only.

1. Applicable model
All models

2. Error detection method
In order to prevent from overcurrent of inverter, if the current exceeds the specifications, it makes the compressor stopping.

3. Condition of error displayed
<ul style="list-style-type: none"> • If the output current of inverter exceeds the specifications, it makes the compressor stopping. • After 3-minute delay, the compressor restarts, but if this anomaly occurs 4 times within 30 minute after the initial detection. (FDC71-250 only)

4. Presumable cause
<ul style="list-style-type: none"> • The service valves closed • Faulty power source • Insufficient refrigerant amount • Faulty compressor • Faulty power transistor module

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD Q1{Is the power source voltage OK?} -- NO --> C1[Check power source.] Q1 -- YES --> Q2{Are the service valves opened?} Q2 -- NO --> C2[Open the service valves.] Q2 -- YES --> Q3{Is the high pressure during operation OK?} Q3 -- NO --> C3[Check refrigerant amount and refrigerant circuit. *In case of transitional increase of high pressure and/or test run, several times restarting may recover it, because liquid refrigerant (migrated) in the compressor is discharged from the compressor.] Q3 -- YES --> Q4{Is the checked result of insulation resistance and coil resistance (1) of compressor motor OK?} Q4 -- NO --> C4[Replace compressor.] Q4 -- YES --> E[To next page.] </pre> <p>(1) 0.864Ω or more at 20°C (Model SRC40-60ZMX-S) 1.154Ω or more at 20°C (Model FDC71VNX) 0.293Ω or more at 20°C (Models FDC100-140VNX) 1.172Ω or more at 20°C (Models FDC100-140VSX) 0.425Ω or more at 20°C (Models FDC100-140VN) 1.504Ω or more at 20°C (Models FDC100-140VS) 1.172Ω or more at 20°C (Model FDC200VSA) 0.309Ω or more at 20°C (Model FDC250VSA) 1.619Ω or more at 20°C (Model FDC71VNP) 1.154Ω or more at 20°C (Model FDC90VNP) 0.51Ω or more at 20°C (Model FDC100VNP)</p>	

Note:

Error code Remote control: E42	LED	Green	Red	Content Current cut (2/2)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED		
		1-time flash or 9-time flash ⁽¹⁾		

Note (1) 9-time flash is for the FDC250 model only.

<p>1. Applicable model</p> <p>All models</p>	<p>5. Troubleshooting</p>	
<p>2. Error detection method</p> <p>In order to prevent from overcurrent of inverter, if the current exceeds the specifications, it makes the compressor stopping.</p>	<p>Diagnosis</p>	<p>Countermeasure</p>
<p>3. Condition of error displayed</p> <ul style="list-style-type: none"> • If the output current of inverter exceeds the specifications, it makes the compressor stopping. • After 3-minute delay, the compressor restarts, but if this anomaly occurs 4 times within 30 minute after the initial detection. (FDC71-250only) 		<p>Defective inverter PCB → Replace. *Replace also the power transistor module. (FDC250 only)</p> <p>Defective inverter PCB → Replace. *Replace also the power transistor module. (FDC250 only)</p>
<p>4. Presumable cause</p> <ul style="list-style-type: none"> • Defective inverter PCB • Faulty power source • Insufficient refrigerant amount • Faulty compressor • Faulty power transistor module 		

Note:


Error code Remote control: E45	LED	Green	Red	Content Communication error between inverter PCB and outdoor control PCB (Models FDC71-250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

1. Applicable model
Models FDC71-250

2. Error detection method
When the communication between inverter PCB and outdoor control PCB is not established.

3. Condition of error displayed
Same as above.

4. Presumable cause
<ul style="list-style-type: none"> • Inverter PCB anomaly • Anomalous connection of connector between the outdoor control PCB and inverter PCB • Outdoor control PCB anomaly • Outdoor fan motor anomaly

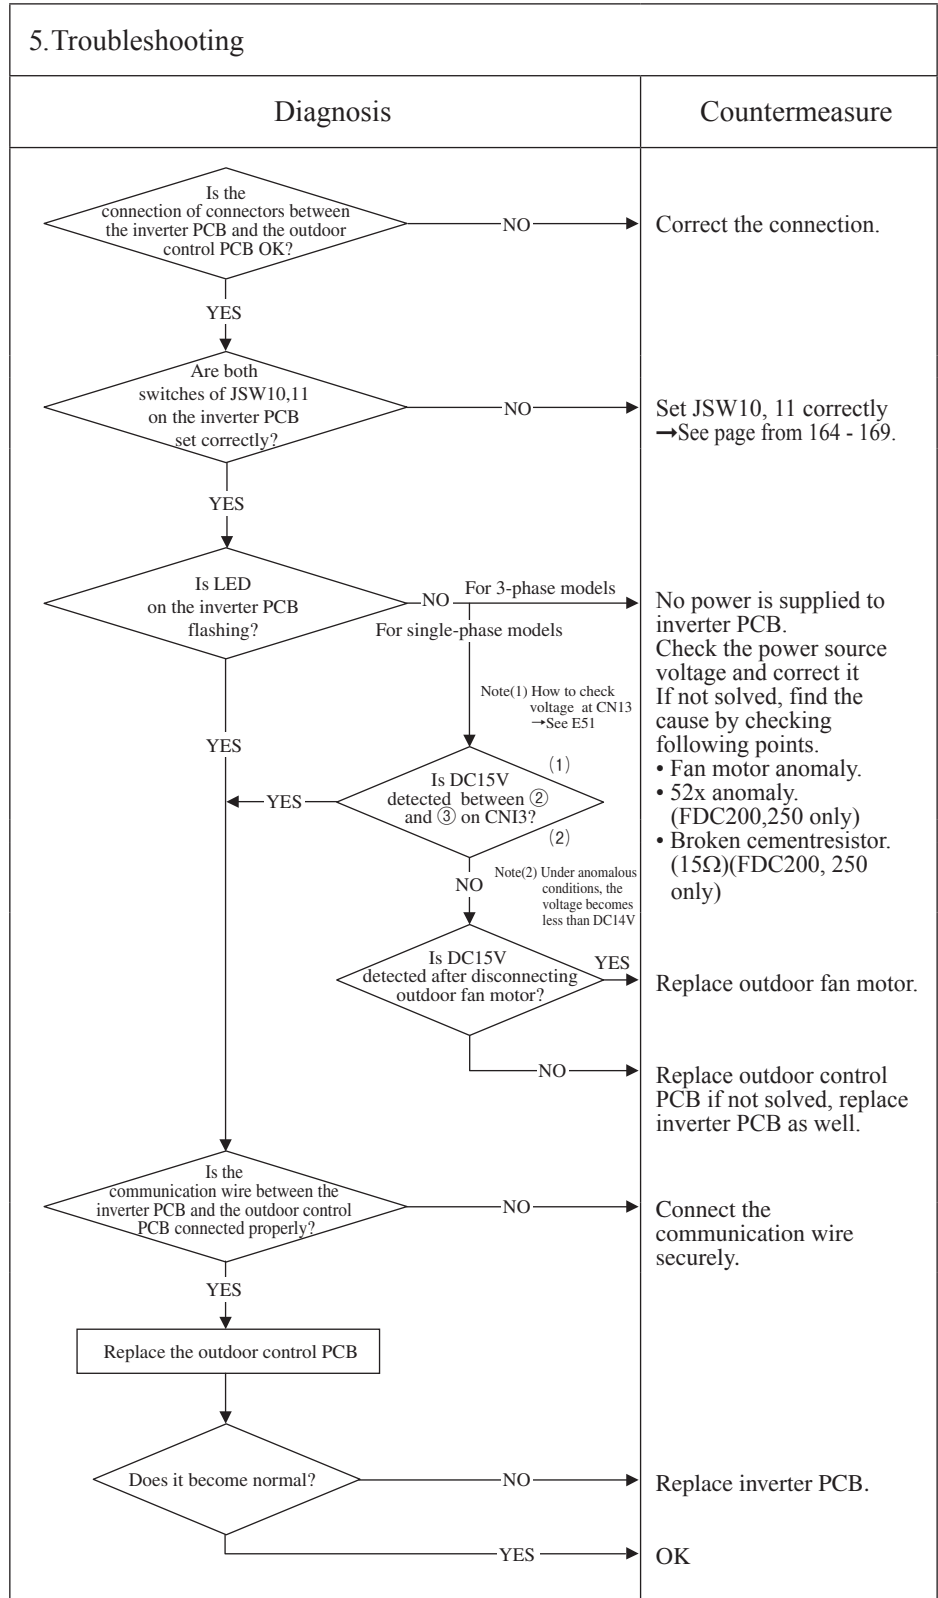

Note:

Error code Remote control: E47	LED	Green	Red	Content Active filter voltage error (Models SRC40-60, FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	2-time flash	

<p>1. Applicable model</p> <p>Models SRC40-60, FDC71-100VNP</p>	5. Troubleshooting	
<p>2. Error detection method</p> <p>Error is displayed if the converter voltage exceeds target voltage (3 times within 20 minutes). Remote control may be set after 3 minutes delay. Error is displayed if the converter voltage is lower than DC210V (1-time within 5 seconds after power ON)</p>	<p>Diagnosis</p> <pre> graph TD A{Is the power source normal?} -- NO --> B[Restore normal condition.] A -- YES --> C{Is voltage within the specified range?} C -- NO --> D[Restore normal condition.] C -- YES --> E{Check soldered surfaces on the outdoor main PCB for foreign matter like dust, fouling, etc.} E -- NO --> F[Remove foreign matter like dust, fouling, etc.] E -- YES --> G[Defective outdoor main PCB -> Replace.] </pre>	<p>Countermeasure</p>
<p>3. Condition of error displayed</p> <p>Same as above</p>	<p>• If the overvoltage (DC voltage is higher than 400V) occurs, Red LED flashes 1-time. (Except FDC100 model)</p>	
<p>4. Presumable cause</p> <ul style="list-style-type: none"> • Defective outdoor main PCB • Dust on outdoor main PCB • Anomalous power source 		

Note:

Error code Remote control: E47	LED	Green	Red	Content Inverter PCB A/F module anomaly (Model FDC71 only)
	Indoor	Keeps flashing	Stays off	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor Inverter PCB	Yellow LED 7-time flashing		

1.Applicable model
Model FDC71

2. Error detection method
In order to prevent from overcurrent of A/F, if the current exceeds the specifications, it makes the compressor stopping.

3. Condition of error displayed
<ul style="list-style-type: none"> • If the output current of A/F exceeds the specifications, it makes the compressor stopping.

4. Presumable cause
<ul style="list-style-type: none"> • Defective inverter PCB

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD Q1{Is the Power source voltage OK?} -- NO --> C1[Check power source.] Q1 -- YES --> Q2{Is the checked results of insulation resistance and coil resistance (1) of compressor motor OK? (1) 1.154Ω or more at 20°C} Q2 -- NO --> C2[Replace compressor.] Q2 -- YES --> C3[Defective outdoor Inverter PCB → Replace.] </pre>	

Note:

Error code Remote control: E48	LED	Green	Red	Content Outdoor fan motor anomaly (Models SRC40-60, FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	ON	

1. Applicable model
Models SRC40-60, FDC71-100VNP

2. Error detection method
Detected by rotation speed of outdoor fan motor

3. Condition of error displayed
When actual rotation speed of outdoor fan motor drops to 75min ⁻¹ or lower for 30 minutes continuously, the compressor and the outdoor fan motor stop. After 3-minutes delay, it starts again automatically, but if this anomaly occurs 3 times within 60 minutes after the initial detection.

4. Presumable cause
<ul style="list-style-type: none"> • Defective outdoor control PCB • Foreign material at rotational area of fan propeller • Defective fan motor • Dust on outdoor control PCB • Blown F3 fuse

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD D1{Does any foreign material intervene in rotational area of fan propeller?} -- YES --> C1[Remove foreign matter.] D1 -- NO --> D2{Does the fan rotate smoothly when turned by hand?} D2 -- YES --> D3{Is DC280V detected between (CNFAN ④ (black)-⑥ (red)) of fan motor connector?} D2 -- NO --> C2[Replace fan motor. If resistance between ① (FG):blue -④(GND):black is detected 1kΩ or lower, it is faulty.] D3 -- YES --> B1[Power source reset] D3 -- NO --> D4{Is F3 (250V1A) fuse blown?} B1 --> D5{Is normal state restored?} D4 -- YES --> C3[Replace faulty fan motor and outdoor control PCB.] D4 -- NO --> C4[Check power source voltage.] D5 -- YES --> C5[Malfunction by temporary noise.] D5 -- NO --> C6[Replace fan motor. (If anomaly persists after replacing fan motor, replace outdoor control PCB.)] </pre>	

Note: When E48 error occurs, in almost cases F3 fuse (1A) on the outdoor control PCB is blown. There are a lot of cases that fuse is blown and E48 occurs due to defective fan motor. And even though only the outdoor control PCB (or fuse) is replaced,, another trouble could occur. Therefore when fuse is blown, check whether the fan motor is OK or not. After confirming the fan motor normal, check by power ON. (Don't power ON without confirming the fan motor normal.)


Error code Remote control: E48	LED	Green	Red	Content Outdoor fan motor anomaly (Models FDC71-250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

1. Applicable model
Models FDC71-250

2. Error detection method
Detected by rotation speed of outdoor fan motor

3. Condition of error displayed
When actual rotation speed of outdoor fan motor (FMo1) drops to 100min ⁻¹ or lower for 30 minutes continuously, the compressor and the outdoor fan motor stop. After 3-minutes delay, it starts again automatically, but if this anomaly occurs 5 times within 60 minutes after the initial detection.

4. Presumable cause
<ul style="list-style-type: none"> • Defective outdoor control PCB • Foreign material at rotational area of fan propeller • Defective fan motor • Dust on outdoor control PCB • Blow fuse • External noise, surge

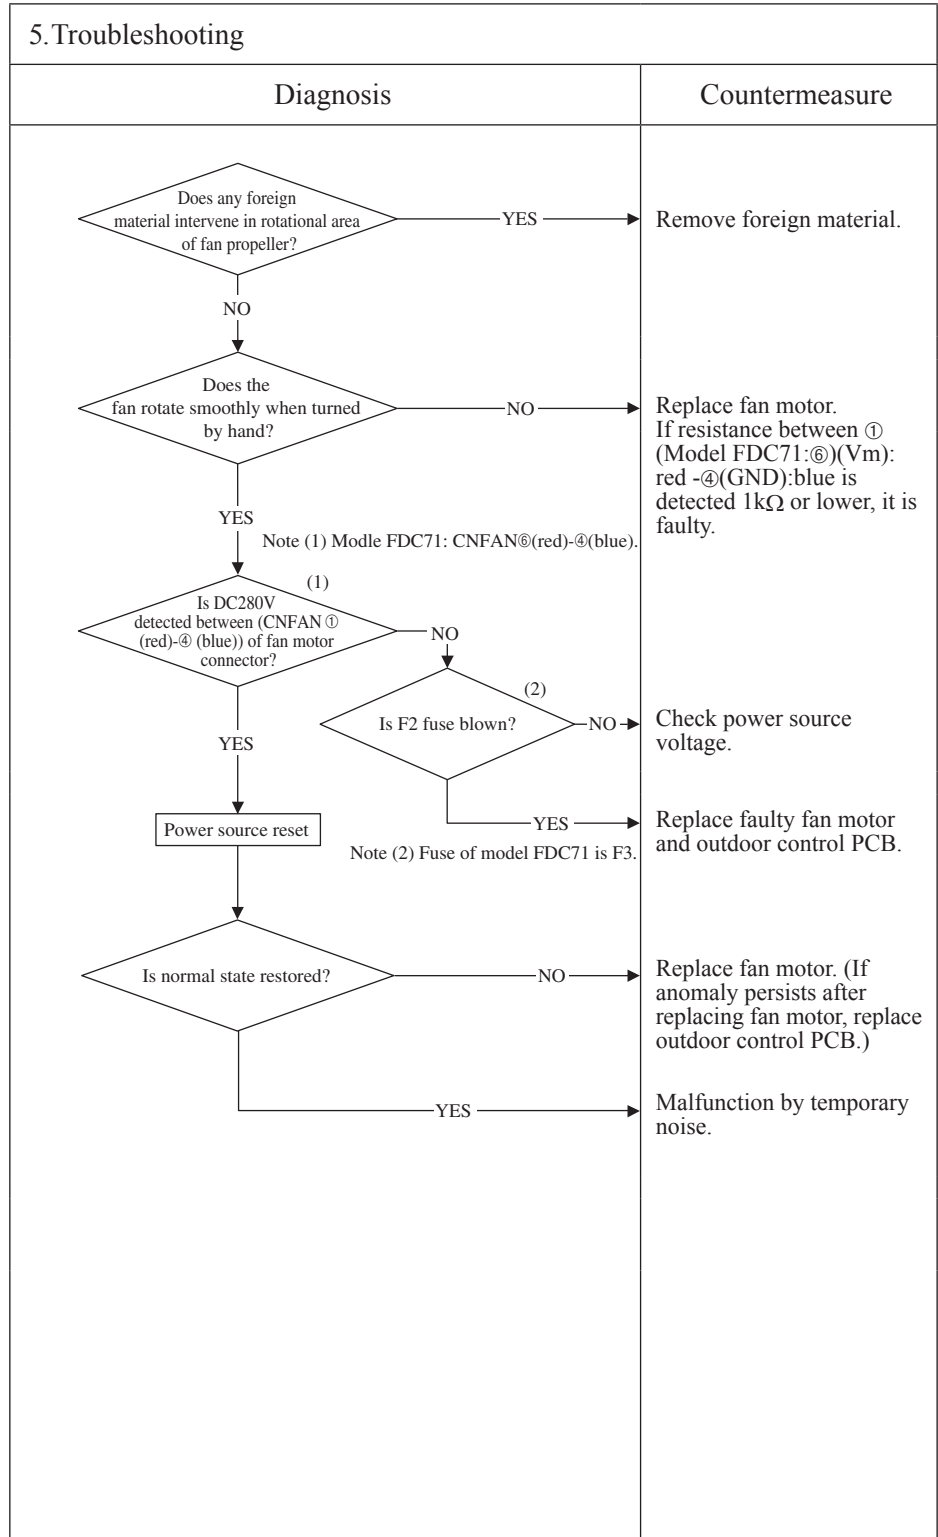

Note: When E48 error occurs, in almost cases F2 fuse (4A) [Model FDC71:F3 fuse (2A)]on the outdoor control PCB is blown. There are a lot of cases that fuse is blown and E48 occurs due to defective fan motor. And even though only the outdoor control PCB (or fuse) is replaced,, another trouble (*1) could occur. Therefore when fuse is blown, check whether the fan motor is OK or not. After confirming the fan motor normal, check by power ON. (Don't power ON without confirming the fan motor normal.)
 *1 The error which does not seem to relate E48 may occur like as “WAIT”, Stay OFF of LED on outdoor control PCB, inverter communication error (E45) and etc.


Error code Remote control: E49	LED	Green	Red	Content Low pressure error or low pressure sensor anomaly (1/2) (Models FDC71-250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

1. Applicable model
Models FDC71-250

2. Error detection method
Detected by low pressure drop and suction superheat

3. Condition of error displayed
<p>① When the low pressure sensor detects 0.079MPa or lower for 15 seconds continuously, compressor stops and it restarts automatically after 3-minutes delay. And if this anomaly occurs 3 times within 60 minutes.</p> <p>② 10 minutes after the compressor starts, if the low pressure sensor detects 0.15MPa or lower for 60 minutes continuously and compressor suction superheat is detected 30degC or higher for 60 minutes continuously. And if this anomaly occurs 3 times within 60 minutes.</p> <p>③ If low pressure sensor detects 0.079MPa or lower for 5 minutes continuously (including the compressor stop status).</p>

4. Presumable cause
<ul style="list-style-type: none"> • Defective outdoor control PCB • Defective low pressure sensor connector • Defective low pressure sensor • Defective suction pipe temperature thermistor connector • Defective suction pipe temperature thermistor

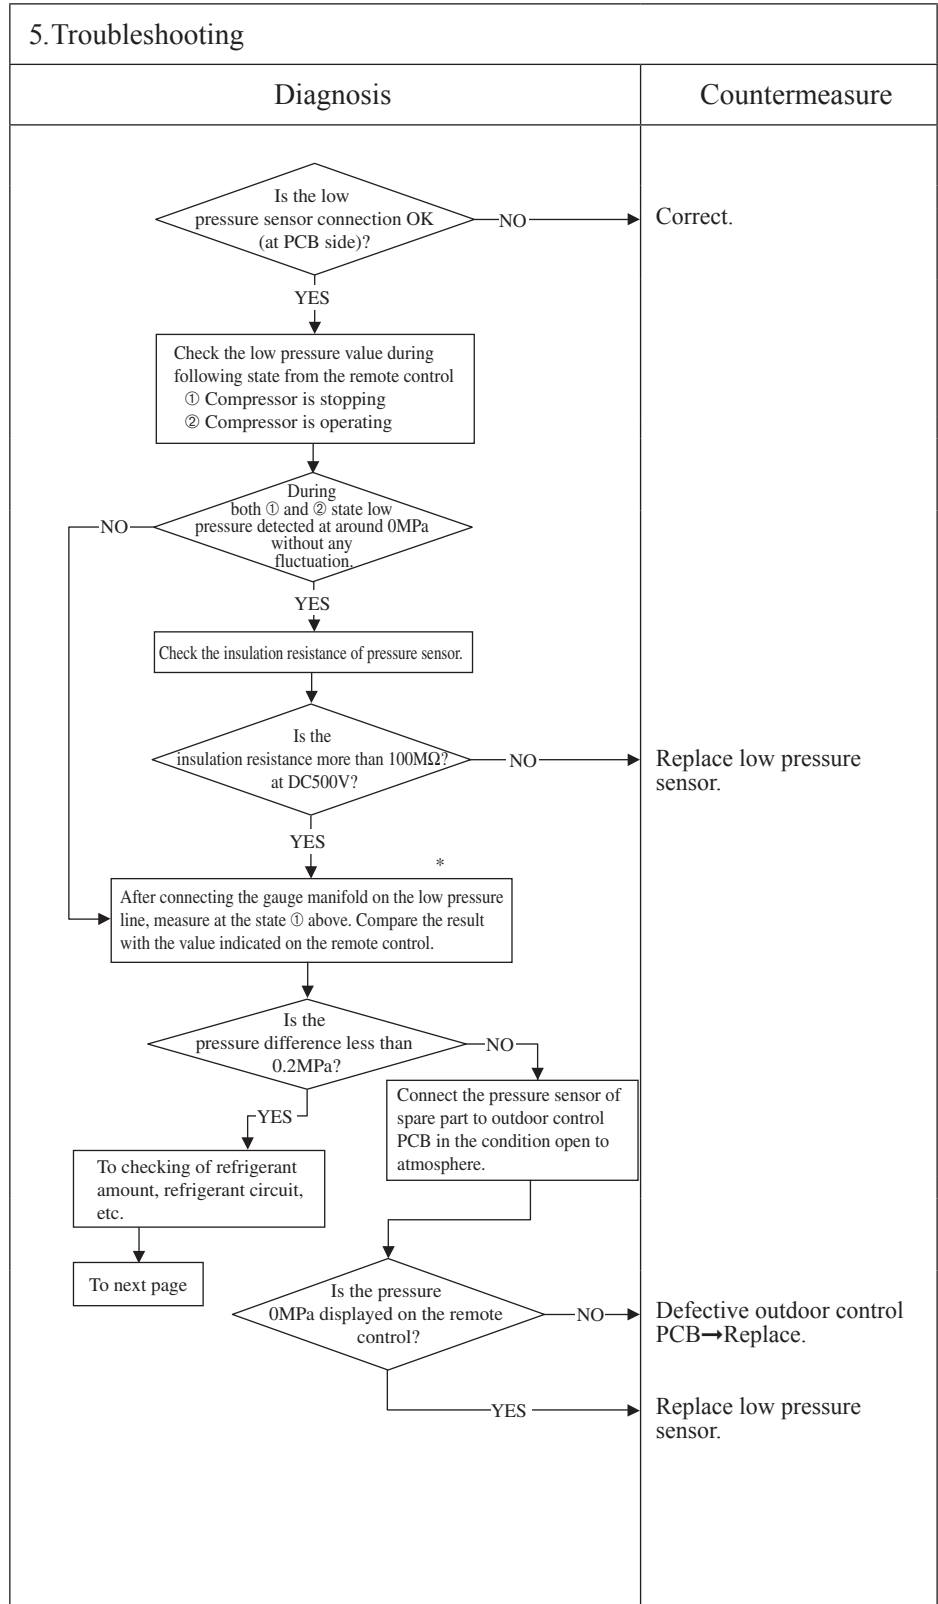

Note: * Connect the gauge manifold to the service valve check joint during cooling, or connect it to the check joint at internal piping of outdoor unit during heating.

Error code Remote control: E49	LED	Green	Red	Content Low pressure error or low pressure sensor anomaly (2/2) (Models FDC71-250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

1.Applicable model
Models FDC71-250

2.Error detection method

3.Condition of error displayed

4.Presumable cause

5.Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD Start[From previous page] --> D1{Is the service valve fully opened?} D1 -- NO --> C1[Open fully.] D1 -- YES --> D2{Are the connections of low pressure sensor and suction pipe temperature thermistor connector OK?} D2 -- NO --> C2[Correct.] D2 -- YES --> D3{Are the characteristics of low pressure sensor, suction pipe temperature thermistor OK?} D3 -- NO --> C3["Defective low pressure sensor, suction pipe temperature thermistor -> Replace."] D3 -- YES --> D4{Is the low pressure normal during operation?} D4 -- NO --> C4[Charge refrigerant.] D4 -- YES --> C5["Defective outdoor control PCB -> Replace. (Defective low pressure sensor, suction pipe temperature thermistor circuits)"] </pre>	

Note:

Error code Remote control: E51	LED	Green	Red	Content Power transistor anomaly (Models SRC40-60, FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	1-time flash	


1.Applicable model
 Models SRC40-60, FDC71-100VNP

2. Error detection method
 Power transistor primary current

3. Condition of error displayed
 If the power transistor primary current exceeds the setting value for 3 seconds, the compressor stops.

4. Presumable cause

- Outdoor control PCB anomaly
- Dust on outdoor control PCB
- Blown F2 fuse

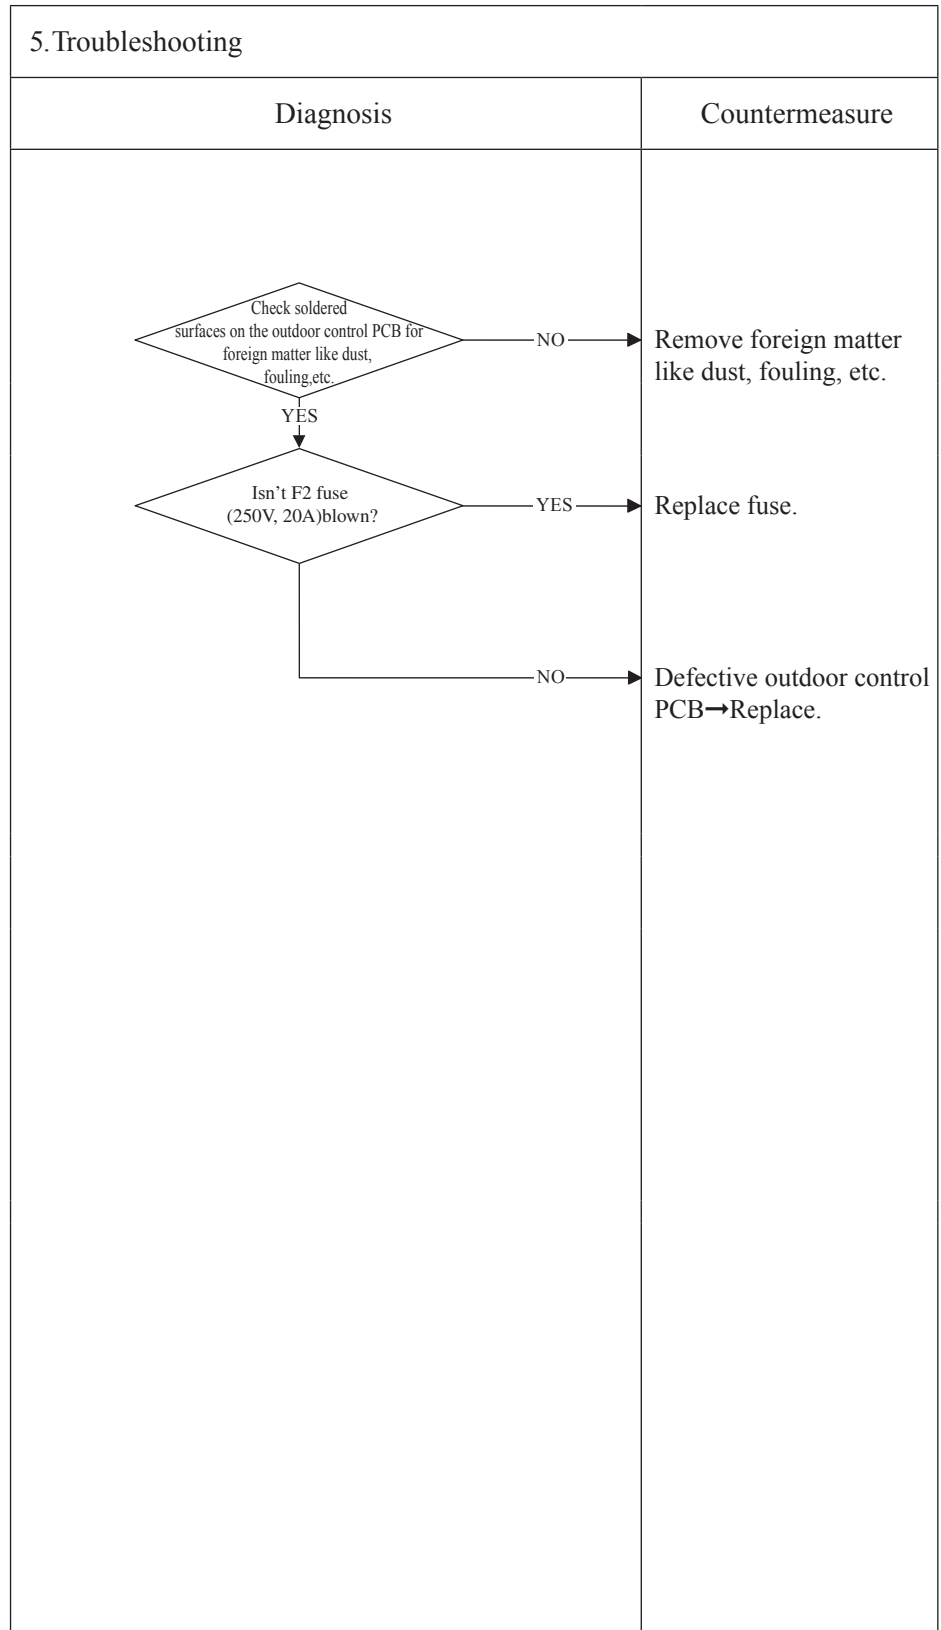

Note:


Error code Remote control: E51	LED	Green	Red	Content Inverter and fan motor anomaly (Models FDC71-140 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED 6-time flash		

1. Applicable model
Models FDC71-140

2. Error detection method
When power transistor anomaly is detected for 15 minutes continuously

3. Condition of error displayed
Same as above


4. Presumable cause
<ul style="list-style-type: none"> • Outdoor fan motor anomaly • Inverter PCB anomaly • Outdoor control PCB anomaly

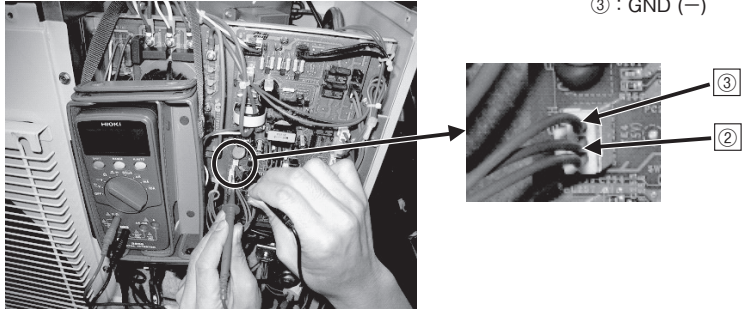5. Troubleshooting	
Diagnosis	Countermeasure
<p>• Models FDC71-140VNX, 100-140VN</p> <p>Is DC15V detected between ② and ③ on CNI3? ① ②</p> <p style="text-align: center;">NO Note(1) Under anomalous conditions, the voltage becomes less than DC14V.</p> <p>Is DC15V detected after disconnecting outdoor fan motor? ①</p> <p style="text-align: center;">NO</p> <p>• Models FDC100-140VSX, 100-140VS Replace immediately the inverter PCB and the power transistor.</p> <p>Note(2) How to check the voltage between ② and ③ of CNI3?</p>	
<p>② : DC15V (+) ③ : GND (-)</p>	
	

Note:

Error code Remote control:E51	LED	Green	Red	Content Inverter or power transistor anomaly (FDC200, 250VSA only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED 2-time flash or 8-time flash ⁽¹⁾		

Note (1) 8-time flash FDC250 model only.
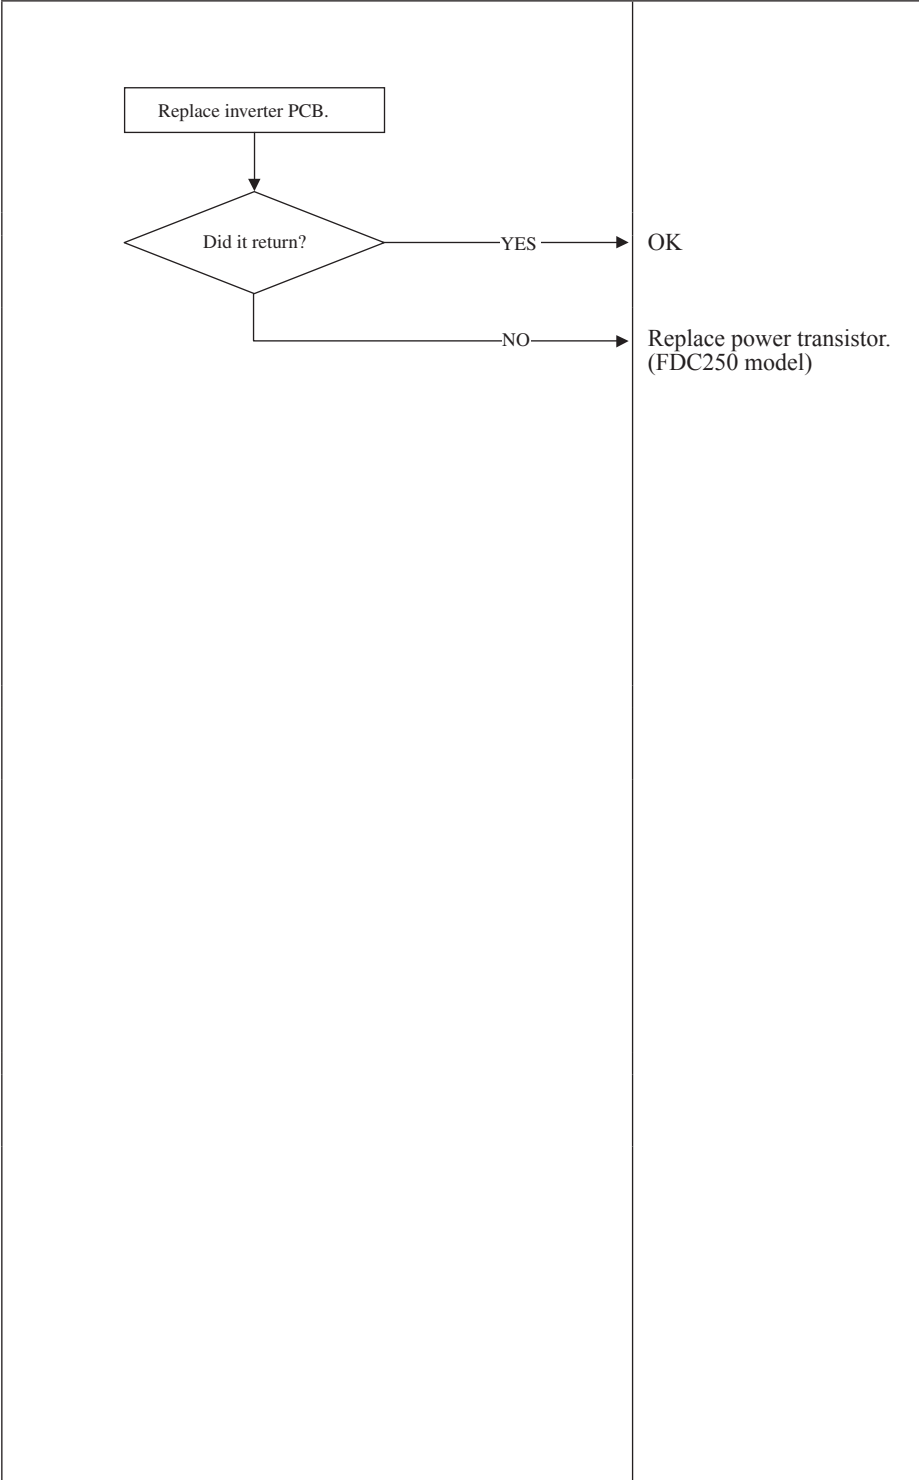
<p>1.Applicable model</p> <p>FDC200, 250VSA</p>	5.Troubleshooting	
<p>2.Error detection method</p> <p>When power transistor anomaly is detected for 15 minutes continuously</p>	Diagnosis	Countermeasure
<p>3.Condition of error displayed</p> <p>Same as above</p>	 <pre> graph TD A[Replace inverter PCB.] --> B{Did it return?} B -- YES --> C[OK] B -- NO --> D[Replace power transistor. (FDC250 model)] </pre>	
<p>4.Presumable cause</p> <ul style="list-style-type: none"> • Inverter PCB anomaly • Power transistor anomaly 		

Note:

Error code Remote control: E53	LED	Green	Red	Content Suction pipe temperature thermistor anomaly (Models FDC71-250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED		
		Keeps flashing		

1.Applicable model
Models FDC71-250

2.Error detection method
When the suction pipe temperature thermistor detects anomalously low temperature

3.Condition of error displayed
If the temperature thermistor detects -50°C or lower for 5 seconds continuously within 10 minutes to 10 minutes 20 seconds after compressor ON, the compressor stops. When the compressor is restarted automatically after 3-minutes delay, if this anomaly occurs 3 times within 40 minute.

- 4.Presumable cause**
- Defective suction pipe temperature thermistor connection
 - Defective suction pipe temperature thermistor
 - Defective outdoor control PCB

5.Troubleshooting

Diagnosis	Countermeasure																
<pre> graph TD Q1{Is the connection of suction pipe temperature thermistor connector OK?} Q2{Are the characteristics of suction pipe temperature thermistor OK?} Q1 -- NO --> C1[Correct connection of suction pipe temperature thermistor connector.] Q1 -- YES --> Q2 Q2 -- NO --> C2[Defective suction pipe temperature thermistor → Replace.] Q2 -- YES --> C3[Defective outdoor control PCB → Replace. (Defective suction pipe temperature thermistor input circuit)] </pre>	<p>Correct connection of suction pipe temperature thermistor connector.</p> <p>Defective suction pipe temperature thermistor → Replace.</p> <p>Defective outdoor control PCB → Replace. (Defective suction pipe temperature thermistor input circuit)</p>																
<p>Temperature-resistance characteristics</p> <table border="1"> <caption>Temperature-resistance characteristics</caption> <thead> <tr> <th>Temperature (°C)</th> <th>Temperature thermistor resistance (kΩ)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>~16</td> </tr> <tr> <td>10</td> <td>~10</td> </tr> <tr> <td>20</td> <td>~6</td> </tr> <tr> <td>25</td> <td>5</td> </tr> <tr> <td>30</td> <td>~4</td> </tr> <tr> <td>40</td> <td>~3</td> </tr> <tr> <td>50</td> <td>~2</td> </tr> </tbody> </table>	Temperature (°C)	Temperature thermistor resistance (kΩ)	0	~16	10	~10	20	~6	25	5	30	~4	40	~3	50	~2	
Temperature (°C)	Temperature thermistor resistance (kΩ)																
0	~16																
10	~10																
20	~6																
25	5																
30	~4																
40	~3																
50	~2																

Note:


Error code Remote control: E54	LED	Green	Red	Content Low pressure sensor anomaly (Models FDC71-250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED		
		Keeps flashing		

1.Applicable model
Models FDC71-250

2. Error detection method
When anomalous voltage (pressure) is detected

3. Condition of error displayed
If the pressure sensor detects DC0V or lower and DC4.0V or higher for 5 seconds continuously within 2 minutes to 2 minutes 20 seconds after compressor ON, the compressor stops. When the compressor is restarted automatically after 3-minuts delay, if this anomaly occurs 3 times within 40 minutes

4. Presumable cause
<ul style="list-style-type: none"> • Defective low pressure sensor connection • Defective low pressure sensor • Defective outdoor control PCB • Improper amount of refrigerant • Anomalous refrigeration circuit

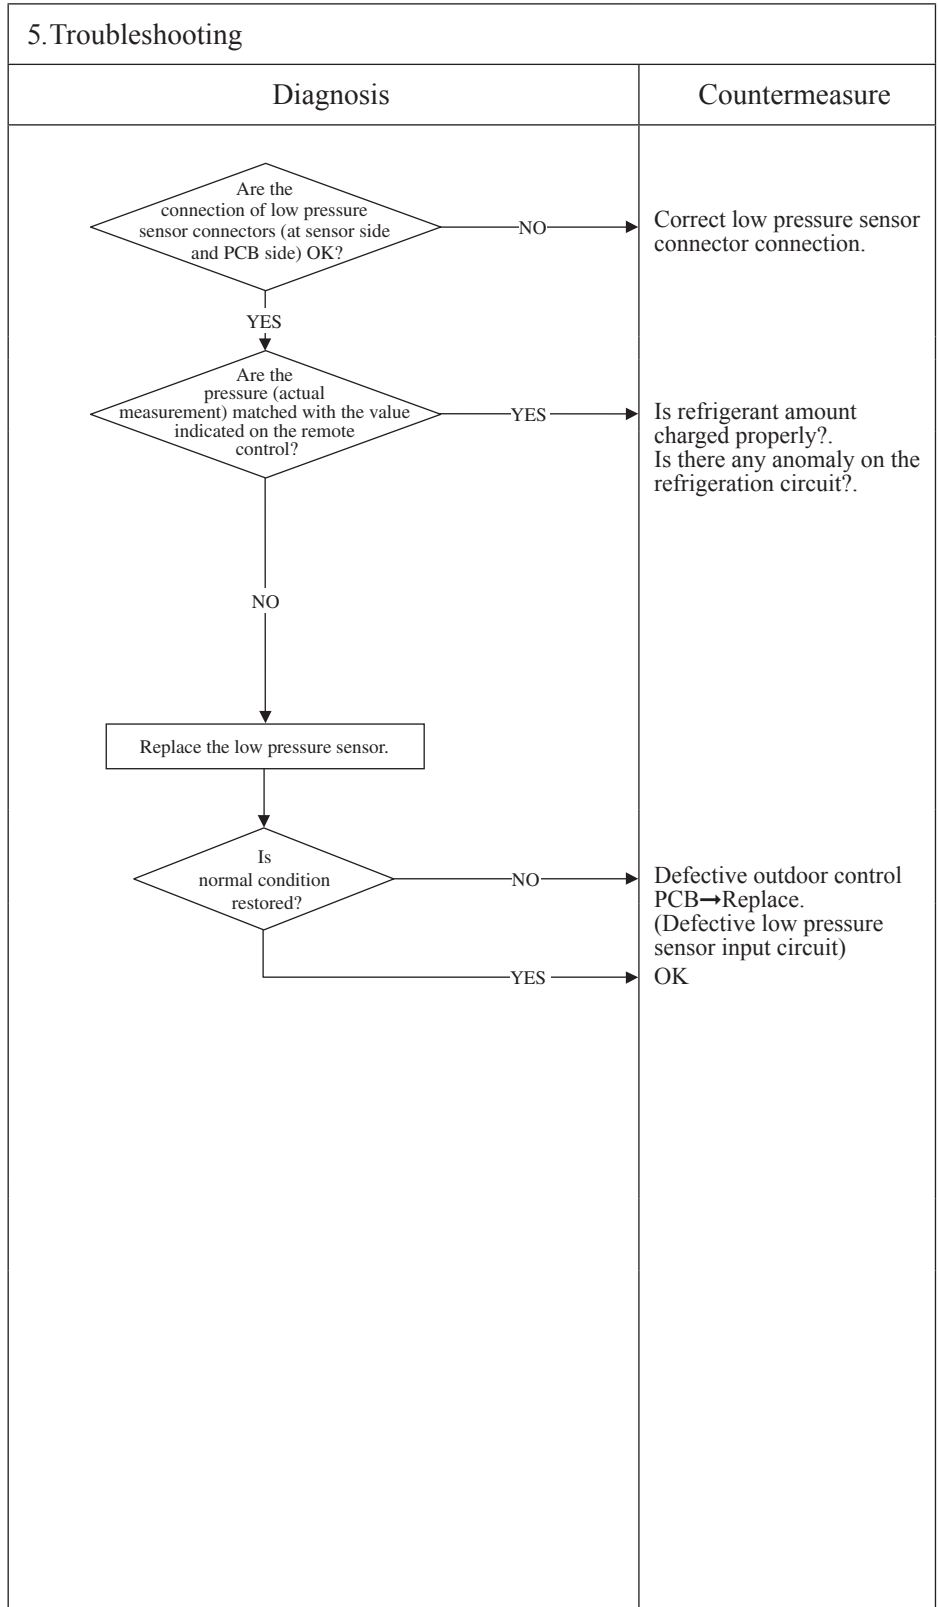

Note:

Error code Remote control:E55	LED	Green	Red	Content Compressor under dome temperature thermistor anomaly (Model FDC250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED Keep flashing		

1.Applicable model
Model FDC250

2.Error detection method
When anomalous low temperature (resistance) is detected by the compressor under dome temperature thermistor

3.Condition of error displayed
If the temperature thermistor detects -50°C or lower for 5 seconds continuously within 10 minutes to 10 minutes 20 seconds after compressor ON, the compressor stops. When the compressor is restarted automatically after 3-minutes delay, if this anomaly occurs 3 times within 40 minute.

4.Presumable cause
<ul style="list-style-type: none"> • Defective under dome temperature thermistor connection • Defective under dome temperature thermistor • Defective outdoor control PCB

5.Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD A{Is the connection of under dome temperature thermistor connector OK?} -- NO --> B[Correct connection of under dome temperature thermistor connector.] A -- YES --> C{Are the characteristics of under dome temperature thermistor OK?} C -- NO --> D[Defective under dome temperature thermistor -> Replace.] C -- YES --> E[Replace outdoor control PCB. (Defective under dome temperature thermistor input circuit)] </pre>	
<p>(Broken wire)</p> <p style="text-align: center;">Temperature-resistance characteristics</p> <p style="text-align: center;">Temperature thermistor resistance (kΩ)</p> <p style="text-align: center;">Temperature (°C)</p> <p style="text-align: center;">5kΩ at 25°C</p> <p style="text-align: center;">(Short circuit)</p>	

Note:

Error code Remote control: E57	LED	Green	Red	Content Insufficient refrigerant amount or detection of service valve closure (Models SRC40-60, FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	2-time flash	

1. Applicable model
Models SRC40-60, FDC71-100VNP

2. Error detection method
• Judge insufficient refrigerant amount by detecting the temperature difference between indoor heat exchanger (Thi-R) and indoor return air (Thi-A).

3. Condition of error displayed
When the insufficient refrigerant amount is detected 3 times within 60 minutes.

4. Presumable cause
• Defective indoor heat exchanger temperature thermistor
• Defective indoor return air temperature thermistor
• Defective indoor control PCB
• Insufficient refrigerant amount

5. Troubleshooting

Diagnosis	Countermeasure
<p>Is the service valve fully opened?</p> <p>NO →</p> <p>YES ↓</p> <p>Are the connections of indoor heat exchanger and/or return air temperature thermistor connectors OK?</p> <p>NO →</p> <p>YES ↓</p> <p>Are the characteristics of indoor heat exchanger and/or return air temperature thermistor OK?</p> <p>NO →</p> <p>YES ↓</p> <p>Is the low pressure during operation normal?</p> <p>NO →</p> <p>YES →</p>	<p>Open fully.</p> <p>Correct indoor heat exchanger, return air temperature thermistor connector connections.</p> <p>Defective indoor heat exchanger, return air temperature thermistor → Replace.</p> <p>Charge refrigerant.</p> <p>Defective indoor control PCB → Replace. (Defective indoor heat exchanger, return air temperature thermistor input circuits)</p>

Indoor heat exchanger, return air temperature thermistor
Temperature-resistance characteristics
(Broken wire)

(Short circuit)

Note: When the compressor speed is 50 rps or under at 5 minutes after the start of compressor or the completion of defrosting, the low refrigerant protection control judges, by detecting the difference between the indoor heat exchanger temperature (Thi-R) and the indoor return air temperature (Thi-A), that it is in the state of gas low, and stops the compressor.
Cooling: Indoor return air temperature (Thi-A) – Indoor heat exchanger temperature (Thi-R) \geq 4 deg
Heating: Indoor heat exchanger temperature (Thi-R) – Indoor return air temperature (Thi-A) \geq 6 deg

Error code Remote control: E57	LED	Green	Red	Content Insufficient refrigerant amount or detection of service valve closure (Models FDC71-250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED Keeps flashing		

1. Applicable model
Models FDC71-250

2. Error detection method

- Judge insufficient refrigerant amount by detecting the temperature difference between indoor heat exchanger (Thi-R) and indoor return air (Thi-A).
- It detects at initial startup in cooling or dehumidifying mode after power ON. (In case of model FDC71 it cannot detect)

3. Condition of error displayed
Anomalous stop at initial detection

4. Presumable cause

- Defective indoor heat exchanger temperature thermistor
- Defective indoor return air temperature thermistor
- Defective indoor control PCB
- Insufficient refrigerant amount

5. Troubleshooting

Diagnosis	Countermeasure
	<p>Open fully.</p> <p>Correct indoor heat exchanger, return air temperature thermistor connector connections.</p> <p>Defective indoor heat exchanger, return air temperature thermistor → Replace.</p> <p>Charge refrigerant.</p> <p>Defective indoor control PCB → Replace. (Defective indoor heat exchanger, return air temperature thermistor input circuits)</p>

Indoor heat exchanger, return air temperature thermistor
Temperature-resistance characteristics

Temperature (°C)	Resistance (kΩ)
0	15
10	10
20	7
25	5
30	4
40	3
50	2

Note: Insufficient refrigerant amount preventive control makes compressor stopped, if it judges insufficient refrigerant amount by detecting the temperature difference between indoor heat exchanger (Thi-R) and return air temperature (Thi-A) for 1 minute after compressor ON in cooling or dehumidifying mode and for 9 minutes after compressor ON in heating mode. [in cooling mode: (Thi-A)-(Thi-R)>4degC, in heating mode: (Thi-R)-(Thi-A)<4degC]

Error code Remote control: E58	LED	Green	Red	Content Current safe stop (Models SRC40-60, FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	3-time flash	

1.Applicable model
Models SRC40-60,FDC71-100VNP

2. Error detection method
When the current safe control has operated at the compressor speed of 30 rps or under:

3. Condition of error displayed
Same as above

4. Presumable cause
<ul style="list-style-type: none"> • Excessive refrigerant amount • Indoor,outdoor unit installation spaces • Faulty compressor • Defective outdoor air temperature sensor • Defective outdoor control PCB

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD D1{Is the refrigerant amount normal?} -- NO --> C1[Adjust the refrigerant amount properly.] D1 -- YES --> D2{Is outdoor ventilation condition good?} D2 -- NO --> C2[Secure space for inlet and outlet.] D2 -- YES --> D3{Inspect compressor} D3 -- NO --> C3[Replace compressor.] D3 -- YES --> D4{Inspect outdoor air temperature sensor} D4 -- NO --> C4[Replace sensor.] D4 -- YES --> C5[Defective outdoor control PCB -> Replace. (Defective outdoor air temperature sensor input circuit)] </pre>	

Note:

Error code Remote control: E59	LED	Green	Red	Content Compressor startup failure (Models SRC40-60, FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	2-time flash	


1. Applicable model
Models SRC40-60, FDC71-100VNP

2. Error detection method
If it fails to change over to the rotor detection operation of compressor motor

3. Condition of error displayed
If compressor fails to startup for 42 times

4. Presumable cause

- Outdoor fan motor anomaly
- Outdoor control PCB anomaly
- Anomalous power source voltage
- Improper refrigerant amount and refrigerant circuit
- Faulty compressor (Motor bearing)

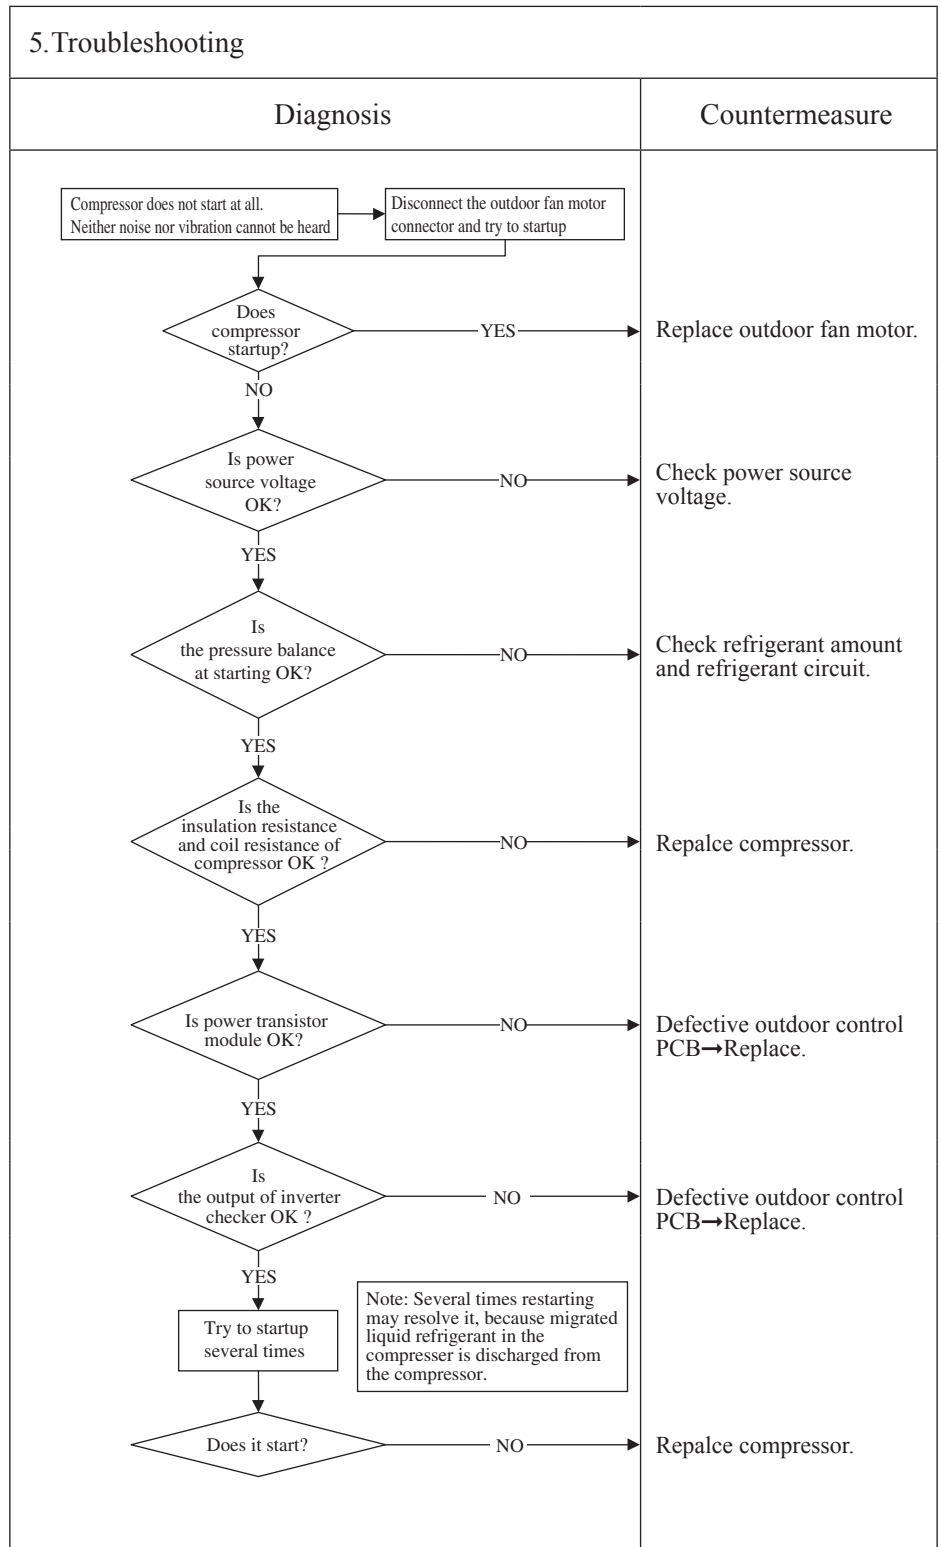

Note: Insulation resistance

- The unit is left for long period without power source or soon after installation, migrated liquid refrigerant may dissolve in the refrigerant oil in the compressor. In such case insulation resistance decreases upto several MΩ or lower. If the electric leakage breaker is activated due to low insulation resistance, check followings.
 - ① Check whether the insulation resistance can recover or not, ater 6 hours has passed since power ON.
(By energize the crankcase heater, migrated liquid refrigerant in the refrigerant oil in compressor can be evaporated)
 - ② Check whether the electric leakage breake conforms to high-hermonic specifications
(As units has inverter, in order to prevent from improper operation, be sure to use high-hermonic one.)

Error code Remote control: E59	LED	Green	Red	Content Compressor startup failure (1/2) (Models FDC71-140 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	5-time flash	
	Outdoor inverter PCB	Yellow LED Stays OFF		


1. Applicable model
Models FDC71-140

2. Error detection method
When it fails to change over to the operation for rotor position detection of compressor motor (If the compressor speed cannot increase 11Hz or higher)

3. Condition of error displayed
If the compressor fails to startup for 20 times (10 patterns x2 times) continuously.

4. Presumable cause

- Outdoor fan motor anomaly
- Outdoor control PCB anomaly
- Inverter PCB anomaly
- Anomalous power source voltage
- Insufficient or excessive refrigerant amount
- Faulty component for refrigerant circuit
- Compressor anomaly (Motor or bearing)

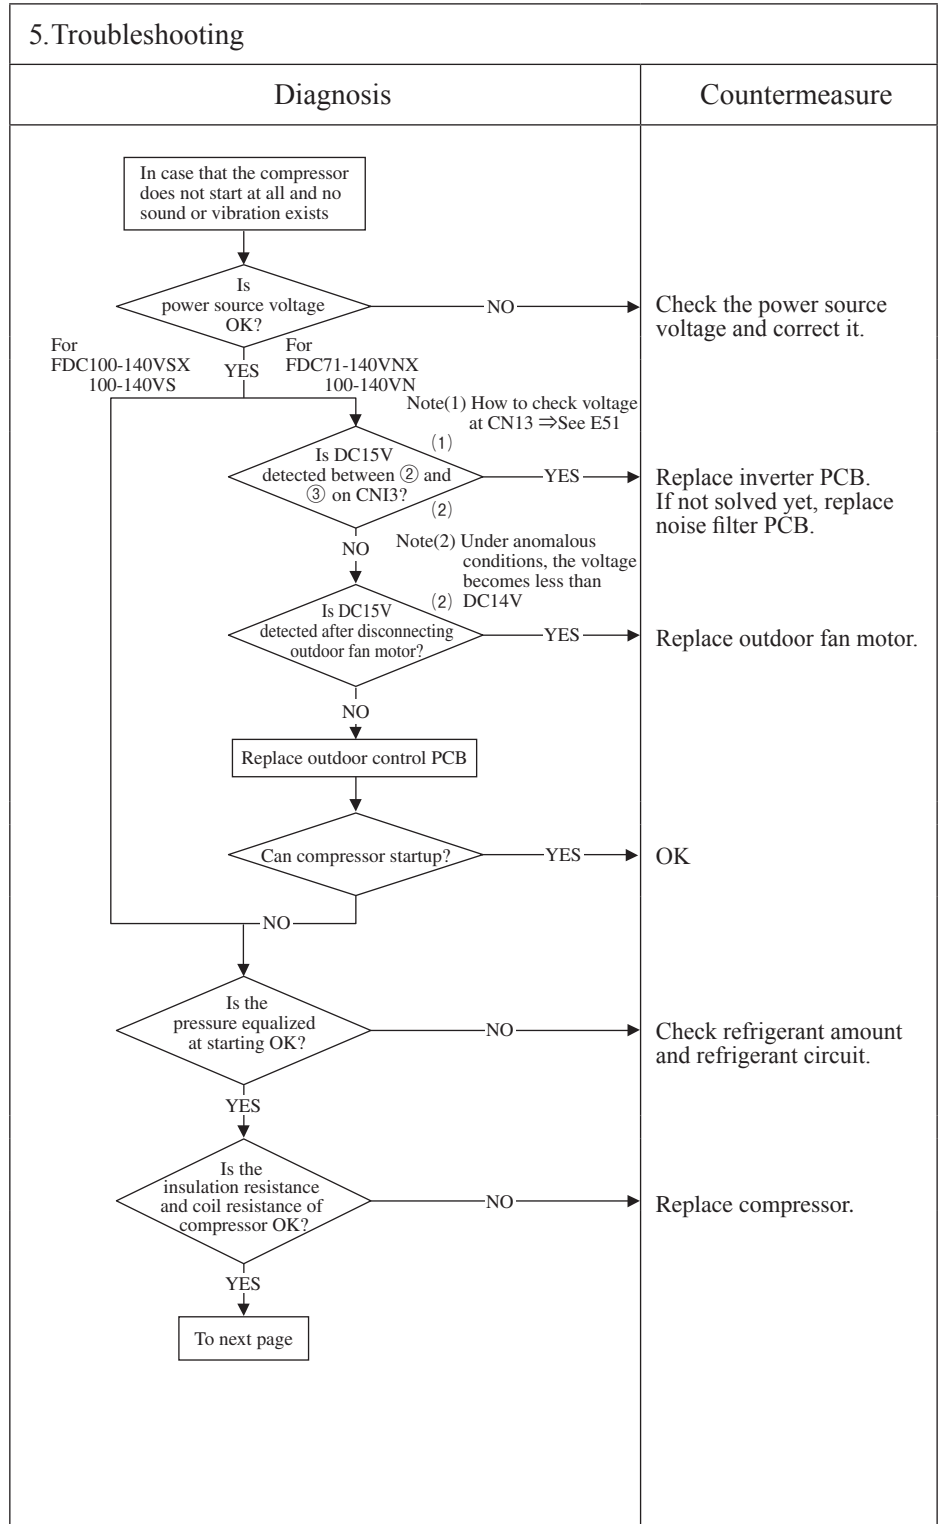

Note: Insulation resistance

- The unit is left for long period without power source or soon after installation, insulation resistance may decrease to several MΩ or lower due to the liquid refrigerant migrated in the refrigerant oil in compressor. If the electric leakage breaker is activated due to low insulation resistance, check followings.
 - ① Check whether the insulation resistance can recover or not, after 6 hours has passed since power ON.
(By energize the crankcase heater, liquid refrigerant migrated in the refrigerant oil in compressor can be evaporated)
 - ② Check whether the electric leakage breaker conforms to high-harmonic specifications
(As inverter PAC units has inverter, in order to prevent from improper operation, be sure to use the breaker of high-harmonic type)


Error code Remote control: E59	LED	Green	Red	Content Compressor startup failure (2/2) (Models FDC71-140 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	5-time flash	
	Outdoor inverter PCB	Yellow LED Stays OFF		

1. Applicable model
Models FDC71-140

2. Error detection method

3. Condition of error displayed

4. Presumable cause

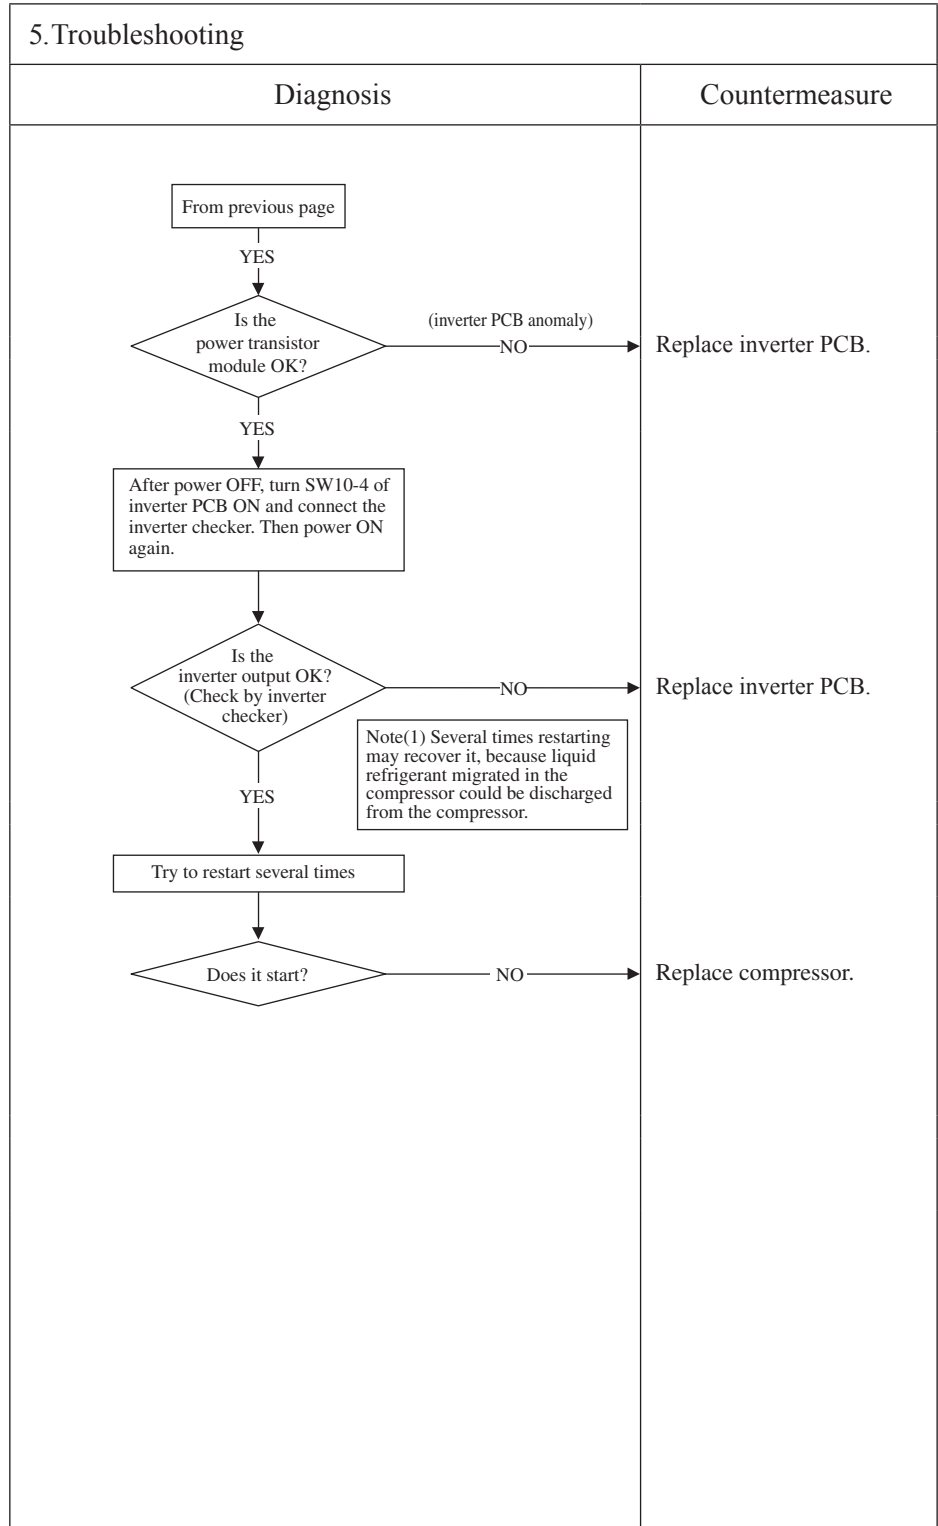

Note:

Error code Remote control: E59	LED	Green	Red	Content Compressor startup failure (1/2) (Models FDC200, 250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	1-time flash	
	Outdoor inverter PCB	Yellow LED 4-time flash		

1. Applicable model
Models FDC200, 250

2. Error detection method
When it fails to change over to the operation for rotor position detection of compressor motor (If the compressor speed cannot increase 11rps or higher)

3. Condition of error displayed
If the compressor fails to startup for 20 times (10 patterns x2 times) continuously.

4. Presumable cause
<ul style="list-style-type: none"> • Outdoor fan motor anomaly • Outdoor control PCB anomaly • Inverter PCB anomaly • Anomalous power source voltage • Insufficient or excessive refrigerant amount • Faulty component for refrigerant circuit • Compressor anomaly (Motor or bearing)

5. Troubleshooting	
Diagnosis	Countermeasure
<pre> graph TD Start[In case that the compressor does not start at all and no sound or vibration exists] --> D1{Is power source voltage OK?} D1 -- NO --> C1[Check the power source voltage and correct it.] D1 -- YES --> D2{Is the pressure equalized at starting OK?} D2 -- NO --> C2[Check refrigerant amount and refrigerant circuit.] D2 -- YES --> D3{Is the insulation resistance and coil resistance of compressor OK?} D3 -- NO --> C3[Replace compressor.] D3 -- YES --> End[To next page] </pre>	

Note: Insulation resistance

- The unit is left for long period without power source or soon after installation, insulation resistance may decrease to several MΩ or lower due to the liquid refrigerant migrated in the refrigerant oil in compressor. If the electric leakage breaker is activated due to low insulation resistance, check followings.
 - ① Check whether the insulation resistance can recover or not, after 6 hours has passed since power ON.
(By energize the crankcase heater, liquid refrigerant migrated in the refrigerant oil in compressor can be evaporated)
 - ② Check whether the electric leakage breaker conforms to high-harmonic specifications
(As INV PAC units has inverter, in order to prevent from improper operation, be sure to use the breaker of high-harmonic type)


Error code Remote control: E59	LED	Green	Red	Content Compressor startup failure (2/2) (Models FDC200, 250 only)
	Indoor control PCB	Keeps flashing	Stays OFF	
	Outdoor control PCB	Keeps flashing	5-time flash	
	Outdoor inverter PCB	Yellow LED 4-time flash		

1. Applicable model
Models FDC200, 250

2. Error detection method

3. Condition of error displayed

4. Presumable cause

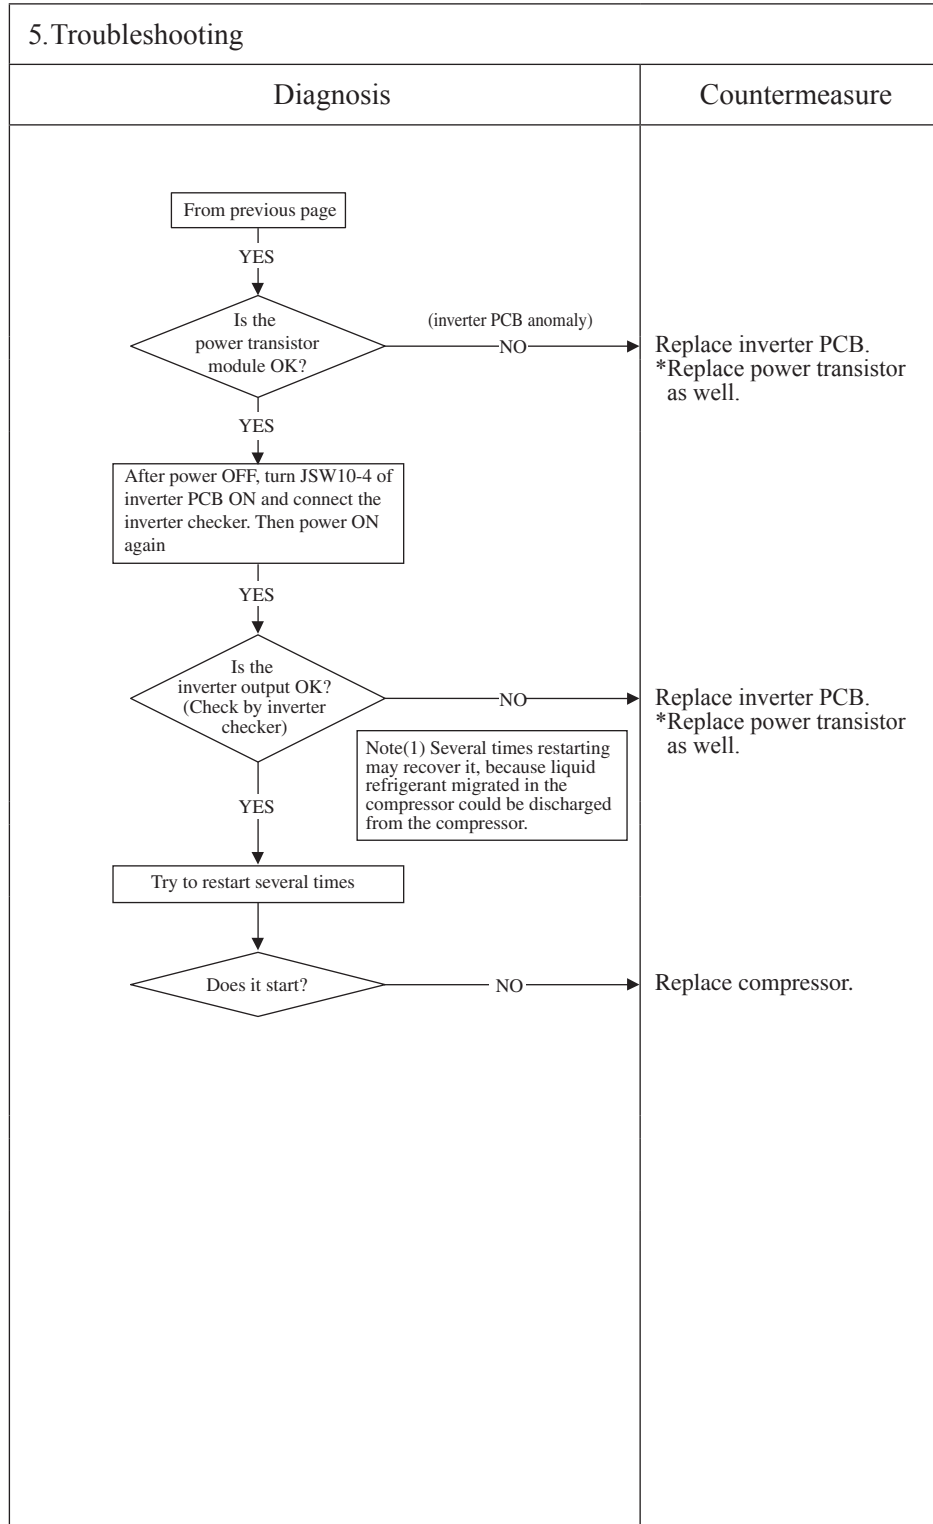

Note:


Error code Remote control: E60	LED	Green	Red	Content Compressor rotor lock error (Models SRC40-60, FDC71-100VNP only)
	Indoor	Keeps flashing	Stays OFF	
	Outdoor	—	7-time flash	

1. Applicable model
Models SRC40-60, FDC71-100VNP

2. Error detection method
Compressor rotor position

3. Condition of error displayed
If it fails again to detect the rotor position after shifting to the compressor rotor position detection operation, the compressor stops.

- 4. Presumable cause**
- Defective outdoor fan motor
 - Defective outdoor control PCB
 - Anomalous power source voltage
 - Improper refrigerant amount and refrigerant circuit
 - Defective compressor (motor, bearing)

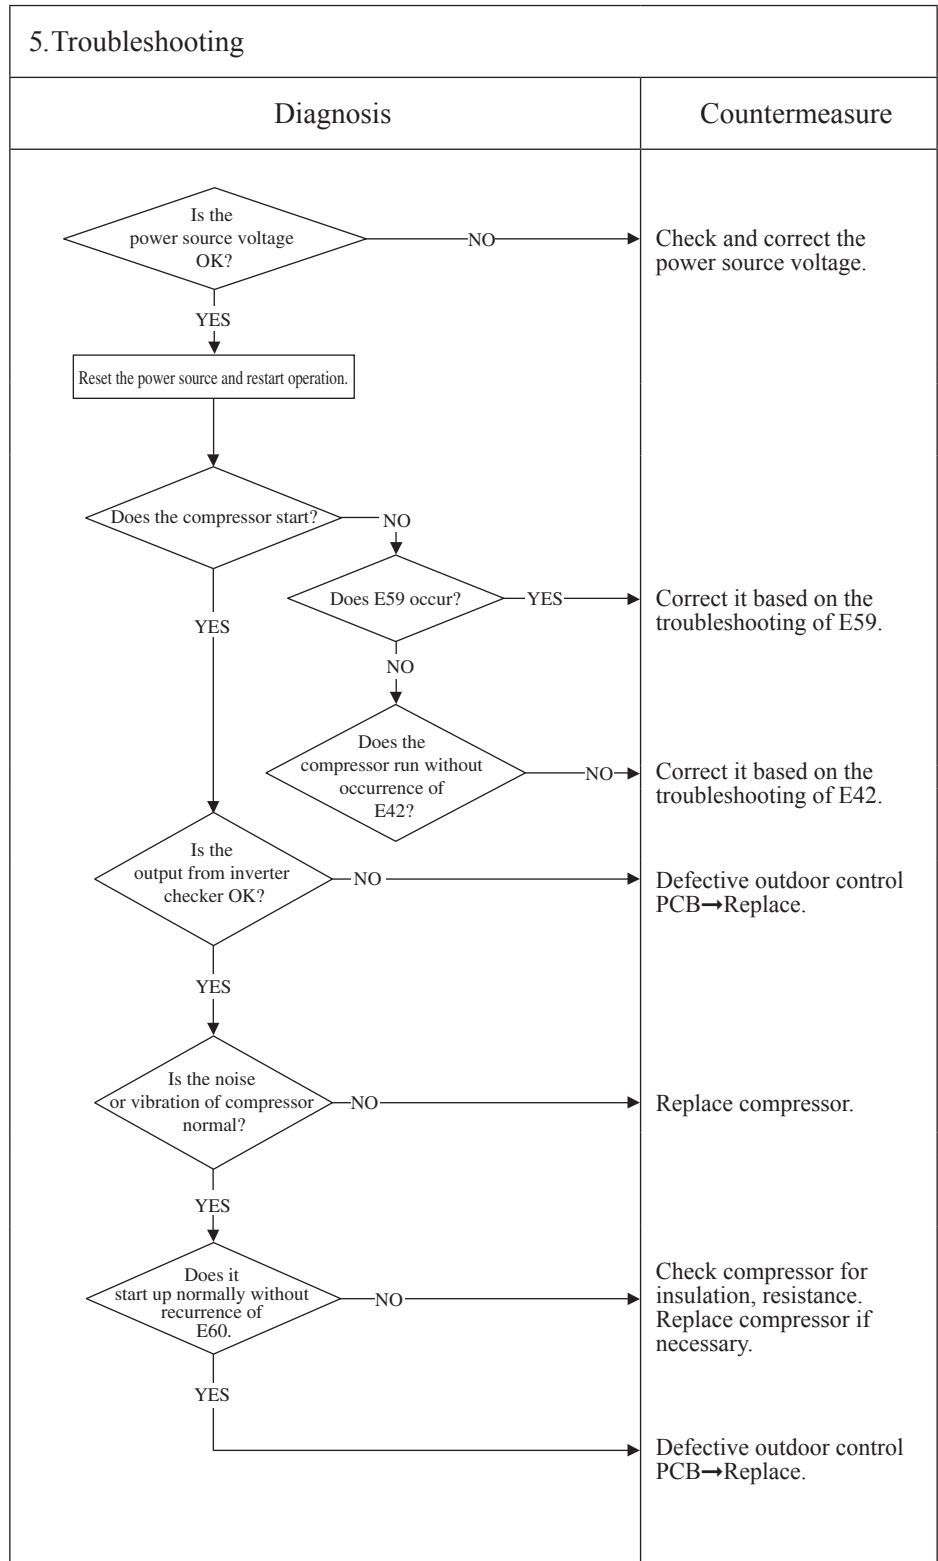

Note: Insulation resistance


- The unit is left for long period without power source or soon after installation, migrated liquid refrigerant may dissolve in the refrigerant oil in the compressor. In such case insulation resistance decreases upto several MΩ or lower. If the electric leakage breaker is activated due to low insulation resistance, check followings.
 - ① Check whether the insulation resistance can recover or not, after 6 hours has passed since power ON.
(By energize the crankcase heater, migrated liquid refrigerant in the refrigerant oil in compressor can be evaporated)
 - ② Check whether the electric leakage breaker conforms to high-harmonic specifications
(As units has inverter, in order to prevent from improper operation, be sure to use high-harmonic one.)

1.12 TECHNICAL INFORMATION

'16 • PAC-T-251


Model FDT40ZSXVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT40VG					
Outdoor unit model name		SRC40ZSX-S					
Function(indicate if present)				Average(mandatory)			
cooling		Yes		Warmer(if designated)		No	
heating		Yes		Colder(if designated)		No	
Item symbol value unit				Item symbol value class			
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc 4.0 kW		cooling		SEER 8.28 A++	
heating / Average		Pdesignh 3.8 kW		heating / Average		SCOP/A 4.45 A+	
heating / Warmer		Pdesignh - kW		heating / Warmer		SCOP/W - -	
heating / Colder		Pdesignh - kW		heating / Colder		SCOP/C - -	
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 3.80 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 4.00 kW		Tj=35°C		EERd 4.30 -	
Tj=30°C		Pdc 2.95 kW		Tj=30°C		EERd 6.42 -	
Tj=25°C		Pdc 1.90 kW		Tj=25°C		EERd 11.05 -	
Tj=20°C		Pdc 1.40 kW		Tj=20°C		EERd 16.45 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 3.34 kW		Tj=-7°C		COPd 2.98 -	
Tj=2°C		Pdh 2.04 kW		Tj=2°C		COPd 4.30 -	
Tj=7°C		Pdh 1.32 kW		Tj=7°C		COPd 5.78 -	
Tj=12°C		Pdh 0.95 kW		Tj=12°C		COPd 6.70 -	
Tj=bivalent temperature		Pdh 3.80 kW		Tj=bivalent temperature		COPd 2.68 -	
Tj=operating limit		Pdh 2.20 kW		Tj=operating limit		COPd 1.99 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -20 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcycc - kW		for cooling		EERcyc - -	
for heating		Pcyh - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 7 W		cooling		Qce 170 kWh/a	
standby mode		Psb 7 W		heating / Average		Qhe 1197 kWh/a	
thermostat-off mode		Pto 10 W		heating / Warmer		Qhe - kWh/a	
crankcase heater mode		Pck 0 W		heating / colder		Qhe - kWh/a	
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)		Lwa 53 dB(A)	
staged		No		Sound power level(outdoor)		Lwa 63 dB(A)	
variable		Yes		Global warming potential		GWP 1975 kgCO2eq.	
				Rated air flow(indoor)		- 1140 m3/h	
				Rated air flow(outdoor)		- 2160 m3/h	
Contact details for obtaining more information				Name and address of the manufacturer or of its authorised representative.			
				Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom			

PJF000Z425 


Model FDT50ZSXVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT50VG		Average(mandatory)		Yes	
Outdoor unit model name		SRC50ZSX-S		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes		Colder(if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	5.0	kW	cooling	SEER	7.76	A++
heating / Average	Pdesignh	4.1	kW	heating / Average	SCOP/A	4.61	A++
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 4.10 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 5.00 kW		Tj=35°C		EERd 3.88 -	
Tj=30°C		Pdc 3.69 kW		Tj=30°C		EERd 5.70 -	
Tj=25°C		Pdc 2.37 kW		Tj=25°C		EERd 9.50 -	
Tj=20°C		Pdc 1.40 kW		Tj=20°C		EERd 17.00 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 3.60 kW		Tj=-7°C		COPd 3.14 -	
Tj=2°C		Pdh 2.20 kW		Tj=2°C		COPd 4.40 -	
Tj=7°C		Pdh 1.40 kW		Tj=7°C		COPd 6.00 -	
Tj=12°C		Pdh 1.05 kW		Tj=12°C		COPd 7.30 -	
Tj=bivalent temperature		Pdh 4.10 kW		Tj=bivalent temperature		COPd 2.68 -	
Tj=operating limit		Pdh 3.40 kW		Tj=operating limit		COPd 2.34 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -20 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcycc - kW		for cooling		EERcyc - -	
for heating		Pcyh - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 7 W		cooling		Qce 226 kWh/a	
standby mode		Psb 7 W		heating / Average		Qhe 1246 kWh/a	
thermostat-off mode		Pto 10 W		heating / Warmer		Qhe - kWh/a	
crankcase heater mode		Pck 0 W		heating / colder		Qhe - kWh/a	
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)		Lwa 54 dB(A)	
staged		No		Sound power level(outdoor)		Lwa 63 dB(A)	
variable		Yes		Global warming potential		GWP 1975 kgCO2eq.	
				Rated air flow(indoor)		- 1200 m3/h	
				Rated air flow(outdoor)		- 2400 m3/h	
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom					




Model FDT60ZSXVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT60VG		Average(mandatory)		Yes	
Outdoor unit model name		SRC60ZSX-S		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes					
heating		Yes					
Item				Item			
		symbol value unit				symbol value class	
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc 5.6 kW		cooling		SEER 8.26 A++	
heating / Average		Pdesignh 4.7 kW		heating / Average		SCOP/A 5.00 A++	
heating / Warmer		Pdesignh - kW		heating / Warmer		SCOP/W - -	
heating / Colder		Pdesignh - kW		heating / Colder		SCOP/C - -	
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 4.7 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 5.6 kW		Tj=35°C		EERd 3.68 -	
Tj=30°C		Pdc 4.05 kW		Tj=30°C		EERd 6.29 -	
Tj=25°C		Pdc 2.65 kW		Tj=25°C		EERd 10.43 -	
Tj=20°C		Pdc 1.3 kW		Tj=20°C		EERd 16.46 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 4.16 kW		Tj=-7°C		COPd 3.41 -	
Tj=2°C		Pdh 2.53 kW		Tj=2°C		COPd 4.83 -	
Tj=7°C		Pdh 1.63 kW		Tj=7°C		COPd 6.40 -	
Tj=12°C		Pdh 1.05 kW		Tj=12°C		COPd 7.50 -	
Tj=bivalent temperature		Pdh 4.7 kW		Tj=bivalent temperature		COPd 2.85 -	
Tj=operating limit		Pdh 4.56 kW		Tj=operating limit		COPd 2.65 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -20 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcycc - kW		for cooling		EERcyc - -	
for heating		Pcych - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 7 W		cooling		Qce 238 kWh/a	
standby mode		Psb 7 W		heating / Average		Qhe 1317 kWh/a	
thermostat-off mode		Pto 10 W		heating / Warmer		Qhe - kWh/a	
crankcase heater mode		Pck 0 W		heating / colder		Qhe - kWh/a	
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)		Lwa 60 dB(A)	
staged		No		Sound power level(outdoor)		Lwa 64 dB(A)	
variable		Yes		Global warming potential		GWP 1975 kgCO2eq.	
				Rated air flow(indoor)		- 1560 m3/h	
				Rated air flow(outdoor)		- 2490 m3/h	
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom					

PJF000Z425 


Model FDT71VNXVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.				
Indoor unit model name		FDT71VG		Average(mandatory)		Yes		
Outdoor unit model name		FDC71VNX		Warmer(if designated)		No		
Function(indicate if present)				Colder(if designated)				
cooling		Yes		Colder(if designated)		No		
heating		Yes						
Item symbol value unit				Item symbol value class				
Design load				Seasonal efficiency and energy efficiency class				
cooling		Pdesignc	7.1	kW	cooling	SEER	5.72	A+
heating / Average		Pdesignh	5.8	kW	heating / Average	SCOP/A	4.34	A+
heating / Warmer		Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder		Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit				
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh				
heating / Average (-10°C)		Pdh	5.80	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)		Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)		Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj				
Tj=35°C		Pdc	7.10	kW	Tj=35°C	EERd	3.66	-
Tj=30°C		Pdc	5.05	kW	Tj=30°C	EERd	5.60	-
Tj=25°C		Pdc	3.30	kW	Tj=25°C	EERd	8.40	-
Tj=20°C		Pdc	3.00	kW	Tj=20°C	EERd	12.42	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj				
Tj=-7°C		Pdh	5.10	kW	Tj=-7°C	COPd	3.05	-
Tj=2°C		Pdh	3.10	kW	Tj=2°C	COPd	4.25	-
Tj=7°C		Pdh	2.00	kW	Tj=7°C	COPd	5.35	-
Tj=12°C		Pdh	2.25	kW	Tj=12°C	COPd	6.95	-
Tj=bivalent temperature		Pdh	5.80	kW	Tj=bivalent temperature	COPd	2.66	-
Tj=operating limit		Pdh	4.95	kW	Tj=operating limit	COPd	2.19	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				
Tj=2°C		Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C		Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C		Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature		Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit		Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj				
Tj=-7°C		Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C		Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C		Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C		Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature		Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit		Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C		Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature				
heating / Average		Tbiv	-10	°C	heating / Average	Tol	-20	°C
heating / Warmer		Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder		Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency				
for cooling		Pcycc	-	kW	for cooling	EERcyc	-	-
for heating		Pcyh	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient				
cooling		Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption				
off mode		Poff	15	W	cooling	Qce	435	kWh/a
standby mode		Psb	15	W	heating / Average	Qhe	1870	kWh/a
thermostat-off mode		Pto	13	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode		Pck	23	W	heating / colder	Qhe	-	kWh/a
Capacity control(indicate one of three options)				Other items				
fixed		No		Sound power level(indoor)	Lwa	62	dB(A)	
staged		No		Sound power level(outdoor)	Lwa	66	dB(A)	
variable		Yes		Global warming potential	GWP	1975	kgCO2eq.	
				Rated air flow(indoor)	-	1680	m3/h	
				Rated air flow(outdoor)	-	3600	m3/h	
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom						

PJF000Z425 


Model FDT100VNXVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT100VG		Average(mandatory)		Yes	
Outdoor unit model name		FDC100VNX		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes		Colder(if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	10.0	kW	cooling	SEER	5.90	A+
heating / Average	Pdesignh	11.2	kW	heating / Average	SCOP/A	4.32	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	11.20	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	10.00	kW	Tj=35°C	EERd	4.00	-
Tj=30°C	Pdc	7.30	kW	Tj=30°C	EERd	5.64	-
Tj=25°C	Pdc	5.13	kW	Tj=25°C	EERd	8.15	-
Tj=20°C	Pdc	5.38	kW	Tj=20°C	EERd	10.60	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	9.90	kW	Tj=-7°C	COPd	2.95	-
Tj=2°C	Pdh	5.80	kW	Tj=2°C	COPd	4.30	-
Tj=7°C	Pdh	4.10	kW	Tj=7°C	COPd	5.40	-
Tj=12°C	Pdh	4.80	kW	Tj=12°C	COPd	6.40	-
Tj=bivalent temperature	Pdh	11.20	kW	Tj=bivalent temperature	COPd	2.62	-
Tj=operating limit	Pdh	9.70	kW	Tj=operating limit	COPd	2.17	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-20	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcycc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyh	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	15	W	cooling	Qce	594	kWh/a
standby mode	Psb	15	W	heating / Average	Qhe	3626	kWh/a
thermostat-off mode	Pto	25	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode	Pck	23	W	heating / colder	Qhe	-	kWh/a
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)	Lwa	63	dB(A)
staged		No		Sound power level(outdoor)	Lwa	70	dB(A)
variable		Yes		Global warming potential	GWP	1975	kgCO2eq.
				Rated air flow(indoor)	-	2220	m3/h
				Rated air flow(outdoor)	-	6000	m3/h
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom					




Model FDT100VSXVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT100VG		Average(mandatory)		Yes	
Outdoor unit model name		FDC100VSX		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes		Colder(if designated)		No	
heating		Yes					
Item				Item			
		symbol value unit				symbol value class	
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc 10.0 kW		cooling		SEER 5.90 A+	
heating / Average		Pdesignh 11.2 kW		heating / Average		SCOP/A 4.32 A+	
heating / Warmer		Pdesignh - kW		heating / Warmer		SCOP/W - -	
heating / Colder		Pdesignh - kW		heating / Colder		SCOP/C - -	
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 11.20 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 10.00 kW		Tj=35°C		EERd 4.00 -	
Tj=30°C		Pdc 7.30 kW		Tj=30°C		EERd 5.64 -	
Tj=25°C		Pdc 5.13 kW		Tj=25°C		EERd 8.15 -	
Tj=20°C		Pdc 5.38 kW		Tj=20°C		EERd 10.60 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 9.90 kW		Tj=-7°C		COPd 2.95 -	
Tj=2°C		Pdh 5.80 kW		Tj=2°C		COPd 4.30 -	
Tj=7°C		Pdh 4.10 kW		Tj=7°C		COPd 5.40 -	
Tj=12°C		Pdh 4.80 kW		Tj=12°C		COPd 6.40 -	
Tj=bivalent temperature		Pdh 11.20 kW		Tj=bivalent temperature		COPd 2.62 -	
Tj=operating limit		Pdh 9.70 kW		Tj=operating limit		COPd 2.17 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -20 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcycc - kW		for cooling		EERcyc - -	
for heating		Pcyh - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 15 W		cooling		Qce 594 kWh/a	
standby mode		Psb 15 W		heating / Average		Qhe 3626 kWh/a	
thermostat-off mode		Pto 25 W		heating / Warmer		Qhe - kWh/a	
crankcase heater mode		Pck 23 W		heating / colder		Qhe - kWh/a	
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)		Lwa 63 dB(A)	
staged		No		Sound power level(outdoor)		Lwa 70 dB(A)	
variable		Yes		Global warming potential		GWP 1975 kgCO2eq.	
				Rated air flow(indoor)		- 2220 m3/h	
				Rated air flow(outdoor)		- 6000 m3/h	
Contact details for obtaining more information				Name and address of the manufacturer or of its authorised representative.			
				Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd.			
				7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom			

PJF000Z425 


Model FDT71VNXPVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT40VG x 2		Average(mandatory)		Yes	
Outdoor unit model name		FDC71VNX		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes					
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	7.1	kW	cooling	SEER	5.77	A+
heating / Average	Pdesignh	5.8	kW	heating / Average	SCOP/A	4.34	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 5.80 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 7.10 kW		Tj=35°C		EERd 3.84 -	
Tj=30°C		Pdc 5.23 kW		Tj=30°C		EERd 5.81 -	
Tj=25°C		Pdc 3.38 kW		Tj=25°C		EERd 9.01 -	
Tj=20°C		Pdc 3.30 kW		Tj=20°C		EERd 12.05 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 5.10 kW		Tj=-7°C		COPd 3.05 -	
Tj=2°C		Pdh 3.10 kW		Tj=2°C		COPd 4.25 -	
Tj=7°C		Pdh 2.00 kW		Tj=7°C		COPd 5.35 -	
Tj=12°C		Pdh 2.25 kW		Tj=12°C		COPd 6.95 -	
Tj=bivalent temperature		Pdh 5.80 kW		Tj=bivalent temperature		COPd 2.66 -	
Tj=operating limit		Pdh 5.00 kW		Tj=operating limit		COPd 2.56 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -20 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcycc - kW		for cooling		EERcyc - -	
for heating		Pcyh - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 18 W		cooling		Qce 431 kWh/a	
standby mode		Psb 18 W		heating / Average		Qhe 1872 kWh/a	
thermostat-off mode		Pto 20 W		heating / Warmer		Qhe - kWh/a	
crankcase heater mode		Pck 23 W		heating / colder		Qhe - kWh/a	
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)		Lwa 53 dB(A)	
staged		No		Sound power level(outdoor)		Lwa 66 dB(A)	
variable		Yes		Global warming potential		GWP 1975 kgCO2eq.	
				Rated air flow(indoor)		- 1140 m3/h	
				Rated air flow(outdoor)		- 3600 m3/h	
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom					

PJF000Z425 


Model FDT100VNXPVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT50VG x 2		Average(mandatory)		Yes	
Outdoor unit model name		FDC100VNX		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes		Colder(if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	10.0	kW	cooling	SEER	5.92	A+
heating / Average	Pdesignh	11.2	kW	heating / Average	SCOP/A	4.16	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	11.20	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	10.00	kW	Tj=35°C	EERd	3.91	-
Tj=30°C	Pdc	7.37	kW	Tj=30°C	EERd	5.80	-
Tj=25°C	Pdc	5.30	kW	Tj=25°C	EERd	8.70	-
Tj=20°C	Pdc	5.30	kW	Tj=20°C	EERd	10.40	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	9.70	kW	Tj=-7°C	COPd	2.60	-
Tj=2°C	Pdh	5.80	kW	Tj=2°C	COPd	4.10	-
Tj=7°C	Pdh	4.10	kW	Tj=7°C	COPd	5.60	-
Tj=12°C	Pdh	4.70	kW	Tj=12°C	COPd	6.20	-
Tj=bivalent temperature	Pdh	11.20	kW	Tj=bivalent temperature	COPd	2.45	-
Tj=operating limit	Pdh	8.10	kW	Tj=operating limit	COPd	2.22	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-20	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcycc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyh	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	18	W	cooling	Qce	592	kWh/a
standby mode	Psb	18	W	heating / Average	Qhe	3774	kWh/a
thermostat-off mode	Pto	20	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode	Pck	23	W	heating / colder	Qhe	-	kWh/a
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)	Lwa	54	dB(A)
staged		No		Sound power level(outdoor)	Lwa	70	dB(A)
variable		Yes		Global warming potential	GWP	1975	kgCO2eq.
				Rated air flow(indoor)	-	1200	m3/h
				Rated air flow(outdoor)	-	6000	m3/h
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom					

PJF000Z425 

Model FDT100VSXPVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT50VG x 2		Average(mandatory)		Yes	
Outdoor unit model name		FDC100VSX		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes		Colder(if designated)		No	
heating		Yes					
Item				Item			
		symbol value unit				symbol value class	
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc 10.0 kW		cooling		SEER 5.92 A+	
heating / Average		Pdesignh 11.2 kW		heating / Average		SCOP/A 4.16 A+	
heating / Warmer		Pdesignh - kW		heating / Warmer		SCOP/W - -	
heating / Colder		Pdesignh - kW		heating / Colder		SCOP/C - -	
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 11.20 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 10.00 kW		Tj=35°C		EERd 3.91 -	
Tj=30°C		Pdc 7.37 kW		Tj=30°C		EERd 5.80 -	
Tj=25°C		Pdc 5.30 kW		Tj=25°C		EERd 8.70 -	
Tj=20°C		Pdc 5.30 kW		Tj=20°C		EERd 10.40 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 9.70 kW		Tj=-7°C		COPd 2.60 -	
Tj=2°C		Pdh 5.80 kW		Tj=2°C		COPd 4.10 -	
Tj=7°C		Pdh 4.10 kW		Tj=7°C		COPd 5.60 -	
Tj=12°C		Pdh 4.70 kW		Tj=12°C		COPd 6.20 -	
Tj=bivalent temperature		Pdh 11.20 kW		Tj=bivalent temperature		COPd 2.45 -	
Tj=operating limit		Pdh 8.10 kW		Tj=operating limit		COPd 2.22 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -20 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcycc - kW		for cooling		EERcyc - -	
for heating		Pcych - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 18 W		cooling		Qce 592 kWh/a	
standby mode		Psb 18 W		heating / Average		Qhe 3774 kWh/a	
thermostat-off mode		Pto 20 W		heating / Warmer		Qhe - kWh/a	
crankcase heater mode		Pck 23 W		heating / colder		Qhe - kWh/a	
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)		Lwa 54 dB(A)	
staged		No		Sound power level(outdoor)		Lwa 70 dB(A)	
variable		Yes		Global warming potential		GWP 1975 kgCO2eq.	
				Rated air flow(indoor)		- 1200 m3/h	
				Rated air flow(outdoor)		- 6000 m3/h	
Contact details for obtaining more information				Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom			



2. MICRO INVERTER PACKAGED AIR-CONDITIONERS

CONTENTS

2.1 SPECIFICATIONS	278
2.2 EXTERIOR DIMENSIONS	297
(1) Indoor units	297
(2) Outdoor units	297
(3) Remote control (Option parts)	299
2.3 ELECTRICAL WIRING	300
(1) Indoor units	300
(2) Outdoor units	300
2.4 NOISE LEVEL	304
2.5 TEMPERATURE AND VELOCITY DISTRIBUTION	306
2.6 PIPING SYSTEM	306
2.7 RANGE OF USAGE & LIMITATIONS	312
2.8 SELECTION CHART	316
2.8.1 Capacity tables	316
2.8.2 Correction of cooling and heating capacity in relation to air flow rate control (fan speed)	329
2.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping	329
2.8.4 Height difference between the indoor unit and outdoor unit	329
2.9 APPLICATION DATA	331
2.9.1 Installation of indoor unit	331
2.9.2 Electric wiring work installation	331
2.9.3 Installation of wired remote control (Option)	331
2.9.4 Installation of outdoor unit	331
(1) Models FDC100—140VN, 100—140VS	331
(2) Models FDC200, 250VSA	339
2.9.5 Method for connecting the accessory pipe	347
2.9.6 Instructions for branching pipe set (DIS-WA1,WB1,TA1,TB1)	350
2.10 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER	351
2.10.1 Remote control	351
2.10.2 Operation control function by the wired remote control	351
2.10.3 Operation control function by the indoor control	351
2.10.4 Operation control function by the outdoor control	351
(I) Models FDC100—140VN, 100—140VS	351
(1) Determination of compressor speed (Frequency)	351
(2) Compressor start control	352
(3) Compressor soft start control	352
(4) Outdoor fan control	352
(5) Defrost operation	355
(6) Protective control/anomalous stop control by compressor's number of revolutions	356
(7) Silent mode	359
(8) Test run	359

(9) Pump-down control360

(10) Base heater ON/OFF output control (Option)360

(II) Models FDC200, 250VSA361

(1) Determination of compressor speed (Frequency)361

(2) Compressor start control361

(3) Compressor soft start control362

(4) Outdoor fan control362

(5) Defrost operation364

(6) Protective control/anomalous stop control by compressor's number of revolutions365

(7) Silent mode369

(8) Test run369


(9) Pump-down control369

(10) Base heater ON/OFF output control (Option)370

2.11 MAINTENANCE DATA370

2.12 TECHNICAL INFORMATION371

Example: **FDT 100 VN P VG**

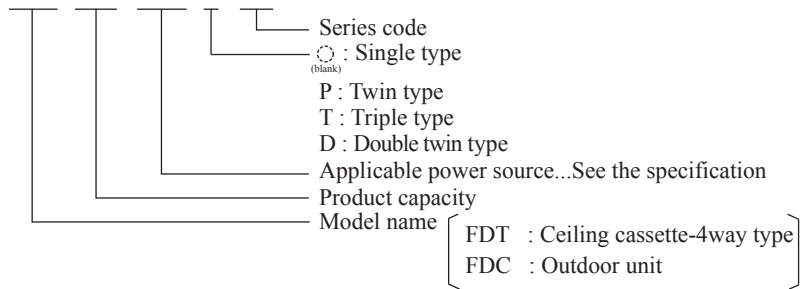


2.1 SPECIFICATIONS

(1) Single type

Item		Model	FDT100VNVG			
			Indoor unit FDT100VG	Outdoor unit FDC100VN		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]			
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 12.5(Max.)]			
	Power consumption	Cooling	kW	2.76		
		Heating		2.74		
	Max power consumption		3.86			
	Running current	Cooling	A	12.1 / 12.7		
		Heating		12.0 / 12.6		
	Inrush current, max current		5, 24			
	Power factor	Cooling	%	99		
		Heating		99		
	EER	Cooling		3.62		
COP	Heating		4.09			
Sound power level	Cooling	dB(A)	63			
	Heating		70			
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 39 Me : 37 Lo : 31			
	Heating		49			
Silent mode sound pressure level			-			
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5	81		
Compressor type & Q'ty			-	RMT5126MDE2×1		
Compressor motor (Starting method)		kW	-	Direct line start		
Refrigerant oil (Amount, type)		ℓ	-	0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1		
Fan motor (Starting method)		W	140 < Direct line start >	86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17			
	Heating		75			
Available external static pressure		Pa	0			
Outside air intake			Possible			
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater		W	-	20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		-			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")			
			Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	-			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)				
Drain hose		Hose connectable with VP25(O.D.32) Holes size φ 20 x 3pcs				
Drain pump, max lift height		mm	Built-in drain pump , 850			
Recommended breaker size		A	-			
L.R.A. (Locked rotor ampere)		A	5.0			
Interconnecting wires	Size x Core number		φ 1.6mm×3 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0			
Standard accessories			Mounting kit, Drain hose			
Option parts			Edging			
Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.						
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	-	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

PJF000Z425 


Item		Model	FDT100VSVG			
			Indoor unit FDT100VG	Outdoor unit FDC100VS		
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]			
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 12.5(Max.)]			
	Power consumption	Cooling	kW	2.76		
		Heating		2.74		
	Max power consumption			3.86		
	Running current	Cooling	A	4.2 / 4.4		
		Heating		4.2 / 4.4		
	Inrush current, max current			5, 15		
	Power factor	Cooling	%	95 / 95		
		Heating		94 / 95		
	EER	Cooling		3.62		
	COP	Heating		4.09		
Sound power level	Cooling	dB(A)	63	70		
	Heating					
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 39 Me : 37 Lo : 31	49		
	Heating					
Silent mode sound pressure level			-			
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5	83		
Compressor type & Q'ty			-	RMT5126MDE3×1		
Compressor motor (Starting method)		kW	-	Direct line start		
Refrigerant oil (Amount, type)		ℓ	-	0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1		
Fan motor (Starting method)		W	140 < Direct line start >	86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17	75		
	Heating			73		
Available external static pressure		Pa	0	-		
Outside air intake			Possible			
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater		W	-	20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
Operation display			-			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")			
	Connecting method		Flare piping	Flare piping		
	Attached length of piping	m	-	-		
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)	Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850			
Recommended breaker size		A	-			
L.R.A. (Locked rotor ampere)		A	5.0			
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0	IP24		
Standard accessories			Mounting kit, Drain hose	Edging		
Option parts			-			
Notes						
(1) The data are measured at the following conditions. The pipe length is 7.5m.						
	Item	Indoor air temperature		Outdoor air temperature	Standards	
	Operation	DB	WB	DB		WB
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
	Heating	20°C	-	7°C	6°C	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						

PJF000Z425 


Item		Model	FDT125VNVG				
			Indoor unit FDT125VG		Outdoor unit FDC125VN		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]				
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 16.0(Max.)]				
	Power consumption	Cooling	kW	4.05			
		Heating		3.77			
	Max power consumption		5.27				
	Running current	Cooling	A	17.7 / 18.6			
		Heating		16.6 / 17.3			
	Inrush current, max current		5, 24				
	Power factor	Cooling	%	99			
		Heating		99			
	EER	Cooling		3.09			
	COP	Heating		3.71			
Sound power level	Cooling	dB(A)	64		72		
	Heating		P-Hi : 49 Hi : 41 Me : 39 Lo : 32		50		
Sound pressure level	Cooling	dB(A)			51		
	Heating		-		-		
Silent mode sound pressure level			-		-		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5		81		
Compressor type & Q'ty			-		RMT5126MDE2×1		
Compressor motor (Starting method)		kW	-		Direct line start		
Refrigerant oil (Amount, type)		ℓ	-		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)				
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	140 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18			75	
	Heating					73	
Available external static pressure		Pa	0		-		
Outside air intake			Possible		-		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		-		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	-		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		-				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	-		-		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		-		
Recommended breaker size		A	-				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			-				
Notes						(1) The data are measured at the following conditions. The pipe length is 7.5m.	
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	
Heating	20°C	-	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							

PJF000Z425 


Model			FDT125VSVG			
Item			Indoor unit FDT125VG		Outdoor unit FDC125VS	
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)		12.5 [5.0(Min.) - 14.0(Max.)]			
	Nominal heating capacity (range)		14.0 [4.0(Min.) - 16.0(Max.)]			
	Power consumption	Cooling	4.05			
		Heating	3.77			
	Max power consumption		5.27			
	Running current	Cooling	5.9 / 6.3			
		Heating	5.5 / 5.9			
	Inrush current, max current		5, 15			
	Power factor	Cooling	99 / 98			
		Heating	99 / 97			
	EER	Cooling	3.09			
	COP	Heating	3.71			
	Sound power level	Cooling	64		72	
Heating						
Sound pressure level	Cooling	P-Hi : 49 Hi : 41 Me : 39 Lo : 32		50		
	Heating			51		
Silent mode sound pressure level		-		-		
Exterior dimensions (Height x Width x Depth)			Unit 298 × 840 × 840 Panel 35 × 950 × 950		845×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight			Unit 25 Panel 5		83	
Compressor type & Q'ty			-		RMT5126MDE3×1	
Compressor motor (Starting method)			-		Direct line start	
Refrigerant oil (Amount, type)			-		0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)			R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1	
Fan motor (Starting method)			W 140 < Direct line start >		86 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18			75
	Heating					73
Available external static pressure			Pa 0		-	
Outside air intake			Possible		-	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		-	
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)	
Electric heater			W -		20(Crank case heater)	
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		-			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)		mm Liquid line: I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")			
	Connecting method		Flare piping		Flare piping	
	Attached length of piping		m -		-	
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length		m Max.50m			
	Vertical height diff. between O.U. and I.U.		m Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)	
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs	
Drain pump, max lift height			mm Built-in drain pump , 850		-	
Recommended breaker size			A -		-	
L.R.A. (Locked rotor ampere)			A 5.0		-	
Interconnecting wires		Size x Core number		φ 1.6mm×3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0		IP24	
Standard accessories			Mounting kit, Drain hose		Edging	
Option parts			-			
Notes						
(1) The data are measured at the following conditions. The pipe length is 7.5m.						
		Indoor air temperature		Outdoor air temperature		Standards
Operation	Item	DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	-	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						

PJF000Z425 

Item		Model	FDT140VNVG				
			Indoor unit FDT140VG		Outdoor unit FDC140VN		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 14.5(Max.)]				
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 16.5(Max.)]				
	Power consumption	Cooling	kW	4.98			
		Heating		4.57			
	Max power consumption		6.47				
	Running current	Cooling	A	22.0 / 23.0			
		Heating		20.2 / 21.2			
	Inrush current, max current			5, 24			
	Power factor	Cooling	%	98			
		Heating		98			
	EER	Cooling		2.81			
	COP	Heating		3.5			
Sound power level	Cooling	dB(A)	64		73		
	Heating		P-Hi : 49 Hi : 42 Me : 39 Lo : 33		51		
Sound pressure level	Cooling	dB(A)	—		—		
	Heating		—		—		
Silent mode sound pressure level			—				
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5		81		
Compressor type & Q'ty			—		RMT5126MDE2×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)				
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	140 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 38 Hi : 29 Me : 26 Lo : 19		75		
	Heating				73		
Available external static pressure		Pa	0				
Outside air intake			Possible				
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)				
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")				
			Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)			
Drain hose		Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850					
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)					
IP number		IPX0		IP24			
Standard accessories		Mounting kit, Drain hose		Edging			
Option parts		—					
Notes							
(1) The data are measured at the following conditions. The pipe length is 7.5m.							
	Item	Indoor air temperature		Outdoor air temperature			
Operation		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		
	Heating	20°C	—	7°C	6°C		
Standards							
ISO5151-T1							
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							

PJF000Z425 

Item		Model	FDT140VSVG			
			Indoor unit FDT140VG	Outdoor unit FDC140VS		
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 14.5(Max.)]			
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 16.5(Max.)]			
	Power consumption	Cooling	kW	4.98		
		Heating		4.57		
	Max power consumption		6.47			
	Running current	Cooling	A	7.4 / 7.8		
		Heating		6.7 / 7.1		
	Inrush current, max current		5, 15			
	Power factor	Cooling	%	97		
		Heating		98		
	EER	Cooling		2.81		
	COP	Heating		3.5		
Sound power level	Cooling	dB(A)	64	73		
	Heating					
Sound pressure level	Cooling	dB(A)	P-Hi : 49 Hi : 42 Me : 39 Lo : 33			
	Heating		51			
Silent mode sound pressure level			-			
Exterior dimensions (Height x Width x Depth)	mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950	845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		Unit 25 Panel 5	83		
Compressor type & Q'ty			-	RMT5126MDE3×1		
Compressor motor (Starting method)	kW		-	Direct line start		
Refrigerant oil (Amount, type)	ℓ		-	0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1		
Fan motor (Starting method)	W		140 < Direct line start >	86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 38 Hi : 29 Me : 26 Lo : 19			
	Heating		75			
Available external static pressure	Pa		0	-		
Outside air intake			Possible	-		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)	-		
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater	W		-	20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		-			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line: φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")			
	Connecting method		Flare piping	Flare piping		
	Attached length of piping	m	-			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)	Holes size φ 20 x 3pcs		
Drain pump, max lift height	mm		Built-in drain pump , 850			
Recommended breaker size	A		-			
L.R.A. (Locked rotor ampere)	A		5.0			
Interconnecting wires	Size x Core number		φ 1.6mm×3 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0	IP24		
Standard accessories			Mounting kit, Drain hose	Edging		
Option parts			-			
Notes	(1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature	Outdoor air temperature		Standards ISO5151-T1	
	Operation	DB	WB	DB		WB
	Cooling	27°C	19°C	35°C		24°C
	Heating	20°C	-	7°C		6°C
	(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
	(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
	(4) Select the breaker size according to the own national standard.					
	(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.					


PJF000Z425 

(2) Twin type


Item		Model	FDT100VNPVG				
			Indoor unit	FDT50VG (2 units)	Outdoor unit	FDC100VN	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]				
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 12.5(Max.)]				
	Power consumption	Cooling	kW	2.82			
		Heating		3.09			
	Max power consumption		4.33				
	Running current	Cooling	A	12.4 / 13.1			
		Heating		13.6 / 14.2			
	Inrush current, max current		5, 24				
	Power factor	Cooling	%	99 / 98			
		Heating		99			
	EER	Cooling		3.55			
	COP	Heating		3.62			
Sound power level	Cooling	dB(A)	54		70		
	Heating						
Sound pressure level	Cooling	dB(A)	P-Hi : 38 Hi : 33 Me : 30 Lo : 27			49	
	Heating						
Silent mode sound pressure level			—			—	
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 19 Panel 5		81		
Compressor type & Q'ty			—		RMT5126MDE2×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 20 Hi : 16 Me : 13 Lo : 10			75	
	Heating					73	
Available external static pressure		Pa	0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/U φ 6.35 (1/4") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line: 1/U φ 12.7 (1/2") ② φ 12.7(1/2")x0.8 ① φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		—		
Recommended breaker size		A	—				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U							

PJF000Z425 

Item		Model	FDT100VSPVG				
			Indoor unit	FDT50VG (2 units)	Outdoor unit	FDC100VS	
Power source			3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]				
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 12.5(Max.)]				
	Power consumption	Cooling	kW	2.82			
		Heating		3.09			
	Max power consumption		4.33				
	Running current	Cooling	A	4.1 / 4.4			
		Heating		4.5 / 4.8			
	Inrush current, max current		5, 15				
	Power factor	Cooling	%	99 / 97			
		Heating		99 / 98			
	EER	Cooling		3.55			
	COP	Heating		3.62			
Sound power level	Cooling	dB(A)	54		70		
	Heating		P-Hi : 38 Hi : 33 Me : 30 Lo : 27		49		
Sound pressure level	Cooling	dB(A)	—		—		
	Heating		—		—		
Silent mode sound pressure level		—					
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 19 Panel 5		83		
Compressor type & Q'ty			—		RMT5126MDE3×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 20 Hi : 16 Me : 13 Lo : 10			75	
	Heating					73	
Available external static pressure		Pa	0		—		
Outside air intake			Possible		—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/U φ 6.35 (1/4") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line: 1/U φ 12.7 (1/2") ② φ 12.7(1/2")x0.8 ① φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		—		
Recommended breaker size		A	—				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U							

PJF000Z425 


Item		Model	FDT125VNPVG				
			Indoor unit	FDT60VG (2 units)	Outdoor unit	FDC125VN	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]				
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 16.0(Max.)]				
	Power consumption	Cooling	kW	3.95			
		Heating		3.70			
	Max power consumption		5.14				
	Running current	Cooling	A	17.7 / 18.5			
		Heating		16.6 / 17.3			
	Inrush current, max current		5, 24				
	Power factor	Cooling	%	97			
		Heating		97			
	EER	Cooling		3.16			
	COP	Heating		3.78			
	Sound power level	Cooling	dB(A)	60		72	
Heating		P-Hi : 44 Hi : 34 Me : 32 Lo : 28		50			
Sound pressure level	Cooling				51		
	Heating		-		-		
Silent mode sound pressure level			-		-		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5		81		
Compressor type & Q'ty			-		RMT5126MDE2×1		
Compressor motor (Starting method)		kW	-		Direct line start		
Refrigerant oil (Amount, type)		ℓ	-		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 26 Hi : 17 Me : 14 Lo : 11			75	
	Heating					73	
Available external static pressure		Pa	0		-		
Outside air intake			Possible		-		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		-		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	-		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		-				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 6.35 (1/4") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line: I/U φ 12.7 (1/2") ② φ 12.7(1/2")x0.8 ① φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	-		-		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		-		
Recommended breaker size		A	-				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mmx3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			-				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature		Standards ISO5151-T1	
Operation		DB	WB	DB	WB		
Cooling		27°C	19°C	35°C	24°C		
Heating		20°C	-	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U							

PJF000Z425 


Item		Model	FDT125VSPVG				
			Indoor unit	FDT60VG (2 units)	Outdoor unit	FDC125VS	
Power source			3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]				
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 16.0(Max.)]				
	Power consumption	Cooling	kW	3.95			
		Heating		3.70			
	Max power consumption		5.14				
	Running current	Cooling	A	5.9 / 6.2			
		Heating		5.5 / 5.8			
	Inrush current, max current		5, 15				
	Power factor	Cooling	%	97			
		Heating		97			
	EER	Cooling		3.16			
	COP	Heating		3.78			
Sound power level	Cooling	dB(A)	60		72		
	Heating		P-Hi : 44 Hi : 34 Me : 32 Lo : 28		50		
Sound pressure level	Cooling	dB(A)			51		
	Heating		-		-		
Silent mode sound pressure level			-		-		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5		83		
Compressor type & Q'ty			-		RMT5126MDE3×1		
Compressor motor (Starting method)		kW	-		Direct line start		
Refrigerant oil (Amount, type)		ℓ	-		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 26 Hi : 17 Me : 14 Lo : 11		75		
	Heating				73		
Available external static pressure		Pa	0		-		
Outside air intake			Possible		-		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		-		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	-		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		-				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 6.35 (1/4") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line: I/U φ 12.7 (1/2") ② φ 12.7(1/2")x0.8 ① φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	-		-		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		-		
Recommended breaker size		A	-				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			-				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	
Heating	20°C	-	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U							

PJF000Z425 

Item		Model	FDT140VNPVG				
			Indoor unit	FDT71VG (2 units)	Outdoor unit	FDC140VN	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 14.5(Max.)]				
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 16.5(Max.)]				
	Power consumption	Cooling	kW	4.51			
		Heating		4.58			
	Max power consumption		5.95				
	Running current	Cooling	A	19.8 / 20.7			
		Heating		20.1 / 21.0			
	Inrush current, max current		5, 24				
	Power factor	Cooling	%	99			
		Heating		99			
	EER	Cooling		3.1			
	COP	Heating		3.49			
Sound power level	Cooling	dB(A)	62		73		
	Heating		P-Hi : 46 Hi : 35 Me : 34 Lo : 29		51		
Sound pressure level	Cooling	dB(A)	—		—		
	Heating		—		—		
Silent mode sound pressure level		—					
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5		81		
Compressor type & Q'ty			—		RMT5126MDE2×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12			75	
	Heating					73	
Available external static pressure		Pa	0		—		
Outside air intake			Possible				
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)				
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") ② φ 9.52(3/8")×0.8 ① φ 9.52(3/8")×0.8 O/U φ 9.52 (3/8") Gas line: I/U φ 15.88 (5/8") ② φ 15.88(5/8")×1.0 ① φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850				
Recommended breaker size		A	—				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U							



Item		Model	FDT140VSPVG				
			Indoor unit	FDT71VG (2 units)	Outdoor unit	FDC140VS	
Power source			3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 14.5(Max.)]				
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 16.5(Max.)]				
	Power consumption	Cooling	kW	4.51			
		Heating		4.58			
	Max power consumption		5.95				
	Running current	Cooling	A	6.7 / 7.1			
		Heating		6.7 / 7.1			
	Inrush current, max current		5, 15				
	Power factor	Cooling	%	97			
		Heating		99 / 98			
	EER	Cooling		3.1			
	COP	Heating		3.49			
Sound power level	Cooling	dB(A)	62		73		
	Heating						
Sound pressure level	Cooling	dB(A)	P-Hi : 46 Hi : 35 Me : 34 Lo : 29			51	
	Heating						
Silent mode sound pressure level			-			-	
Exterior dimensions (Height x Width x Depth)	mm		Unit 236 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		Unit 21 Panel 5		83		
Compressor type & Q'ty			-		RMT5126MDE3×1		
Compressor motor (Starting method)	kW		-		Direct line start		
Refrigerant oil (Amount, type)	ℓ		-		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 3.8kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)	W		50 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12			75	
	Heating					73	
Available external static pressure	Pa		0			-	
Outside air intake			Possible			-	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			-	
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater	W		-		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		-				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/U φ 9.52 (3/8") ② φ 9.52(3/8")×0.8 ① φ 9.52(3/8")×0.8 O/U φ 9.52 (3/8") Gas line: 1/U φ 15.88 (5/8") ② φ 15.88(5/8")×1.0 ① φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	-		-		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height	mm		Built-in drain pump , 850			-	
Recommended breaker size	A		-				
L.R.A. (Locked rotor ampere)	A		5.0				
Interconnecting wires	Size x Core number		φ 1.6mm×3 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			-				
Notes	(1) The data are measured at the following conditions. The pipe length is 7.5m.						
	Item	Indoor air temperature		Outdoor air temperature		Standards	
	Operation	DB	WB	DB	WB	ISO5151-T1	
	Cooling	27°C	19°C	35°C	24°C		
	Heating	20°C	-	7°C	6°C		
	(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
	(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
	(4) Select the breaker size according to the own national standard.						
	(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						
	(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.						
	(7) Branching pipe set "DIS-WA1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U						

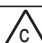PJF000Z425 

Item		Model	FDT200VSAPVG				
			Indoor unit FDT100VG (2 units)		Outdoor unit FDC200VSA		
Power source			3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	19.0 [5.2(Min.)- 22.4(Max.)]				
	Nominal heating capacity (range)	kW	22.4 [3.3(Min.)- 25.0(Max.)]				
	Power consumption	Cooling	kW	6.25			
		Heating		6.02			
	Max power consumption		12.0				
	Running current	Cooling	A	9.8 / 10.2			
		Heating		9.4 / 9.8			
	Inrush current, max current		5, 20				
	Power factor	Cooling	%	92 / 93			
		Heating		92 / 93			
	EER	Cooling		3.04			
	COP	Heating		3.72			
Sound power level	Cooling	dB(A)	63		72		
	Heating				74		
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 39 Me : 37 Lo : 31		58		
	Heating				59		
Silent mode sound pressure level			-		52		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		1,300×970×370		
Exterior appearance (Munsell color)			Plaster White (6.8Y8.9/0.2) near equivalent		Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5		115		
Compressor type & Q'ty			-		RMT5134MDE3×1		
Compressor motor (Starting method)		kW	-		Direct line start		
Refrigerant oil (Amount, type)		ℓ	-		0.9(compressor) + 0.6(unit) M-MA68		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 5.6kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2		
Fan motor (Starting method)		W	140 < Direct line start >		86 × 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17		135		
	Heating						
Available external static pressure		Pa	0		0		
Outside air intake			Possible		-		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		-		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	-		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		-				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 or φ 12.7(1/2")x0.8 O/U φ 9.52(3/8") Gas line: 1/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 22.22(7/8")x1.0 or φ 25.4(1")x1.0 or φ 28.58(1 1/8")x1.0 O/U φ 22.22 (7/8")				
			Connecting method	Flare piping		Liquid : Flare / Gas : Brazing	
	Attached length of piping	m	-				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.70m(Liquid piping: φ 12.7, Gas piping: φ 25.4 or φ 28.58), Max.40m(Liquid piping: φ 9.52), Max.35m(Gas piping: φ 22.22)				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		-		
Recommended breaker size		A	-				
L.R.A. (Locked rotor ampere)		A	5/5				
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (including earth cable) / Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Connecting pipe, Edging		
Optional parts			-				
Notes						(1) The data are measured at the following conditions. The pipe length is 7.5m.	
		Indoor air temperature		Outdoor air temperature		Standards	
Operation	DB	WB	DB	WB	ISO5151-T1		
	Cooling	27°C	19°C	35°C			24°C
Heating	20°C	-	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.							
(7) Branching pipe set "DIS-WB1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U							
(8) Use 1/2H pipes having a 1.0mm or thicker wall for φ 19.05 or larger pipes.							

PJF000Z425 

Item		Model	FDT250VSAPVG			
			Indoor unit FDT125VG (2 units)	Outdoor unit FDC250VSA		
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	24.0 [6.9(Min.) - 28.0(Max.)]			
	Nominal heating capacity (range)	kW	27.0 [5.5(Min.) - 31.5(Max.)]			
	Power consumption	Cooling	kW	8.36		
		Heating		7.15		
	Max power consumption		13.7			
	Running current	Cooling	A	13.4 / 13.8		
		Heating		11.3 / 11.9		
	Inrush current, max current		5, 21			
	Power factor	Cooling	%	90 / 92		
		Heating		91		
	EER	Cooling		2.87		
	COP	Heating		3.78		
	Sound power level	Cooling	dB(A)	64		
		Heating		73		
Sound pressure level	Cooling	dB(A)	P-Hi : 49 Hi : 41 Me : 39 Lo : 32			
	Heating		75			
Silent mode sound pressure level			59			
Exterior dimensions (Height x Width x Depth)	mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950	1,505×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		Unit 25 Panel 5	143		
Compressor type & Q'ty			—	GTC5150NC40KF×1		
Compressor motor (Starting method)	kW		—	Direct line start		
Refrigerant oil (Amount, type)	ℓ		—	1.45 (M-MA32R)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 7.2kg(Pre-charged up to the piping length of 30m)Outdoor unit			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2		
Fan motor (Starting method)	W		140 < Direct line start >	86 x 2 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18			
	Heating		143			
Available external static pressure	Pa		0			
Outside air intake			Possible			
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater	W		—	20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 12.7(1/2")x0.8 O/U φ 12.7 (1/2") Gas line: I/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 22.22(7/8")x1.0 or φ 25.4(1")x1.0 or φ 28.58(1 1/8")x1.0 O/U φ 22.22			
	Connecting method		Flare piping	Liquid : Flare / Gas : Brazing		
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.70m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
	Drain hose		Hose connectable with VP25(O.D.32)	Holes size φ 20 x 3pcs		
Drain pump, max lift height	mm	Built-in drain pump , 850		—		
Recommended breaker size	A	—				
L.R.A. (Locked rotor ampere)	A	1.0				
Interconnecting wires	Size x Core number	φ 1.6mm×3 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number		IPX0		IP24		
Standard accessories		Mounting kit, Drain hose		Connecting pipe, Edging		
Option parts		—				
Notes						
(1) The data are measured at the following conditions. The pipe length is 7.5m.						
	Item	Indoor air temperature		Outdoor air temperature	Standards ISO5151-T1	
Operation		DB	WB	DB		WB
Cooling		27°C	19°C	35°C		24°C
Heating		20°C	—	7°C		6°C
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.						
(7) Branching pipe set "DIS-WB1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U						
(8) Use 1/2H pipes having a 1.0mm or thicker wall for φ 19.05 or larger pipes.						




(3) Triple type


		Model	FDT140VNTVG				
Item			Indoor unit	FDT50VG (3 units)	Outdoor unit	FDC140VN	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 14.5(Max.)]				
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 16.5(Max.)]				
	Power consumption	Cooling	kW	4.65			
		Heating		4.63			
	Max power consumption		6.05				
	Running current	Cooling	A	20.8 / 22.1			
		Heating		20.3 / 21.2			
	Inrush current, max current		5, 24				
	Power factor	Cooling	%	97 / 96			
		Heating		99			
	EER	Cooling		3.01			
	COP	Heating		3.46			
Sound power level	Cooling	dB(A)	54		73		
	Heating						
Sound pressure level	Cooling	dB(A)	P-Hi : 38 Hi : 33 Me : 30 Lo : 27			51	
	Heating						
Silent mode sound pressure level			-			-	
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 19 Panel 5		81		
Compressor type & Q'ty			-		RMT5126MDE2×1		
Compressor motor (Starting method)		kW	-		Direct line start		
Refrigerant oil (Amount, type)		ℓ	-		0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg(Pre-charged up to the piping length of 30m)Outdoor unit				
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 20 Hi : 16 Me : 13 Lo : 10			75	
	Heating					73	
Available external static pressure		Pa	0		-		
Outside air intake			Possible		-		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		-		
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	-		20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		-				
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 6.35 (1/4") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line: I/U φ 12.7 (1/2") ② φ 12.7(1/2")x0.8 ① φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	-		-		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		-		
Recommended breaker size		A	-				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	φ 1.6mmx3 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number			IPX0		IP24		
Standard accessories			Mounting kit, Drain hose		Edging		
Option parts			-				
Notes							
(1) The data are measured at the following conditions. The pipe length is 7.5m.							
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	-	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							
(6) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.							
(7) Branching pipe set "DIS-TB1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U							

PJF000Z425 

Item		Model	FDT140VSTVG			
			Indoor unit FDT50VG (3 units)	Outdoor unit FDC140VS		
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 14.5(Max.)]			
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 16.5(Max.)]			
	Power consumption	Cooling	kW	4.65		
		Heating		4.63		
	Max power consumption		6.05			
	Running current	Cooling	A	6.9 / 7.4		
		Heating		6.8 / 7.1		
	Inrush current, max current		5, 15			
	Power factor	Cooling	%	97 / 95		
		Heating		98 / 99		
	EER	Cooling		3.01		
	COP	Heating		3.46		
Sound power level	Cooling	dB(A)	54	73		
	Heating					
Sound pressure level	Cooling	dB(A)	P-Hi : 38 Hi : 33 Me : 30 Lo : 27			
	Heating		51			
Silent mode sound pressure level			-			
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950	845×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 19 Panel 5	83		
Compressor type & Q'ty			-	RMT5126MDE3×1		
Compressor motor (Starting method)		kW	-	Direct line start		
Refrigerant oil (Amount, type)		ℓ	-	0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg(Pre-charged up to the piping length of 30m)Outdoor unit			
Heat exchanger			Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >	86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 20 Hi : 16 Me : 13 Lo : 10			
	Heating		75 73			
Available external static pressure		Pa	0			
Outside air intake			Possible			
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater		W	-	20(Crank case heater)		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		-			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/U φ 6.35 (1/4") ② φ 9.52(3/8")×0.8 ① φ 9.52(3/8")×0.8 O/U φ 9.52 (3/8")			
			Gas line: 1/U φ 12.7 (1/2") ② φ 12.7(1/2")×0.8 ① φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	-			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)			
Drain hose		Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height	mm	Built-in drain pump , 850		-		
Recommended breaker size	A	-				
L.R.A. (Locked rotor ampere)	A	5.0				
Interconnecting wires	Size x Core number	φ 1.6mm×3 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number		IPX0		IP24		
Standard accessories		Mounting kit, Drain hose		Edging		
Option parts		-				
Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.						
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	-	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						
(6) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.						
(7) Branching pipe set "DIS-TB1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U						


PJF000Z425 

		Model	FDT200VSATVG		
Item			Indoor unit FDT71VG (3 units)	Outdoor unit FDC200VSA	
Power source			3 Phase 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	19.0 [5.2(Min.) - 22.4(Max.)]		
	Nominal heating capacity (range)	kW	22.4 [3.3(Min.) - 25.0(Max.)]		
	Power consumption	Cooling	kW	6.01	
		Heating		5.76	
	Max power consumption		12.0		
	Running current	Cooling	A	9.6 / 10.0	
		Heating		9.2 / 9.6	
	Inrush current, max current		5, 20		
	Power factor	Cooling	%	90 / 91	
		Heating		90 / 91	
	EER	Cooling		3.16	
	COP	Heating		3.89	
	Sound power level	Cooling	dB(A)	62	
Heating		72			
Sound pressure level	Cooling	dB(A)	P-Hi : 46 Hi : 35 Me : 34 Lo : 29		
	Heating		74		
Silent mode sound pressure level	Cooling	dB(A)	58		
	Heating		59		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950	1,300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 21 Panel 5	115	
Compressor type & Q'ty			—	RMT5134MDE3×1	
Compressor motor (Starting method)		kW	—	Direct line start	
Refrigerant oil (Amount, type)		ℓ	—	0.9(compressor) + 0.6(unit) (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 5.6kg(Pre-charged up to the piping length of 30m)Outdoor unit		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2	
Fan motor (Starting method)		W	50 < Direct line start >	86 × 2 < Direct line start >	
Air flow	Cooling	m³/min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12		
	Heating		135		
Available external static pressure		Pa	0	0	
Outside air intake			Possible	—	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)	—	
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)	
Electric heater		W	—	20(Crank case heater)	
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
Operation display			—		
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 or φ 12.7(1/2")x0.8 O/U φ 9.52(3/8") Gas line: 1/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 22.22(7/8")x1.0 or φ 25.4(1")x1.0 or φ 28.58(1 1/8")x1.0		
			Connecting method	Flare piping	Liquid : Flare / Gas : Brazing
	Attached length of piping	m	—		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.70m(Liquid piping:φ 12.7, Gas piping:φ 25.4 or φ 28.58), Max.40m(Liquid piping:φ 9.52), Max.35m(Gas piping:φ 22.22)		
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)	
Drain hose		mm	Hose connectable with VP25(O.D.32) Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		
Recommended breaker size		A	—		
L.R.A. (Locked rotor ampere)		A	5/5		
Interconnecting wires		Size x Core number	φ 1.6mmx3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0	IP24	
Standard accessories			Mounting kit, Drain hose	Connecting pipe, Edging	
Option parts			—		
Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature	Outdoor air temperature		Standards
Operation		DB	DB	WB	
	Cooling	27°C	19°C	35°C	ISO5151-T1
	Heating	20°C	—	7°C	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
(4) Select the breaker size according to the own national standard.					
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.					
(6) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.					
(7) Branching pipe set "DIS-TB1G"×1(option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U					
(8) Use 1/2H pipes having a 1.0mm or thicker wall for φ 19.05 or larger pipes.					




(4) Double twin type

		Model	FDT200VSADVG			
Item			Indoor unit	FDT50VG (4 units)	Outdoor unit	FDC200VSA
Power source		3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	19.0 [5.2(Min.) - 22.4(Max.)]			
	Nominal heating capacity (range)	kW	22.4 [3.3(Min.) - 25.0(Max.)]			
	Power consumption	Cooling	kW	6.26		
		Heating		6.15		
	Max power consumption		12.0			
	Running current	Cooling	A	9.8 / 10.2		
		Heating		9.6 / 10.0		
	Inrush current, max current		5, 20			
	Power factor	Cooling	%	92 / 93		
		Heating		92 / 93		
	EER	Cooling		3.04		
	COP	Heating		3.64		
	Sound power level	Cooling	dB(A)	54		72
		Heating				74
Sound pressure level	Cooling	dB(A)	P-Hi : 38 Hi : 33 Me : 30 Lo : 27		58	
	Heating				59	
Silent mode sound pressure level			—		52	
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1,300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 19 Panel 5		115	
Compressor type & Q'ty			—		RMT5134MDE3×1	
Compressor motor (Starting method)		kW	—		Direct line start	
Refrigerant oil (Amount, type)		ℓ	—		0.9(compressor) + 0.6(unit) (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 5.6kg(Pre-charged up to the piping length of 30m)Outdoor unit			
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2	
Fan motor (Starting method)		W	50 < Direct line start >		86 x 2 < Direct line start >	
Air flow	Cooling	m³/min	P-Hi : 20 Hi : 16 Me : 13 Lo : 10		135	
	Heating					
Available external static pressure		Pa	0		0	
Outside air intake			Possible			
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)	
Electric heater		W	—		20(Crank case heater)	
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/U φ9.52 (3/8") ③② φ9.52(3/8")x0.8 ① φ9.52(3/8")x0.8 or φ12.7(1/2")x0.8 O/U φ9.52(3/8") Gas line: 1/U φ12.7 (1/2") ③ φ12.7x0.8 ② φ15.88x1.0 ① φ22.22(7/8")x1.0 or φ25.4(1")x1.0 or φ28.58(1 1/8")x1.0			
			Connecting method	Flare piping		Liquid : Flare / Gas : Brazing
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.70m(Liquid piping: φ12.7, Gas piping: φ25.4 or φ28.58), Max.40m(Liquid piping: φ9.52), Max.35m(Gas piping: φ22.22)			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)	
Drain hose		Hose connectable with VP25(O.D.32)		Holes size φ20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		—	
Recommended breaker size		A	—			
L.R.A. (Locked rotor ampere)		A	5/5			
Interconnecting wires		Size x Core number	φ 1.6mmx3 cores (Including earth cable)/ Terminal block (Screw fixing type)			
IP number			IPX0		IP24	
Standard accessories			Mounting kit, Drain hose		Connecting pipe, Edging	
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Operation	27°C	19°C	35°C	24°C	
	Cooling	27°C	19°C	35°C	24°C	
	Heating	20°C	—	7°C	6°C	ISO5151-T1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						
(6) Indoor unit specifications for one unit. Capacity and operation data is four indoor units are combined and run together.						
(7) Branching pipe set "DIS-WB1G"×1, "DIS-WA1G"×2 (option). Pipe① : O/U-Branch, ② : Branch-Branch, ③ : Branch-I/U						
(8) Use 1/2H pipes having a 1.0mm or thicker wall for φ 19.05 or larger pipes.						

PJF000Z425 


		Model	FDT250VSADVG			
Item			Indoor unit	FDT60VG (4 units)	Outdoor unit	FDC250VSA
Power source		3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	24.0 [6.9(Min.) - 28.0(Max.)]			
	Nominal heating capacity (range)	kW	27.0 [5.5(Min.) - 31.5(Max.)]			
	Power consumption	Cooling	kW	7.43		
		Heating		6.83		
	Max power consumption			13.7		
	Running current	Cooling	A	11.9 / 12.5		
		Heating		11.0 / 11.4		
	Inrush current, max current			5, 21		
	Power factor	Cooling	%	90		
		Heating		90 / 91		
	EER	Cooling		3.23		
	COP	Heating		3.95		
	Sound power level	Cooling	dB(A)	60		73
Heating				75		
Sound pressure level	Cooling	dB(A)	P-Hi : 44 Hi : 34 Me : 32 Lo : 28		59	
	Heating				62	
Silent mode sound pressure level			-		54	
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		1,505×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 21 Panel 5		143	
Compressor type & Q'ty			-		GTC5150NC40KF×1	
Compressor motor (Starting method)		kW	-		Direct line start	
Refrigerant oil (Amount, type)		ℓ	-		1.45 (M-MA32R)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 7.2kg(Pre-charged up to the piping length of 30m)Outdoor unit			
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2	
Fan motor (Starting method)		W	50 < Direct line start >		86 x 2 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 26 Hi : 17 Me : 14 Lo : 11		143	
	Heating				151	
Available external static pressure		Pa	0		0	
Outside air intake			Possible		-	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		-	
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)	
Electric heater		W	-		20(Crank case heater)	
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		-			
Safety equipments			Overload protection for fan motor. Frost protection thermostat. Internal thermostat for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: 1/O φ 6.35 (1/4") ③② φ 9.52(3/8")x0.8 ① φ 12.7(1/2")x0.8 O/U φ 12.7 (1/2")			
			Gas line: 1/U φ 12.7 (1/2") ③ φ 12.7x0.8 ② φ 15.88x1.0			
	Connecting method		Flare piping		Liquid : Flare / Gas : Brazing	
	Attached length of piping	m	-			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.70m			
Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		-	
Recommended breaker size		A	-			
L.R.A. (Locked rotor ampere)		A	5/5			
Interconnecting wires		Size x Core number	φ 1.6mm×3 cores (Including earth cable)/ Terminal block (Screw fixing type)			
IP number			IPX0		IP24	
Standard accessories			Mounting kit, Drain hose		Connecting pipe, Edging	
Option parts			-			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
	Heating	20°C	-	7°C	6°C	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						
(6) Indoor unit specifications for one unit. Capacity and operation data is four indoor units are combined and run together.						
(7) Branching pipe set "DIS-WB1G"×1,"DIS-WA1G"×2(option). Pipe ① : O/U-Branch, ② :Branch-Branch, ③ : Branch-I/U						
(8) Use 1/2H pipes having a 1.0mm or thicker wall for φ 19.05 or larger pipes.						



2.2 EXTERIOR DIMENSIONS

- (1) Indoor units See page 24.
 (2) Outdoor units

Models FDC100VN, 125VN, 140VN
 FDC100VS, 125VS, 140VS





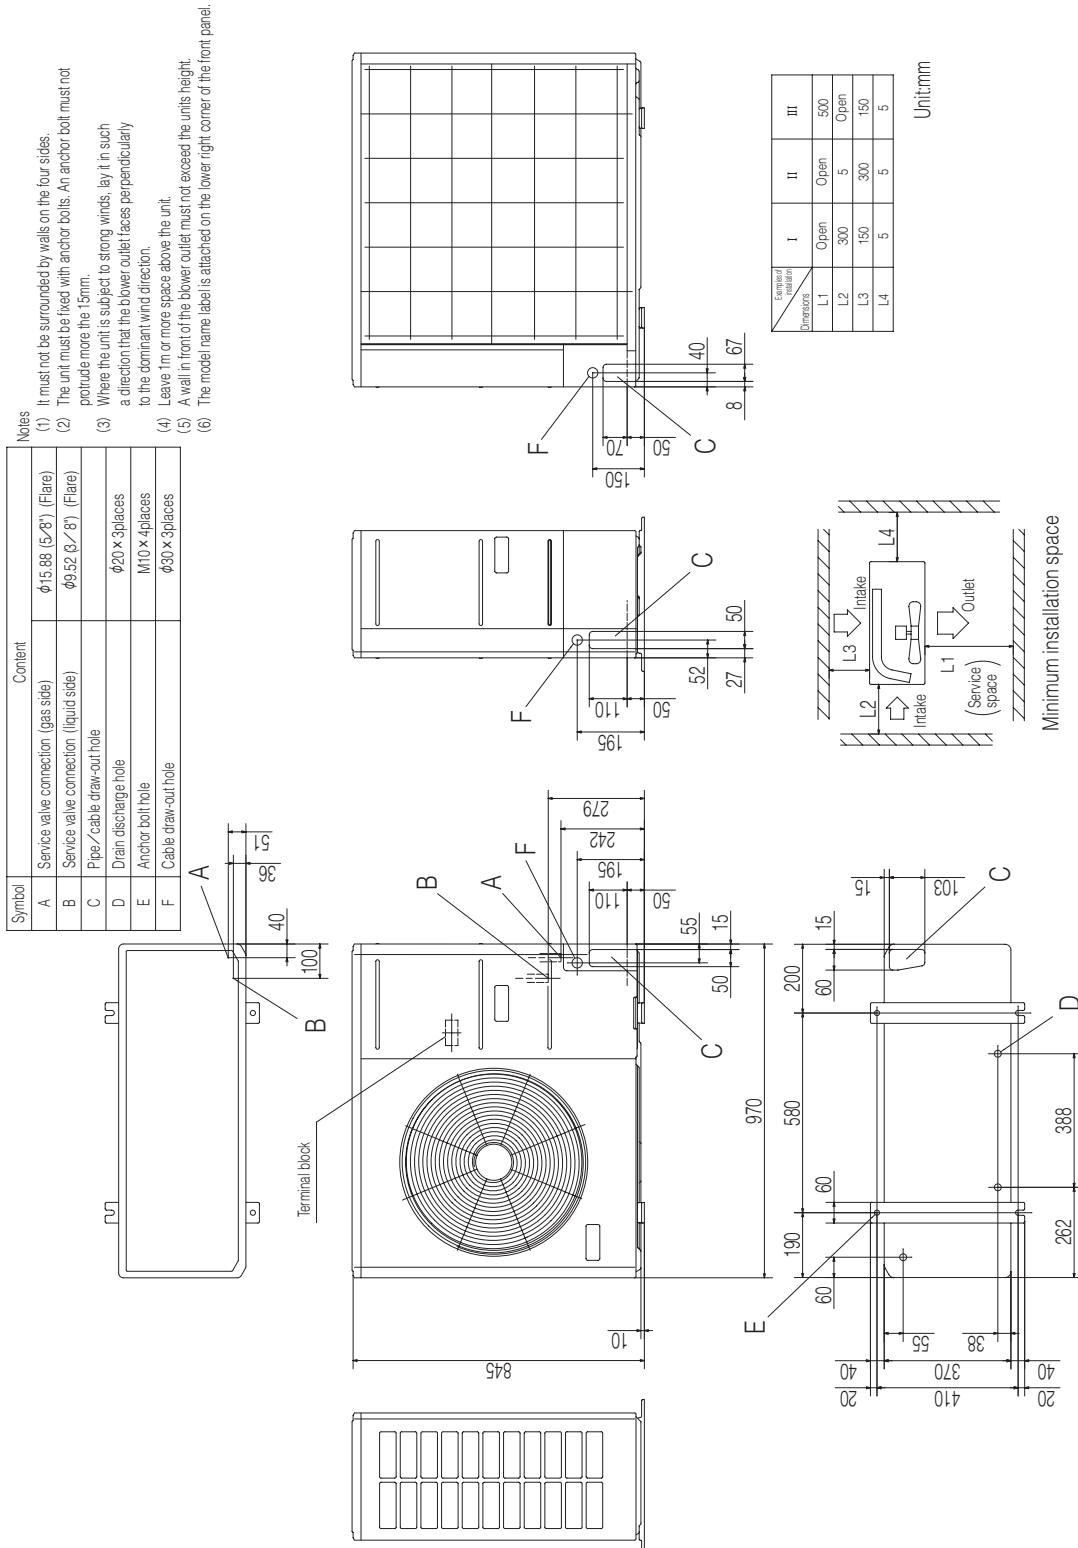


Model FDC200VSA

Notes


- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the lower right corner of the front panel.
- (7) Connect the service valve with local pipe by using the pipe of the attachment (Gas side only)
- (8) Regarding attaching the pipe of accessories, refer to page

Symbol	Content
A	Service valve connection of the attached connecting pipe (gas side)
B	Service valve connection (liquid side)
C	Pipe/cable draw-out hole
D	Drain discharge hole
E	Anchor bolt hole
F	Cable draw-out hole

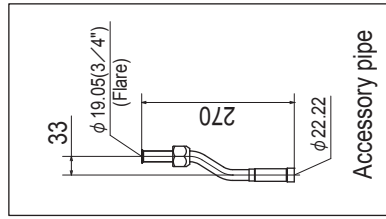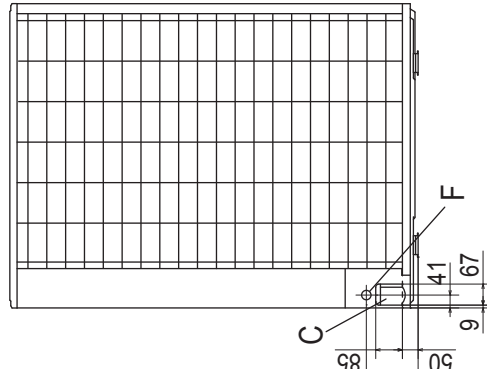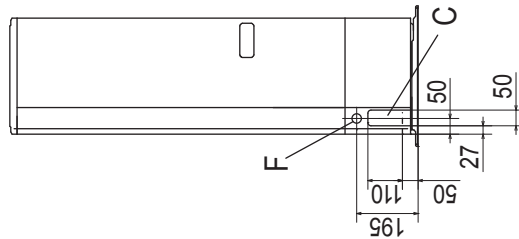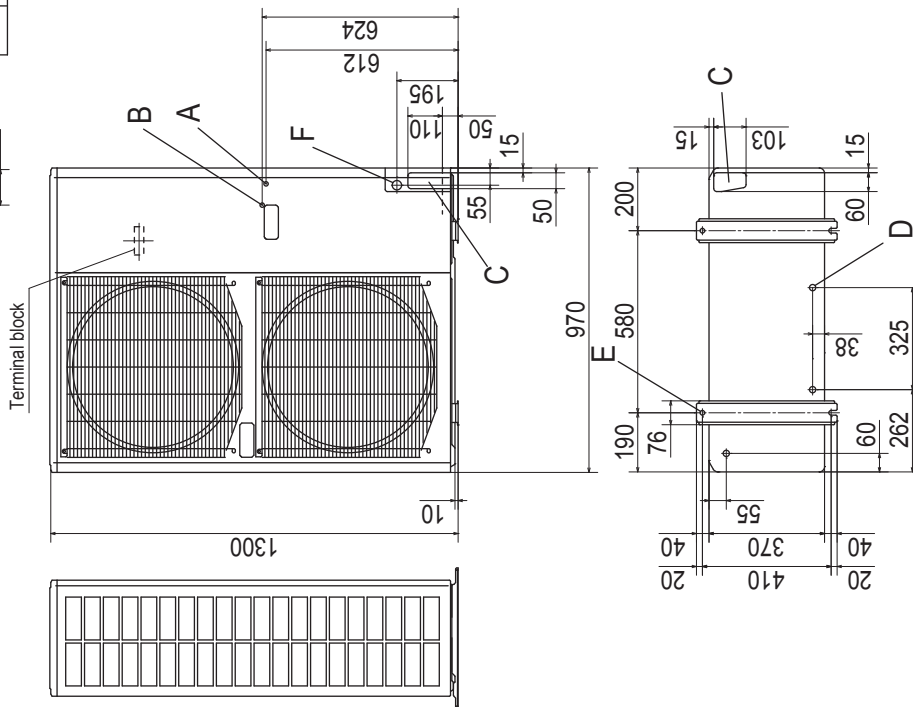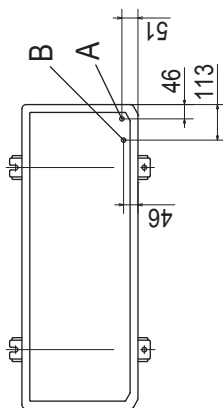

Unit:mm

Examples of installation	I	II	III
L1 Open	300	5	500
L2 Open	150	300	150
L3 Open	5	5	5
L4	5	5	5

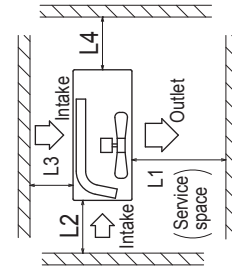

Minimum installation space





PCA001Z768

Model FDC250VSA

Notes


- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts.
An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the lower right corner of the front panel.
- (7) Connect the service valve with local pipe by using the pipe of the attachment (Gas side only)
- (8) Regarding attaching the pipe of accessories, refer to page

Symbol	Content
A	Service valve connection of the attached connecting pipe (gas side) $\phi 19.05(3/4")$ (Flare)
B	Service valve connection (liquid side) $\phi 12.7(1/2")$ (Flare)
C	Cable draw-out hole (front-side) $\phi 30 \times 2$ places
D	Cable draw-out hole (front-side) $\phi 45 \times 2$ places
E	Cable draw-out hole (back) $\phi 50$
F	Pipe/cable draw-out hole 4places
G	Drain discharge hole $\phi 20 \times 3$ places
H	Anchor bolt hole M10 \times 4places

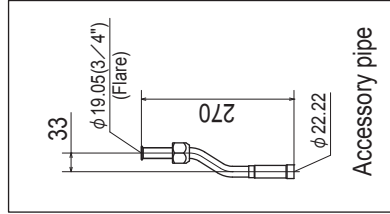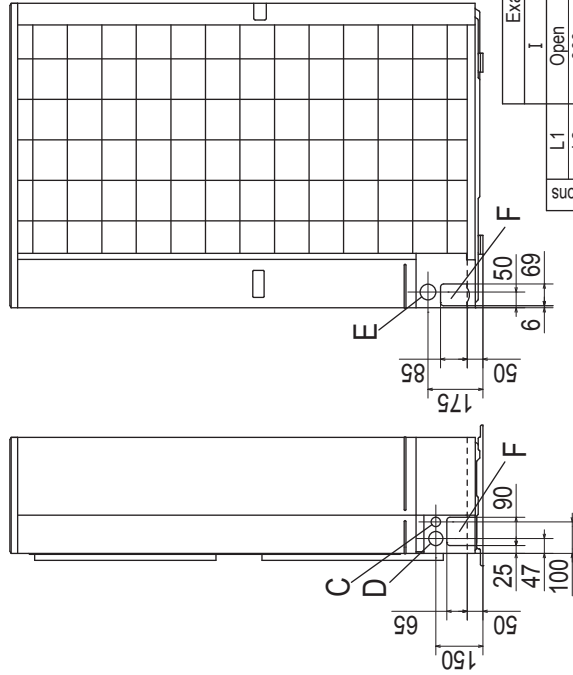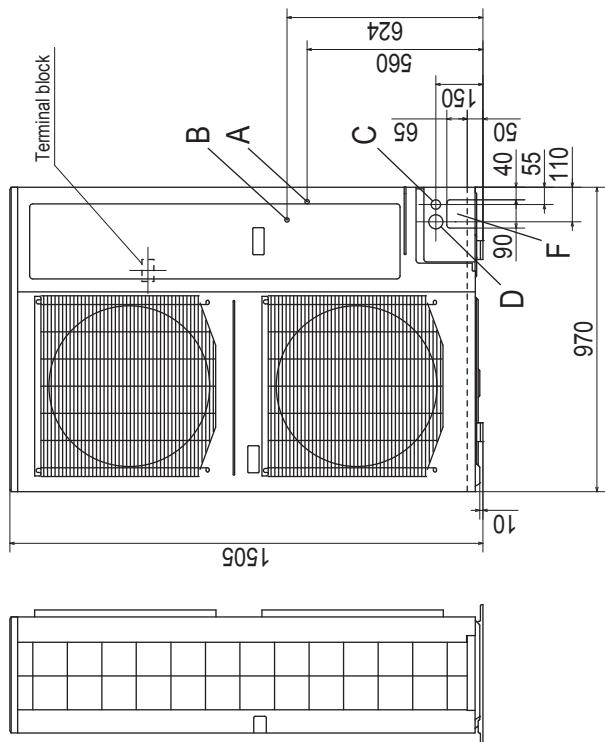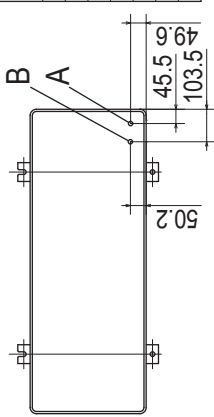


Unit:mm

Examples of installation	
I	Open
II	Open
III	Open
L1	300
L2	150
L3	250(5) ^{※1}
L4	250(5) ^{※1}

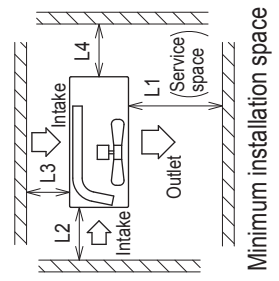

※1 At the time of the installation at () dimension, Secure space of 250mm in lateral (L4) by unit movement at the time of the exchange work of the compressor.

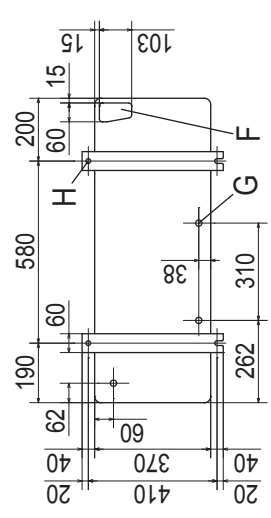

PCB003Z865

(3) Remote control (Option parts) See page 29.


2.3 ELECTRICAL WIRING

- (1) Indoor units See page 32.
 (2) Outdoor units

Models FDC100VN, 125VN, 140VN

Item	Description
CnA-Z	Connector
CH	Crankcase heater
CM	Compressor motor
CT	Current sensor
DM	Diode module
F	Fuse
FM01	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp. (GREEN)
LED2	Indication lamp. (RED)
LPT	Low pressure sensor
SM1	Expansion valve for cooling
SM2	Expansion valve for heating
SW1	Pump down switch
SW3.5	Local setting switch
TB	Terminal block
Tho-A	Thermistor. (Outdoor air temp.)
Tho-D	Thermistor. (Discharge pipe temp.)
Tho-IPM	Thermistor. (IPM)
Tho-R1,2	Thermistor. (Heat exchanger pipe temp.)
Tho-S	Thermistor. (Suction pipe temp.)
20S	Solenoid valve for 4 way valve
52X1	Auxiliary relay. (for CH)
52X3	Auxiliary relay. (for 20S)
63H1	High pressure switch

Mark	Color
BK	Black
BL	Blue
BR	Brown
GN	Green
GR	Gray
P	Pink
OR	Orange
RD	Red
WH	White
Y	Yellow
Y/GN	Yellow/Green

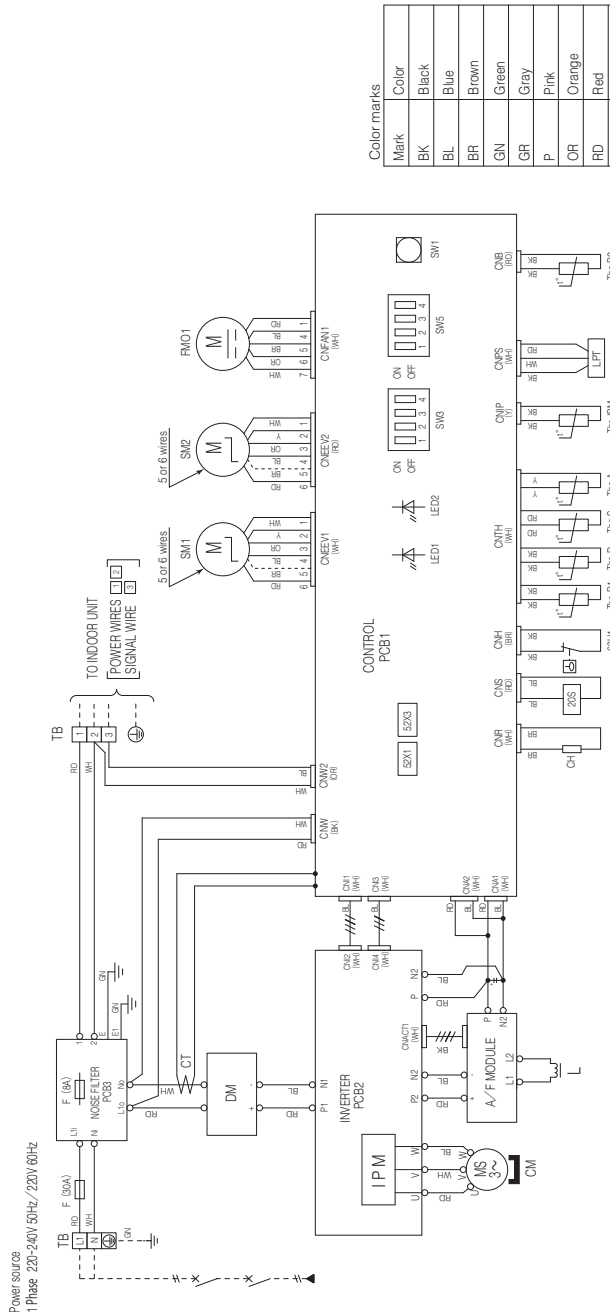


Local setting switch SW3 (Set up at shipment OFF)

SW3-1	Defrost control change	Method of trial operation
SW3-2	Snow guard fan control	① Trial operation can be performed by using SW3-3.4. ② Compressor will be in the operation when SW3-3 is ON. ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON. ④ Be sure to turn OFF SW3-3 after the trial operation is finished.
SW3-3.4	Trial operation	


Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm)
FDC100	24	5.5	25	φ 1.6mm x 3	φ 1.6
FDC125					
FDC140					

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.



Models FDC100VS, 125VS, 140VS

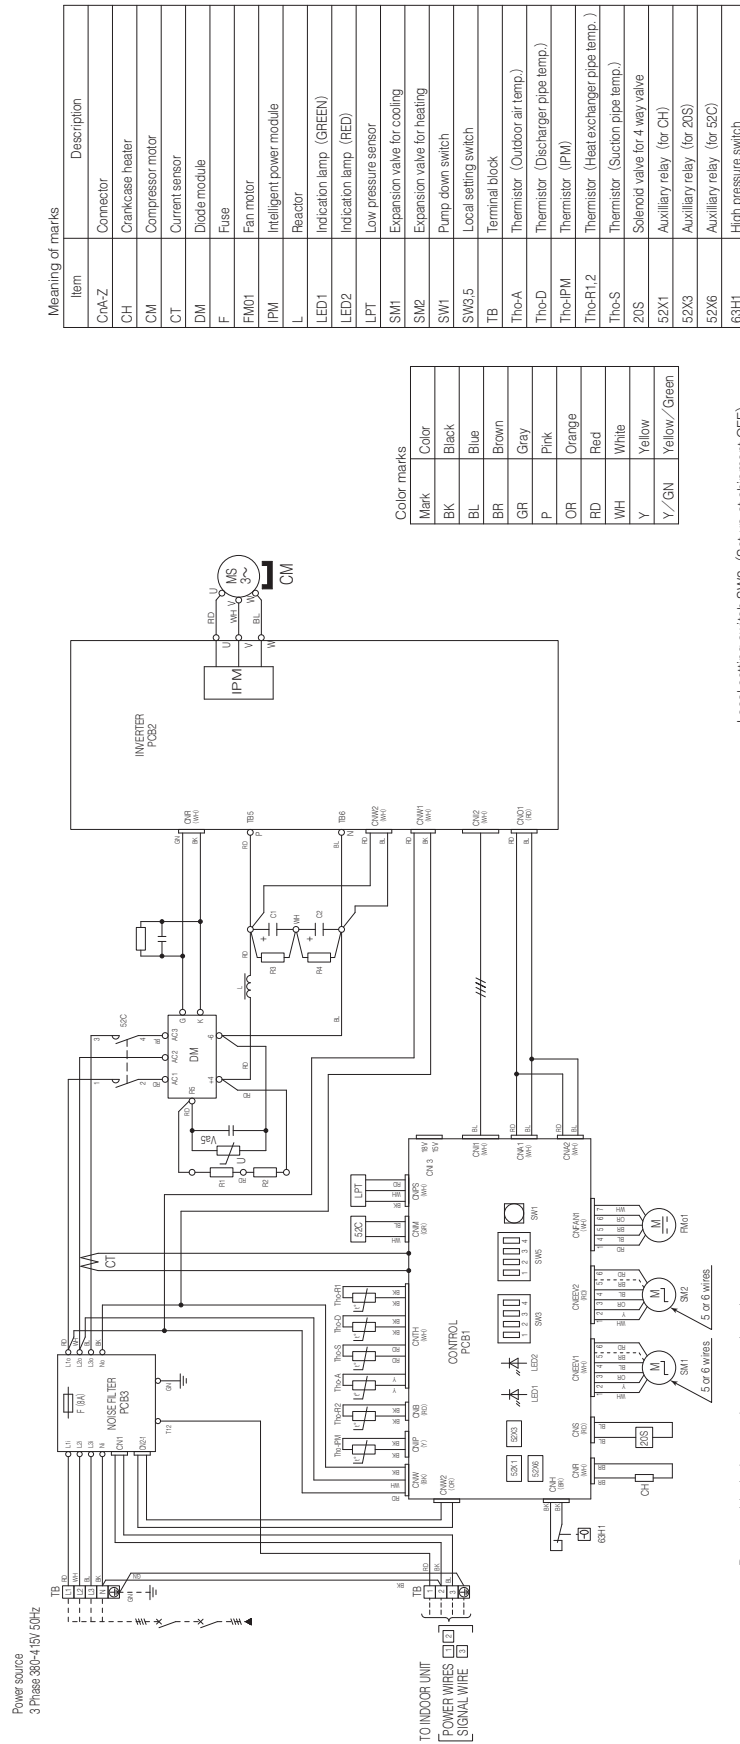

Power source
3 Phase 380-415V 50Hz

Color marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
GR	Gray
P	Pink
OR	Orange
RD	Red
WH	White
Y	Yellow
Y/GN	Yellow/Green

Item	Description
CPA-Z	Connector
CH	Crankcase heater
CM	Compressor motor
CT	Current sensor
DM	Diode module
F	Fuse
FM01	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
LPT	Low pressure sensor
SM1	Expansion valve for cooling
SM2	Expansion valve for heating
SW1	Pump down switch
SW3.5	Local setting switch
TB	Terminal block
Tho-A	Thermistor (Outdoor air temp.)
Tho-D	Thermistor (Discharger pipe temp.)
Tho-IPM	Thermistor (IPM)
Tho-R1.2	Thermistor (Heat exchanger pipe temp.)
Tho-S	Thermistor (Suction pipe temp.)
20S	Solenoid valve for 4 way valve
52X1	Auxiliary relay (for CH)
52X3	Auxiliary relay (for 20S)
52X6	Auxiliary relay (for 52C)
63H1	High pressure switch


Local setting switch SW3. (Set up at shipment OFF)

SW3-1	Defrost control change	<ul style="list-style-type: none"> ① Trial operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point. ② When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.
SW3-2	Snow guard fan control	<ul style="list-style-type: none"> ① Trial operation can be performed by using SW3-3,4. ② Compressor will be in the operation when SW3-3 is ON. ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON. ④ Be sure to turn OFF SW3-3 after the trial operation is finished.
SW3-3,4	Trial operation	


Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm)
FDC100	15	3.5	27	φ 1.6mm x 3	φ 1.6
FDC125					
FDC140					

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.



Model FDC200VSA

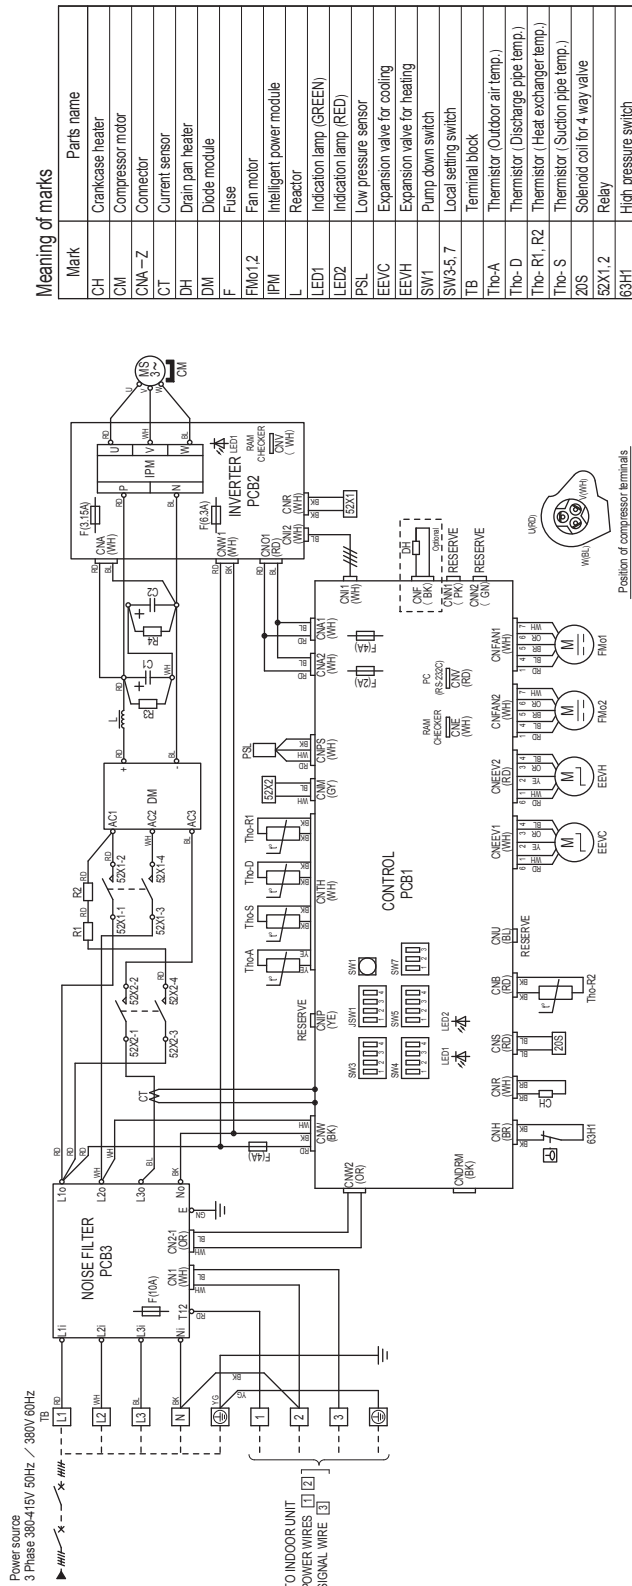

Meaning of marks

Mark	Parts name
CH	Criticase heater
CM	Compressor motor
CNA-Z	Connector
CT	Current sensor
DH	Drain pan heater
DM	Diode module
F	Fuse
FMot.2	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
PSL	Low pressure sensor
EEVC	Expansion valve for cooling
EEVH	Expansion valve for heating
SW1	Pump down switch
SW3-5,7	Local setting switch
TB	Terminal block
Th-A	Thermistor (Outdoor air temp.)
Th-D	Thermistor (Discharge pipe temp.)
Th-R1, R2	Thermistor (Heat exchanger temp.)
Th-S	Thermistor (Suction pipe temp.)
20S	Solenoid coil for 4 way valve
52X1, 2	Relay
63H1	High pressure switch

Color marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
GN	Green
OR	Orange
RD	Red
WH	White
YE	Yellow
YG	Yellow/Green
GY	Gray
PK	Pink

Local setting switch SW3 (Set up at shipment OFF)	Method of trial operation
SW3-1 Defrost control change	The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.
SW3-2 Snow guard fan control	When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.
SW3-3,4 Trial operation	Method of trial operation ① Trial operation can be performed by using SW3-3,4. ② Compressor will be in the operation when SW3-3 is ON. ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON. ④ Be sure to turn OFF SW3-3 after the trial operation is finished.

MAX over current (A)	Power cable size (mm)	Indoor-outdoor wire size x number	Earth wire size
25	5.5	φ1.6mm x 3	φ1.6mm


- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

PCA001Z769

Model FDC250VSA

Meaning of marks

Mark	Parts name
CH	Crankcase heater
CM	Compressor motor
CNA-Z	Comector
CT	Current sensor
DH	Drain pan heater
DM	Diode module
F	Fuse
FMo1,2	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
PSL	Low pressure sensor
EEVC	Expansion valve for cooling
EEVH	Expansion valve for heating
SW1	Pump down switch
SW3-5,7	Local setting switch
TB	Terminal block
Tho-A	Thermistor (Outdoor air temp.)
Tho-D	Thermistor (Discharge pipe temp.)
Tho-R1,R2	Thermistor (Heat exchanger temp.)
Tho-H	Thermistor (Comp. under dome temp.)
Tho-S	Thermistor (Suction pipe temp.)
20S	Solenoid coil for 4 way valve
SV6	Solenoid coil for 2 way valve
52X1, 2	Relay
63H1	High pressure switch

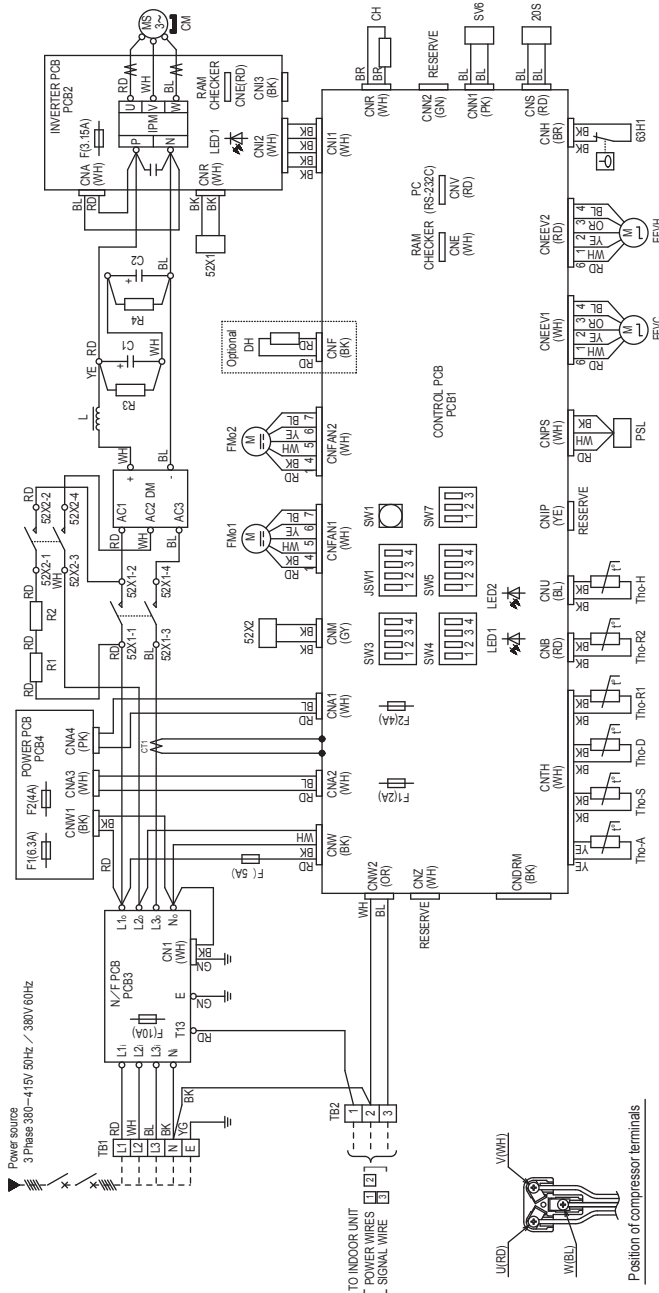

Position of compressor terminals

Power cable, indoor-outdoor connecting wires

MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size
27	5.5	40	φ 1.6mm x 3	φ 1.6mm

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Local setting switch SW3 (Set up at shipment OFF)

SW3-1	SW3-2	SW3-3,4
Defrost control change	Snow guard fan control	Trial operation

The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.

When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.

Method of trial operation
 ① Trial operation can be performed by using SW3-3,4.
 ② Compressor will be in the operation when SW3-3 is ON.
 ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON.
 ④ Be sure to turn OFF SW3-3 after the trial operation is finished.

Color marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
GN	Green
OR	Orange
RD	Red
WH	White
YE	Yellow
YG	Yellow/Green
GY	Gray
PK	Pink

PCB003Z866

2.4 NOISE LEVEL

Notes(1) The data are based on the following conditions.

Ambient air temperature: Indoor unit 27°CWB. Outdoor unit 35°CDB.

(2) The data in the chart are measured in an anechoic room.

(3) The noise levels measured in the field are usually higher than the data because of reflection.

(1) **Indoor units** See page 37.

(2) Outdoor units

Measured based on ISO-T1, JIS B 8616


Mike position: at highest noise level in position as mentined below

Distance from front side 1m

Height 1m


Models FDC100VN, 100VS

Noise level 49 dB (A)

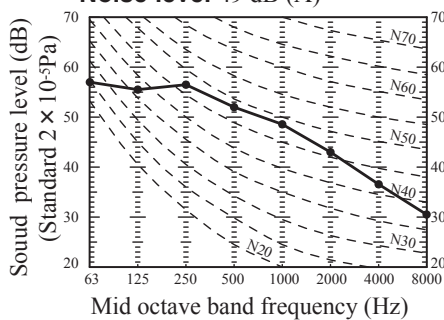


Models FDC125VN, 125VS

Cooling noise level 50 dB (A)

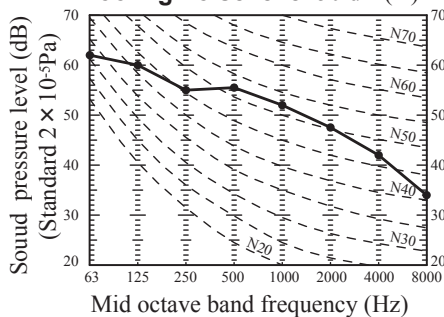


Heating noise level 51 dB (A)

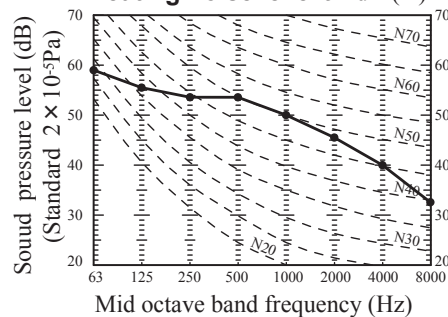


Models FDC140VN, 140VS

Noise level 51 dB (A)

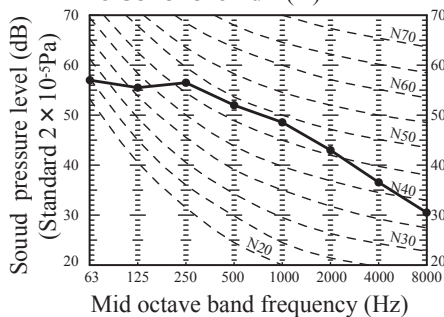


Model FDC200VSA

Cooling noise level 58dB (A)

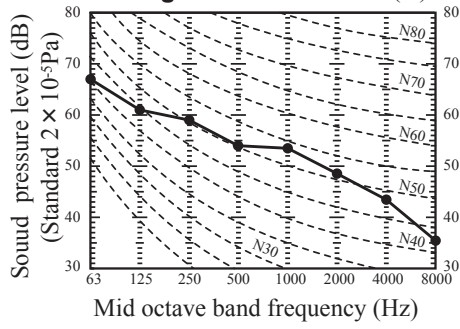


Heating noise level 59dB (A)

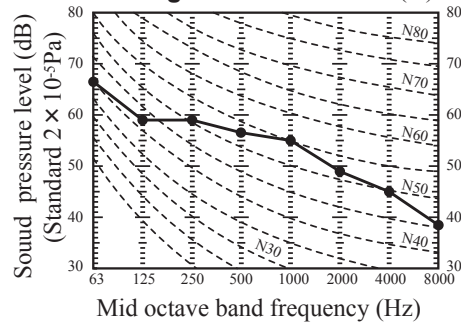


Model FDC250VSA

Cooling noise level 59dB (A)

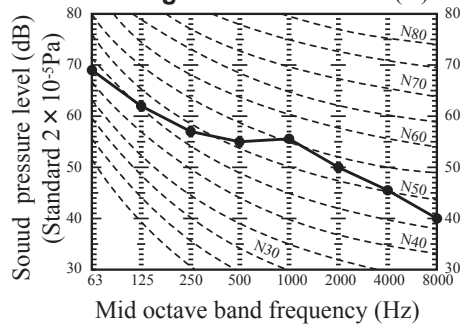

Heating noise level 62dB (A)

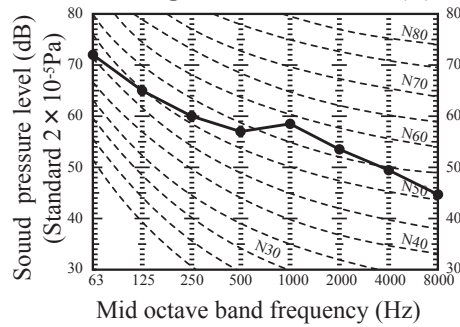


2.5 TEMPERATURE AND VELOCITY DISTRIBUTION

See page 40 of 1.5 chapter.

2.6 PIPING SYSTEM


(1) Single type

Models FDT100, 125, 140

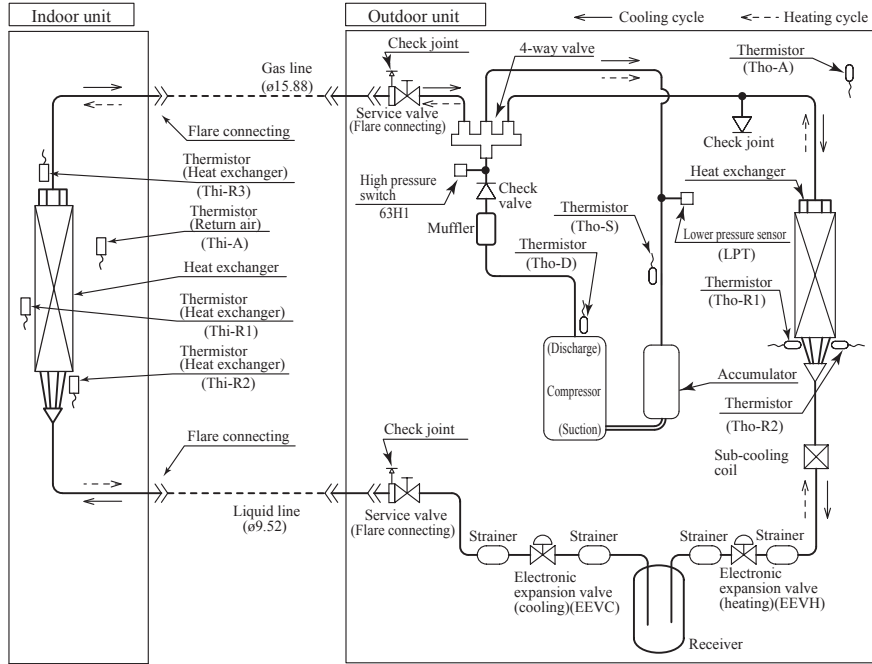


(2) Twin type


Models FDT100, 125, 140

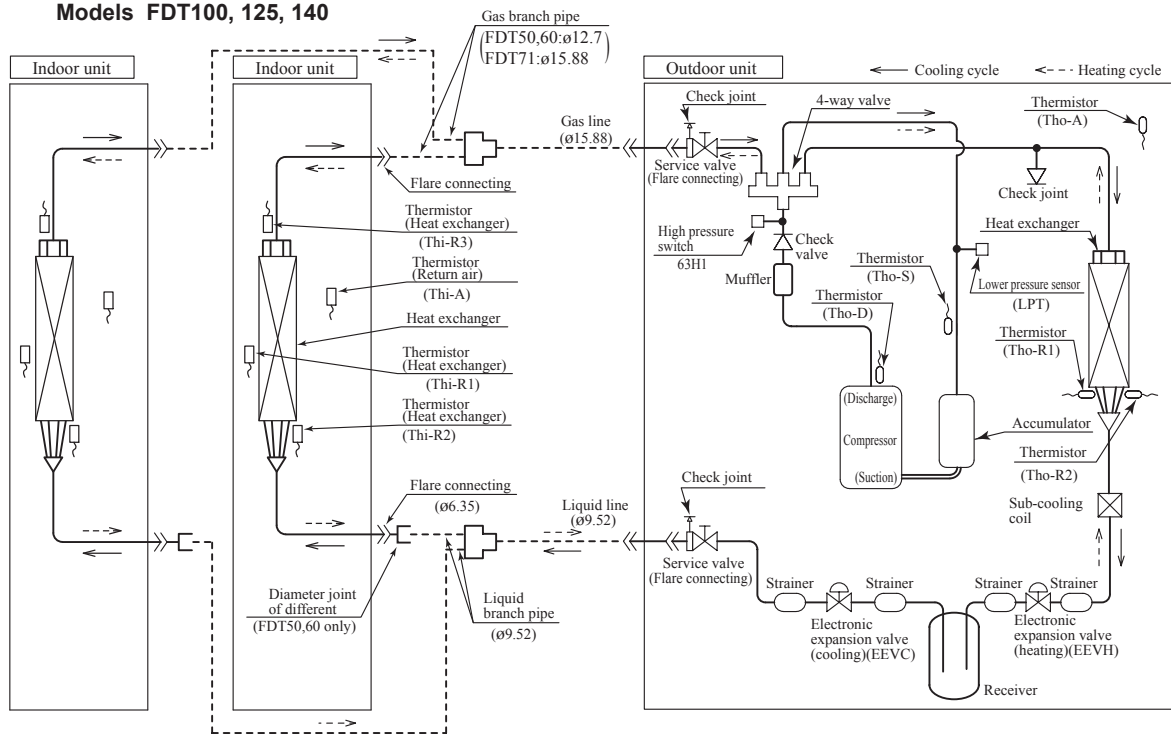

Model FDT200

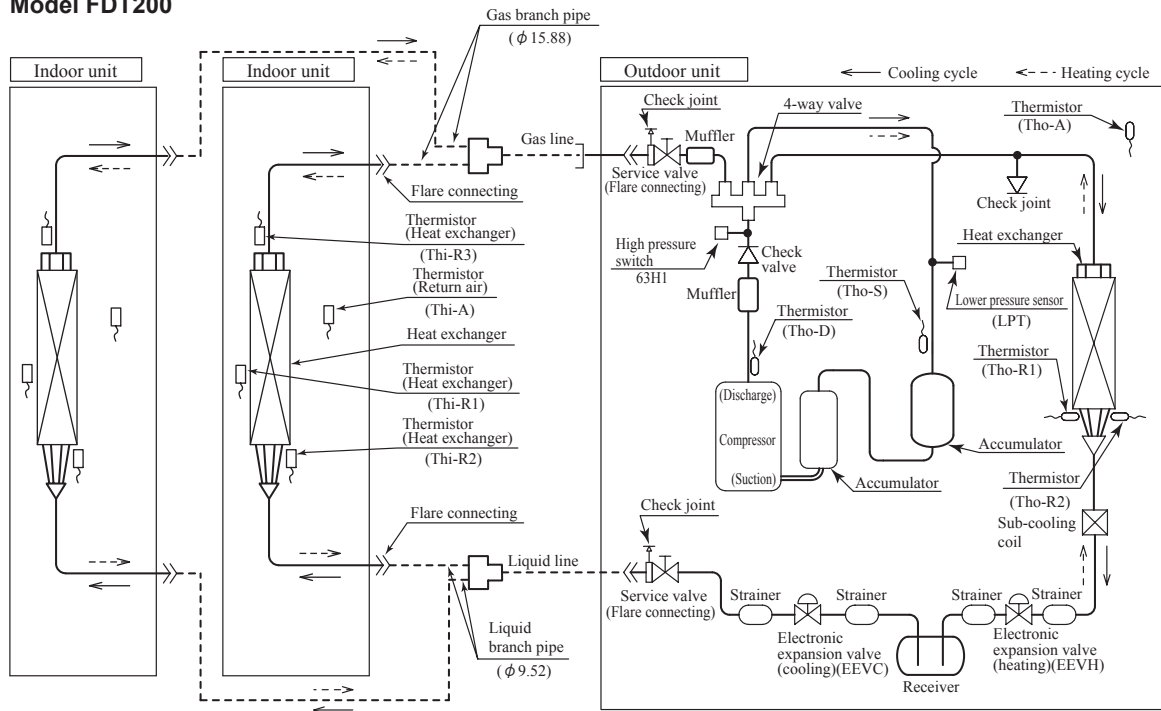


Model FDT250

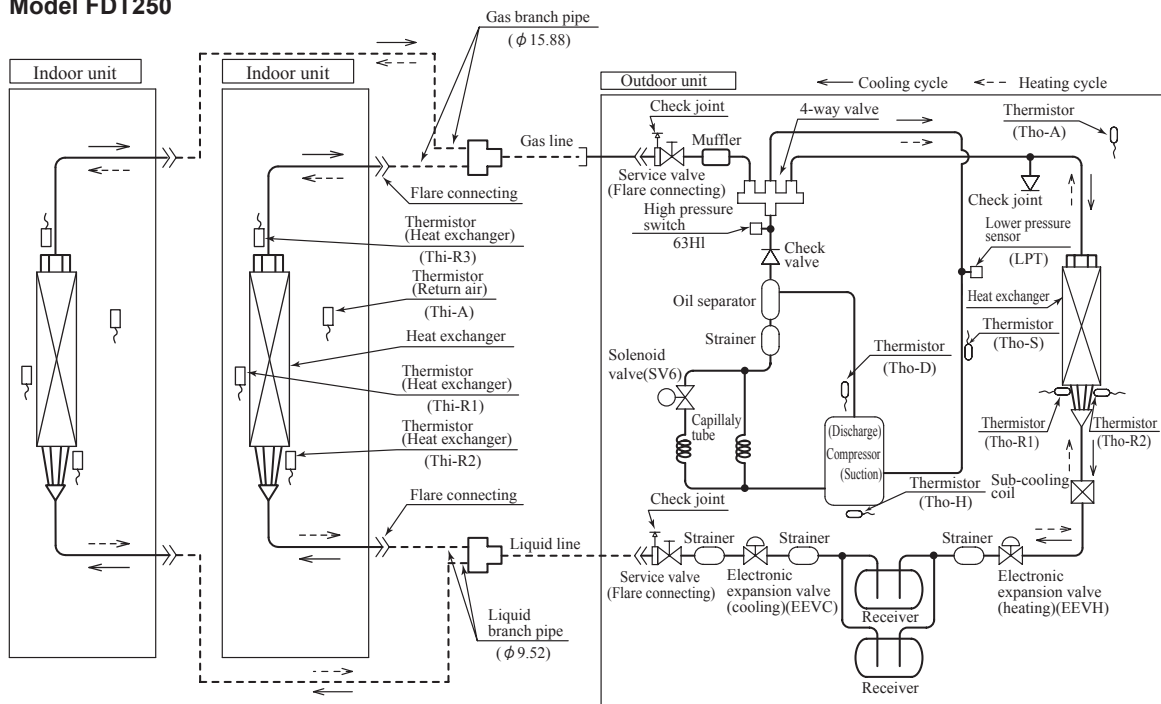


●Refrigerant line (one way) pipe size

Model	Gas line	Liquid line
FDT200	In case of φ 22.22 : 35m	In case of φ 9.52 : 40m In case of φ 12.7 : 70m
FDT250	In case of φ 25.4 or φ 28.58 : 70m	In case of φ 12.7 : 70m

(3) Triple type
Model FDT140

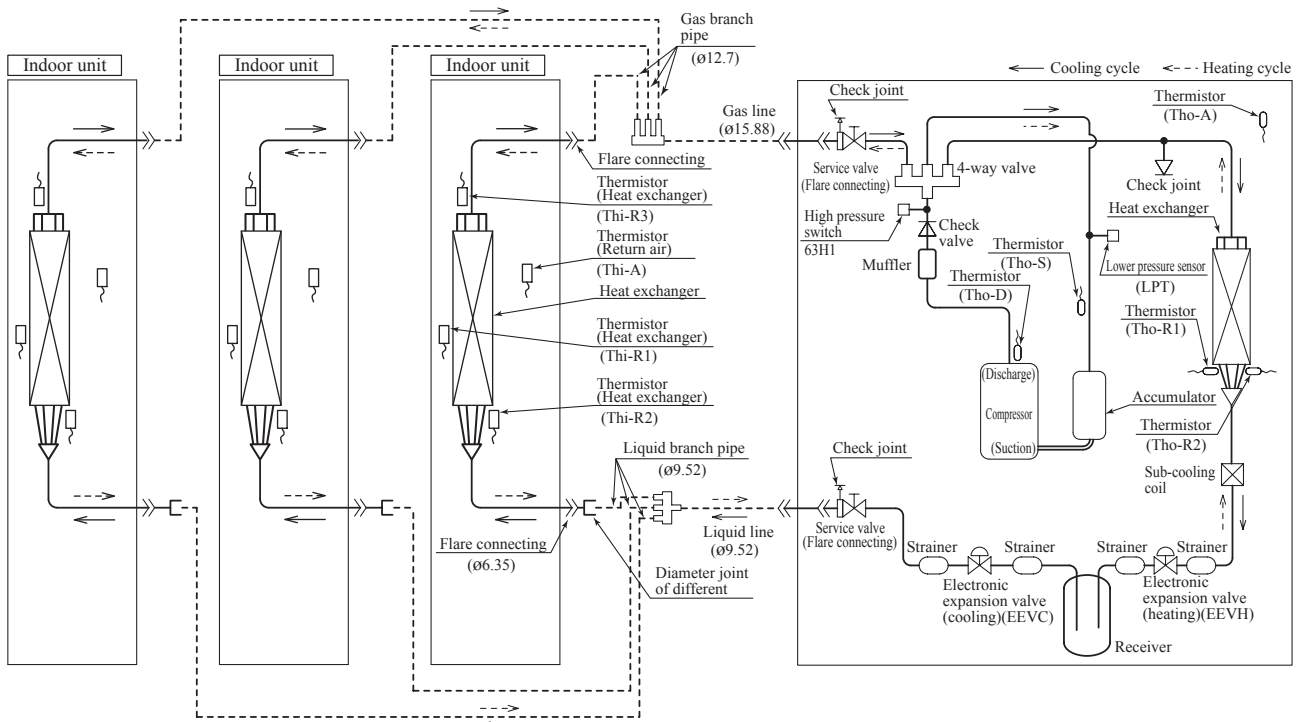

Model FDT200


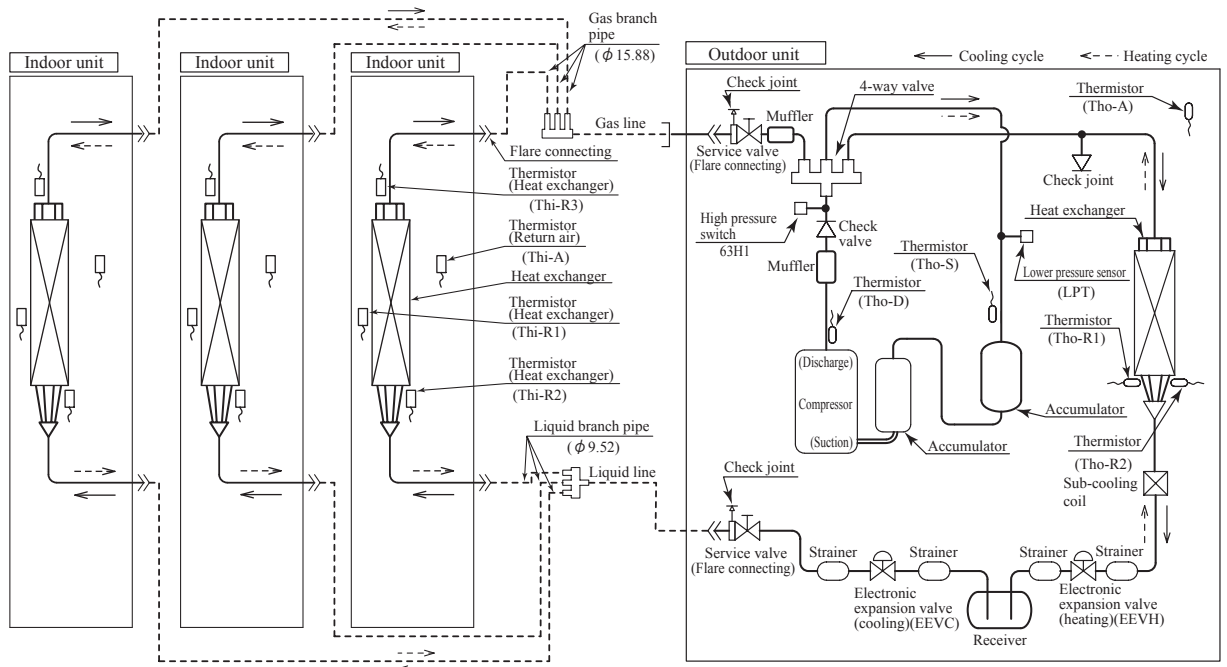


●Refrigerant line (one way) pipe size

Gas line	Liquid line
In case of $\phi 22.22$: 35m	In case of $\phi 9.52$: 40m
In case of $\phi 25.4$ or $\phi 28.58$: 70m	In case of $\phi 12.7$: 70m

(4) Double twin type


Model FDT200

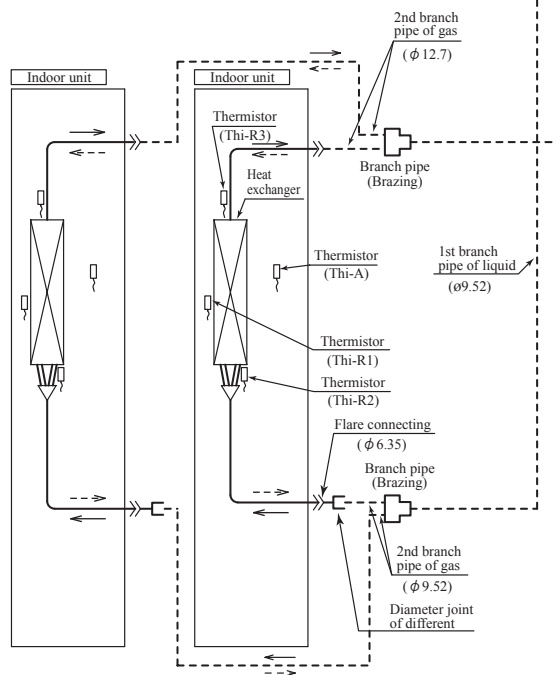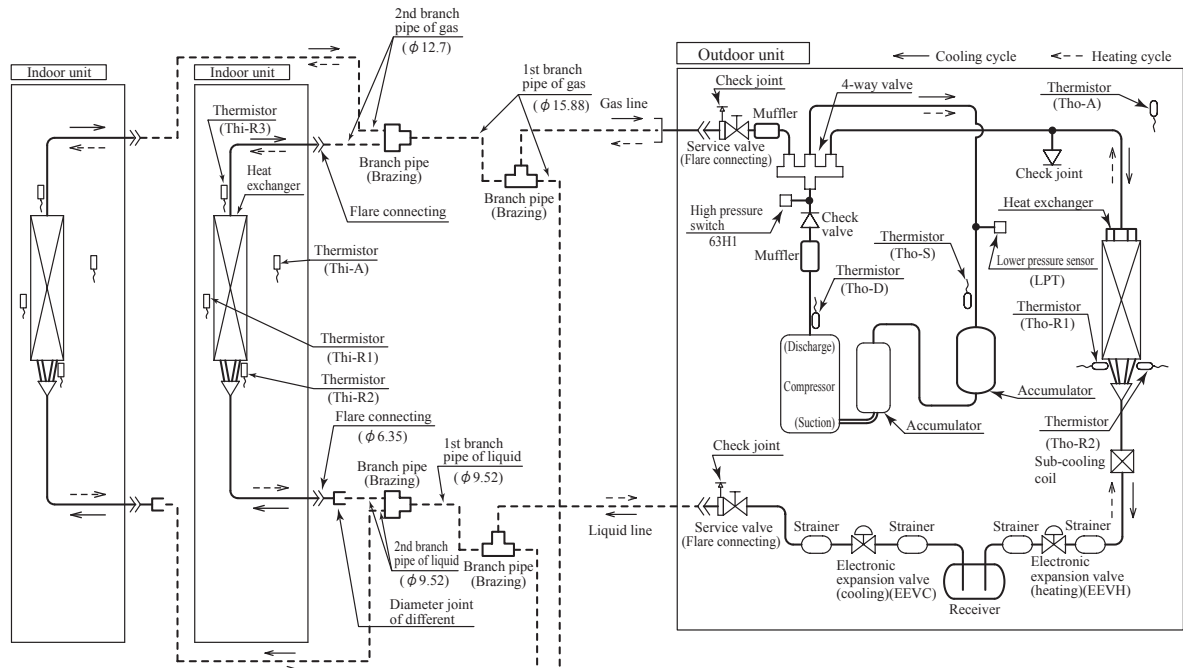

●Refrigerant line (one way) pipe size


Gas line	Liquid line
In case of $\phi 22.22$: 35m	In case of $\phi 9.52$: 40m
In case of $\phi 25.4$ or $\phi 28.58$: 70m	In case of $\phi 12.7$: 70m

Model FDT250

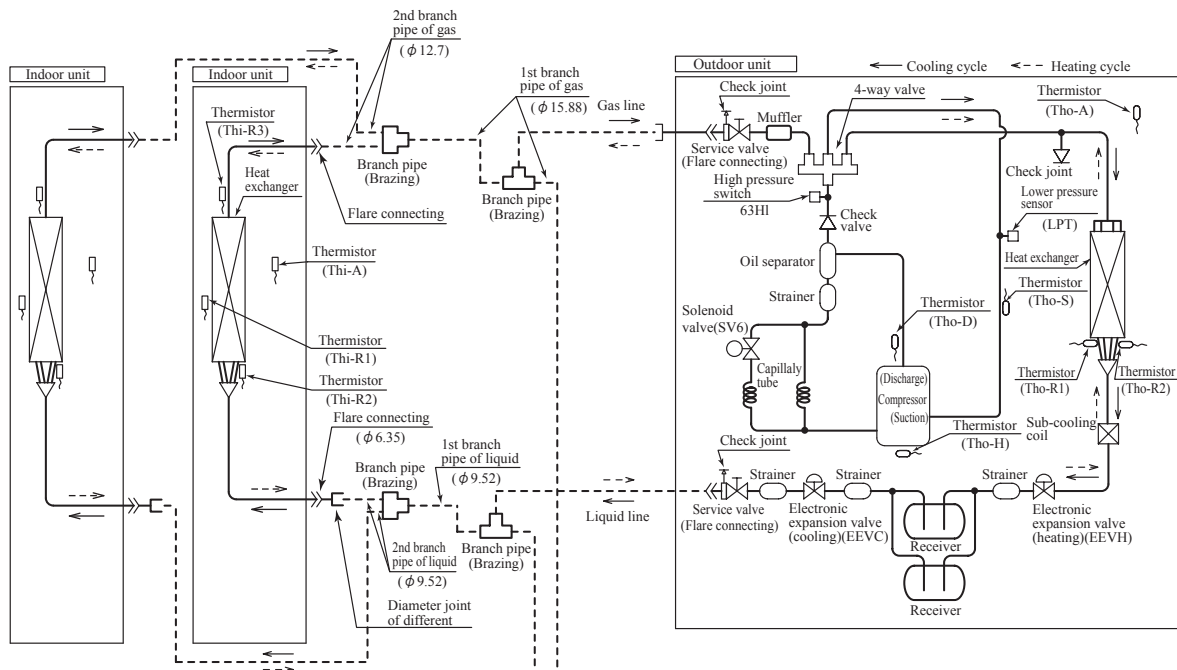

●Refrigerant line (one way) pipe size

Gas line	Liquid line
In case of φ 22.22 : 35m	In case of φ 12.7 : 70m
In case of φ 25.4 or φ 28.58 : 70m	

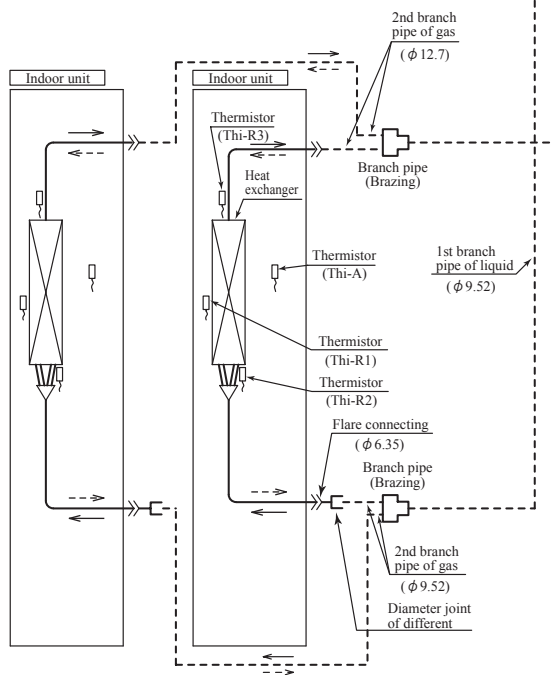

Preset point of the protective devices

Parts name	Mark	Equipped unit	FDT100, 125, 140 models	FDT200, 250 models
Thermistor (for protection overloading in heating)	Thi-R	Indoor unit	OFF 63°C ON 56°C	
Thermistor (for frost prevention)	Thi-R		OFF 1.0°C ON 10°C	
Thermistor (for protection high pressure in cooling.)	Tho-R	Outdoor unit	OFF 51°C ON 65°C	
Thermistor (for detecting discharge pipe temp.)	Tho-D	Outdoor unit	OFF 115°C ON 85°C	OFF 135°C ON 90°C
High pressure switch (for protection)	63H1	Outdoor unit	OFF 4.15MPa ON 3.15MPa	
Low pressure sensor (for protection)	LPT	Outdoor unit	OFF 0.227MPa ON 0.079MPa	

2.7 RANGE OF USAGE & LIMITATIONS

Operating temperature range		See next page.
		When used below -5°C, install a snow hood (FDC100-250 only).
Recommendable area to install		Considering to get sufficient heating capacity, the area where the averaged lowest ambient air temperature in day time during winter is above 0°C, and it has no accumulation of snow.
Installation site		The limitations of installation space are shown in the page for exterior dimensions. Install the indoor unit at least 2.5m higher than the floor surface.
Temperature and humidity conditions surrounding the indoor unit in the ceiling (Note 2)		Dew point temperature : 28°C or less, relative humidity : 80% or less
Limitations on unit and piping installation		See pages 314 and 315
Compressor ON-OFF cycling	Cycle time	7 minutes or more (from OFF to OFF) or (from ON to ON)
	Stop time	3 minutes or more
Power source	Voltage range	Rating ±10%
	Voltage drop at start-up	Min.85% of rating
	Phase-to-phase unbalance	3% or less

Note 1. Do not install the unit in places which :

- 1) Flammable gas may leak.
- 2) Carbon fiber, metal particles, powder, etc. are floating.
- 3) Cosmetic or special sprays are used frequently.
- 4) Exposed to oil splashes or steam (e.g. kitchen and machine plant).
- 5) Exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent).
- 6) Exposed to ammonia substance (e.g. organic fertilizer).
- 7) Matters affecting devices, such as sulfuric gas, chlorine gas, acid, alkali, etc. may generate or accumulate.
- 8) Chimney smoke is hanging.
- 9) Sucking the exhaust gas from heat exchanger.
- 10) Adjacent to equipment generating electromagnetic waves or high frequency waves.
- 11) There is light beams that affect the receiving device of indoor unit in case of the wireless specification.
- 12) Snow falls heavily.
- 13) At an elevation of 1000 meters or higher.
- 14) On mobile machine (e.g. vehicle, ship, etc.)
- 15) Splashed with water to indoor unit (e.g. laundry room).
- 16) Indoor units of twin, triple and double-twin specifications separately in a room with partition.

Note 2. If ambient temperature and humidity exceed the above values, add polyurethane foam insulation on the outer plate (10mm or thicker) of indoor unit.

Both gas and liquid pipes need to be covered with 20mm or thicker heat insulation materials at the place where humidity exceeds 70%.

Note 3. When used below -5°C, install a snow hood on site.


Regarding outline of a snow hood, refer to our technical manual.

PJF000Z044


PCA001Z779

Operating temperature range

■ Cooling

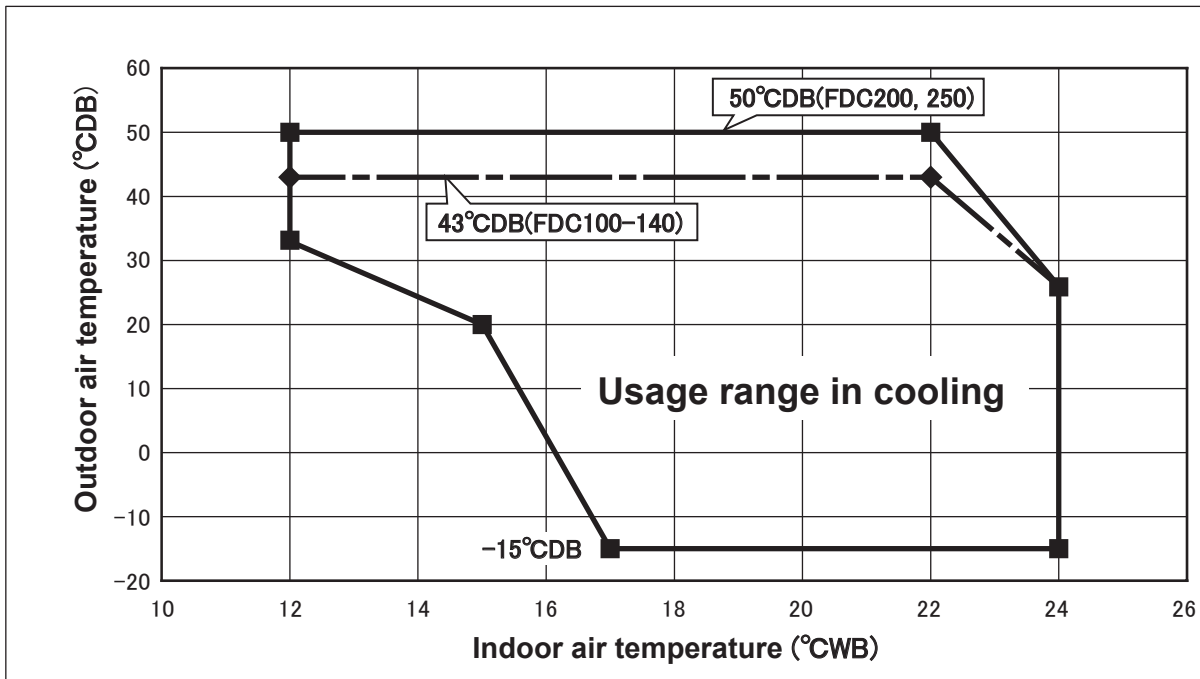

■ Heating

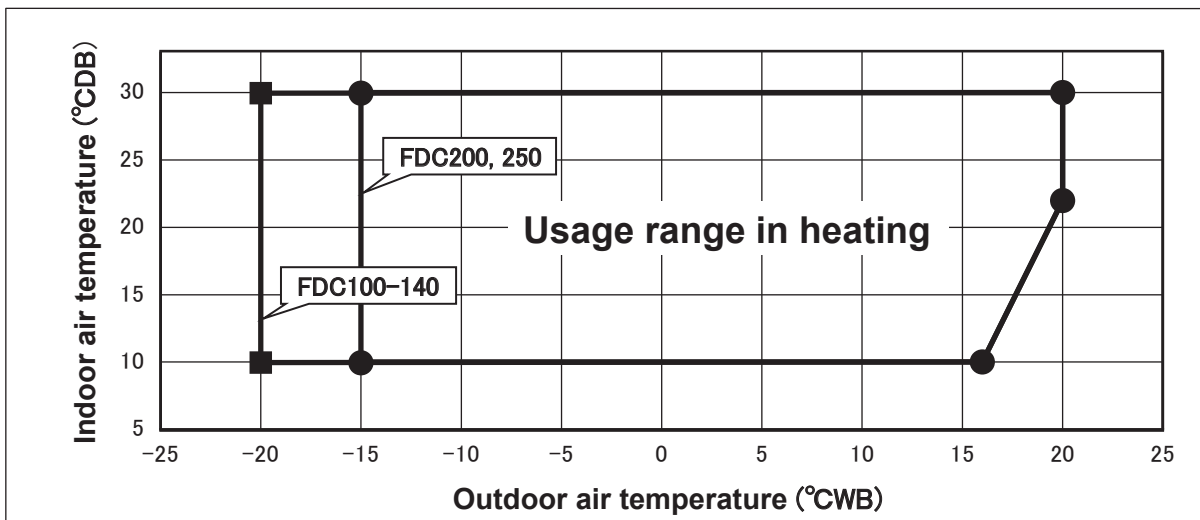

Decline in cooling and heating capacity or operation stop may occur when the outdoor unit is installed in places where natural wind can increase or decrease its design airflow rate.

“CAUTION” Cooling operation under low outdoor air temperature conditions

PAC models can be operated in cooling mode at low outdoor air temperature condition within above temperature range. However in case of severely low temperature conditions if the following precaution is not observed, it may not be operated in spite of operable temperature range mentioned above and cooling capacity may not be established under certain conditions.

[Precaution]

In case of severely low temperature condition

- 1) Install the outdoor unit at the place where strong wind cannot blow directly into the outdoor unit.
- 2) If there is no installation place where can prevent strong wind from directly blowing into the outdoor unit, mount the flex flow adapter (prepared as optional part) or like such devices onto the outdoor unit in order to divert the strong wind.

[Reason]


Under the low outdoor air temperature conditions of -5°C or lower, the outdoor fan is controlled at lower or lowest speed by outdoor fan control, but if strong wind directly blow into the outdoor unit, the outdoor heat exchanger temperature will drop more.

This makes high and low pressures to drop as well. This low pressure drop makes the indoor heat exchanger temperature to drop and will activate anti-frost control at indoor heat exchanger at frequent intervals, that cooling operation may not be established for any given time.


Limitation on unit and piping installation - single,twin,Double twin.

Descriptions	Model for outdoor units		Dimensional limitations	Marks appearing in the drawing	
	Single type	Twin type		Single type	Twin type
One-way pipe length	FDC100 • 125 • 140	FDC100 • 125 • 140	≤ 50m	L	Double twin type
	FDC200	Liquid piping φ 9.52 φ 12.7 φ 12.7	≤ 40m	L+L1 L+L2	L+La+L1 L+La+L2 L+Lb+L3 L+Lb+L4
	FDC250		≤ 40m L ≤ 70m		
	FDC200 • 250	Gas piping φ 22.22 φ 25.4 or φ 28.58	≤ 35m	L	L
	FDC100 • 125 • 140		≤ 35m L ≤ 70m		
	Main pipe length	FDC200	Liquid piping φ 9.52 φ 12.7 φ 12.7	≤ 50m	L
FDC250		≤ 40m			
FDC200 • 250		≤ 40m L ≤ 70m			
One-way pipe length after the first branching point	FDC100 • 125 • 140	Gas piping φ 22.22 φ 25.4 or φ 28.58	≤ 35m	L1, L2	La+L1, La+L2, Lb+L3, Lb+L4
	FDC200 • 250		≤ 35m L ≤ 70m		
Difference of pipe length after the first branching point			≤ 30m	L1-L2, L2-L1, L3-L4, L4-L3	
Total pipe length after the second branching point			≤ 10m	L1-L2 L2-L1	(L1+La)-(L3+Lb), (L1+La)-(L4+Lb) (L2+La)-(L3+Lb), (L2+La)-(L4+Lb)
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher	FDC100 - 250	≤ 15m	H	H
Elevation difference among indoor units	When the outdoor unit is positioned lower	FDC100 - 250	≤ 15m	H	H
			≤ 0.5m	h	h1, h2, h3, h4, h5, h6

Single type

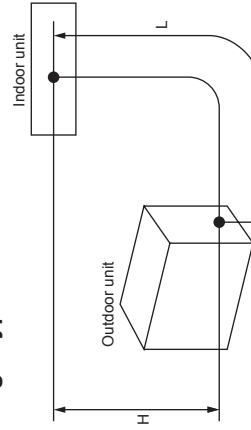


Twin type

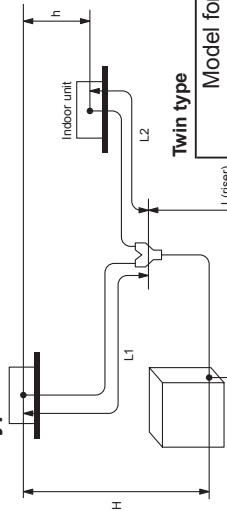

Model for outdoor units	Branch piping set(option)
FDC100 • 125 • 140	DIS-WA1
FDC200 • 250	DIS-WB1

Double twin type

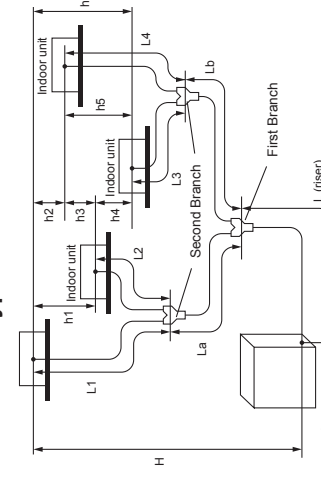


- (1) A riser pipe must be part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.
- (2) Reduce refrigerant amount by according to table below when refrigerant piping is shorter than 3m.

Model for outdoor units	Refrigerant to be reduced
FDC100 • 125 • 140 • 200 • 250	-1.0kg


Model for outdoor units	Branch piping set(option)
FDC200 • 250	DIS-WB1
	DIS-WA1x2

Limitation on unit and piping installation - triple.		Triple type (in case of FDC140・200)		One-way pipe length difference from the first branching point to the indoor unit		Dimensional limitations		Marks appearing in the drawing	
Descriptions	Model for outdoor units	Model for outdoor units	One-way pipe length difference from the first branching point to the indoor unit	Model for outdoor units	One-way pipe length difference from the first branching point to the indoor unit	Model for outdoor units	Dimensional limitations	Triple type A	Triple type B
One-way pipe length	FDC140	Liquid piping Gas piping	φ9.52 φ12.7 φ25.4 or φ28.58 φ22.22	FDC140	Liquid piping Gas piping	φ9.52 φ12.7 φ25.4 or φ28.58 φ22.22	≤ 50m ≤ 40m ≤ 70m ≤ 35m ≤ 50m ≤ 40m ≤ 70m ≤ 35m	L	L+L1+L2+L3 ※1 L+L1, L+L2, L+L3 L
Main pipe length	FDC200	Liquid piping Gas piping	φ9.52 φ12.7 φ25.4 or φ28.58 φ22.22	FDC200	Liquid piping Gas piping	φ9.52 φ12.7 φ25.4 or φ28.58 φ22.22	≤ 5m ≤ 30m ≤ 15m ≤ 0.5m	L	La L1 ※1 La+L2, La+L3 ※1 L1-(La+L2), L1-(La+L3) ※1 L2-L3, L3-L2
Piping length between the first branching point and the second branching point		One-way pipe length difference from the first branching point to the indoor unit		One-way pipe length difference from the first branching point to the indoor unit		Dimensional restrictions		Triple type B	
One-way pipe length between the first branching point and indoor units		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
One-way pipe length from the first branching point to indoor units through the second branching point		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Piping length difference from the first branching point to indoor unit		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
One-way pipe length difference from the second branching point to indoor unit		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Elevation difference between indoor and outdoor units		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Elevation difference among indoor units		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Restrictions		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
One-way pipe length		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Main pipe length		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
One-way pipe length between the first branching point from to the second branching point		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
One-way pipe length between the first branching point and indoor units		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Piping length difference from the first branching point to indoor unit		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Elevation difference between indoor and outdoor units		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Elevation difference among indoor units		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Restrictions		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
One-way pipe length		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Main pipe length		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
One-way pipe length between the first branching point from to the second branching point		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
One-way pipe length between the first branching point and indoor units		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Piping length difference from the first branching point to indoor unit		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Elevation difference between indoor and outdoor units		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	
Elevation difference among indoor units		Model for outdoor units		Model for outdoor units		Dimensional restrictions		Triple type B	

Triple type A

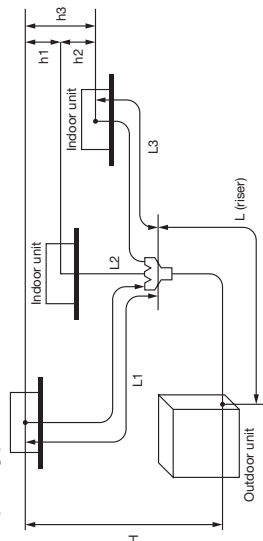

Triple type B

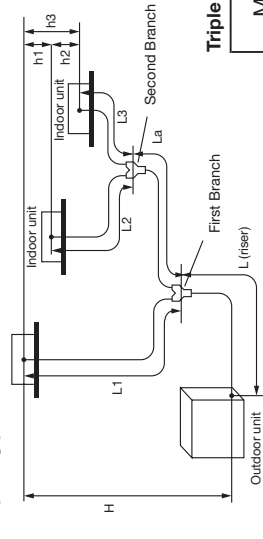

Triple type

Model for outdoor units	Branch piping set(option)	
	Type A	Type B
FDC140	Branch pipe DIS-TA1	Second branch DIS-WA1
FDC200・250	Branch pipe DIS-TB1	Second branch DIS-WA1

- ※1 Install the indoor units so that L+L1 becomes the longest one-way pipe. Keep the pipe length difference between L1 and (La+L2) or (La+L3) within 10m.
- ※2 Connect the unit that is the maximum capacity with L1.

- (1) A riser pipe must be part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.
- (2) Reduce refrigerant amount by 1.0kg from the factory charge when refrigerant piping is shorter than 3m.

2.8 SELECTION CHART

Correct the cooling and heating capacity in accordance with the operating conditions. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown in the capacity tables (2.8.1) × Correction factors shown in the table (2.8.2) (2.8.3) (2.8.4).

Caution: In case that the cooling operation during low outdoor air temperature below -5°C is expected, install the outdoor unit where it is not influenced by natural wind. Otherwise protection control by low pressure will be activated much more frequently and it will cause insufficient capacity or breakdown of the compressor in worst case.

2.8.1 Capacity tables

(1) Single type

Model **FDT100VNVG** Indoor unit FDT100VG Outdoor unit FDC100VN

Cooling Mode (kW)																Heating Mode : HC (kW)									
Outdoor air temp. °CDB	Indoor air temperature															Outdoor air temp. °CDB		Indoor air temperature °CDB							
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		°CDB	°CWB	16	18	20	22	24		
	12°CWB	14°CWB	16°CWB	18°CWB	19°CWB	20°CWB	22°CWB	24°CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC									
11					8.12	7.73	8.59	8.42	8.82	8.38	9.07	8.30	9.56	8.84	10.06	8.65	-19.8	-20	5.64	5.62	5.60	5.58	5.56		
13					8.50	7.87	9.00	8.59	9.26	8.51	9.52	8.43	10.06	8.97	10.60	8.78	-17.7	-18	5.97	5.95	5.92	5.90	5.87		
15					8.88	8.01	9.42	8.73	9.69	8.65	9.98	8.57	10.56	9.11	11.14	8.91	-15.7	-16	6.30	6.27	6.25	6.22	6.19		
17					9.26	8.15	9.84	8.87	10.12	8.79	10.43	8.71	11.05	9.24	11.67	9.04	-13.5	-14	6.66	6.63	6.60	6.57	6.54		
19					9.46	8.22	10.05	8.94	10.34	8.86	10.65	8.77	11.29	9.31	11.92	9.10	-11.5	-12	7.03	6.99	6.96	6.93	6.90		
21					9.65	8.29	10.25	9.01	10.56	8.93	10.88	8.84	11.52	9.37	12.16	9.16	-9.5	-10	7.39	7.36	7.32	7.29	7.25		
23					9.65	8.29	10.28	9.02	10.59	8.94	10.91	8.85	11.56	9.38	12.21	9.17	-7.5	-8	7.75	7.72	7.68	7.64	7.60		
25				8.93	8.50	9.64	8.29	10.31	9.03	10.62	8.95	10.95	8.87	11.61	9.40	12.27	9.19	-5.5	-6	7.92	7.88	7.85	7.80	7.76	
27				8.86	8.47	9.64	8.29	10.34	9.04	10.65	8.96	10.96	8.87	11.57	9.39			-3.0	-4	8.10	8.05	8.01	7.97	7.92	
29				8.80	8.45	9.50	8.23	10.17	8.98	10.49	8.91	10.81	8.82	11.45	9.35			-1.0	-2	8.27	8.22	8.18	8.13	8.08	
31				8.73	8.42	9.35	8.18	9.99	8.92	10.32	8.85	10.66	8.78	11.32	9.32			1.0	0	8.44	8.39	8.34	8.29	8.24	
33	8.22	7.79	8.58	8.36	9.21	8.13	9.82	8.87	10.16	8.80	10.51	8.73	11.19	9.28			2.0	1	8.52	8.47	8.42	8.37	8.32		
35	8.05	7.72	8.44	8.27	9.06	8.07	9.64	8.81	10.00	8.75	10.36	8.68	11.07	9.25			3.0	2	9.08	9.03	8.98	8.94	8.90		
37	7.92	7.66	8.30	8.13	8.91	8.02	9.46	8.75	9.79	8.68	10.13	8.61	10.80	9.17			4.0	3	10.21	10.15	10.09	10.08	10.07		
39	7.78	7.60	8.16	8.00	8.75	7.96	9.28	8.69	9.59	8.62	9.90	8.55	10.53	9.10			5.0	4	11.33	11.27	11.20	11.22	11.23		
41	7.64	7.49	8.02	7.86	8.60	7.90	9.09	8.62	9.38	8.55	9.68	8.48	10.26	9.03			6.0	5	11.78	11.71	11.64	11.62	11.59		
43	7.50	7.35	7.88	7.72	8.45	7.85	8.91	8.56	9.18	8.49	9.45	8.41	9.99	8.96			7.0	6	12.23	12.16	12.09	12.02	11.94		
																	8.0	7	12.35	12.23	12.15	12.05	11.94		
																	9.0	8	13.59	13.50	13.42	13.29	13.26		
																	10.0	9	16.5	16	13.93	13.84	13.75	13.61	13.59

PJF000Z451

Model **FDT100VSVG** Indoor unit FDT100VG Outdoor unit FDC100VS

Cooling Mode (kW)																Heating Mode : HC (kW)									
Outdoor air temp. °CDB	Indoor air temperature															Outdoor air temp. °CDB		Indoor air temperature °CDB							
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		°CDB	°CWB	16	18	20	22	24		
	12°CWB	14°CWB	16°CWB	18°CWB	19°CWB	20°CWB	22°CWB	24°CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC									
11					8.12	7.73	8.59	8.42	8.82	8.38	9.07	8.30	9.56	8.84	10.06	8.65	-19.8	-20	5.64	5.62	5.60	5.58	5.56		
13					8.50	7.87	9.00	8.59	9.26	8.51	9.52	8.43	10.06	8.97	10.60	8.78	-17.7	-18	5.97	5.95	5.92	5.90	5.87		
15					8.88	8.01	9.42	8.73	9.69	8.65	9.98	8.57	10.56	9.11	11.14	8.91	-15.7	-16	6.30	6.27	6.25	6.22	6.19		
17					9.26	8.15	9.84	8.87	10.12	8.79	10.43	8.71	11.05	9.24	11.67	9.04	-13.5	-14	6.66	6.63	6.60	6.57	6.54		
19					9.46	8.22	10.05	8.94	10.34	8.86	10.65	8.77	11.29	9.31	11.92	9.10	-11.5	-12	7.03	6.99	6.96	6.93	6.90		
21					9.65	8.29	10.25	9.01	10.56	8.93	10.88	8.84	11.52	9.37	12.16	9.16	-9.5	-10	7.39	7.36	7.32	7.29	7.25		
23					9.65	8.29	10.28	9.02	10.59	8.94	10.91	8.85	11.56	9.38	12.21	9.17	-7.5	-8	7.75	7.72	7.68	7.64	7.60		
25				8.93	8.50	9.64	8.29	10.31	9.03	10.62	8.95	10.95	8.87	11.61	9.40	12.27	9.19	-5.5	-6	7.92	7.88	7.85	7.80	7.76	
27				8.86	8.47	9.64	8.29	10.34	9.04	10.65	8.96	10.96	8.87	11.57	9.39			-3.0	-4	8.10	8.05	8.01	7.97	7.92	
29				8.80	8.45	9.50	8.23	10.17	8.98	10.49	8.91	10.81	8.82	11.45	9.35			-1.0	-2	8.27	8.22	8.18	8.13	8.08	
31				8.73	8.42	9.35	8.18	9.99	8.92	10.32	8.85	10.66	8.78	11.32	9.32			1.0	0	8.44	8.39	8.34	8.29	8.24	
33	8.22	7.79	8.58	8.36	9.21	8.13	9.82	8.87	10.16	8.80	10.51	8.73	11.19	9.28			2.0	1	8.52	8.47	8.42	8.37	8.32		
35	8.05	7.72	8.44	8.27	9.06	8.07	9.64	8.81	10.00	8.75	10.36	8.68	11.07	9.25			3.0	2	9.08	9.03	8.98	8.94	8.90		
37	7.92	7.66	8.30	8.13	8.91	8.02	9.46	8.75	9.79	8.68	10.13	8.61	10.80	9.17			4.0	3	10.21	10.15	10.09	10.08	10.07		
39	7.78	7.60	8.16	8.00	8.75	7.96	9.28	8.69	9.59	8.62	9.90	8.55	10.53	9.10			5.0	4	11.33	11.27	11.20	11.22	11.23		
41	7.64	7.49	8.02	7.86	8.60	7.90	9.09	8.62	9.38	8.55	9.68	8.48	10.26	9.03			6.0	5	11.78	11.71	11.64	11.62	11.59		
43	7.50	7.35	7.88	7.72	8.45	7.85	8.91	8.56	9.18	8.49	9.45	8.41	9.99	8.96			7.0	6	12.23	12.16	12.09	12.02	11.94		
																	8.0	7	12.35	12.23	12.15	12.05	11.94		
																	9.0	8	13.59	13.50	13.42	13.29	13.26		
																	10.0	9	16.5	16	13.93	13.84	13.75	13.61	13.59

PJF000Z451

Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.

(3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

Model **FDT125VNVG** Indoor unit FDT125VG Outdoor unit FDC125VN

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp. °CDB	Indoor air temperature																
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
11						10.15	8.75	10.74	9.49	11.03	9.41	11.34	9.32	11.96	9.86	12.57	9.65
13						10.63	8.94	11.26	9.68	11.57	9.59	11.91	9.51	12.58	10.05	13.25	9.83
15						11.10	9.13	11.78	9.87	12.11	9.78	12.47	9.69	13.20	10.23	13.92	10.01
17						11.58	9.32	12.29	10.06	12.65	9.97	13.04	9.88	13.82	10.42	14.59	10.20
19						11.82	9.42	12.56	10.16	12.92	10.06	13.32	9.98	14.11	10.51	14.90	10.29
21						12.06	9.51	12.82	10.25	13.19	10.16	13.60	10.07	14.40	10.60	15.20	10.37
23						12.06	9.51	12.85	10.26	13.23	10.17	13.64	10.09	14.45	10.62	15.27	10.39
25			11.16	9.71	12.06	9.51	12.89	10.28	13.27	10.19	13.68	10.10	14.51	10.64	15.34	10.41	
27			11.08	9.68	12.05	9.51	12.92	10.29	13.31	10.20	13.69	10.10	14.47	10.62			
29			11.00	9.64	11.87	9.44	12.71	10.21	13.11	10.13	13.51	10.04	14.31	10.57			
31			10.92	9.61	11.69	9.36	12.49	10.13	12.90	10.06	13.32	9.98	14.15	10.52			
33	10.27	8.95	10.72	9.52	11.51	9.29	12.27	10.05	12.70	9.99	13.13	9.91	13.99	10.48			
35	10.07	8.86	10.55	9.45	11.33	9.22	12.06	9.97	12.50	9.91	12.94	9.85	13.83	10.43			
37	9.90	8.78	10.38	9.37	11.13	9.14	11.83	9.89	12.24	9.82	12.66	9.75	13.50	10.33			
39	9.72	8.70	10.20	9.29	10.94	9.06	11.60	9.80	11.99	9.74	12.38	9.66	13.16	10.22			
41	9.55	8.62	10.02	9.22	10.75	8.99	11.37	9.72	11.73	9.65	12.09	9.56	12.82	10.12			
43	9.38	8.54	9.85	9.15	10.56	8.91	11.14	9.64	11.47	9.56	11.81	9.47	12.48	10.02			

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB					
		16	18	20	22	24	
		-19.8	-20	7.06	7.03	7.00	6.97
-17.7	-18	7.46	7.43	7.41	7.37	7.34	
-15.7	-16	7.87	7.84	7.81	7.77	7.74	
-13.5	-14	8.33	8.29	8.26	8.22	8.18	
-11.5	-12	8.78	8.74	8.70	8.66	8.62	
-9.5	-10	9.24	9.19	9.15	9.11	9.06	
-7.5	-8	9.69	9.65	9.60	9.55	9.50	
-5.5	-6	9.91	9.86	9.81	9.75	9.70	
-3.0	-4	10.12	10.07	10.01	9.96	9.90	
-1.0	-2	10.33	10.28	10.22	10.16	10.10	
1.0	0	10.55	10.49	10.43	10.36	10.30	
2.0	1	10.65	10.59	10.53	10.47	10.40	
3.0	2	11.36	11.29	11.22	11.18	11.13	
5.0	4	12.76	12.69	12.61	12.60	12.58	
7.0	6	14.16	14.08	14.00	14.02	14.04	
9.0	8	14.72	14.64	14.56	14.52	14.49	
11.5	10	15.28	15.20	15.11	15.02	14.93	
13.5	12	16.13	16.04	15.94	15.82	15.75	
15.5	14	16.98	16.88	16.77	16.62	16.58	
16.5	16	17.41	17.30	17.19	17.02	16.99	

PJF000Z451

Model **FDT125VSVG** Indoor unit FDT125VG Outdoor unit FDC125VS

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp. °CDB	Indoor air temperature																
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
11						10.15	8.75	10.74	9.49	11.03	9.41	11.34	9.32	11.96	9.86	12.57	9.65
13						10.63	8.94	11.26	9.68	11.57	9.59	11.91	9.51	12.58	10.05	13.25	9.83
15						11.10	9.13	11.78	9.87	12.11	9.78	12.47	9.69	13.20	10.23	13.92	10.01
17						11.58	9.32	12.29	10.06	12.65	9.97	13.04	9.88	13.82	10.42	14.59	10.20
19						11.82	9.42	12.56	10.16	12.92	10.06	13.32	9.98	14.11	10.51	14.90	10.29
21						12.06	9.51	12.82	10.25	13.19	10.16	13.60	10.07	14.40	10.60	15.20	10.37
23						12.06	9.51	12.85	10.26	13.23	10.17	13.64	10.09	14.45	10.62	15.27	10.39
25			11.16	9.71	12.06	9.51	12.89	10.28	13.27	10.19	13.68	10.10	14.51	10.64	15.34	10.41	
27			11.08	9.68	12.05	9.51	12.92	10.29	13.31	10.20	13.69	10.10	14.47	10.62			
29			11.00	9.64	11.87	9.44	12.71	10.21	13.11	10.13	13.51	10.04	14.31	10.57			
31			10.92	9.61	11.69	9.36	12.49	10.13	12.90	10.06	13.32	9.98	14.15	10.52			
33	10.27	8.95	10.72	9.52	11.51	9.29	12.27	10.05	12.70	9.99	13.13	9.91	13.99	10.48			
35	10.07	8.86	10.55	9.45	11.33	9.22	12.06	9.97	12.50	9.91	12.94	9.85	13.83	10.43			
37	9.90	8.78	10.38	9.37	11.13	9.14	11.83	9.89	12.24	9.82	12.66	9.75	13.50	10.33			
39	9.72	8.70	10.20	9.29	10.94	9.06	11.60	9.80	11.99	9.74	12.38	9.66	13.16	10.22			
41	9.55	8.62	10.02	9.22	10.75	8.99	11.37	9.72	11.73	9.65	12.09	9.56	12.82	10.12			
43	9.38	8.54	9.85	9.15	10.56	8.91	11.14	9.64	11.47	9.56	11.81	9.47	12.48	10.02			

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB					
		16	18	20	22	24	
		-19.8	-20	7.06	7.03	7.00	6.97
-17.7	-18	7.46	7.43	7.41	7.37	7.34	
-15.7	-16	7.87	7.84	7.81	7.77	7.74	
-13.5	-14	8.33	8.29	8.26	8.22	8.18	
-11.5	-12	8.78	8.74	8.70	8.66	8.62	
-9.5	-10	9.24	9.19	9.15	9.11	9.06	
-7.5	-8	9.69	9.65	9.60	9.55	9.50	
-5.5	-6	9.91	9.86	9.81	9.75	9.70	
-3.0	-4	10.12	10.07	10.01	9.96	9.90	
-1.0	-2	10.33	10.28	10.22	10.16	10.10	
1.0	0	10.55	10.49	10.43	10.36	10.30	
2.0	1	10.65	10.59	10.53	10.47	10.40	
3.0	2	11.36	11.29	11.22	11.18	11.13	
5.0	4	12.76	12.69	12.61	12.60	12.58	
7.0	6	14.16	14.08	14.00	14.02	14.04	
9.0	8	14.72	14.64	14.56	14.52	14.49	
11.5	10	15.28	15.20	15.11	15.02	14.93	
13.5	12	16.13	16.04	15.94	15.82	15.75	
15.5	14	16.98	16.88	16.77	16.62	16.58	
16.5	16	17.41	17.30	17.19	17.02	16.99	

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

PJF000Z451

Model **FDT140VNVG** Indoor unit FDT140VG Outdoor unit FDC140VN
Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.37	9.26	12.02	9.99	12.35	9.90	12.70	9.80	13.39	10.33	14.08	10.10
13					11.90	9.48	12.61	10.21	12.96	10.11	13.33	10.02	14.09	10.55	14.84	10.31
15					12.43	9.69	13.19	10.43	13.57	10.33	13.97	10.24	14.78	10.76	15.59	10.53
17					12.96	9.92	13.77	10.65	14.17	10.55	14.61	10.46	15.48	10.99	16.34	10.74
19					13.24	10.03	14.06	10.76	14.48	10.67	14.92	10.57	15.80	11.09	16.68	10.84
21					13.51	10.15	14.36	10.88	14.78	10.78	15.23	10.68	16.12	11.20	17.02	10.94
23					13.51	10.15	14.40	10.89	14.82	10.79	15.28	10.70	16.19	11.22	17.10	10.97
25			12.50	10.34	13.50	10.14	14.43	10.91	14.86	10.81	15.33	10.72	16.25	11.24	17.18	10.99
27			12.41	10.30	13.50	10.14	14.47	10.92	14.91	10.83	15.34	10.72	16.20	11.22		
29			12.32	10.25	13.29	10.05	14.23	10.83	14.68	10.74	15.13	10.65	16.02	11.16		
31			12.23	10.21	13.09	9.97	13.99	10.73	14.45	10.66	14.92	10.57	15.85	11.11		
33	11.51	9.57	12.01	10.11	12.89	9.89	13.75	10.64	14.23	10.58	14.71	10.50	15.67	11.05		
35	11.28	9.46	11.82	10.03	12.68	9.80	13.50	10.55	14.00	10.49	14.50	10.42	15.49	10.99		
37	11.08	9.36	11.62	9.94	12.47	9.71	13.25	10.45	13.71	10.38	14.18	10.31	15.12	10.87		
39	10.89	9.27	11.43	9.86	12.26	9.62	12.99	10.35	13.43	10.28	13.86	10.20	14.74	10.75		
41	10.70	9.18	11.23	9.77	12.04	9.53	12.73	10.25	13.14	10.18	13.55	10.09	14.36	10.63		
43	10.51	9.09	11.03	9.68	11.83	9.45	12.47	10.16	12.85	10.07	13.23	9.98	13.98	10.51		

(kW) Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	8.06	8.03	8.00	7.97	7.94
-17.7	-18	8.53	8.50	8.46	8.43	8.39
-15.7	-16	9.00	8.96	8.92	8.88	8.85
-13.5	-14	9.52	9.48	9.43	9.39	9.35
-11.5	-12	10.04	9.99	9.95	9.90	9.85
-9.5	-10	10.56	10.51	10.46	10.41	10.36
-7.5	-8	11.08	11.02	10.97	10.91	10.86
-5.5	-6	11.32	11.26	11.21	11.15	11.09
-3.0	-4	11.56	11.50	11.44	11.38	11.31
-1.0	-2	11.81	11.75	11.68	11.61	11.54
1.0	0	12.05	11.99	11.92	11.84	11.77
2.0	1	12.18	12.11	12.04	11.96	11.89
3.0	2	12.98	12.90	12.83	12.77	12.72
5.0	4	14.58	14.50	14.41	14.40	14.38
7.0	6	16.19	16.09	16.00	16.02	16.05
9.0	8	16.83	16.73	16.63	16.59	16.55
11.5	10	17.46	17.37	17.27	17.17	17.06
13.5	12	18.44	18.33	18.22	18.08	18.00
15.5	14	19.41	19.29	19.17	18.99	18.95
16.5	16	19.90	19.77	19.64	19.45	19.42

PJF000Z451

Model **FDT140VSVG** Indoor unit FDT140VG Outdoor unit FDC140VS
Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.37	9.26	12.02	9.99	12.35	9.90	12.70	9.80	13.39	10.33	14.08	10.10
13					11.90	9.48	12.61	10.21	12.96	10.11	13.33	10.02	14.09	10.55	14.84	10.31
15					12.43	9.69	13.19	10.43	13.57	10.33	13.97	10.24	14.78	10.76	15.59	10.53
17					12.96	9.92	13.77	10.65	14.17	10.55	14.61	10.46	15.48	10.99	16.34	10.74
19					13.24	10.03	14.06	10.76	14.48	10.67	14.92	10.57	15.80	11.09	16.68	10.84
21					13.51	10.15	14.36	10.88	14.78	10.78	15.23	10.68	16.12	11.20	17.02	10.94
23					13.51	10.15	14.40	10.89	14.82	10.79	15.28	10.70	16.19	11.22	17.10	10.97
25			12.50	10.34	13.50	10.14	14.43	10.91	14.86	10.81	15.33	10.72	16.25	11.24	17.18	10.99
27			12.41	10.30	13.50	10.14	14.47	10.92	14.91	10.83	15.34	10.72	16.20	11.22		
29			12.32	10.25	13.29	10.05	14.23	10.83	14.68	10.74	15.13	10.65	16.02	11.16		
31			12.23	10.21	13.09	9.97	13.99	10.73	14.45	10.66	14.92	10.57	15.85	11.11		
33	11.51	9.57	12.01	10.11	12.89	9.89	13.75	10.64	14.23	10.58	14.71	10.50	15.67	11.05		
35	11.28	9.46	11.82	10.03	12.68	9.80	13.50	10.55	14.00	10.49	14.50	10.42	15.49	10.99		
37	11.08	9.36	11.62	9.94	12.47	9.71	13.25	10.45	13.71	10.38	14.18	10.31	15.12	10.87		
39	10.89	9.27	11.43	9.86	12.26	9.62	12.99	10.35	13.43	10.28	13.86	10.20	14.74	10.75		
41	10.70	9.18	11.23	9.77	12.04	9.53	12.73	10.25	13.14	10.18	13.55	10.09	14.36	10.63		
43	10.51	9.09	11.03	9.68	11.83	9.45	12.47	10.16	12.85	10.07	13.23	9.98	13.98	10.51		

(kW) Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	8.06	8.03	8.00	7.97	7.94
-17.7	-18	8.53	8.50	8.46	8.43	8.39
-15.7	-16	9.00	8.96	8.92	8.88	8.85
-13.5	-14	9.52	9.48	9.43	9.39	9.35
-11.5	-12	10.04	9.99	9.95	9.90	9.85
-9.5	-10	10.56	10.51	10.46	10.41	10.36
-7.5	-8	11.08	11.02	10.97	10.91	10.86
-5.5	-6	11.32	11.26	11.21	11.15	11.09
-3.0	-4	11.56	11.50	11.44	11.38	11.31
-1.0	-2	11.81	11.75	11.68	11.61	11.54
1.0	0	12.05	11.99	11.92	11.84	11.77
2.0	1	12.18	12.11	12.04	11.96	11.89
3.0	2	12.98	12.90	12.83	12.77	12.72
5.0	4	14.58	14.50	14.41	14.40	14.38
7.0	6	16.19	16.09	16.00	16.02	16.05
9.0	8	16.83	16.73	16.63	16.59	16.55
11.5	10	17.46	17.37	17.27	17.17	17.06
13.5	12	18.44	18.33	18.22	18.08	18.00
15.5	14	19.41	19.29	19.17	18.99	18.95
16.5	16	19.90	19.77	19.64	19.45	19.42

PJF000Z451

- Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.
- (3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

(2) Twin type

Model **FDT100VNPVG** Indoor unit FDT50VG (2 units) Outdoor unit FDC100VN
Cooling Mode (kW) Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.12	7.81	8.59	8.42	8.82	8.47	9.07	8.37	9.56	8.93	10.06	8.70
13					8.50	7.93	9.00	8.68	9.26	8.59	9.52	8.48	10.06	9.04	10.60	8.80
15					8.88	8.05	9.42	8.81	9.69	8.70	9.98	8.60	10.56	9.15	11.14	8.91
17					9.26	8.18	9.84	8.93	10.12	8.82	10.43	8.72	11.05	9.26	11.67	9.01
19					9.46	8.24	10.05	8.99	10.34	8.88	10.65	8.77	11.29	9.32	11.92	9.06
21					9.65	8.30	10.25	9.05	10.56	8.94	10.88	8.83	11.52	9.37	12.16	9.11
23					9.65	8.30	10.28	9.06	10.59	8.95	10.91	8.84	11.56	9.38	12.21	9.12
25			8.93	8.58	9.64	8.30	10.31	9.07	10.62	8.96	10.95	8.85	11.61	9.39	12.27	9.13
27			8.86	8.55	9.64	8.30	10.34	9.08	10.65	8.97	10.96	8.86	11.57	9.38		
29			8.80	8.53	9.50	8.25	10.17	9.03	10.49	8.92	10.81	8.82	11.45	9.35		
31			8.73	8.50	9.35	8.21	9.99	8.97	10.32	8.88	10.66	8.78	11.32	9.32		
33	8.22	7.85	8.58	8.41	9.21	8.16	9.82	8.92	10.16	8.83	10.51	8.74	11.19	9.29		
35	8.05	7.78	8.44	8.27	9.06	8.11	9.64	8.87	10.00	8.79	10.36	8.70	11.07	9.27		
37	7.92	7.73	8.30	8.13	8.91	8.06	9.46	8.82	9.79	8.73	10.13	8.64	10.80	9.20		
39	7.78	7.62	8.16	8.00	8.75	8.01	9.28	8.77	9.59	8.68	9.90	8.58	10.53	9.14		
41	7.64	7.49	8.02	7.86	8.60	7.96	9.09	8.71	9.38	8.62	9.68	8.52	10.26	9.08		
43	7.50	7.35	7.88	7.72	8.45	7.91	8.91	8.66	9.18	8.56	9.45	8.46	9.99	9.02		

Outdoor air temp.		Indoor air temperature					
		°CDB					
°CDB	°CWB	16	18	20	22	24	
-19.8	-20	5.64	5.62	5.60	5.58	5.56	
-17.7	-18	5.97	5.95	5.92	5.90	5.87	
-15.7	-16	6.30	6.27	6.25	6.22	6.19	
-13.5	-14	6.66	6.63	6.60	6.57	6.54	
-11.5	-12	7.03	6.99	6.96	6.93	6.90	
-9.5	-10	7.39	7.36	7.32	7.29	7.25	
-7.5	-8	7.75	7.72	7.68	7.64	7.60	
-5.5	-6	7.92	7.88	7.85	7.80	7.76	
-3.0	-4	8.10	8.05	8.01	7.97	7.92	
-1.0	-2	8.27	8.22	8.18	8.13	8.08	
1.0	0	8.44	8.39	8.34	8.29	8.24	
2.0	1	8.52	8.47	8.42	8.37	8.32	
3.0	2	9.08	9.03	8.98	8.94	8.90	
5.0	4	10.21	10.15	10.09	10.08	10.07	
7.0	6	11.33	11.27	11.20	11.22	11.23	
9.0	8	11.78	11.71	11.64	11.62	11.59	
11.5	10	12.23	12.16	12.09	12.02	11.94	
13.5	12	12.91	12.83	12.75	12.65	12.60	
15.5	14	13.59	13.50	13.42	13.29	13.26	
16.5	16	13.93	13.84	13.75	13.61	13.59	

PJF000Z451

Model **FDT100VSPVG** Indoor unit FDT50VG (2 units) Outdoor unit FDC100VS
Cooling Mode (kW) Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.12	7.81	8.59	8.42	8.82	8.47	9.07	8.37	9.56	8.93	10.06	8.70
13					8.50	7.93	9.00	8.68	9.26	8.59	9.52	8.48	10.06	9.04	10.60	8.80
15					8.88	8.05	9.42	8.81	9.69	8.70	9.98	8.60	10.56	9.15	11.14	8.91
17					9.26	8.18	9.84	8.93	10.12	8.82	10.43	8.72	11.05	9.26	11.67	9.01
19					9.46	8.24	10.05	8.99	10.34	8.88	10.65	8.77	11.29	9.32	11.92	9.06
21					9.65	8.30	10.25	9.05	10.56	8.94	10.88	8.83	11.52	9.37	12.16	9.11
23					9.65	8.30	10.28	9.06	10.59	8.95	10.91	8.84	11.56	9.38	12.21	9.12
25			8.93	8.58	9.64	8.30	10.31	9.07	10.62	8.96	10.95	8.85	11.61	9.39	12.27	9.13
27			8.86	8.55	9.64	8.30	10.34	9.08	10.65	8.97	10.96	8.86	11.57	9.38		
29			8.80	8.53	9.50	8.25	10.17	9.03	10.49	8.92	10.81	8.82	11.45	9.35		
31			8.73	8.50	9.35	8.21	9.99	8.97	10.32	8.88	10.66	8.78	11.32	9.32		
33	8.22	7.85	8.58	8.41	9.21	8.16	9.82	8.92	10.16	8.83	10.51	8.74	11.19	9.29		
35	8.05	7.78	8.44	8.27	9.06	8.11	9.64	8.87	10.00	8.79	10.36	8.70	11.07	9.27		
37	7.92	7.73	8.30	8.13	8.91	8.06	9.46	8.82	9.79	8.73	10.13	8.64	10.80	9.20		
39	7.78	7.62	8.16	8.00	8.75	8.01	9.28	8.77	9.59	8.68	9.90	8.58	10.53	9.14		
41	7.64	7.49	8.02	7.86	8.60	7.96	9.09	8.71	9.38	8.62	9.68	8.52	10.26	9.08		
43	7.50	7.35	7.88	7.72	8.45	7.91	8.91	8.66	9.18	8.56	9.45	8.46	9.99	9.02		

Outdoor air temp.		Indoor air temperature					
		°CDB					
°CDB	°CWB	16	18	20	22	24	
-19.8	-20	5.64	5.62	5.60	5.58	5.56	
-17.7	-18	5.97	5.95	5.92	5.90	5.87	
-15.7	-16	6.30	6.27	6.25	6.22	6.19	
-13.5	-14	6.66	6.63	6.60	6.57	6.54	
-11.5	-12	7.03	6.99	6.96	6.93	6.90	
-9.5	-10	7.39	7.36	7.32	7.29	7.25	
-7.5	-8	7.75	7.72	7.68	7.64	7.60	
-5.5	-6	7.92	7.88	7.85	7.80	7.76	
-3.0	-4	8.10	8.05	8.01	7.97	7.92	
-1.0	-2	8.27	8.22	8.18	8.13	8.08	
1.0	0	8.44	8.39	8.34	8.29	8.24	
2.0	1	8.52	8.47	8.42	8.37	8.32	
3.0	2	9.08	9.03	8.98	8.94	8.90	
5.0	4	10.21	10.15	10.09	10.08	10.07	
7.0	6	11.33	11.27	11.20	11.22	11.23	
9.0	8	11.78	11.71	11.64	11.62	11.59	
11.5	10	12.23	12.16	12.09	12.02	11.94	
13.5	12	12.91	12.83	12.75	12.65	12.60	
15.5	14	13.59	13.50	13.42	13.29	13.26	
16.5	16	13.93	13.84	13.75	13.61	13.59	

PJF000Z451

Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
(2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.
(3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

Model **FDT125VNPVG** Indoor unit FDT60VG (2 units) Outdoor unit FDC125VN
Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.15	9.95	10.74	10.53	11.03	10.81	11.34	11.04	11.96	11.72	12.57	11.54
13					10.63	10.40	11.26	11.03	11.57	11.30	11.91	11.19	12.58	11.95	13.25	11.68
15					11.10	10.56	11.78	11.54	12.11	11.46	12.47	11.34	13.20	12.10	13.92	11.82
17					11.58	10.73	12.29	11.74	12.65	11.62	13.04	11.50	13.82	12.25	14.59	11.97
19					11.82	10.81	12.56	11.82	12.92	11.70	13.32	11.58	14.11	12.33	14.90	12.04
21					12.06	10.89	12.82	11.90	13.19	11.78	13.60	11.66	14.40	12.40	15.20	12.10
23					12.06	10.89	12.85	11.91	13.23	11.79	13.64	11.67	14.45	12.41	15.27	12.12
25			11.16	10.94	12.06	10.89	12.89	11.92	13.27	11.80	13.68	11.68	14.51	12.43	15.34	12.13
27			11.08	10.86	12.05	10.89	12.92	11.93	13.31	11.81	13.69	11.68	14.47	12.42		
29			11.00	10.78	11.87	10.83	12.71	11.87	13.11	11.75	13.51	11.63	14.31	12.38		
31			10.92	10.70	11.69	10.76	12.49	11.80	12.90	11.69	13.32	11.58	14.15	12.34		
33	10.27	10.06	10.72	10.51	11.51	10.70	12.27	11.73	12.70	11.63	13.13	11.53	13.99	12.30		
35	10.07	9.87	10.55	10.34	11.33	10.64	12.06	11.66	12.50	11.57	12.94	11.47	13.83	12.26		
37	9.90	9.70	10.38	10.17	11.13	10.57	11.83	11.59	12.24	11.50	12.66	11.40	13.50	12.17		
39	9.72	9.53	10.20	10.00	10.94	10.51	11.60	11.37	11.99	11.42	12.38	11.32	13.16	12.09		
41	9.55	9.36	10.02	9.82	10.75	10.44	11.37	11.14	11.73	11.35	12.09	11.24	12.82	12.01		
43	9.38	9.19	9.85	9.65	10.56	10.35	11.14	10.92	11.47	11.24	11.81	11.16	12.48	11.93		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	7.06	7.03	7.00	6.97	6.95
-17.7	-18	7.46	7.43	7.41	7.37	7.34
-15.7	-16	7.87	7.84	7.81	7.77	7.74
-13.5	-14	8.33	8.29	8.26	8.22	8.18
-11.5	-12	8.78	8.74	8.70	8.66	8.62
-9.5	-10	9.24	9.19	9.15	9.11	9.06
-7.5	-8	9.69	9.65	9.60	9.55	9.50
-5.5	-6	9.91	9.86	9.81	9.75	9.70
-3.0	-4	10.12	10.07	10.01	9.96	9.90
-1.0	-2	10.33	10.28	10.22	10.16	10.10
1.0	0	10.55	10.49	10.43	10.36	10.30
2.0	1	10.65	10.59	10.53	10.47	10.40
3.0	2	11.36	11.29	11.22	11.18	11.13
5.0	4	12.76	12.69	12.61	12.60	12.58
7.0	6	14.16	14.08	14.00	14.02	14.04
9.0	8	14.72	14.64	14.56	14.52	14.49
11.5	10	15.28	15.20	15.11	15.02	14.93
13.5	12	16.13	16.04	15.94	15.82	15.75
15.5	14	16.98	16.88	16.77	16.62	16.58
16.5	16	17.41	17.30	17.19	17.02	16.99

PJF000Z451

Model **FDT125VSPVG** Indoor unit FDT60VG (2 units) Outdoor unit FDC125VS
Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.15	9.95	10.74	10.53	11.03	10.81	11.34	11.04	11.96	11.72	12.57	11.54
13					10.63	10.40	11.26	11.03	11.57	11.30	11.91	11.19	12.58	11.95	13.25	11.68
15					11.10	10.56	11.78	11.54	12.11	11.46	12.47	11.34	13.20	12.10	13.92	11.82
17					11.58	10.73	12.29	11.74	12.65	11.62	13.04	11.50	13.82	12.25	14.59	11.97
19					11.82	10.81	12.56	11.82	12.92	11.70	13.32	11.58	14.11	12.33	14.90	12.04
21					12.06	10.89	12.82	11.90	13.19	11.78	13.60	11.66	14.40	12.40	15.20	12.10
23					12.06	10.89	12.85	11.91	13.23	11.79	13.64	11.67	14.45	12.41	15.27	12.12
25			11.16	10.94	12.06	10.89	12.89	11.92	13.27	11.80	13.68	11.68	14.51	12.43	15.34	12.13
27			11.08	10.86	12.05	10.89	12.92	11.93	13.31	11.81	13.69	11.68	14.47	12.42		
29			11.00	10.78	11.87	10.83	12.71	11.87	13.11	11.75	13.51	11.63	14.31	12.38		
31			10.92	10.70	11.69	10.76	12.49	11.80	12.90	11.69	13.32	11.58	14.15	12.34		
33	10.27	10.06	10.72	10.51	11.51	10.70	12.27	11.73	12.70	11.63	13.13	11.53	13.99	12.30		
35	10.07	9.87	10.55	10.34	11.33	10.64	12.06	11.66	12.50	11.57	12.94	11.47	13.83	12.26		
37	9.90	9.70	10.38	10.17	11.13	10.57	11.83	11.59	12.24	11.50	12.66	11.40	13.50	12.17		
39	9.72	9.53	10.20	10.00	10.94	10.51	11.60	11.37	11.99	11.42	12.38	11.32	13.16	12.09		
41	9.55	9.36	10.02	9.82	10.75	10.44	11.37	11.14	11.73	11.35	12.09	11.24	12.82	12.01		
43	9.38	9.19	9.85	9.65	10.56	10.35	11.14	10.92	11.47	11.24	11.81	11.16	12.48	11.93		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	7.06	7.03	7.00	6.97	6.95
-17.7	-18	7.46	7.43	7.41	7.37	7.34
-15.7	-16	7.87	7.84	7.81	7.77	7.74
-13.5	-14	8.33	8.29	8.26	8.22	8.18
-11.5	-12	8.78	8.74	8.70	8.66	8.62
-9.5	-10	9.24	9.19	9.15	9.11	9.06
-7.5	-8	9.69	9.65	9.60	9.55	9.50
-5.5	-6	9.91	9.86	9.81	9.75	9.70
-3.0	-4	10.12	10.07	10.01	9.96	9.90
-1.0	-2	10.33	10.28	10.22	10.16	10.10
1.0	0	10.55	10.49	10.43	10.36	10.30
2.0	1	10.65	10.59	10.53	10.47	10.40
3.0	2	11.36	11.29	11.22	11.18	11.13
5.0	4	12.76	12.69	12.61	12.60	12.58
7.0	6	14.16	14.08	14.00	14.02	14.04
9.0	8	14.72	14.64	14.56	14.52	14.49
11.5	10	15.28	15.20	15.11	15.02	14.93
13.5	12	16.13	16.04	15.94	15.82	15.75
15.5	14	16.98	16.88	16.77	16.62	16.58
16.5	16	17.41	17.30	17.19	17.02	16.99

PJF000Z451

- Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.
- (3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

Model **FDT140VNPVG** Indoor unit FDT71VG (2 units) Outdoor unit FDC140VN
Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.37	11.14	12.02	11.78	12.35	12.10	12.70	12.20	13.39	13.03	14.08	12.76
13					11.90	11.51	12.61	12.36	12.96	12.50	13.33	12.38	14.09	13.21	14.84	12.93
15					12.43	11.70	13.19	12.81	13.57	12.69	13.97	12.57	14.78	13.39	15.59	13.11
17					12.96	11.89	13.77	12.99	14.17	12.87	14.61	12.75	15.48	13.58	16.34	13.28
19					13.24	11.99	14.06	13.09	14.48	12.97	14.92	12.85	15.80	13.66	16.68	13.36
21					13.51	12.09	14.36	13.19	14.78	13.06	15.23	12.94	16.12	13.75	17.02	13.44
23					13.51	12.09	14.40	13.20	14.82	13.07	15.28	12.95	16.19	13.76	17.10	13.46
25			12.50	12.25	13.50	12.08	14.43	13.21	14.86	13.09	15.33	12.97	16.25	13.78	17.18	13.48
27			12.41	12.16	13.50	12.08	14.47	13.22	14.91	13.10	15.34	12.97	16.20	13.77		
29			12.32	12.07	13.29	12.01	14.23	13.14	14.68	13.03	15.13	12.91	16.02	13.72		
31			12.23	11.99	13.09	11.93	13.99	13.07	14.45	12.96	14.92	12.85	15.85	13.67		
33	11.51	11.28	12.01	11.77	12.89	11.86	13.75	12.99	14.23	12.89	14.71	12.78	15.67	13.63		
35	11.28	11.05	11.82	11.58	12.68	11.79	13.50	12.91	14.00	12.82	14.50	12.72	15.49	13.58		
37	11.08	10.86	11.62	11.39	12.47	11.71	13.25	12.82	13.71	12.73	14.18	12.63	15.12	13.48		
39	10.89	10.67	11.43	11.20	12.26	11.64	12.99	12.73	13.43	12.64	13.86	12.53	14.74	13.38		
41	10.70	10.49	11.23	11.01	12.04	11.56	12.73	12.48	13.14	12.55	13.55	12.44	14.36	13.28		
43	10.51	10.30	11.03	10.81	11.83	11.49	12.47	12.22	12.85	12.47	13.23	12.35	13.98	13.18		

Outdoor air temp.	Indoor air temperature					
	°CDB					
°CDB	°CWB	16	18	20	22	24
-19.8	-20	8.06	8.03	8.00	7.97	7.94
-17.7	-18	8.53	8.50	8.46	8.43	8.39
-15.7	-16	9.00	8.96	8.92	8.88	8.85
-13.5	-14	9.52	9.48	9.43	9.39	9.35
-11.5	-12	10.04	9.99	9.95	9.90	9.85
-9.5	-10	10.56	10.51	10.46	10.41	10.36
-7.5	-8	11.08	11.02	10.97	10.91	10.86
-5.5	-6	11.32	11.26	11.21	11.15	11.09
-3.0	-4	11.56	11.50	11.44	11.38	11.31
-1.0	-2	11.81	11.75	11.68	11.61	11.54
1.0	0	12.05	11.99	11.92	11.84	11.77
2.0	1	12.18	12.11	12.04	11.96	11.89
3.0	2	12.98	12.90	12.83	12.77	12.72
5.0	4	14.58	14.50	14.41	14.40	14.38
7.0	6	16.19	16.09	16.00	16.02	16.05
9.0	8	16.83	16.73	16.63	16.59	16.55
11.5	10	17.46	17.37	17.27	17.17	17.06
13.5	12	18.44	18.33	18.22	18.08	18.00
15.5	14	19.41	19.29	19.17	18.99	18.95
16.5	16	19.90	19.77	19.64	19.45	19.42

PJF000Z451

Model **FDT140VSPVG** Indoor unit FDT71VG (2 units) Outdoor unit FDC140VS
Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.37	11.14	12.02	11.78	12.35	12.10	12.70	12.20	13.39	13.03	14.08	12.76
13					11.90	11.51	12.61	12.36	12.96	12.50	13.33	12.38	14.09	13.21	14.84	12.93
15					12.43	11.70	13.19	12.81	13.57	12.69	13.97	12.57	14.78	13.39	15.59	13.11
17					12.96	11.89	13.77	12.99	14.17	12.87	14.61	12.75	15.48	13.58	16.34	13.28
19					13.24	11.99	14.06	13.09	14.48	12.97	14.92	12.85	15.80	13.66	16.68	13.36
21					13.51	12.09	14.36	13.19	14.78	13.06	15.23	12.94	16.12	13.75	17.02	13.44
23					13.51	12.09	14.40	13.20	14.82	13.07	15.28	12.95	16.19	13.76	17.10	13.46
25			12.50	12.25	13.50	12.08	14.43	13.21	14.86	13.09	15.33	12.97	16.25	13.78	17.18	13.48
27			12.41	12.16	13.50	12.08	14.47	13.22	14.91	13.10	15.34	12.97	16.20	13.77		
29			12.32	12.07	13.29	12.01	14.23	13.14	14.68	13.03	15.13	12.91	16.02	13.72		
31			12.23	11.99	13.09	11.93	13.99	13.07	14.45	12.96	14.92	12.85	15.85	13.67		
33	11.51	11.28	12.01	11.77	12.89	11.86	13.75	12.99	14.23	12.89	14.71	12.78	15.67	13.63		
35	11.28	11.05	11.82	11.58	12.68	11.79	13.50	12.91	14.00	12.82	14.50	12.72	15.49	13.58		
37	11.08	10.86	11.62	11.39	12.47	11.71	13.25	12.82	13.71	12.73	14.18	12.63	15.12	13.48		
39	10.89	10.67	11.43	11.20	12.26	11.64	12.99	12.73	13.43	12.64	13.86	12.53	14.74	13.38		
41	10.70	10.49	11.23	11.01	12.04	11.56	12.73	12.48	13.14	12.55	13.55	12.44	14.36	13.28		
43	10.51	10.30	11.03	10.81	11.83	11.49	12.47	12.22	12.85	12.47	13.23	12.35	13.98	13.18		

Outdoor air temp.	Indoor air temperature					
	°CDB					
°CDB	°CWB	16	18	20	22	24
-19.8	-20	8.06	8.03	8.00	7.97	7.94
-17.7	-18	8.53	8.50	8.46	8.43	8.39
-15.7	-16	9.00	8.96	8.92	8.88	8.85
-13.5	-14	9.52	9.48	9.43	9.39	9.35
-11.5	-12	10.04	9.99	9.95	9.90	9.85
-9.5	-10	10.56	10.51	10.46	10.41	10.36
-7.5	-8	11.08	11.02	10.97	10.91	10.86
-5.5	-6	11.32	11.26	11.21	11.15	11.09
-3.0	-4	11.56	11.50	11.44	11.38	11.31
-1.0	-2	11.81	11.75	11.68	11.61	11.54
1.0	0	12.05	11.99	11.92	11.84	11.77
2.0	1	12.18	12.11	12.04	11.96	11.89
3.0	2	12.98	12.90	12.83	12.77	12.72
5.0	4	14.58	14.50	14.41	14.40	14.38
7.0	6	16.19	16.09	16.00	16.02	16.05
9.0	8	16.83	16.73	16.63	16.59	16.55
11.5	10	17.46	17.37	17.27	17.17	17.06
13.5	12	18.44	18.33	18.22	18.08	18.00
15.5	14	19.41	19.29	19.17	18.99	18.95
16.5	16	19.90	19.77	19.64	19.45	19.42

PJF000Z451

- Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.
- (3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

Model FDT200VSAPVG Indoor unit FDT100VG (2 units) Outdoor unit FDC200VSA
Cooling Mode

(kW) Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					17.37	15.87	18.41	17.32	18.94	17.16	19.50	17.00	20.63	18.08	21.76	17.70
13					17.90	16.06	18.99	17.51	19.54	17.35	20.13	17.19	21.31	18.27	22.49	17.87
15					18.43	16.26	19.57	17.71	20.14	17.54	20.75	17.38	21.98	18.45	23.21	18.05
17					18.96	16.45	20.14	17.90	20.73	17.73	21.38	17.57	22.66	18.64	23.94	18.23
19					19.35	16.60	20.56	18.04	21.16	17.87	21.81	17.70	23.12	18.77	24.42	18.35
21					19.41	16.62	20.98	18.19	21.59	18.01	22.25	17.84	23.57	18.89	24.89	18.47
23					19.31	16.58	20.86	18.15	21.47	17.97	22.12	17.80	23.43	18.85	24.73	18.43
25			17.35	16.80	19.20	16.54	20.74	18.10	21.35	17.93	21.99	17.76	23.28	18.81	24.57	18.39
27			17.28	16.77	19.10	16.51	20.62	18.06	21.22	17.89	21.83	17.71	23.04	18.74		
29			17.14	16.71	18.85	16.41	20.31	17.96	20.92	17.79	21.53	17.62	22.75	18.66		
31			16.99	16.65	18.59	16.32	20.00	17.85	20.61	17.69	21.22	17.52	22.45	18.58		
33	16.46	15.59	17.03	16.67	18.33	16.22	19.69	17.75	20.31	17.60	20.92	17.43	22.15	18.50		
35	16.14	15.45	16.76	16.42	18.08	16.13	19.38	17.64	20.00	17.50	20.62	17.34	21.85	18.42		
37	15.86	15.33	16.50	16.17	17.76	16.01	18.98	17.51	19.57	17.36	20.17	17.20	21.35	18.28		
39	15.59	15.21	16.23	15.91	17.44	15.89	18.58	17.38	19.15	17.23	19.71	17.06	20.85	18.14		
41	15.32	15.01	15.97	15.65	17.13	15.78	18.17	17.24	18.72	17.09	19.26	16.93	20.35	18.01		
43	15.04	14.74	15.70	15.39	16.81	15.67	17.77	17.11	18.29	16.96	18.81	16.80	19.85	17.88		

Outdoor air temp.	Indoor air temperature					
	°CDB					
°CDB	°CWB	16	18	20	22	24
-19.8	-20	11.27	11.26	11.25	11.24	11.23
-17.7	-18	11.89	11.87	11.85	11.84	11.82
-15.7	-16	12.51	12.49	12.46	12.43	12.41
-13.5	-14	13.21	13.18	13.14	13.11	13.08
-11.5	-12	13.91	13.87	13.83	13.79	13.76
-9.5	-10	14.61	14.57	14.52	14.47	14.43
-7.5	-8	15.31	15.26	15.21	15.16	15.10
-5.5	-6	15.64	15.58	15.52	15.46	15.40
-3.0	-4	15.96	15.89	15.82	15.76	15.69
-1.0	-2	16.29	16.21	16.13	16.06	15.98
1.0	0	16.61	16.53	16.44	16.36	16.28
2.0	1	16.78	16.69	16.59	16.51	16.42
3.0	2	17.96	17.86	17.76	17.66	17.56
5.0	4	20.33	20.21	20.08	19.96	19.84
7.0	6	22.71	22.55	22.40	22.26	22.12
9.0	8	23.43	23.28	23.13	22.88	22.63
11.5	10	24.14	24.00	23.86	23.50	23.13
13.5	12	25.41	25.24	25.07	24.77	24.43
15.5	14	26.67	26.47	26.27	26.05	25.72
16.5	16	27.30	27.09	26.87	26.69	26.37

PJF000Z451

Model FDT250VSAPVG Indoor unit FDT125VG (2 units) Outdoor unit FDC250VSA
Cooling Mode

(kW) Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					21.71	18.06	23.02	19.54	23.67	19.36	24.38	19.20	25.79	20.28	27.21	19.86
13					22.38	18.32	23.74	19.80	24.42	19.63	25.16	19.45	26.63	20.54	28.11	20.10
15					23.04	18.59	24.46	20.07	25.17	19.89	25.94	19.72	27.48	20.80	29.02	20.35
17					23.70	18.85	25.18	20.34	25.92	20.15	26.72	19.98	28.32	21.06	29.92	20.60
19					24.19	19.05	25.70	20.53	26.45	20.34	27.27	20.17	28.89	21.23	30.52	20.77
21					24.26	19.08	26.22	20.72	26.99	20.54	27.82	20.36	29.47	21.41	31.12	20.94
23					24.13	19.03	26.07	20.67	26.84	20.48	27.65	20.30	29.28	21.35	30.91	20.88
25			21.69	19.15	24.00	18.98	25.92	20.61	26.68	20.43	27.49	20.24	29.10	21.30	30.71	20.83
27			21.60	19.11	23.88	18.93	25.77	20.56	26.53	20.37	27.29	20.18	28.80	21.20		
29			21.42	19.03	23.56	18.80	25.39	20.41	26.15	20.24	26.91	20.05	28.43	21.09		
31			21.24	18.95	23.24	18.67	25.00	20.27	25.77	20.10	26.53	19.92	28.06	20.98		
33	20.58	17.92	21.29	18.97	22.92	18.54	24.61	20.12	25.38	19.96	26.15	19.79	27.69	20.86		
35	20.17	17.73	20.96	18.83	22.60	18.41	24.23	19.98	25.00	19.83	25.77	19.66	27.31	20.75		
37	19.83	17.57	20.62	18.68	22.20	18.25	23.73	19.80	24.47	19.64	25.21	19.47	26.69	20.56		
39	19.49	17.42	20.29	18.54	21.80	18.09	23.22	19.61	23.93	19.45	24.64	19.28	26.06	20.37		
41	19.15	17.26	19.96	18.40	21.41	17.94	22.72	19.43	23.40	19.27	24.08	19.10	25.43	20.18		
43	18.81	17.10	19.63	18.26	21.01	17.78	22.22	19.25	22.86	19.09	23.51	18.91	24.81	19.99		

Outdoor air temp.	Indoor air temperature					
	°CDB					
°CDB	°CWB	16	18	20	22	24
-19.8	-20	14.09	14.07	14.06	14.05	14.04
-17.7	-18	14.87	14.84	14.81	14.79	14.77
-15.7	-16	15.64	15.61	15.57	15.54	15.51
-13.5	-14	16.52	16.47	16.43	16.39	16.35
-11.5	-12	17.39	17.34	17.29	17.24	17.19
-9.5	-10	18.26	18.21	18.15	18.09	18.04
-7.5	-8	19.14	19.07	19.01	18.94	18.88
-5.5	-6	19.55	19.47	19.40	19.32	19.24
-3.0	-4	19.95	19.87	19.78	19.70	19.61
-1.0	-2	20.36	20.26	20.17	20.07	19.98
1.0	0	20.77	20.66	20.55	20.45	20.35
2.0	1	20.97	20.86	20.74	20.64	20.53
3.0	2	22.45	22.32	22.19	22.07	21.95
5.0	4	25.42	25.26	25.10	24.95	24.80
7.0	6	28.38	28.19	28.00	27.82	27.65
9.0	8	29.28	29.10	28.91	28.60	28.28
11.5	10	30.18	30.00	29.83	29.37	28.91
13.5	12	31.76	31.55	31.33	30.97	30.53
15.5	14	33.34	33.09	32.84	32.57	32.15
16.5	16	34.13	33.86	33.59	33.37	32.96

PJF000Z451

Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
(2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.
(3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

(3) Triple type

Model **FDT140VNTVG** Indoor unit **FDT50VG (3 units)** Outdoor unit **FDC140VN**
Cooling Mode (kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.37	11.14	12.02	11.78	12.35	12.10	12.70	12.33	13.39	13.12	14.08	12.86
13					11.90	11.62	12.61	12.36	12.96	12.63	13.33	12.48	14.09	13.34	14.84	13.00
15					12.43	11.79	13.19	12.93	13.57	12.79	13.97	12.64	14.78	13.49	15.59	13.14
17					12.96	11.96	13.77	13.10	14.17	12.95	14.61	12.81	15.48	13.64	16.34	13.29
19					13.24	12.05	14.06	13.19	14.48	13.04	14.92	12.89	15.80	13.72	16.68	13.35
21					13.51	12.14	14.36	13.28	14.78	13.12	15.23	12.97	16.12	13.79	17.02	13.42
23					13.51	12.14	14.40	13.29	14.82	13.13	15.28	12.98	16.19	13.80	17.10	13.43
25			12.50	12.25	13.50	12.14	14.43	13.30	14.86	13.14	15.33	12.99	16.25	13.82	17.18	13.45
27			12.41	12.16	13.50	12.14	14.47	13.31	14.91	13.16	15.34	12.99	16.20	13.81		
29			12.32	12.07	13.29	12.07	14.23	13.24	14.68	13.09	15.13	12.94	16.02	13.77		
31			12.23	11.99	13.09	12.00	13.99	13.17	14.45	13.03	14.92	12.89	15.85	13.73		
33	11.51	11.28	12.01	11.77	12.89	11.94	13.75	13.10	14.23	12.97	14.71	12.83	15.67	13.69		
35	11.28	11.05	11.82	11.58	12.68	11.87	13.50	13.03	14.00	12.91	14.50	12.78	15.49	13.65		
37	11.08	10.86	11.62	11.39	12.47	11.80	13.25	12.96	13.71	12.83	14.18	12.70	15.12	13.56		
39	10.89	10.67	11.43	11.20	12.26	11.74	12.99	12.73	13.43	12.75	13.86	12.62	14.74	13.48		
41	10.70	10.49	11.23	11.01	12.04	11.67	12.73	12.48	13.14	12.68	13.55	12.54	14.36	13.40		
43	10.51	10.30	11.03	10.81	11.83	11.59	12.47	12.22	12.85	12.59	13.23	12.46	13.98	13.31		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	8.06	8.03	8.00	7.97	7.94
-17.7	-18	8.53	8.50	8.46	8.43	8.39
-15.7	-16	9.00	8.96	8.92	8.88	8.85
-13.5	-14	9.52	9.48	9.43	9.39	9.35
-11.5	-12	10.04	9.99	9.95	9.90	9.85
-9.5	-10	10.56	10.51	10.46	10.41	10.36
-7.5	-8	11.08	11.02	10.97	10.91	10.86
-5.5	-6	11.32	11.26	11.21	11.15	11.09
-3.0	-4	11.56	11.50	11.44	11.38	11.31
-1.0	-2	11.81	11.75	11.68	11.61	11.54
1.0	0	12.05	11.99	11.92	11.84	11.77
2.0	1	12.18	12.11	12.04	11.96	11.89
3.0	2	12.98	12.90	12.83	12.77	12.72
5.0	4	14.58	14.50	14.41	14.40	14.38
7.0	6	16.19	16.09	16.00	16.02	16.05
9.0	8	16.83	16.73	16.63	16.59	16.55
11.5	10	17.46	17.37	17.27	17.17	17.06
13.5	12	18.44	18.33	18.22	18.08	18.00
15.5	14	19.41	19.29	19.17	18.99	18.95
16.5	16	19.90	19.77	19.64	19.45	19.42

PJF000Z451

Model **FDT140VSTVG** Indoor unit **FDT50VG (3 units)** Outdoor unit **FDC140VS**
Cooling Mode (kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.37	11.14	12.02	11.78	12.35	12.10	12.70	12.33	13.39	13.12	14.08	12.86
13					11.90	11.62	12.61	12.36	12.96	12.63	13.33	12.48	14.09	13.34	14.84	13.00
15					12.43	11.79	13.19	12.93	13.57	12.79	13.97	12.64	14.78	13.49	15.59	13.14
17					12.96	11.96	13.77	13.10	14.17	12.95	14.61	12.81	15.48	13.64	16.34	13.29
19					13.24	12.05	14.06	13.19	14.48	13.04	14.92	12.89	15.80	13.72	16.68	13.35
21					13.51	12.14	14.36	13.28	14.78	13.12	15.23	12.97	16.12	13.79	17.02	13.42
23					13.51	12.14	14.40	13.29	14.82	13.13	15.28	12.98	16.19	13.80	17.10	13.43
25			12.50	12.25	13.50	12.14	14.43	13.30	14.86	13.14	15.33	12.99	16.25	13.82	17.18	13.45
27			12.41	12.16	13.50	12.14	14.47	13.31	14.91	13.16	15.34	12.99	16.20	13.81		
29			12.32	12.07	13.29	12.07	14.23	13.24	14.68	13.09	15.13	12.94	16.02	13.77		
31			12.23	11.99	13.09	12.00	13.99	13.17	14.45	13.03	14.92	12.89	15.85	13.73		
33	11.51	11.28	12.01	11.77	12.89	11.94	13.75	13.10	14.23	12.97	14.71	12.83	15.67	13.69		
35	11.28	11.05	11.82	11.58	12.68	11.87	13.50	13.03	14.00	12.91	14.50	12.78	15.49	13.65		
37	11.08	10.86	11.62	11.39	12.47	11.80	13.25	12.96	13.71	12.83	14.18	12.70	15.12	13.56		
39	10.89	10.67	11.43	11.20	12.26	11.74	12.99	12.73	13.43	12.75	13.86	12.62	14.74	13.48		
41	10.70	10.49	11.23	11.01	12.04	11.67	12.73	12.48	13.14	12.68	13.55	12.54	14.36	13.40		
43	10.51	10.30	11.03	10.81	11.83	11.59	12.47	12.22	12.85	12.59	13.23	12.46	13.98	13.31		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	8.06	8.03	8.00	7.97	7.94
-17.7	-18	8.53	8.50	8.46	8.43	8.39
-15.7	-16	9.00	8.96	8.92	8.88	8.85
-13.5	-14	9.52	9.48	9.43	9.39	9.35
-11.5	-12	10.04	9.99	9.95	9.90	9.85
-9.5	-10	10.56	10.51	10.46	10.41	10.36
-7.5	-8	11.08	11.02	10.97	10.91	10.86
-5.5	-6	11.32	11.26	11.21	11.15	11.09
-3.0	-4	11.56	11.50	11.44	11.38	11.31
-1.0	-2	11.81	11.75	11.68	11.61	11.54
1.0	0	12.05	11.99	11.92	11.84	11.77
2.0	1	12.18	12.11	12.04	11.96	11.89
3.0	2	12.98	12.90	12.83	12.77	12.72
5.0	4	14.58	14.50	14.41	14.40	14.38
7.0	6	16.19	16.09	16.00	16.02	16.05
9.0	8	16.83	16.73	16.63	16.59	16.55
11.5	10	17.46	17.37	17.27	17.17	17.06
13.5	12	18.44	18.33	18.22	18.08	18.00
15.5	14	19.41	19.29	19.17	18.99	18.95
16.5	16	19.90	19.77	19.64	19.45	19.42

PJF000Z451

- Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.
- (3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

Model **FDT200VSATVG** Indoor unit FDT71VG (3 units) Outdoor unit FDC200VSA
 Cooling Mode (kW) Heating Mode : HC (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					17.37	17.02	18.41	18.04	18.94	18.56	19.50	18.43	20.63	19.69	21.76	19.28
13					17.90	17.28	18.99	18.61	19.54	18.78	20.13	18.61	21.31	19.86	22.49	19.45
15					18.43	17.47	19.57	19.14	20.14	18.96	20.75	18.79	21.98	20.04	23.21	19.62
17					18.96	17.66	20.14	19.32	20.73	19.14	21.38	18.97	22.66	20.22	23.94	19.79
19					19.35	17.80	20.56	19.46	21.16	19.28	21.81	19.10	23.12	20.34	24.42	19.90
21					19.41	17.82	20.98	19.60	21.59	19.41	22.25	19.23	23.57	20.46	24.89	20.01
23					19.31	17.78	20.86	19.56	21.47	19.37	22.12	19.19	23.43	20.42	24.73	19.97
25			17.35	17.00	19.20	17.75	20.74	19.52	21.35	19.34	21.99	19.15	23.28	20.38	24.57	19.93
27			17.28	16.93	19.10	17.71	20.62	19.48	21.22	19.30	21.83	19.11	23.04	20.32		
29			17.14	16.80	18.85	17.62	20.31	19.38	20.92	19.20	21.53	19.02	22.75	20.24		
31			16.99	16.65	18.59	17.53	20.00	19.28	20.61	19.11	21.22	18.93	22.45	20.16		
33	16.46	16.13	17.03	16.69	18.33	17.44	19.69	19.18	20.31	19.02	20.92	18.84	22.15	20.08		
35	16.14	15.82	16.76	16.42	18.08	17.35	19.38	18.99	20.00	18.92	20.62	18.75	21.85	20.00		
37	15.86	15.54	16.50	16.17	17.76	17.23	18.98	18.60	19.57	18.79	20.17	18.62	21.35	19.87		
39	15.59	15.28	16.23	15.91	17.44	17.09	18.58	18.21	19.15	18.66	19.71	18.49	20.85	19.75		
41	15.32	15.01	15.97	15.65	17.13	16.79	18.17	17.81	18.72	18.35	19.26	18.36	20.35	19.62		
43	15.04	14.74	15.70	15.39	16.81	16.47	17.77	17.41	18.29	17.92	18.81	18.23	19.85	19.45		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB					
		16	18	20	22	24	
		-19.8	-20	11.27	11.26	11.25	11.24
-17.7	-18	11.89	11.87	11.85	11.84	11.82	
-15.7	-16	12.51	12.49	12.46	12.43	12.41	
-13.5	-14	13.21	13.18	13.14	13.11	13.08	
-11.5	-12	13.91	13.87	13.83	13.79	13.76	
-9.5	-10	14.61	14.57	14.52	14.47	14.43	
-7.5	-8	15.31	15.26	15.21	15.16	15.10	
-5.5	-6	15.64	15.58	15.52	15.46	15.40	
-3.0	-4	15.96	15.89	15.82	15.76	15.69	
-1.0	-2	16.29	16.21	16.13	16.06	15.98	
1.0	0	16.61	16.53	16.44	16.36	16.28	
2.0	1	16.78	16.69	16.59	16.51	16.42	
3.0	2	17.96	17.86	17.76	17.66	17.56	
5.0	4	20.33	20.21	20.08	19.96	19.84	
7.0	6	22.71	22.55	22.40	22.26	22.12	
9.0	8	23.43	23.28	23.13	22.88	22.63	
11.5	10	24.14	24.00	23.86	23.50	23.13	
13.5	12	25.41	25.24	25.07	24.77	24.43	
15.5	14	26.67	26.47	26.27	26.05	25.72	
16.5	16	27.30	27.09	26.87	26.69	26.37	

PJF000Z451

(4) Double twin type

Model **FDT200VSADV** Indoor unit FDT50VG (4 units) Outdoor unit FDC200VSA
 Cooling Mode (kW) Heating Mode : HC (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					17.37	15.98	18.41	17.49	18.94	17.28	19.50	17.08	20.63	18.19	21.76	17.71
13					17.90	16.15	18.99	17.66	19.54	17.45	20.13	17.24	21.31	18.34	22.49	17.85
15					18.43	16.32	19.57	17.83	20.14	17.61	20.75	17.40	21.98	18.49	23.21	17.99
17					18.96	16.50	20.14	17.99	20.73	17.78	21.38	17.57	22.66	18.65	23.94	18.14
19					19.35	16.63	20.56	18.12	21.16	17.90	21.81	17.68	23.12	18.76	24.42	18.23
21					19.41	16.65	20.98	18.25	21.59	18.02	22.25	17.80	23.57	18.86	24.89	18.33
23					19.31	16.61	20.86	18.21	21.47	17.99	22.12	17.76	23.43	18.83	24.73	18.30
25			17.35	16.97	19.20	16.58	20.74	18.17	21.35	17.95	21.99	17.73	23.28	18.79	24.57	18.26
27			17.28	16.93	19.10	16.54	20.62	18.14	21.22	17.92	21.83	17.69	23.04	18.74		
29			17.14	16.80	18.85	16.46	20.31	18.04	20.92	17.83	21.53	17.61	22.75	18.67		
31			16.99	16.65	18.59	16.37	20.00	17.95	20.61	17.75	21.22	17.53	22.45	18.60		
33	16.46	15.71	17.03	16.69	18.33	16.29	19.69	17.86	20.31	17.66	20.92	17.45	22.15	18.53		
35	16.14	15.59	16.76	16.42	18.08	16.21	19.38	17.77	20.00	17.58	20.62	17.37	21.85	18.47		
37	15.86	15.47	16.50	16.17	17.76	16.10	18.98	17.65	19.57	17.46	20.17	17.25	21.35	18.35		
39	15.59	15.28	16.23	15.91	17.44	16.00	18.58	17.54	19.15	17.34	19.71	17.13	20.85	18.24		
41	15.32	15.01	15.97	15.65	17.13	15.90	18.17	17.42	18.72	17.23	19.26	17.02	20.35	18.13		
43	15.04	14.74	15.70	15.39	16.81	15.80	17.77	17.30	18.29	17.11	18.81	16.90	19.85	18.02		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB					
		16	18	20	22	24	
		-19.8	-20	11.27	11.26	11.25	11.24
-17.7	-18	11.89	11.87	11.85	11.84	11.82	
-15.7	-16	12.51	12.49	12.46	12.43	12.41	
-13.5	-14	13.21	13.18	13.14	13.11	13.08	
-11.5	-12	13.91	13.87	13.83	13.79	13.76	
-9.5	-10	14.61	14.57	14.52	14.47	14.43	
-7.5	-8	15.31	15.26	15.21	15.16	15.10	
-5.5	-6	15.64	15.58	15.52	15.46	15.40	
-3.0	-4	15.96	15.89	15.82	15.76	15.69	
-1.0	-2	16.29	16.21	16.13	16.06	15.98	
1.0	0	16.61	16.53	16.44	16.36	16.28	
2.0	1	16.78	16.69	16.59	16.51	16.42	
3.0	2	17.96	17.86	17.76	17.66	17.56	
5.0	4	20.33	20.21	20.08	19.96	19.84	
7.0	6	22.71	22.55	22.40	22.26	22.12	
9.0	8	23.43	23.28	23.13	22.88	22.63	
11.5	10	24.14	24.00	23.86	23.50	23.13	
13.5	12	25.41	25.24	25.07	24.77	24.43	
15.5	14	26.67	26.47	26.27	26.05	25.72	
16.5	16	27.30	27.09	26.87	26.69	26.37	

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.
 These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length : 7.5m
 Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)
 SHC : Sensible heat capacity (kW)
 HC : Heating capacity (kW)

Model **FDT250VSADVG** Indoor unit FDT60VG (4 units) Outdoor unit FDC250VSA

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					21.71	20.96	23.02	22.56	23.67	22.76	24.38	22.53	25.79	24.05	27.21	23.51
13					22.38	21.18	23.74	23.21	24.42	22.98	25.16	22.75	26.63	24.26	28.11	23.71
15					23.04	21.41	24.46	23.43	25.17	23.20	25.94	22.96	27.48	24.47	29.02	23.90
17					23.70	21.64	25.18	23.66	25.92	23.42	26.72	23.18	28.32	24.68	29.92	24.10
19					24.19	21.81	25.70	23.82	26.45	23.58	27.27	23.34	28.89	24.82	30.52	24.23
21					24.26	21.83	26.22	23.99	26.99	23.74	27.82	23.49	29.47	24.96	31.12	24.37
23					24.13	21.79	26.07	23.94	26.84	23.69	27.65	23.44	29.28	24.92	30.91	24.32
25			21.69	21.26	24.00	21.74	25.92	23.89	26.68	23.65	27.49	23.40	29.10	24.87	30.71	24.27
27			21.60	21.17	23.88	21.70	25.77	23.84	26.53	23.60	27.29	23.34	28.80	24.80		
29			21.42	20.99	23.56	21.59	25.39	23.72	26.15	23.49	26.91	23.24	28.43	24.70		
31			21.24	20.82	23.24	21.48	25.00	23.60	25.77	23.37	26.53	23.13	28.06	24.61		
33	20.58	20.17	21.29	20.86	22.92	21.37	24.61	23.48	25.38	23.26	26.15	23.02	27.69	24.52		
35	20.17	19.77	20.96	20.54	22.60	21.26	24.23	23.36	25.00	23.15	25.77	22.92	27.31	24.43		
37	19.83	19.43	20.62	20.21	22.20	21.12	23.73	23.21	24.47	22.99	25.21	22.76	26.69	24.27		
39	19.49	19.10	20.29	19.88	21.80	20.99	23.22	22.76	23.93	22.83	24.64	22.60	26.06	24.12		
41	19.15	18.77	19.96	19.56	21.41	20.85	22.72	22.27	23.40	22.68	24.08	22.45	25.43	23.97		
43	18.81	18.43	19.63	19.24	21.01	20.59	22.22	21.78	22.86	22.40	23.51	22.30	24.81	23.82		

Outdoor air temp.		Indoor air temperature					
°CDB	°CWB	°CDB					
		16	18	20	22	24	
-19.8	-20	14.09	14.07	14.06	14.05	14.04	
-17.7	-18	14.87	14.84	14.81	14.79	14.77	
-15.7	-16	15.64	15.61	15.57	15.54	15.51	
-13.5	-14	16.52	16.47	16.43	16.39	16.35	
-11.5	-12	17.39	17.34	17.29	17.24	17.19	
-9.5	-10	18.26	18.21	18.15	18.09	18.04	
-7.5	-8	19.14	19.07	19.01	18.94	18.88	
-5.5	-6	19.55	19.47	19.40	19.32	19.24	
-3.0	-4	19.95	19.87	19.78	19.70	19.61	
-1.0	-2	20.36	20.26	20.17	20.07	19.98	
1.0	0	20.77	20.66	20.55	20.45	20.35	
2.0	1	20.97	20.86	20.74	20.64	20.53	
3.0	2	22.45	22.32	22.19	22.07	21.95	
5.0	4	25.42	25.26	25.10	24.95	24.80	
7.0	6	28.38	28.19	28.00	27.82	27.65	
9.0	8	29.28	29.10	28.91	28.60	28.28	
11.5	10	30.18	30.00	29.83	29.37	28.91	
13.5	12	31.76	31.55	31.33	30.97	30.53	
15.5	14	33.34	33.09	32.84	32.57	32.15	
16.5	16	34.13	33.86	33.59	33.37	32.96	

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)


PJF000Z451

[References data]


Capacity variation against outdoor and indoor temperature at the maximum compressor speed capacity compensation coefficient shows the ratio to nominal capacity.

(I) Models FDC100, 125, 140VN, 100, 125, 140VS

① Cooling

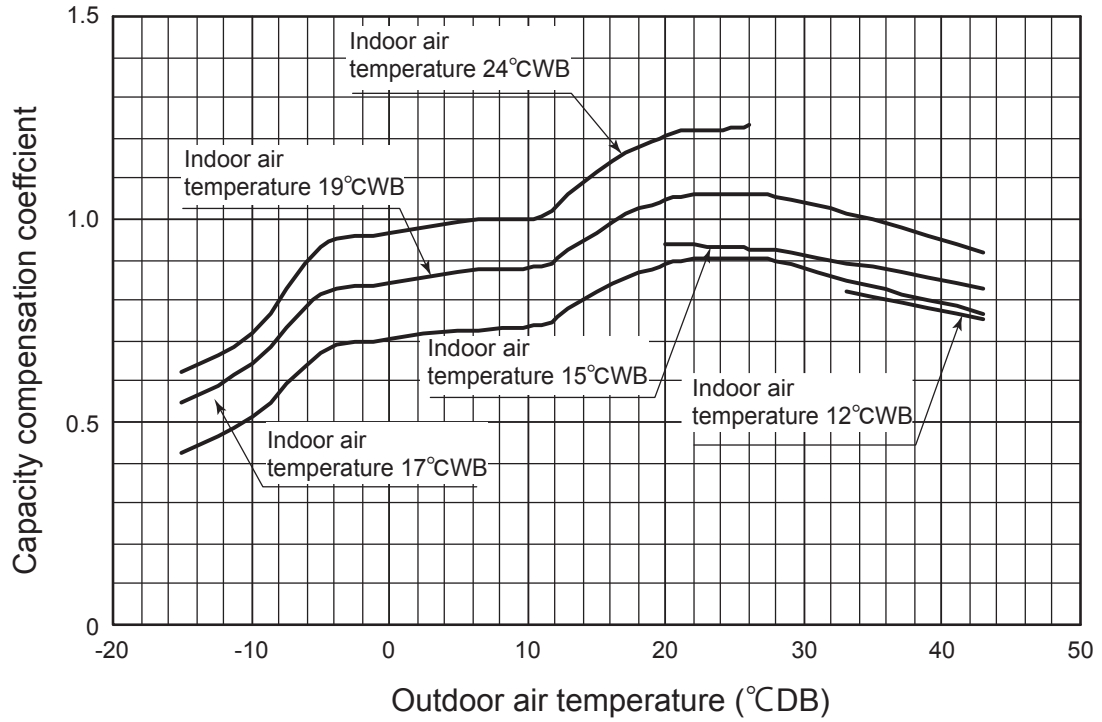


② Heating

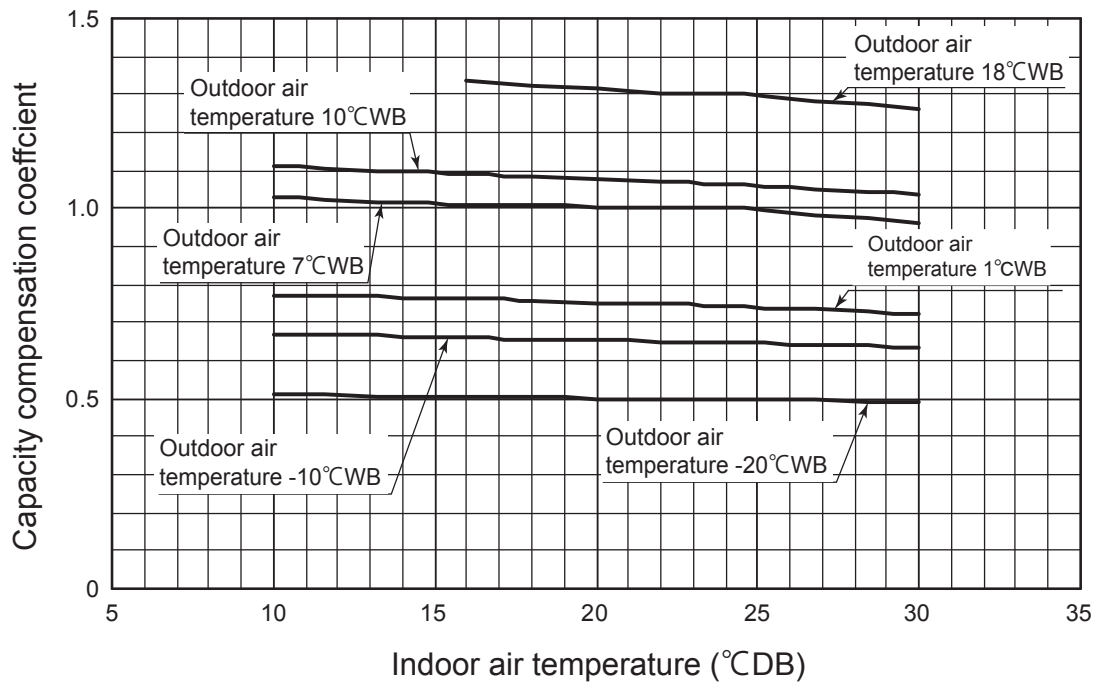


(II) Model FDC200VSA

① Cooling

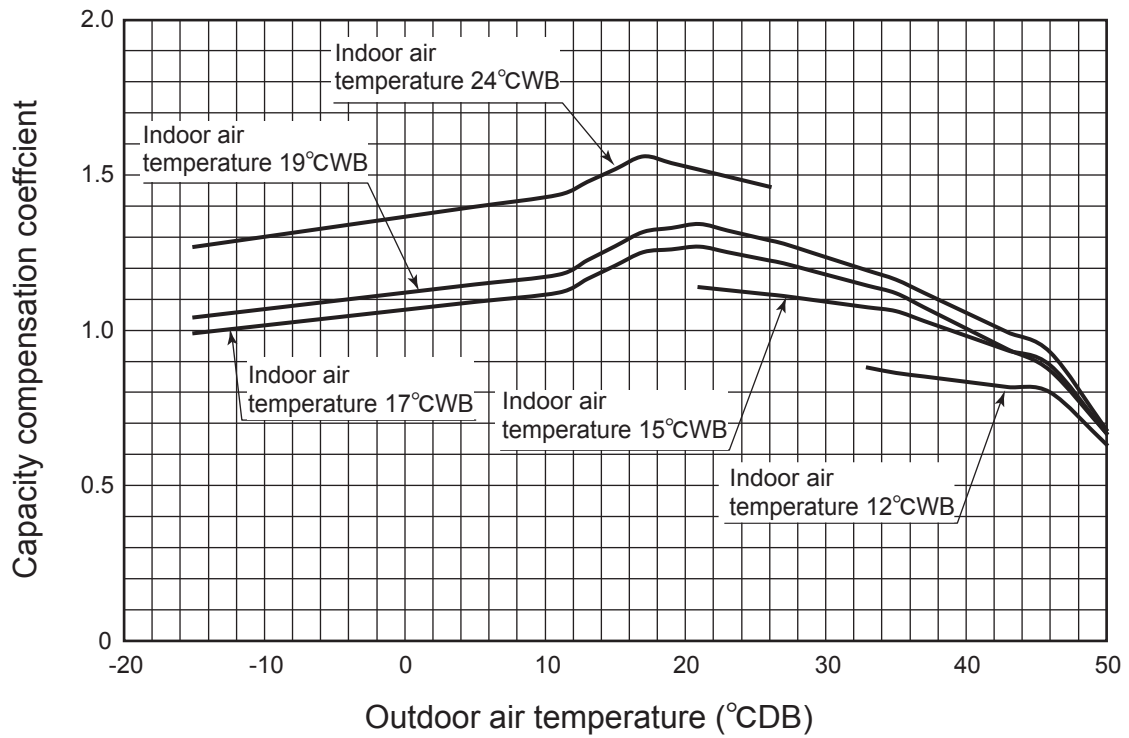


② Heating

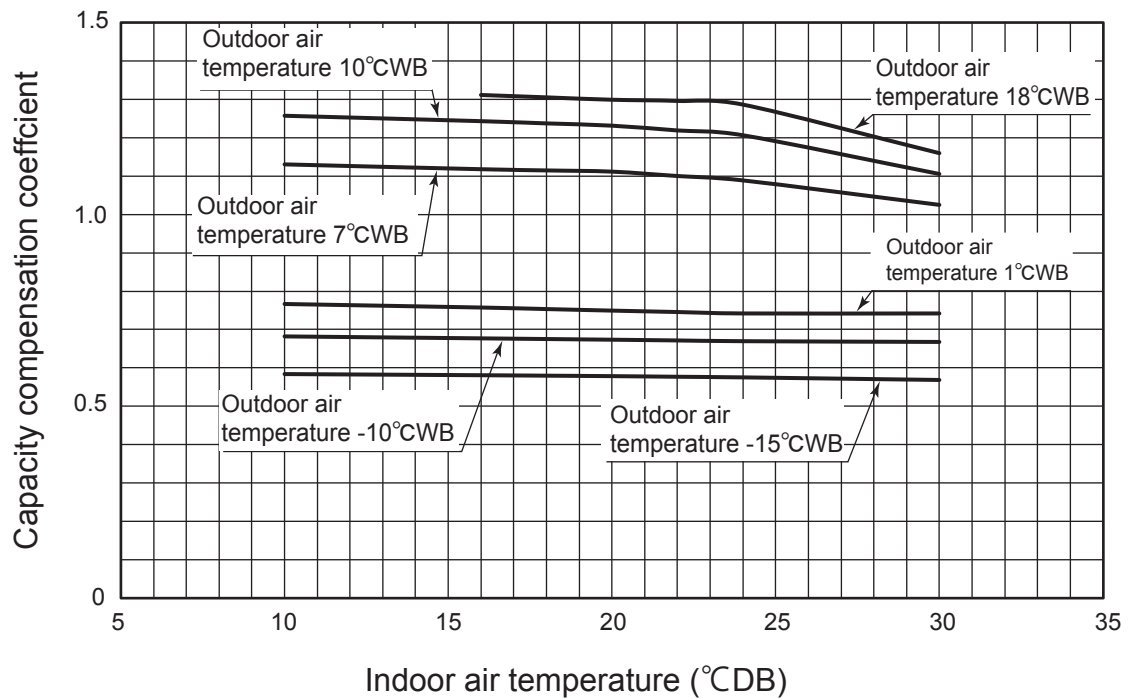


(III) Model FDC250VSA

① Cooling

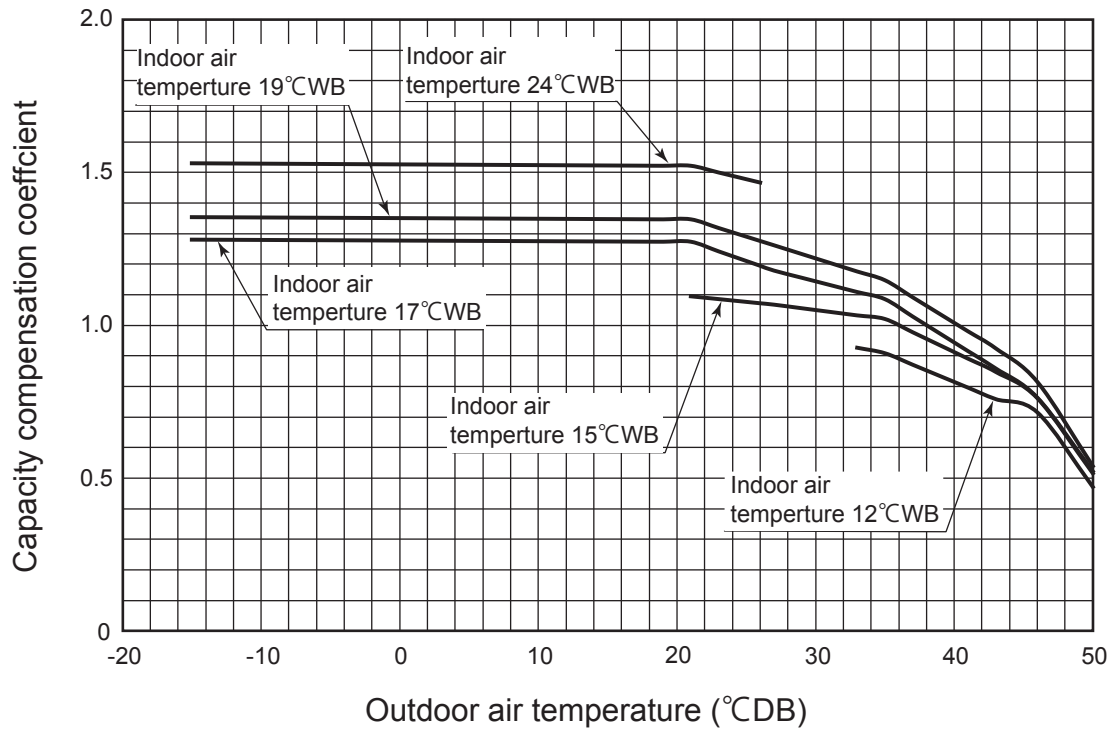

② Heating

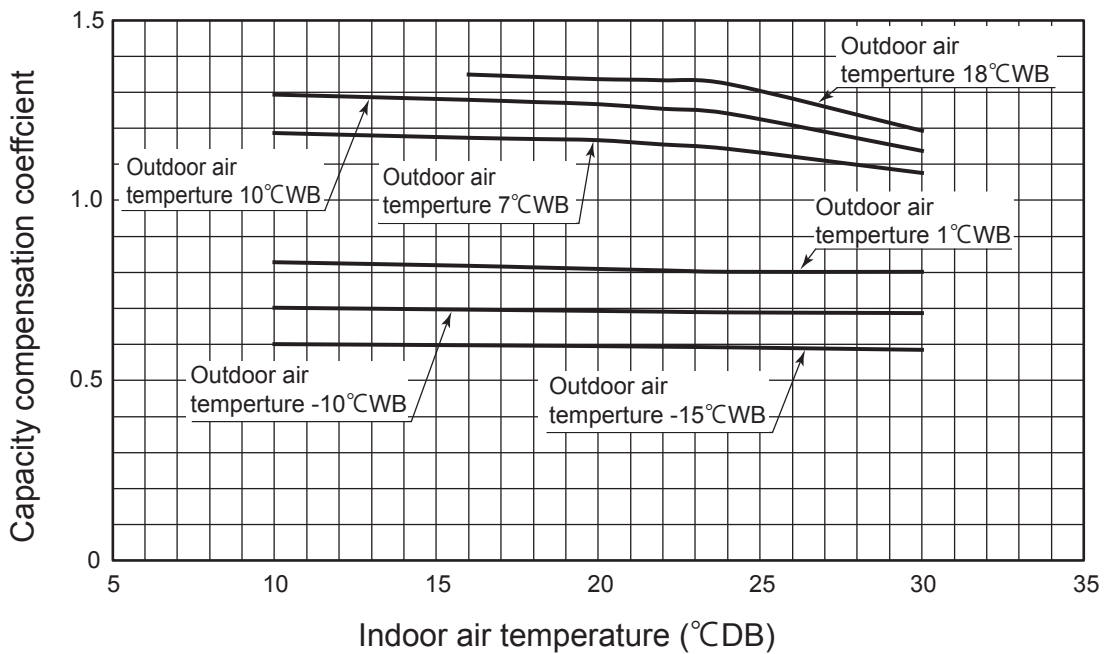

2.8.2 Correction of cooling and heating capacity in relation to air flow rate control (fan speed)

Fan speed	P-Hi or Hi	Me	Lo
Coefficient	1.00	0.97	0.95

2.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way equivalent piping length between the indoor and outdoor units.

(1) Models FDC100 - 140

Equivalent piping length ⁽¹⁾ (m)		7.5	10	15	20	25	30	35	40	45	50	55	
Heating		1	1	1	1	1	0.998	0.998	0.993	0.993	0.988	0.988	
Cooling	FDC100 model	φ 15.88	1	0.991	0.978	0.964	0.951	0.937	0.924	0.910	0.897	0.883	0.870
	FDC125 model		1	0.986	0.968	0.950	0.932	0.914	0.896	0.878	0.860	0.842	0.824
	FDC140 model		1	0.985	0.966	0.946	0.927	0.907	0.888	0.868	0.849	0.829	0.810
	FDC100 model	φ 19.05	1.016	1.013	1.007	1.002	0.996	0.991	0.985	0.980	0.974	0.969	0.963
	FDC125 model		1.022	1.018	1.009	1.001	0.992	0.984	0.975	0.967	0.958	0.950	0.941
	FDC140 model		1.026	1.021	1.011	1.002	0.992	0.983	0.973	0.964	0.954	0.945	0.935

Note (1) Calculate the equivalent length using the following formula.

However, install the piping so that the piping length is within +5 m of the limit length (actual length) for the respective types.

(2) Models FDC200, 250

Equivalent piping length ⁽¹⁾ (m)		7.5	10	15	20	25	30	35	40	45	50	55	60	65	70	75
Heating		1	0.998	0.995	0.991	0.988	0.984	0.981	0.977	0.974	0.970	0.967	0.963	0.960	0.956	0.953
Cooling	FDC200 model	φ 22.22	1	0.997	0.991	0.984	0.978	0.971	0.965	–	–	–	–	–	–	–
	FDC250 model		1	0.995	0.985	0.975	0.965	0.954	0.944	–	–	–	–	–	–	–
	FDC200 model	φ 25.4	–	–	–	–	–	0.988	0.984	0.981	0.977	0.974	0.970	0.967	0.963	0.960
	FDC250 model		–	–	–	–	–	0.978	0.972	0.966	0.960	0.953	0.947	0.941	0.935	0.929
	FDC200 model	φ 28.58	–	–	–	–	–	0.999	0.997	0.995	0.993	0.991	0.989	0.987	0.985	0.983
	FDC250 model		–	–	–	–	–	0.997	0.994	0.990	0.987	0.983	0.980	0.976	0.973	0.969

Note (1) Calculate the equivalent length using the following formula.

However, install the piping so that the piping length is within +5 m of the limit length (actual length) for the respective types.

• Equivalent Length = Actual Length + (Equivalent bend length x number of bends in the piping.)

Equivalent length per bend.

Gas pipe diameter (mm)	φ 12.7	φ 15.88	φ 19.05	φ 22.22	φ 25.4	φ 28.58
Equivalent bend length	0.20	0.25	0.30	0.35	0.40	0.45

2.8.4 Height difference between the indoor unit and outdoor unit

When the outdoor unit is located below indoor units in cooling mode, or when the outdoor unit is located above indoor units in heating mode, the correction coefficient mentioned in the below table should be subtracted from the value in the above table.

Height difference between the indoor unit and outdoor unit in the vertical height difference	5m	10m	15m	20m	25m	30m
Adjustment coefficient	0.99	0.98	0.97	0.96	0.95	0.94

Piping length limitations

Model	FDC100 - 140	FDC200, 250
Item		
Max. one way piping length	50m	70m
Max. vertical height difference	Outdoor unit is higher 30m Outdoor unit is lower 15m	

Note (1) Values in the table indicate the one way piping length between the indoor and outdoor units.

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model FDT200VSATVG with the air flow “P-High”, the piping length of 15m, the outdoor unit located 5m lower than the indoor unit, indoor wet-bulbtemperature at 19.0°C and outdoor dry-bulb temperature 35°C is

$$\text{Net cooling capacity} = \frac{19.0}{\text{Net cooling total capacity of FDT200VSATVG (Outdoor temp. : 35°CDB Indoor temp. : 19°CWB) shown in 2.8.1}} \times \frac{1.00}{\text{Air flow : P-High shown in 2.8.2}} \times \frac{0.991}{\text{Piping length : 15m (Gas pipe size is } \phi 22.22 \text{) shown in 2.8.3}} \times \frac{0.99}{\text{Height diff. : 5m (Outdoor unit : below) shown in 2.8.4}} \approx 18.6\text{kW}$$

2.9 APPLICATION DATA

- 2.9.1 Installation of indoor unit See page 65.
- 2.9.2 Electric wiring work installation See page 71.
- 2.9.3 Installation of wired remote control (Option) See page 75.

PSC012D066H
Inverter driven split PAC
100VN~140VN, 100VS~140VS
100VNX~140VNX, 100VSX~140VSX
Designed for R410A refrigerant

Check before installation work

[Accessory]

Edging	1 piece	knock-out hole protection
--------	---------	---------------------------

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

2.9.4 Installation of outdoor unit

(1) Models FDC100-140VN, 100-140VS

◎ This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 65.
 ◎ When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces

SAFETY PRECAUTIONS

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into [**WARNING**] and [**CAUTION**]. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the [**WARNING**], and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in [**CAUTION**]. **These are very important precautions for safety. Be sure to observe all of them without fail.**
- The meaning of "Marks" used here are as shown below.
 - ⊘ Never do it under any circumstance. [**Prohibition**] Always do it according to the instruction
- For 3 phase power source outdoor unit, ENG1000-3-2 is not applicable if consent by the utility company or notification to the utility company is given before usage.
- 3phase power source unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment. If installed as a house-hold appliance it could cause electromagnetic interference.
- 5 and 6 HP units of single phase power source are equipment complying with IEC 61000-3-12.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover, if necessary, ask to hand them to a new user.



WARNING

- ⚠ **Installation must be carried out by the qualified installer.**
If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction.
- **Install the system in full accordance with the instruction manual.**
Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire.
- **Use the original accessories and the specified components for installation.**
If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury.
- **When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage**
Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents.
- **Ventilate the working area well in the event of refrigerant leakage during installation.**
If the refrigerant comes into contact with naked flames, poisonous gas is produced.
- **After completed installation, check that no refrigerant leaks from the system.**
If refrigerant leaks into the room and comes into contact with an open or other hot surface, poisonous gas is produced.
- **Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support.**
An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit.
- **Install the unit in a location with good support.**
Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- **Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.**
Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- **The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.**
Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.
- **Be sure to shut off the power before starting electrical work.**
Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.
- **Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.**
Unconformable cables can cause electric leak, anomalous heat production or fire.
- **Use the prescribed cables for electrical connection, lighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.**
Loose connections or cable mountings can cause anomalous heat production or fire.
- **Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.**
Incorrect installation may result in overheating and fire.

- **Do not perform brazing work in the airtight room**
It can cause lack of oxygen.
- **Use the prescribed pipes, flare nuts and tools for R410A.**
Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.
- **Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much.**
Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen.
- **Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.**
If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from abrupt refrigerant outflow and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant.
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not perform any change of protective device itself or its setup condition**
The forced operation by short-circuiting protective device or pressure switch and temperature controller or the use of non specified component can cause fire or burst.
- **Be sure to switch off the power source in the event of installation, inspection or servicing.**
If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.
- **Consult the dealer or an expert regarding removal of the unit.**
Incorrect installation can cause water leaks, electric shocks or fire.
- **Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation.**
If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit.
- **Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.**
Moisture in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.
- **Do not run the unit with removed panels or protections**
Use of rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.
- **Be sure to fix up the service panels.**
Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.
- **Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair.**
If you repair or modify the unit, it can cause water leaks, electric shocks or fire.

CAUTION



- **Carry out the electrical work for ground lead with care**
Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because if gas leaks, it could cause explosion or ignition.
- **Use the circuit breaker for all poles with correct capacity**
Using the incorrect circuit breaker, it can cause the unit malfunction and fire.
- **Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.**
The isolator should be locked in accordance with EN60204-1.
- **Take care when carrying the unit by hand**
The unit is certified by bus or rope accessors. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use proper lifting techniques to minimize the risk of cuts by the aluminum fins.
- **Dispose of any packing materials correctly**
Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.
- **Pay attention not to damage the drain pan by weld spatter when welding work is done near the indoor unit.**
If weld spatter entered the drain pan, it can cause pH-hole in drain pan and result in water leakage. To prevent such damage, keep the indoor unit in its packing or cover it.
- **Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.**
Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **Perform installation work properly according to this installation manual.**
Improper installation can cause abnormal vibrations or increased noise generation.
- **Earth leakage breaker must be installed**
If the earth leakage breaker is not installed, it can cause fire or electric shocks.
- **Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.**
Connecting the circuit with copper wire or other metal instead can cause unit failure and fire.
- **Do not install the unit near the location where leakage of combustible gases can occur.**
Leaked gases accumulate around the unit. It can cause fire.
- **Do not use any corrosive gas (such as sulfuric acid, etc.) or combustible gas (such as thinner and petroleum gases) can accurately or collect or collect or where volatile combustible substances are handled.**
Corrosive gas can cause corrosion of heat exchanger, breakdown of plastic parts and etc. And combustible gas can cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.**
Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **When the outdoor unit is installed on a roof or a high place, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit.**
If safety facilities are not provided, it can cause personal injury due to falling from the installation place.
- **Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics**
Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.
- **Do not install the outdoor unit in a location where insects and small animals can inhabit.**
Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.




- **Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation.**
Using an old and damaged base flame can cause the unit falling down and cause personal injury.
- **Do not install the unit in the locations listed below**
 - Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkali can occur.
 - Locations where carbon fiber, metal powder or any powder is floating.
 - Locations where organic or special sprays are often used.
 - Locations where combustible or explosive materials are used.
 - Locations with direct exposure of oil mist and steam such as kitchen and machine plant.
 - Locations with salty atmospheres such as coastlines.
 - Locations where the unit is exposed to high frequency harmonics.
 - Locations where the base flame and snow hood mentioned in the manual can be damaged by high frequency harmonics.
 - Locations where the unit is exposed to chimney smoke.
 - Locations at high altitude (more than 1000m high)
 - Locations with ammoniac atmospheres (e.g. organic fertilizer).
 - Locations with calcium chloride (e.g. snow melting agent).
 - Locations where the unit is exposed to heat source can affect the unit.
 - Locations without good air circulation.
 - Locations with any obstacles which can prevent inlet and outlet air of the unit.
 - Locations where short circuit of air can occur (in case of multiple units installation)
 - Locations where an equipment directed by high harmonics is placed. (TV set or radio receiver is placed within 3m)
- **Do not install the outdoor unit in the locations listed below.**
 - Locations where discharges of air compressor sound of the outdoor unit can bother neighborhood.
 - Locations where outlet air of the outdoor unit blows directly to an animal or plants. The outlet air can affect adversely to the plant etc.
 - Locations where vibration and operation sound generated by the outdoor unit can affect seriously. (on the wall or at the place near bed room)
 - Locations where an equipment directed by high harmonics is placed. (TV set or radio receiver is placed within 3m)
- **Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.**
It can affect surrounding environment and cause a claim.
- **Do not touch any refrigerant pipes with your hands when the system is in operation.**
During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.
- **Do not clean up the unit with water**
It can cause electric shocks.
- **Do not operate the outdoor unit with any article placed on it.**
It may incur property damage or personal injury from a fall of the article.
- **Do not step onto the outdoor unit.**
It may incur injury from a dropout or fall.

Notabilia as a unit designed for R410A

- do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a flare nuts parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

Dedicated R410A tools	
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector


1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

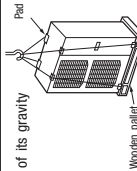

CAUTION When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

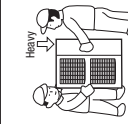

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.


3) Selection of installation location for the outdoor unit

- Be sure to select a suitable installation place in consideration of following conditions.
- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmission of the unit.
 - A place where it can be free from possibility of touching neighbors due to noise or exhaust air from the unit.
 - A place where it can be free from danger of fire.
 - A place where it can be free from danger of flammable gas leakage.
 - A place where drain water can be disposed without any trouble.
 - A place where the unit will not be affected by heat radiation from other heat source.
 - A place where snow will not accumulate.
 - A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
 - A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
 - A place where corrosive substances like sulfuric gas, chlorine gas, carbonic acid gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
 - A place where strong wind will not blow against the outlet air blow of the unit.
 - Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

(1) If the unit is installed in the area where the snow will accumulate, following measures are required.

1. The bottom plate of unit and intake, outlet may be blocked by snow.
2. Provide a snow hood to the outdoor unit on site. Regarding outline of a snow hood, refer to our technical manual.
3. Install the unit under eaves or provide the roof on site.




Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain grommet (option parts). (Refer to Drain piping work.)
 - Attach setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). (Refer to Setting SW3-1, SW3-2.)
 - Reheat heater on a base plate on site, if there is possibility to freeze drain water.
- In case that the product has a connective drainage system, the drainage paths should have suitable measure against freezing but be sure not to melt the material of drainage paths with heat.

(2) If the unit can be affected by strong wind, following measures are required.

- Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.
1. Install the outdoor air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen.
 2. Install the outlet air blow side of the unit in a position perpendicular to the direction of wind.
 3. The unit should be installed on the stable and level foundation. If the foundation is not level, tie down the unit with wires.



2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use


- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Descriptions	One-way pipe length difference from the first branching point to the indoor unit		Max. spacing in the drawing	
	Models for outdoor units	Dimensional limitations	Single type	Twin type
One-way pipe length of refrigerant piping	140W/L140V5, 140W/L120V5, 125V5	≤ 50m	L	L+L1+L2+L3
	140W/L140V5, 140W/L120V5, 125V5SX	≤ 100m	L+L1+L2	L+L1+L2+L3
	140W/L140V5SX	≤ 50m	L	L
	140W/L140V5SX	≤ 100m	L	L
Main pipe length	140W/L140V5, 140W/L120V5, 125V5	≤ 50m	L	L
	140W/L140V5SX, 140W/L120V5SX, 125V5SX	≤ 100m	L	L
One-way pipe length between the first branching point from the first branching point to the second branching point	140W/L140V5, 140W/L120V5, 125V5	≤ 5m	-	L1, L2
	All Models	≤ 50m	-	L1, L2, L3
One-way pipe length after the first branching point	140W/L140V5, 140W/L120V5, 125V5	≤ 27m	-	-
	All Models	≤ 30m	-	-
One-way pipe length difference from the first branching point to the indoor unit	140W/L140V5, 140W/L120V5, 125V5	≤ 10m	L1+L2	L1+L2+L3+L4
	All Models	≤ 10m	-	-
One-way pipe length difference from the second branching point to the indoor unit	140W/L140V5, 140W/L120V5, 125V5	≤ 10m	H	H
	All Models	≤ 10m	-	-
Elevation difference between indoor units	When the outdoor unit is installed higher.	≤ 30m	H	H
	When the outdoor unit is installed lower.	≤ 0.5m	-	h

5) Installation space


- Walls surrounding the unit on the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- Where a danger of short-circuiting exists, install guide lowers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.
- A barrier wall placed in front of the exhaust diffuser must not be higher than the unit.

Size	Example installation (mm)				
	I	II	III	IV	V
L1	Open	500	Open	500	Open
L2	300	5	Open	300	150
L3	150	300	150	300	150
L4	5	5	5	5	5

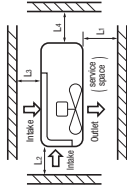


6) Installation

① Anchor bolt fixed position

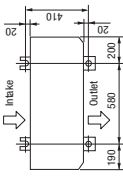

② Notabilia for installation

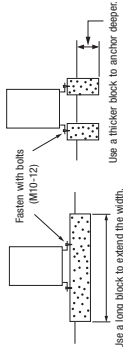


- In installing the unit, fix the unit's legs with bolts specified on the left.
 - The protrusion of an anchor bolt on the front side must be kept within 15 mm.
 - Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
 - Refer to the left illustrations for information regarding concrete foundations.
 - Install the unit in a level area. (With a gradient of 5 mm or less.)
- Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.


7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site.
- So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

< Single type >

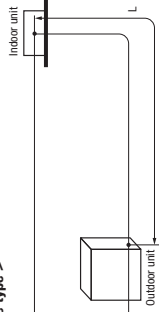

< Twin type >

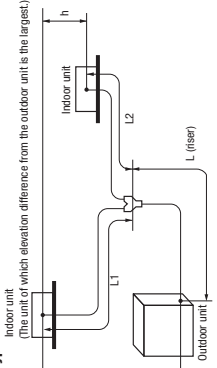

CAUTION

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is without different one-way pipe length restrictions, should apply depending on its pipe size. For more information, see "6. UTILIZATION OF EXISTING PIPING."
- When the pipe length difference between L1 and L2 is 100mm or more, the way of use is different when the difference of one-way pipe length after the first branching point is 3m or 10ft. For details, refer to the table below.
- Note (1) Install the indoor unit and L1 becomes the longest one-way pipe. Keep the pipe length difference between L1 and (La + L2) or (La + L3) within 10m.

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.


	Model 100V		Model 125V		Model 140V	
	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe
Outdoor unit connected	Refrigerant piping (Main pipe L1)	φ 9.52	φ 9.52	φ 9.52	φ 9.52	φ 9.52
	Flare	φ 15.88	φ 15.88	φ 15.88	φ 15.88	φ 15.88
In the case of a single type	Indoor unit connected	φ 9.52	φ 9.52	φ 9.52	φ 9.52	φ 9.52
	Capacity of indoor unit	φ 15.88	φ 15.88	φ 15.88	φ 15.88	φ 15.88
In the case of a twin type	Refrigerant piping (Main pipe L1, L2)	φ 9.52	φ 9.52	φ 9.52	φ 9.52	φ 9.52
	Indoor unit connected	φ 12.7	φ 12.7	φ 12.7	φ 12.7	φ 12.7
In the case of a triple type A	Refrigerant piping (Main pipe L1, L2, L3)	φ 12.7	φ 12.7	φ 12.7	φ 12.7	φ 12.7
	Indoor unit connected	φ 15.88	φ 15.88	φ 15.88	φ 15.88	φ 15.88
In the case of a triple type B	Refrigerant piping (Main pipe L1, L2, L3)	φ 12.7	φ 12.7	φ 12.7	φ 12.7	φ 12.7
	Indoor unit connected	φ 15.88	φ 15.88	φ 15.88	φ 15.88	φ 15.88

CAUTION

- When the 50V or 60V model is connected as an indoor unit, always use a φ6.35 liquid pipe for the branch (branching pipe – indoor unit) and a different diameter joint supplied with the branching pipe set for connection with the indoor unit (φ6.35 on the liquid pipe side). If a φ6.35 pipe is used for connection with a branching pipe, a refrigerant distribution disorder may occur, causing one of the indoor units to fail short of the rated capacity.
- A riser pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.
- A branching part must be dressed with a heat-insulation material supplied as an accessory.
- For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.

About brazing

Brazing must be performed under a nitrogen gas flow.
Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

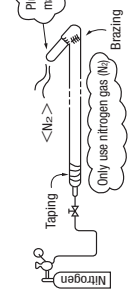

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.
- This unit uses R410A. Always use 1/2H pipes having a 1.0mm or thicker wall for φ 19.05 or larger pipes, because O-type pipes do not meet the pressure resistance requirement.


4) On-site piping work

- Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.
- First remove the five screws (X mark) of the service panel and push it down into the direction of the arrow mark and then remove it by pulling it toward you.



How to remove the service panel

- The pipe can be laid in any of the following directions: side right, front, rear and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- Carry out the on-site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and biased, or with an adhesive tape) so that water or foreign matters may not be attached to the pipe end.
- Bend a pipe to a radius as large as practical (R100–R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

< Triple type A >

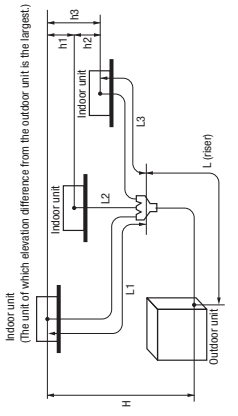


< Triple type B >

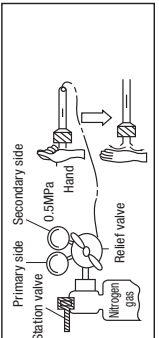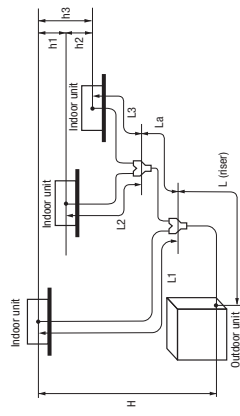

NOTE
• Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter (mm)	φ 6.35	φ 9.52	φ 12.7	φ 15.88	φ 22.22	φ 25.4	φ 28.58
Minimum pipe wall thickness (mm)	0.8	0.8	0.8	1.0	1.0	1.0	1.0
Pipe material*	O-type pipe	O-type pipe	O-type pipe	O-type pipe	1/2H-type pipe	1/2H-type pipe	1/2H-type pipe

*Phosphorus deoxidized seamless copper pipe C1220T, JIS H 3300

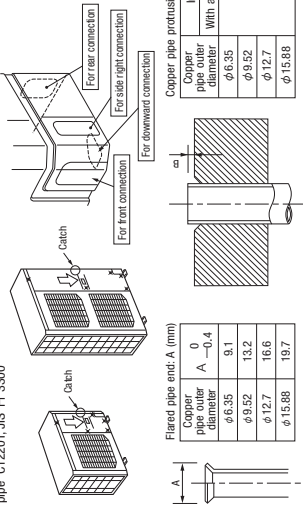

Copper pipe diameter	φ 6.35	φ 9.52	φ 12.7	φ 15.88
Copper pipe protrusion for flaring, B (mm)	0	0	0	0
In the case of a rigid (clutch) type	With an R410A tool	With an R410A tool	With a conventional tool	With a conventional tool
Protrusion control gauge	0-0.5	0-0.5	0-0.5	0.7-1.3

CAUTION Do not apply force beyond proper fastening torque in tightening the flare nut.


Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Stop the pressure test, and take the following measures to ease if the pressure drops.
 - 1) Turn the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - 2) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - b) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - c) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

6) Evacuation

<Work flow> When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.



7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Capacity					
1000B~1400A	2.0	0	0.06	3.8	30
1000C~1400K	2.7	0	0.06	4.5	30

- A standard refrigerant charge volume means a refrigerant charge volume for an installation with 0m long refrigerant piping.
- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping.
- When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- In an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - \text{Length covered without additional charge 30 (m)}) \times 0.06 \text{ (kg/m)} + \text{Total length of branch pipes (m)} \times 0.06 \text{ (kg/m)}$$

- To charge refrigerant again, recover refrigerant from the system first and then charge the volume calculated from the above table (Standard refrigerant charge volume + additional charge volume for total pipe length.)

(2) Charging refrigerant


- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gassy upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE

Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

8) Heating and condensation prevention


- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Although it is verified in a test that this air-conditioning unit shows satisfactory performance under JIS condensation test conditions, both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.
- (2) Use a heat insulating material that can withstand 120 °C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Although it is verified in a test that this air-conditioning unit shows satisfactory performance under JIS condensation test conditions, both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

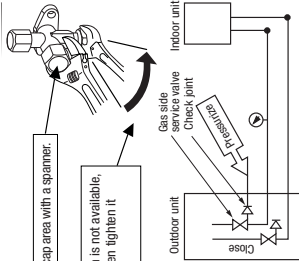

Use a torque wrench. If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
φ6.35 (1/4")	14~18	45~60	150
φ8.52 (3/8")	34~42	30~45	200
φ12.7 (1/2")	49~61	30~45	250
φ15.88 (5/8")	68~82	15~20	300

Gas side service valve check joint equipped on the outdoor

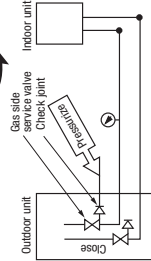


Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterclockwise prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Refrigerant charge volume (kg) per meter of refrigerant piping (liquid pipe)	Main pipe	Branch pipe	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Capacity							
1000B~1400A	2.0	0	0.06	3.8	4.5	3.8	30
1000C~1400K	2.7	0	0.06	4.5	4.5	4.5	30


- A standard refrigerant charge volume means a refrigerant charge volume for an installation with 0m long refrigerant piping.
- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping.
- When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- In an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "6. UTILIZATION OF EXISTING PIPING."

*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

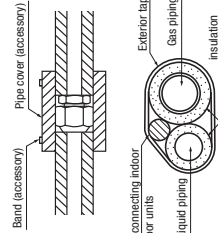


3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as option parts, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)
- Do not use drain elbow and grommet made of plastic for drain piping when base heater for outdoor unit is used. Plastic grommet and elbow will be damaged and burnt in worst case.
- Prepare another drain tray made of metallic material for collecting drain when base heater is used.

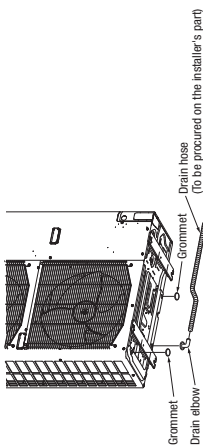


- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an option part) or concrete blocks. Then, please secure space for the drain elbow and the drain hose.



4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

- Electrical installation work must be performed by an electrical installation service provider, qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.
- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51)
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin lead cord (code designation 60227 IEC 41)
 - Do not use anything lighter than polythiophrene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts or appliances for outdoor use.
 - Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire. If improper grounded, an electric shock or malfunction may result.
 - A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
 - The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.

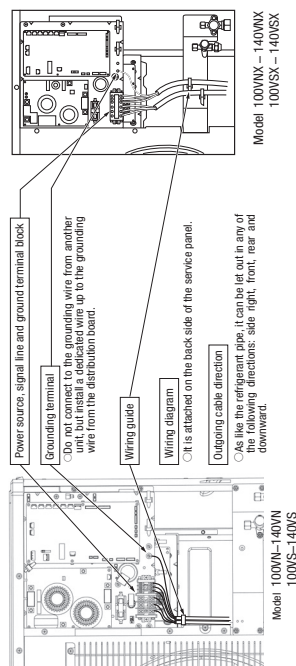


Model 100VN-140VN
100VS-140VS

Model	Power source	Power cable thickness(mm)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness >number
100VN-140N	Single phase 3 wire 220-240V 50Hz	5.5	24	25	Ø1.6mm	Ø1.6mm x 3
100VN	220-240V 50Hz	5.5	26	23		
120VN-140NS	220V 60Hz	3.5	15	27		
100VS-140S	3 phase 4 wire 380V 50Hz	3.5				
100VS-140SX	380V 60Hz	3.5				

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction manual.
- The capacity of the earth leakage breaker is calculated from MAX. over current should be chosen along the regulations in each country.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheating accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection, and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

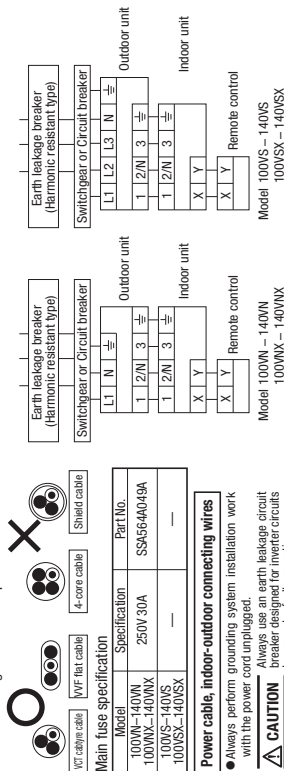

Model 100VN-140VN
100VNX-140VNX

Model	Specification	Part No.
100VN-140VN	250V 30A	SSA564A049A
100VNX-140VNX	—	—
100VS-140VS	—	—
100VSX-140VSX	—	—

Power cable, indoor-outdoor connecting wires

- Always perform grounding system installation work with the power cord unplugged.

Always use an earth leakage circuit breaker for indoor circuits to prevent a faulty operation.



At the connection with the duct type indoor unit.

Model	Power source	Power cable thickness(mm)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness >number
100VN-100VN	Single phase 3 wire 220-240V 50Hz	5.5	25	24	Ø1.6mm	Ø1.6mm x 3
120VN	220-240V 50Hz	5.5	27	22		
140VN	220V 60Hz	8	28	32		
120VS	3 phase 4 wire 380V 50Hz	3.5	16	26		
120VS-120SX	380V 50Hz	3.5	18	23		
140VS-140SX	380V 60Hz	3.5	19	21		

At the connection with the duct type indoor unit.

5. TEST RUN

WARNING

- Before conduct a test run, make sure that the service valves are closed.
- Turn on power 6 hours prior to a test run to energize the crank case heater.
- In case of the first operation after turning on power, even if the unit again whenever it is stopped.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite dangerous. Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

CAUTION

- When you operate switches (SW3, SW5) for on-site setting, be careful not to touch a live part.
- You cannot check discharge pressure from the liquid service valve charge port.
- The 4-way valve (ZS) is energized during a heating operation.
- When power source is cut off to reset the unit, give 3 or more minutes before you turn on power again after power is cut off. If this procedure is not observed in turning on power again, "Communication error between outdoor and indoor unit" may occur.

1) Test run method

- (1) A test run can be initiated from an outdoor unit by using SW3-3 and SW3-4 for on-site setting.
- (2) Switching SW3-3 to ON will start the compressor.
- (3) The unit will start a cooling operation when SW3-4 is OFF, or a heating operation when SW3-4 is ON.
- (4) Do not fail to switch SW3-3 to OFF when a test run is completed.

2) Checking the state of the unit in operation

Use check points provided on the piping before and after the four-way valve installed inside the outdoor unit for checking discharge pressure and suction pressure. As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

SW3-3	SW3-4	SW3-3, SW3-4
ON	OFF	Cooling during a test run
OFF	ON	Heating during a test run
OFF	—	Normal or After the test operation

Operation	Check point of the pipe
Cooling operation	Discharge pressure (High pressure)
Heating operation	Suction pressure (Low pressure)
Normal operation	Discharge pressure (High pressure)

3) Setting SW3-1, SW3-2, on-site

- (1) Defrost control switching (SW3-1)
 - When this switch is turned ON, the unit will run in the defrost mode more frequently.
 - Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
 - When this switch is turned on, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
 - When the unit is used in a very snowy country, set this switch to ON.

4) Failure diagnosis in a test run

Error indicated on remote control unit	Printed circuit board LED (The codes of seconds)	Failure event	Action
E34	Blinking once	Blinking continuously	Open phase
E40	Blinking once	Blinking continuously	63H1 actuation or operation with service valves shut (occurs mainly during a heating operation)
E49	Blinking once	Blinking continuously	63H2 actuation or operation with service valves shut (occurs mainly during a cooling operation)

● If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve.

Valve for a cooling operation	When power is turned on	When the unit comes to a normal stop	When the unit comes to an abnormal stop
Complete shut position	Complete shut position	During a heating operation	During a cooling operation
Full open position	Full open position	Complete shut position	Full open position
Complete shut position	Complete shut position	Complete shut position	Full open position
Full open position	Full open position	Full open position	Full open position

6) Heed the following on the first operation after turning on the circuit breaker.

This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.

A failure to observe these instructions can result in a compressor breakdown.

- When you leave the outdoor unit with power supplied to it, be sure to close the panel.


Items to check before a test run

Item No. used in the installation manual	Item	Check item	Check
2	Refrigerant plumbing	Is freon, was it brazed under a nitrogen gas flow? Were air-ignites and any vacuum detection safety performed? Are heat insulation materials installed on both liquid and gas pipes? Are service valves safely opened for both liquid and gas systems? Have you recorded the additional refrigerant charge volume and refrigerant pipe length on the panel's label? Is the unit free of rattling errors such as uncompleted connection, an absent or reversed phase? Are property rated electrical equipments used for circuit breakers and cables? Doesn't cabling cause contact between units, where more than one unit are installed? Do indoor-outdoor connecting cables connect between the same terminal numbers? Do indoor-outdoor connecting cables connect between the same terminal numbers? Are other VCT cable/cable or VV flat cables used for indoor-outdoor connecting cables? Does grounding satisfy the D type grounding (Type II for grounding) requirements? Is the unit grounded with a dedicated grounding wire not connected to another unit's grounding wire? Are cables tied or loos screws at their connection points? Are cables tied or loos screws at their connection points so that no external force works onto terminal connections? Is indoor unit installation work completed? Where a heat cover should be attached onto an indoor unit, is the heat cover attached to the indoor unit?	
4	Electric wiring		
—	Indoor unit		

Test run procedure


● Always carry out a test run and check the following in order as listed.

Turn	The contents of operation	Check
(1)	Open the gas side service valve fully.	
(2)	Open the liquid side service valve fully.	
(3)	Close the panel.	
(4)	Where a remote control unit is used for unit setup on the installation site. Show instructions for unit setup on the installation site with a remote control unit.	
(5)	SW3-3 ON/ SW3-3 OFF: the unit will start a cooling operation. SW3-3 ON/ SW3-3 ON: the unit will start a heating operation.	
(6)	When the unit starts operation, press the wind direction button provided on the remote control unit to check its operation.	
(7)	Place your hand before the indoor unit's diffuser to check whether cold (warm) winds come out in a cooling (heating) operation.	
(8)	Make sure that a red LED is not blinking.	
(9)	When you complete the test run, do not forget to turn SW3-3 to the OFF position.	
(10)	Where options are used, check their operation according to the respective instruction manuals.	

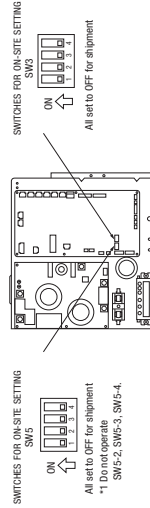

6. UTILIZATION OF EXISTING PIPING.

Check whether an existing pipe system is reusable or not by using the following flow chart.

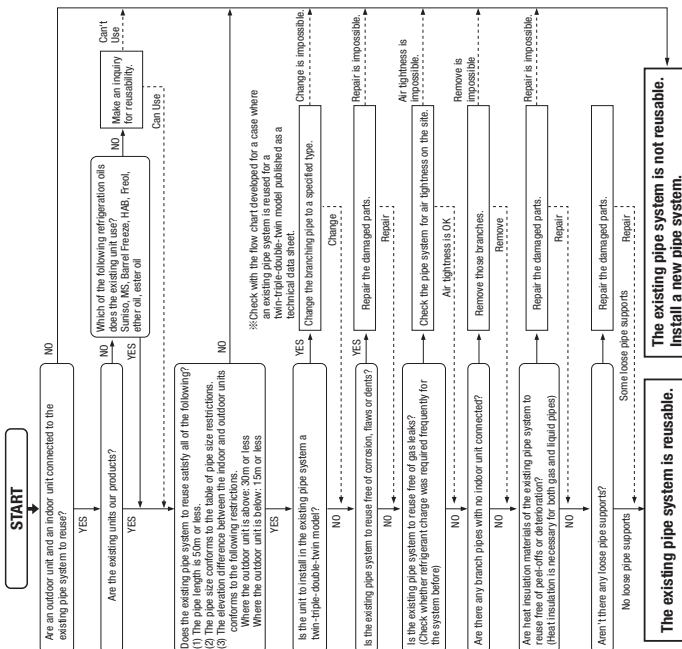

WARNING

<Where the existing unit can be run for a cooling operation.>
 Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))
 (1) Run the unit for 30 minutes for a cooling operation.
 (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
 (3) Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
 (4) Blow with nitrogen gas. ※ If discarded refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
 ● For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
 ● Turn on-site setting switch SW5-1 to the ON position. (Where the gas pipe size is φ19.05)
 <Where the existing unit cannot be run for a cooling operation.>
 Wash the pipe system or install a new pipe system.
 ● If you choose to wash the pipe system, contact our distributor in the area.

<Table of pipe size restrictions>

○:Standard pipe size △:Usable
 △:Restricted to shorter pipe length limits ×:Not usable

Pipe size	Additional charging amount of refrigerant per 1m		0.08kg/m		φ 12.7		φ 12.7		0.08kg/m		φ 12.7		φ 12.7	
	Liquid pipe	Gas pipe	φ 9.52	φ 9.52	φ 12.7	φ 12.7	φ 12.7	φ 12.7	φ 15.88	φ 15.88	φ 19.05	φ 19.05	φ 19.05	φ 19.05
100V	Usability	Usability	○	○	△	△	△	△	○	○	○	○	○	○
100VWX	Maximum one-way pipe length	Maximum one-way pipe length	50	50	25	25	25	25	20	100	100	50	50	50
100VXS	Length covered without additional charge	Length covered without additional charge	30	30	15	15	15	15	10	30	30	15	15	15
125V	Usability	Usability	○	○	△	△	△	△	○	○	○	○	○	○
125VWX	Maximum one-way pipe length	Maximum one-way pipe length	50	50	25	25	25	25	20	100	100	50	50	50
125VXS	Length covered without additional charge	Length covered without additional charge	30	30	15	15	15	15	10	30	30	15	15	15
140V	Usability	Usability	○	○	△	△	△	△	○	○	○	○	○	○
140VWX	Maximum one-way pipe length	Maximum one-way pipe length	50	50	25	25	25	25	20	100	100	50	50	50
140VXS	Length covered without additional charge	Length covered without additional charge	30	30	15	15	15	15	10	30	30	15	15	15

<Pipe system after the branching pipe>

Pipe size	Additional charging amount of refrigerant per 1m		0.08kg/m		φ 9.52		φ 9.52		0.08kg/m		φ 12.7		φ 12.7	
	Liquid pipe	Gas pipe	φ 9.52	φ 9.52	φ 12.7	φ 12.7	φ 15.88	φ 15.88	φ 19.05	φ 19.05	φ 19.05	φ 19.05	φ 19.05	φ 19.05
Mortal	Combination type	Combination type	○	○	○	○	○	○	○	○	○	○	○	○
100V	Twin	50+50	○	○	○	○	○	○	○	○	○	○	○	○
125V	Twin	60+60	○	○	○	○	○	○	○	○	○	○	○	○
140V	Tripe A	71+71	○	○	○	○	○	○	○	○	○	○	○	○
	Tripe B	50+50+50	○	○	○	○	○	○	○	○	○	○	○	○

※1 Because of its invert-pressure resistance, turn the dip switch SW5-1 provided on the outdoor unit board to the ON position for φ 19.05 × 11.0. (In the case of a twin-tuple-double-twin model, this also applies to the case where φ 19.05 × 11.0 is used in a pipe system after the first branching point). However, you need not turn the dip switch SW5-1 to the ON position, if 1/2H pipes or pipes having 1.2 or thicker walls are used.
 ※2 When the main pipe length exceeds 40m, a significant capacity drop may be experienced due to pressure loss in the liquid pipe system. Use φ 12.7 for the liquid main.

※3 Keep the total pipe length, not one-way pipe length, below the specified maximum pipe length.
 ※4 Piping size after branch should be equal or smaller than main pipe size.
 ※5 Piping size from first branch to indoor unit should be φ 9.52 (Liquid) / φ 12.7 (Gas).
 ● When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from factory charged volume.
 ● Any combinations of pipe sizes not listed in the table or marked with × in the table are not usable.

<The model types of existing units of which branching pipes are reusable.>
 Models later than Type 8.

- FDC * * * * 8 □ □ □ □
- FDCP * * * * 8 □ □ □ □

The branching pipes used with models other than those listed above are not reusable because of their insufficient pressure resistance. Please use our genuine branching pipes for R410A.
 ● * * * are numbers representing horsepower. □ □ □ □ is an alphanumeric letter.
 Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) × Additional charge volume per meter of pipe shown in the table (kg/m) + Additional charge volume per meter of pipe shown in the table (kg/m)

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.
 Example) When an 140V (single installation) is installed in a 20m long existing pipe system (liquid φ 12.7, gas φ 19.05), the quantity of refrigerant to charge additionally should be (20m-15m) × 0.08kg/m = 0.4 kg.

PSC012D066D
Inverter driven split PAC
FDC200VSA, 250VSA (200V, 250V)
FDCA160VSA, 200VSA (A160V, A200V)
Designed for R410A refrigerant

- ⓘ This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 65.
- ⓘ When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces




SAFETY PRECAUTIONS

- ⓘ We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- ⓘ The precautions described below are divided into [**WARNING**] and [**CAUTION**]. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the [**WARNING**] and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in [**CAUTION**]. **These are very important precautions for safety. Be sure to observe all of them without fail.**
- ⓘ The meaning of "Marks" used here are as shown below.

ⓘ	⚠	⚡	⚙
Never do it under any circumstance.	Always do it according to the instruction		
- ⓘ For 3 phase power source outdoor unit, EN61000-3-2 is not applicable if consent by the utility company or notification to the utility company is given before usage.
- ⓘ 3phase power source unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment. If installed as a house-hold appliance it could cause electromagnetic interference.
- ⓘ Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- ⓘ Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.

Check before installation work

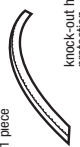[Accessory]

1 piece 	1 piece 	1 piece 
Edging knock-out hole protection	Accessory pipe A	Accessory pipe B

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

WARNING

- ⓘ **Installation must be carried out by the qualified installer.**
If the system is installed by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction.
- ⓘ **Install the system in full accordance with the instruction manual.**
Incorrect installation may cause burns, personal injury, water leaks, electric shocks and fire.
- ⓘ **Use the original accessories and the specified components for installation.**
If parts other than the specified parts are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury.
- ⓘ **When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage** in the event of leakage. Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents.
- ⓘ **Ventilate the working area well in the event of refrigerant leakage during installation.**
If the refrigerant comes into contact with naked flames, poisonous gas is produced.
- ⓘ **After completed installation, check that no refrigerant leaks from the system.**
If refrigerant leaks into the room and comes into contact with an open or other hot surface, poisonous gas is produced.
- ⓘ **Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to be careful of the weight of the unit.**
An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit.
- ⓘ **Install the unit in a location with good support.**
Unstable installation locations can cause the unit to fall and cause material damage and personal injury.
- ⓘ **Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.**
Unstable installation locations can cause the unit to fall and cause material damage and personal injury.
- ⓘ **The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national standards for electrical work."**
Power source with insufficient capacity and incorrect function (due to improper work) can cause electric shocks and fire.
- ⓘ **Be sure to shut off the power before starting electrical work.**
Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.
- ⓘ **Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.**
Unconform cable cables can cause electric shock, anomalous heat production or fire.
- ⓘ **Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.**
Loose connections or cable mountings can cause anomalous heat production or fire.
- ⓘ **Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.**
Incorrect installation may result in overheating and fire.

- ⓘ **Do not perform brazing work in the airtight room.**
It can cause lack of oxygen.
- ⓘ **Use the prescribed pipes, flare nuts and tools for R410A.**
Using existing pipes (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.
- ⓘ **Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much.**
Improper torque or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen.
- ⓘ **Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test**
If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant.
- ⓘ **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- ⓘ **Do not perform any change of protective device itself or its setup condition**
The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.
- ⓘ **Be sure to switch off the power source in the event of installation, inspection or servicing.**
If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.
- ⓘ **Consult the dealer or an expert regarding removal of the unit.**
Incorrect installation can cause water leaks, electric shocks or fire.
- ⓘ **Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation.**
If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit.
- ⓘ **Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.**
If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.
- ⓘ **Do not run the unit with removed panels or protections**
Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.
- ⓘ **Be sure to fix up the service panels.**
Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.
- ⓘ **Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair.**
If you repair or modify the unit, it can cause water leaks, electric shocks or fire.

⚠ CAUTION	
⚡	<ul style="list-style-type: none"> ● Carry out the electrical work for ground lead with care Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because it could cause explosion or ignition. ● Use the circuit breaker for all pole with correct capacity. Using the incorrect circuit breaker, it can cause the unit malfunction and fire. ● Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in accordance with EN62004-1. ● Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins. ● Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up. ● Pay attention not to damage the drain pan by weld spatter when welding work is done near the indoor unit. If weld spatter entered the indoor unit during welding work, it can cause pin-hole in drain pan and result in water leakage. To prevent such damage, keep the indoor unit in its packing or cover it. ● Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables. ● Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. ● Perform installation work properly according to this installation manual. Improper installation can cause abnormal vibrations or increased noise generation. ● Earth leakage breaker must be installed If the earth leakage breaker is not installed, it can cause fire or electric shocks. ● Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire. ● Do not install the unit near the location where leakage of combustible gases can occur. If leaked gases accumulate around the unit, it can cause fire. ● Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled. Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire. ● Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place. ● When the outdoor units installed on a roof or a high place, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit. If safety facilities are not provided, it can cause personal injury due to falling from the installation place. ● Do not install near use the system close to the equipment that generates electromagnetic fields or high frequency harmonics Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming. ● Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.
⊘	<ul style="list-style-type: none"> ● Do not use the base frame for outdoor unit which is corroded or damaged due to long periods of operation. Using an old and damaged base frame can cause the unit falling down and cause personal injury. ● Do not install the unit in the locations listed below. <ul style="list-style-type: none"> -Locations where carbon fiber metal powder or any powder is floating. -Locations where ceramic or special springs are often used. -Locations where any machines which generate high frequency harmonics are used. -Locations with salty atmospheres such as coastlines -Locations with heavy snow (if installed, be sure to provide base frame and snow hood mentioned in the manual) -Locations at high altitude (more than 1000m high, permafrost) -Locations with calcium chloride (e.g. snow melting agent) -Locations with any obstacles which can prevent inlet and outlet air of the unit -Locations where hot liquid or air can occur (in case of multiple units installation) -Locations where there is a risk of fire ● Do not install the outdoor unit in the locations listed below. <ul style="list-style-type: none"> -Locations where discharge of the outdoor unit can bother neighborhood. -Locations where outlet air of the outdoor unit blows directly to an animal or plants. The outlet air can affect adversely to the plant etc. -Locations where vibration can be amplified and transmitted due to insufficient strength of structure. -Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near lead room) -Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 5m) -Locations where drainage cannot run off safely. ● Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art. It can affect surrounding environment and cause a claim. ● Do not touch any buttons with wet hands It can cause electric shocks ● Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury. ● Do not clean up the unit with water It can cause electric shocks ● Do not operate the outdoor unit with any article placed on it. You may incur property damage or personal injury from a fall of the article. ● Do not step onto the outdoor unit. You may incur injury from a drop or fall.

Notabilia as a unit designed for R410A																	
● Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.																	
● A cylinder containing R410A has a pink indication mark on the top.																	
● A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.	<table border="1"> <tr><td>a)</td><td>Gauge manifold</td></tr> <tr><td>b)</td><td>Change hose</td></tr> <tr><td>c)</td><td>Electronic scale for refrigerant charging</td></tr> <tr><td>d)</td><td>Torque wrench</td></tr> <tr><td>e)</td><td>Flare tool</td></tr> <tr><td>f)</td><td>Protrusion control copper pipe gauge</td></tr> <tr><td>g)</td><td>Vacuum pump adapter</td></tr> <tr><td>h)</td><td>Gas leak detector</td></tr> </table>	a)	Gauge manifold	b)	Change hose	c)	Electronic scale for refrigerant charging	d)	Torque wrench	e)	Flare tool	f)	Protrusion control copper pipe gauge	g)	Vacuum pump adapter	h)	Gas leak detector
a)	Gauge manifold																
b)	Change hose																
c)	Electronic scale for refrigerant charging																
d)	Torque wrench																
e)	Flare tool																
f)	Protrusion control copper pipe gauge																
g)	Vacuum pump adapter																
h)	Gas leak detector																
● Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.																	
● In charging refrigerant, always take it out from a cylinder in the liquid phase.																	
● All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)																	

1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

⚠ CAUTION



When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

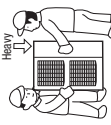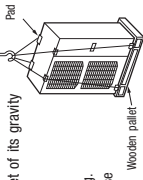

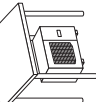



3) Selection of installation location for the outdoor unit

- Be sure to select a suitable installation place in consideration of following conditions.
- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmission of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where it can be free from possibility of fire.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where there are no sulfuric gas, chlorine gas, acid and alkali (including ammonia), which can harm the unit.
- A place where the unit will not be damaged by strong wind.
- A place where the unit will not blow against the outlet air blow of the unit.
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

(1) If the unit is installed in the area where the snow will accumulate, following measures are required.

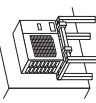


1. Install the unit on the base so that the bottom plate is higher than snow cover surface.
 
2. Provide a snow hood to the outdoor unit on site. Regarding outline of a snow hood, refer to our technical manual.
 
3. Install the unit under eaves or provide the roof on site.
 


Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (option parts). [Refer to Drain piping work.]
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). [Refer to Setting SW3-1, SW3-2.]
- Attach heater on a base plate on site. If there is possibility to freeze drain water.

In case that the product has a connective drainage system, the drainage paths should have suitable measure against freezing but be sure not to meet the material of drainage paths with heat.

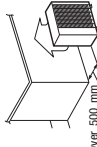(2) If the unit can be affected by strong wind, following measures are required. Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.

1. Install the outlet air blow side of the unit to face a wall of building, or to the direction of wind.
 
2. Install the outlet air blow side of the unit in a position perpendicular to the direction of wind.
 
3. The unit should be installed on the stable and level foundation. If the foundation is not level, tie down the unit with wires.
 



2. REFRIGERANT PIPING WORK


1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Metric appearing in the drawing			
	One-way pipe length difference from the first branching point to the indoor unit	Two-way pipe length difference from the first branching point to the indoor unit	Single type	Twin type
One-way pipe length of refrigerant piping	Model for outdoor units 200V 250V A1BW/A200V 250V A1RW/A200V 250V A1RW/A200V	≤ 40m ≤ 40m ≤ 70m ≤ 70m	Type type A 200V-L1-L2-L3 250V-L1-L1-L2-L3 250V-L1-L1-L2-L3-L4-L5-L6-L7-L8-L9-L10-L11-L12-L13-L14-L15-L16-L17-L18-L19-L20	Type type B 200V-L1-L1 250V-Prohibition of the use
Max. pipe length	200V 250V 250V 250V 250V	≤ 40m ≤ 40m ≤ 70m ≤ 90m ≤ 70m	200V-L1-L2-L3 250V-L1-L1-L2-L3-L4-L5-L6-L7-L8-L9-L10-L11-L12-L13-L14-L15-L16-L17-L18-L19-L20	L L L L L
One-way pipe length between the first branching point from the first branching point to the second branching point	200V 250V 250V	≤ 5m ≤ 30m ≤ 30m	La La, Va L1, L2, L3 L1, L2, L3, L4, L5, L6, L7, L8, L9, L10, L11, L12, L13, L14, L15, L16, L17, L18, L19, L20	— — — —
One-way pipe length after the first branching point to indoor units through the second branching point	200V 250V 250V	≤ 27m ≤ 10m ≤ 10m	— — —	— — —
One-way pipe length difference from the first branching point to the indoor unit	200V 250V 250V	≤ 10m ≤ 30m ≤ 30m	— — —	— — —
One-way pipe length differences from the second branching point to the indoor unit	200V 250V 250V	≤ 10m ≤ 10m ≤ 10m	— — —	— — —
One-way pipe length differences from the second branching point to indoor units	200V 250V 250V	≤ 10m ≤ 10m ≤ 10m	— — —	— — —
Direction of difference between indoor and outdoor units	When the outdoor unit is positioned higher. When the outdoor unit is positioned lower.	≤ 30m ≤ 15m ≤ 30m	— — —	— — —
Direction of difference between indoor units	—	≤ 0.9m	h h	h h


5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- Where a danger of short-circuiting exists, install guide lowers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piping snow can bury the outdoor unit, provide proper snow guards.
- A barrier wall placed in front of the exhaust diffuser must not be higher than the unit.



※1 In case of 200V model
※2 In case of 250V A1BW/A200V model: If unit is installed in L4 space with ()'s condition, secure space of 250mm in latera (L4) by unit movement at the time of exchange work of compressor.


6) Installation

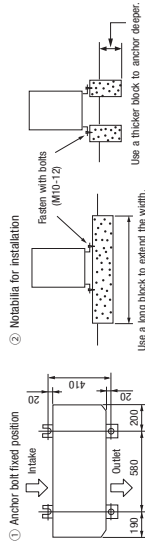

- 1) Anchor bolt fixed position
 - 2) Notabilia for installation
- In installing the unit, fix the units legs with bolts specified on the left.
 - The protrusion of an anchor bolt on the front side must be kept within 15 mm.
 - Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
 - Refer to left illustrations for information regarding concrete foundations.
 - Install the unit in a level area. (With a gradient of 5 mm or less.)
 - Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

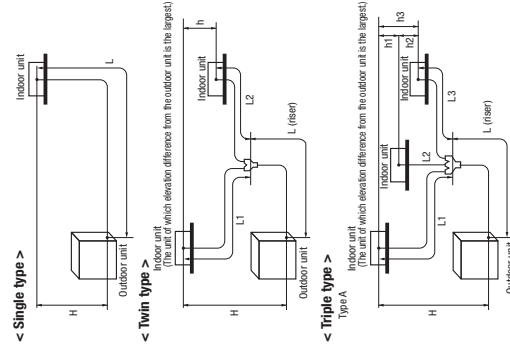

⚠ CAUTION

- For model 200V, always use $\phi 12.7\text{mm}$ liquid main pipe when the one-way piping length exceeds 40m. If $\phi 9.52\text{mm}$ pipes are used in an installation having over 40m piping, they can cause deformation or rupture from an indoor unit to the outdoor unit. In liquid piping, use $\phi 12.7\text{mm}$ liquid main pipe when the one-way piping length is less than 40m.
- Minimum diameter of the indoor unit is $\phi 25.4\text{mm}$ and the outdoor unit is $\phi 25.4\text{mm}$. When the diameter of the indoor unit is $\phi 25.4\text{mm}$, the diameter of the outdoor unit is $\phi 25.4\text{mm}$.
- If the $\phi 22.22\text{mm}$ pipes are used in an installation having over 35m piping, they can cause performance degradation and/or water leaks from an indoor unit.
- Triple type B is not allowed to use in case of 250V.
- Note (1) Flare the indoor unit with L1, L2, L3, L4, L5, L6, L7, L8, L9, L10, L11, L12, L13, L14, L15, L16, L17, L18, L19, L20, L21, L22, L23, L24, L25, L26, L27, L28, L29, L30, L31, L32, L33, L34, L35, L36, L37, L38, L39, L40, L41, L42, L43, L44, L45, L46, L47, L48, L49, L50, L51, L52, L53, L54, L55, L56, L57, L58, L59, L60, L61, L62, L63, L64, L65, L66, L67, L68, L69, L70, L71, L72, L73, L74, L75, L76, L77, L78, L79, L80, L81, L82, L83, L84, L85, L86, L87, L88, L89, L90, L91, L92, L93, L94, L95, L96, L97, L98, L99, L100.
- Note (2) Connect the unit that is the maximum capacity with L1.

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.


	Model 200V		Model 250V		Model A160V, A200V	
	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe
Outdoor unit connected	$\phi 9.52$	$\phi 12.7$	$\phi 9.52$	$\phi 12.7$	$\phi 22.22$	$\phi 12.7$
Refrigerant piping (branch pipe)	$\phi 12.7$ or $\phi 15.88$ or $\phi 19.05$	$\phi 15.88$ or $\phi 12.7$ or $\phi 9.52$ or $\phi 6.35$	$\phi 12.72$ or $\phi 15.88$ or $\phi 19.05$	$\phi 12.7$	$\phi 22.22$ or $\phi 15.88$ or $\phi 12.7$	$\phi 12.7$
Capacity of indoor unit	$\phi 25.4$	$\phi 12.7$	$\phi 25.4$	$\phi 12.7$	$\phi 22.22$ or $\phi 15.88$ or $\phi 12.7$	$\phi 12.7$
Branching pipe set	DS-WB16	DS-WB16	DS-WB16	DS-WB16	DS-WB16	DS-WB16
Capacity of indoor unit	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$	—	—
Branching pipe set	DS-WB16	DS-WB16	DS-WB16	DS-WB16	—	—
Capacity of indoor unit	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$	—	—
Branching pipe set	DS-WB16	DS-WB16	DS-WB16	DS-WB16	—	—
Refrigerant piping (branch pipe) (L1)	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$	DS-WB16	$\phi 9.52$
Refrigerant piping (branch pipe) (L2, L3)	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$	DS-WB16	$\phi 9.52$
Indoor unit connected	$\phi 15.88$	$\phi 9.52$	$\phi 12.7$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$
Capacity of indoor unit	Model 71V-3	Model 60V-2 + Model 120V	$\phi 15.88$	$\phi 9.52$	Model 71V-2 + Model 120V	$\phi 9.52$
Branching pipe set	DS-WB16	DS-WB16	DS-WB16	DS-WB16	DS-WB16	DS-WB16
Refrigerant piping (branch pipe) (L4, L5)	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$	—	—
Branching pipe set	DS-WB16	DS-WB16	DS-WB16	DS-WB16	—	—
Capacity of indoor unit	$\phi 12.7$	$\phi 9.52$	$\phi 12.7$	$\phi 9.52$	—	—
Branching pipe set	DS-WB16	DS-WB16	DS-WB16	DS-WB16	—	—
Capacity of indoor unit	$\phi 12.7$	$\phi 9.52$	$\phi 12.7$	$\phi 9.52$	—	—
Branching pipe set	DS-WB16	DS-WB16	DS-WB16	DS-WB16	—	—

⚠ CAUTION

- When the model 50V or model 60V model is connected as an indoor unit, always use a $\phi 9.52$ liquid pipe for the branch (branching pipe - indoor unit) and a different diameter joint supplied with the branching pipe set for connection with the indoor unit ($\phi 6.35$ on the liquid pipe side).
- If a $\phi 6.35$ pipe is used for connection with a branching pipe, a refrigerant distribution disorder may occur, causing one of the indoor units to fall short of the rated capacity.
- A branching pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.
- The gas pipe must be dressed with a heat-insulation material supplied as an accessory.
- The gas pipe must be dressed with a heat-insulation material required at and near a branching unit, see the installation manual supplied with your branching pipe set.

3) How to use pipe reducer.

- $\phi 22.22(OD)$ size of the refrigerant gas pipe can be used by using accessory pipe A and joint pipe C.
- $\phi 25.4(OD)$ size of the refrigerant gas pipe can be used by using accessory pipe B and joint pipe C.
- Ready joint C yourself. Need not accessory pipe B.

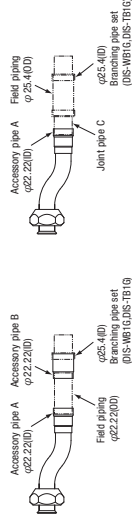

4) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.
- This unit uses R410A. Always use 1/2H pipes having a 1.0mm or thicker wall for $\phi 19.05$ or larger pipes, because O-type pipes do not meet the pressure resistance requirement.

5) On-site piping work

- Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.

⚠ IMPORTANT

First remove screws (X mark) of the service panel and push it down into the direction of the arrow and then remove it by pulling it toward you.


How to remove the service panel

- The pipe can be laid in any of the following directions: side right, front, rear and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and brazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Righten a flare joint securely with a double spanner.

< Triple type >




< Double twin type >

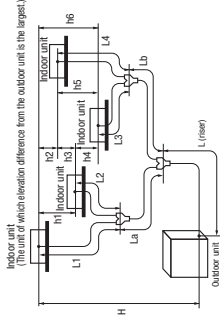

About brazing


Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

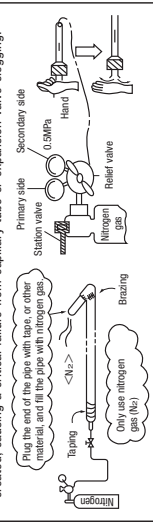

NOTE

- Select pipes having a wall thickness larger than the specified minimum pipe thickness.

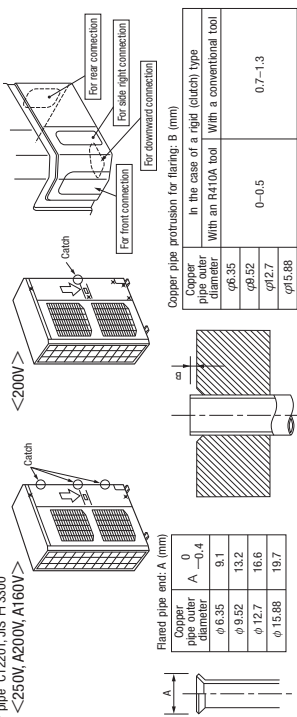

CAUTION
Do not apply force beyond proper fastening torque in tightening the flare nut.


Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

6) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut at all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five more minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature falls 1°C, the pressure also falls approximately 0.01 MPa. The pressure, further, should be compensated for.
 - e) If a pressure drop is observed in checking a) and b) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

7) Evacuation

<Work flow> When the system has remaining moisture inside or a leaky point, the vacuum gauge inside the system for a leaky point and then draw air to create a vacuum again.



8) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Capacity	200V	3.8	0.06 (Liquid piping φ9.52)	30
	250V	3.6	0.12 (Liquid piping φ12.7)	30
	A160V, A200V		0.12	

- A standard refrigerant charge volume means a refrigerant charge volume for an installation with 0m long refrigerant piping.
- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping.
- When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

Model 200V	In the case of φ9.52mm main liquid piping	Additional charge volume (kg) = (Main pipe length (m) - 30 (m)) × 0.06 (kg/m) + Total length of branch pipes (m) × 0.06 (kg/m)
	In the case of φ12.7mm main liquid piping	Additional charge volume (kg) = (Main pipe length (m) - 30 (m)) × 0.12 (kg/m) + Total length of branch pipes (m) × 0.06 (kg/m)
Model 250V, A160V, A200V		Additional charge volume (kg) = (Main pipe length (m) - 30 (m)) × 0.12 (kg/m) + Total length of branch pipes (m) × 0.06 (kg/m)

● To charge refrigerant again, recover refrigerant from the system first and then charge the volume calculated from the above table (Standard refrigerant charge volume + additional charge volume for total pipe length).

In case of 200V and using φ12.7 at main liquid piping, calculate the amount as follows

Total charge volume(kg) = Refrigerant volume charged for shipment at the factory + (Main piping length(m)-30(m))×0.145(kg/m) + Total length of branch pipes (m) × 0.06 (kg/m)


(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the label attached on the back side of the service panel.

9) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - In proper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid piping).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
- Both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

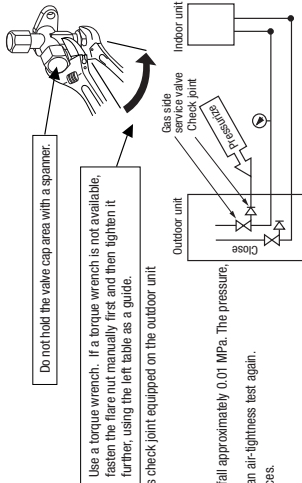


Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
φ 6.35 (1/4")	14-18	45-60	150
φ 9.52 (3/8")	34-42	30-45	200
φ 12.7 (1/2")	49-61	30-45	250
φ 15.88 (5/8")	88-92	15-20	300
φ 19.05 (3/4")	100-120	15-20	450

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.


Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping		Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
			Main pipe	Branch pipe		
Capacity	200V	3.8	0.06 (Liquid piping φ9.52)	0.06	5.6	30
	250V	3.6	0.12 (Liquid piping φ12.7)	0.06	7.2	
	A160V, A200V		0.12	0.06		

*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

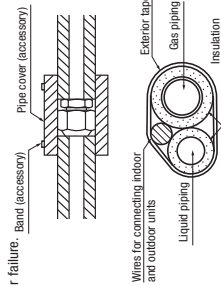


3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as option parts, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)
- Do not use drain elbow and grommet made of plastic for drain piping when base heater for outdoor unit is used. Plastic grommet and elbow will be damaged and burnt in worst case.
- Prepare another drain tray made of metallic material for collecting drain when base heater is used.

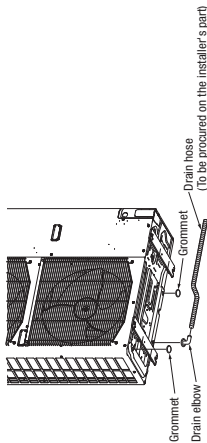

- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an option part) or concrete blocks. Then, please secure space for the drain elbow and the drain hose.




4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51).
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41).
- Do not use anything lighter than polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improper grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.

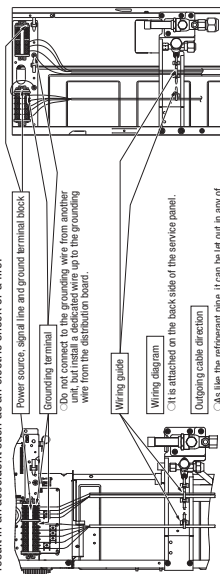

Model: 200V

Model: 250V
A160V, A200V

Model	Power source	Power cable thickness (mm ²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness number
200V	3 phase, 4 wire 380V/200V/50Hz	5.5	20	5.4	φ7.6mm	φ7.6mm x 3
250V, A160V, A200V	3 phase, 4 wire 380V/200V/50Hz	5.5	21	5.1	φ7.6mm	φ7.6mm x 3


- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheat accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable. Separate grounding wire from indoor-outdoor connecting wire.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

Power cable, indoor-outdoor connecting wires

- Always perform grounding system installation work with the power cord unplugged.

CAUTION
Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

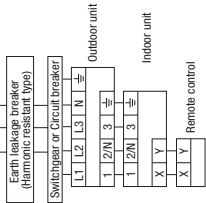

Model: 200V, 250V
A160V, A200V

Model	Power source	Power cable thickness (mm ²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness number
200V	3 phase, 4 wire 380V/200V/50Hz	5.5	25	4.3	φ7.6mm	φ7.6mm x 3
250V, A160V, A200V	3 phase, 4 wire 380V/200V/50Hz	5.5	27	4.0	φ7.6mm	φ7.6mm x 3

Model	Power source	Power cable thickness (mm ²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness number
200V	3 phase, 4 wire 380V/200V/50Hz	5.5	22	4.9	φ7.6mm	φ7.6mm x 3
250V, A160V, A200V	3 phase, 4 wire 380V/200V/50Hz	5.5	24	4.5	φ7.6mm	φ7.6mm x 3

※ A: the connection with EDU indoor unit.

※ A: the connection with FDUM indoor unit.

5. TEST RUN

⚠ WARNING

- Before conduct a test run, make sure that the service valves are opened.
- Turn on power 6 hours prior to a test run to energize the crank case heater.
- In case of the first operation after turning on power, even if the unit again whenever it is stopped.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite dangerous. Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

⚠ CAUTION

- When you operate switches (SW3, SW5) for on-site setting, be careful not to touch a live part.
- You cannot charge pressure from the service valve.
- The service valve (QS) is closed during operation.
- When power source is cut off to reset the unit, "Communication error between outdoor and indoor unit" off. If this procedure is not observed in turning on power again, "Communication error between outdoor and indoor unit" will occur.

1) Test run method

- (1) A test run can be initiated from an outdoor unit by using SW3-3 and SW5-4 for on-site setting.
- (2) Switching SW3-3 to ON will start the compressor.
- (3) The unit will start a cooling operation when SW3-4 is OFF or a heating operation when SW3-4 is ON.
- (4) Do not fail to switch SW3-3 to OFF when a test run is completed.

SW3-3	SW3-4	Operation
ON	OFF	Cooling during a test run
ON	ON	Heating during a test run
OFF	—	Normal or After the test operation

2) Checking the state of the unit in operation

Use check points provided on the piping before and after the four-way valve installed inside the outdoor unit for checking discharge pressure and suction pressure. As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

Check point of the pipe	Check joint of the pipe	Charge part of the gas operation valve
Cooling operation	Discharge pressure	Suction pressure
Heating operation	Suction pressure	Discharge pressure (High pressure)

3) Setting SW3-1, SW3-2, on-site

- (1) Defrost control switching (SW3-1)
 - When this switch is turned ON, the unit will run in the defrost mode more frequently.
 - Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
 - When this switch is turned on, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
 - When the unit is installed in a very snowy country, set this switch to ON.

4) Failure diagnosis in a test run

Error indicated on the remote control unit	Red LED	Green LED	Failure event	Action
E40	Blinking once	Blinking continuously	RS485 activation or operation with service valves shut (occurs mainly during a heating operation)	1. Check whether the service valves are open. 2. If an error has been canceled when 3 minutes have elapsed since a compressor stop, you can restart the unit by effecting check reset from the remote control unit.
E49	Blinking once	Blinking continuously	Low pressure error or operation with service valves shut (occurs mainly during a cooling operation)	

- If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve.

Valve for a cooling operation	When power is turned on	When the unit comes to a normal stop
Complete shut position	During a cooling operation	During a heating operation
Full open position	Complete shut position	Full open position
Valve for a heating operation	Full open position	Complete shut position
Complete shut position	Full open position	Full open position

6) Heed the following on the first operation after turning on the circuit breaker.

- This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.
- At the first operation of heating mode after turning on the circuit breaker, the outdoor unit may start in cooling mode a while to prevent from liquid refrigerant back to compressor, if that is the case, do not suspect a unit failure.

A failure to observe these instructions can result in a compressor breakdown.

- When you leave the outdoor unit with power supplied to it, be sure to close the panel.


Items to check before a test run

Item No. used in the installation manual	Item	Check item	Check
2	Refrigerant plumbing	Have air trapped under a nitrogen gas flow? Were air traps removed and vacuum evacuation safely performed? Are heat insulation materials installed on both liquid and gas pipes? Are service valves safely opened for both liquid and gas systems? How you recorded the additional refrigerant charge volume and refrigerant pipe length on the panel's label? Is the unit free of rattling noise such as uncompleted connection, an absent or reversed flange? Are temporary rated electrical equipments used for circuit breakers and cables? Doesn't cabling cause contact between units, where more than one unit are installed? Are indoor-outdoor signal wires connected to remote control wires? Are indoor-outdoor connecting cables connect between the same terminal numbers?	
4	Electric wiring	Are either VCT cable-type cables or VV flat cables used for indoor-outdoor connecting cables? Does grounding satisfy the D-type grounding (Type II) grounding requirements? Is the unit grounded with a dedicated grounding wire not connected to another unit's grounding wire? Are cables tied or loose screws at their connection points? Are cables laid down with cable clamps so that no external force works onto terminal connections? Is indoor unit installation work completed? Is there a heat cover should be attached onto an indoor unit, is the heat cover attached to the indoor unit?	
—	Indoor unit		

Test run procedure


- Always carry out a test run and check the following in order as listed.

Turn	The contents of operation	Check
(1)	Open the gas side service valve fully.	
(2)	Open the liquid side service valve fully.	
(3)	Close the panel.	
(4)	When a remote control unit is used for unit setup on the installation site, blow instructions for unit setup on the installation site with a remote control unit.	
(5)	SW3-3 ON/ SW3-4 OFF: the unit will start a cooling operation.	
(6)	When the unit starts operation, press the wind direction button provided on the remote control unit to check its operation.	
(7)	Place your hand before the indoor unit's diffuser to check whether cold (warm) winds come out in a cooling (heating) operation.	
(8)	Make sure that a red LED is not blinking.	
(9)	When you complete the test run, do not forget to turn SW3-3 to the OFF position.	
(10)	Where options are used, check their operation according to the respective instruction manuals.	

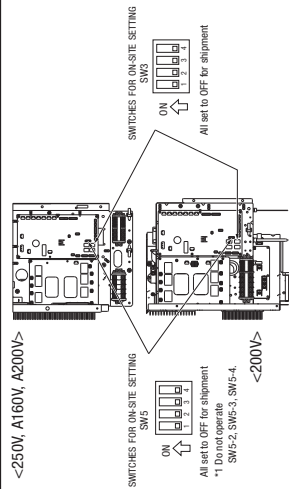

6. UTILIZATION OF EXISTING PIPING.

Check whether an existing pipe system is reusable or not by using the following flow chart.

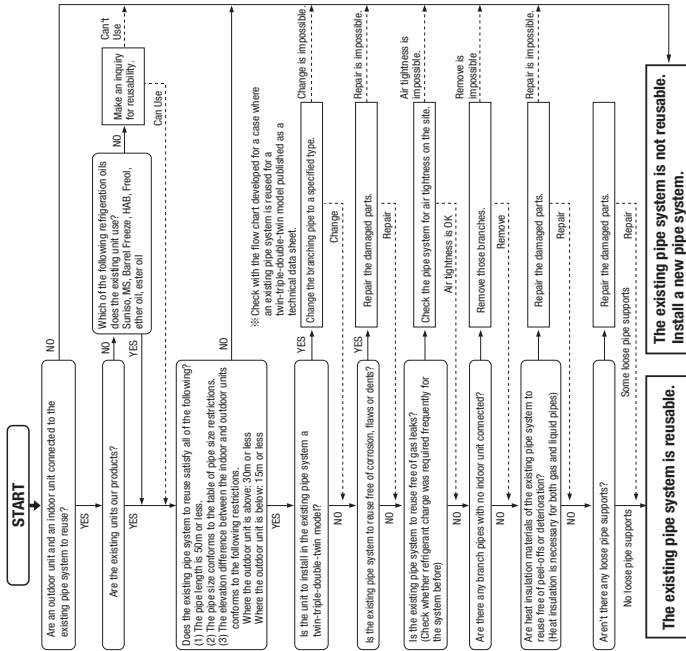

WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4)).

- (1) Run the unit for 30 minutes for a cooling operation.
- (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid).
- (3) Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery) wash the pipe system with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
- Turn on-site setting switch SWS-1 to the ON position. (Where the gas pipe size is φ19.05)

<Where the existing unit cannot be run for a cooling operation.>

- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, contact our distributor in the area.

<Table of pipe size restrictions>

○: Standard pipe size ○: Usable
△: Restricted to shorter pipe length limits ×: Not usable

Pipe size	0.08kg/m				0.12kg/m ※5				0.2kg/m			
	φ9.52	φ9.52	φ12.7	φ12.7	φ9.52	φ12.7	φ12.7	φ12.7	φ15.88	φ15.88	φ15.88	φ15.88
Liquid pipe												
Gas pipe												
Usability	○	○	○	○	○	○	○	○	○	○	○	○
Maximum one-way pipe length	35	70	70	35	70	70	70	30m	30m	30m	30m	30m
Length covered without additional charge	30	30	30	16.5	16.5	16.5	9	9	9	9	9	9
Usability	×	×	×	×	×	×	×	△	△	△	△	△
Maximum one-way pipe length	×	×	×	×	×	×	×	30	30	35	40	40
Length covered without additional charge	×	×	×	×	×	×	×	30	25	18	18	18

<Pipe system after the branching pipe>

Pipe size	After 1st branch ※3				After 2nd branch			
	φ9.52	φ9.52	φ12.7	φ12.7	φ9.52	φ9.52	φ12.7	φ12.7
Liquid pipe								
Gas pipe								
Usability	○	○	○	○	○	○	○	○
Maximum one-way pipe length	35	70	70	35	30	30	30	30
Length covered without additional charge	30	30	30	16.5	16.5	16.5	9	9
Usability	×	×	×	×	×	×	×	×
Maximum one-way pipe length	×	×	×	×	×	×	×	×
Length covered without additional charge	×	×	×	×	×	×	×	×

※1 Because of its insufficient pressure resistance, turn the dip switch SWS-1 provided on the outdoor unit bent to the ON position for φ19.05 × 11.0. (In the case of a twin-triple-double-twin model, this also applies to the case where φ19.05 × 11.0 is used in a pipe system after the first branching point). However, you need not turn the dip switch SWS-1 to the ON position, if 1/2H pipes or pipes having 1.2 or thicker walls are used.

※2 When the main pipe length exceeds 40m, a significant capacity drop may be experienced due to pressure loss in the liquid pipe system. Use φ12.7 for the liquid main.

※3 Piping size after branch should be equal or smaller than main pipe size.

※4 Piping size from first branch to indoor unit should be φ9.52 (Liquid) / φ15.88 (Gas).

※5 In case of 200V, change 0.145 kg/m.

● When refrigerant piping is stiffer than 3m, reduce refrigerant by kg from factory charged volume.

● Any combinations of pipe sizes not listed in the table or marked with × in the table are not usable.

<The model types of existing units of which branching pipes are reusable.>

Models later than Type 8.

● FDC * * * *8 □ □ □ □

● FDCP * * * *8 □ □ □ □

The branching pipes used with models other than those listed above are not reusable because of their insufficient pressure resistance. Please use our genuine branching pipes for R410A.

● * * * *8 numbers representing horsepower. □ □ □ □ is an alphanumeric letter.

Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) × Total length of branch pipes (m) × Additional charge volume per meter of pipe shown in the table (kg/m)

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example) When an 250V (twin installation) is installed in a 40m long existing pipe system (main pipe length 30m, liquid φ15.88, gas φ25.4; pipe length after branching pipe 5m x 2, liquid φ9.52, gas φ15.88), the quantity of refrigerant to charge additionally should be (30m-18m) x 0.2kg/m + 5m x 2 x 0.06kg/m = 3.0 kg.

2.9.5 Method for connecting the accessory pipe

Model FDC200VSA

PSC012D028A

- Be sure to use the accessory pipe to connect the service valve on the gas side with the field pipe.
- Be sure to use the straight pipe (Procured at the field) shown in the table 1 applicable.
- When tightening the flare, connect the pipe securely by pressing the flared face of pipe against the service valve.
- When brazing between the pipe in place and the attached pipe, confirm that no excessive force is applied to the flare joint. Otherwise gas could leak from the flare joint.
- Connect the attached pipe according to the following steps ① – ⑤.
 - ① Referring to Table 2 and Table 3, prepare the straight pipe and the elbow in the field, which are used in the construction examples (A) – (D) applicable to the connecting direction.
 - ② Firstly, use the accessory pipe to assemble the connecting pipe assembly outside the outdoor unit.
(As shown in the figure of connecting examples (A) – (D).)
 - ③ After assembling the connecting pipe, connect it to the service valve on the gas side inside the outdoor unit. Tighten the flare nut with appropriate torque.

Proper torque	
φ 19.05	100 – 120N · m

- ④ After connection of the connecting pipe assembly to the service valve on the gas side, braze the connecting pipe assembly and the field pipe.
- ⑤ When connecting pipe contacts wiring, attach heat insulating material to the pipe in order to prevent from contacting of the pipe and wiring. (If the wiring is rubbed with the pipe and the cover of wiring is teared, there is a risk of a short circuit or an electric shock.)

About brazing

- Be sure to braze while supplying nitrogen gas.
If no nitrogen gas is supplied, a large amount of impurity (oxidized film) will be generated, which may clog the capillary tube and the expansion valve, resulting in fatal malfunction.

Table 1 Pipe specification

Refrigerant line (one way)	length (m)
≤35 (m)	φ 22.22 x T1.0
≤70 (m)	φ 25.4 x T1.0 or φ 28.58 x T1.0


- Be sure to use pipes of 1/2H material, and wall thickness above 1mm. (Pressure resistance of O-type pipe is not enough)

Table 2 Parts used for the connecting pipe assembly


No.	Name	Quantity	Remark
1	Accessory pipe A	1	Accessory
2	Straight pipe ①	1	Procured at the field
3	Straight pipe ②	1 or 0	Procured at the field (Not required for downward direction)
4	Elbow	1 or 0	Procured at the field (Not required for downward direction)

Table 3 Length and specification of straight pipe (Procured in the field)

	Ⓐ Downward	Ⓑ Forward	Ⓒ Rightward	Ⓓ Backward
Straight pipe ①	380mm or more	200mm	155mm	215mm
Straight pipe ②	—	160mm or more	160mm or more	370mm or more

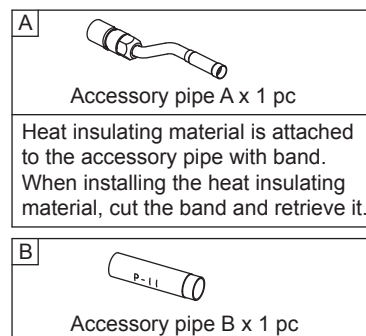


- Branching pipe set can be used by using the accessory pipe B.
When φ 22.22 (OD) size of the indoor unit gas pipe is used, the accessory pipe B is unnecessary.

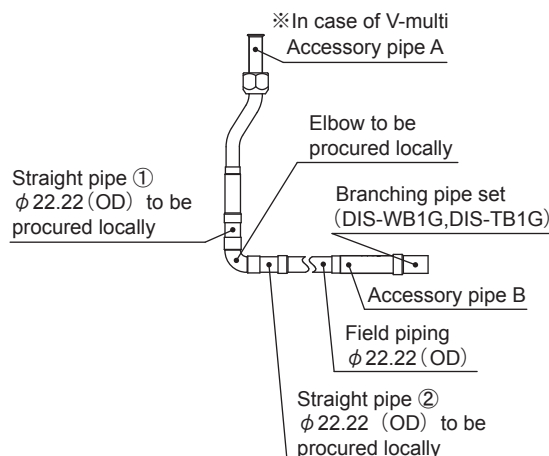


【 Connection example (A) – (D) applicable to the connecting direction.】


- The piping angle shown below is an example in case of 15mm of heat insulating material.
Adjust an angle, according to the thickness of heat insulating material.
Pass the connecting pipe in a hole after angle adjustment.

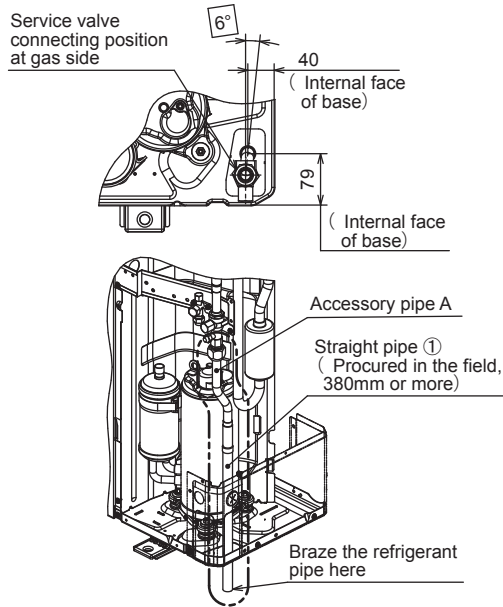


Connection example of refrigerant pipe-(A)
(Downward connection)

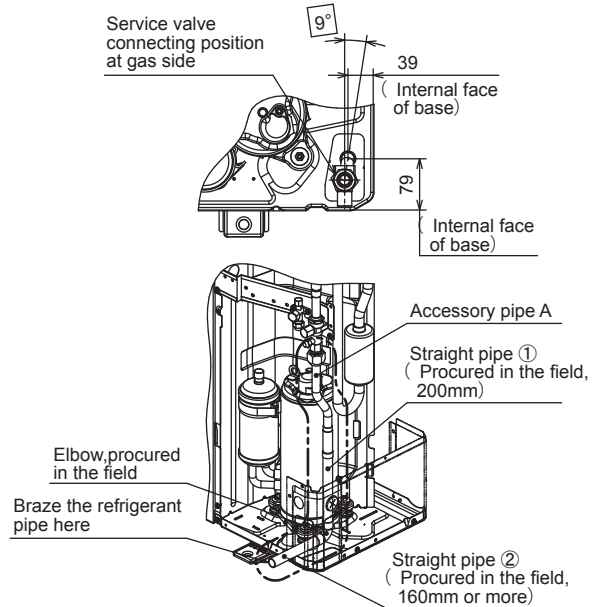

Connection example of refrigerant pipe-(B)
(Forward connection)

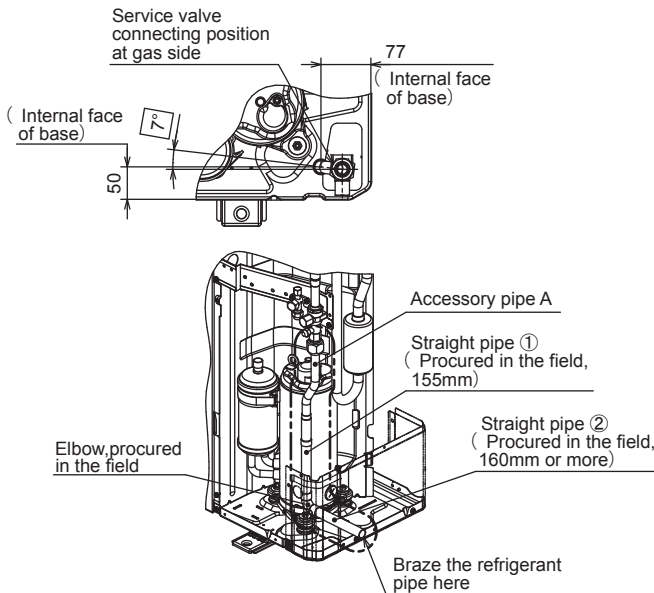

Connection example of refrigerant pipe-(C)
(Rightward connection)

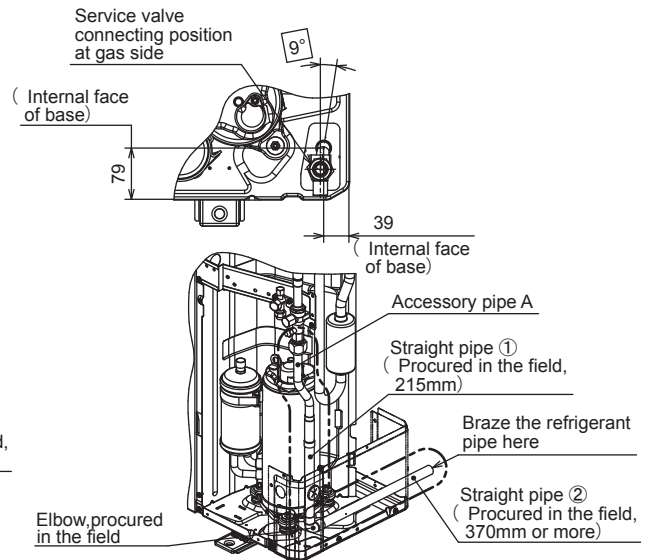

Connection example of refrigerant pipe-(D)
(Backward connection)

Model FDC250VSA

PSC012D028C

- Be sure to use the accessory pipe to connect the service valve on the gas side with the field pipe.
- Be sure to use the straight pipe (Procured at the field) shown in the table 1 applicable to the model of outdoor unit.
- When tightening the flare, connect the pipe securely by pressing the flared face of pipe against the service valve.
- When brazing between the pipe in place and the attached pipe, confirm that no excessive force is applied to the flare joint. Otherwise gas could leak from the flare joint.

• Connect the attached pipe according to the following steps ① – ⑤.

- ① Referring to Table 2 and Table 3, prepare the straight pipe and the elbow in the field, which are used in the construction examples (A) – (D) applicable to the connecting direction.
- ② Firstly, use the accessory pipe to assemble the connecting pipe assembly outside the outdoor unit.
(As shown in the figure of connecting examples (A) – (D).)
- ③ After assembling the connecting pipe, connect it to the service valve on the gas side inside the outdoor unit. Tighten the flare nut with appropriate torque.

Proper torque	
φ 19.05	100 – 120N · m

- ④ After connection of the connecting pipe assembly to the service valve on the gas side, braze the connecting pipe assembly and the field pipe.
- ⑤ When connecting pipe contacts wiring, attach heat insulating material to the pipe in order to prevent from contacting of the pipe and wiring. (If the wiring is rubbed with the pipe and the cover of wiring is teared, there is a risk of a short circuit or an electric shock.)

About brazing

- Be sure to braze while supplying nitrogen gas.
If no nitrogen gas is supplied, a large amount of impurity (oxidized film) will be generated, which may clog the capillary tube and the expansion valve, resulting in fatal malfunction.

Table 1 Pipe specification

		Refrigerant line (one way) length (m)	
Single type	FDC250V	≤ 35 (m)	φ 22.22 x T1.0
		≤ 70 (m)	φ 25.4 x T1.0 or φ 28.58 x T1.0
Multi type	FDC224KXZPE1	≤ 90 (m)	φ 19.05 x T1.0
		≤ 120 (m)	φ 22.22 x T1.0
	FDC280KXZPE1	≤ 90 (m)	φ 22.22 x T1.0
		≤ 120 (m)	φ 25.4 x T1.0 or φ 28.58 x T1.0

- Be sure to use pipes of 1/2H material, and wall thickness above 1mm. (Pressure resistance of O-type pipe is not enough)


Table 2 Parts used for the connecting pipe assembly

No.	Name	Quantity	Remark
1	Accessory pipe A	1	Accessory
2	Straight pipe ①	1	Procured at the field
3	Straight pipe ②	1 or 0	Procured at the field (Not required for downward direction)
4	Elbow	1 or 0	Procured at the field (Not required for downward direction)

Table 3 Length and specification of straight pipe (Procured in the field)

	Ⓐ Downward	Ⓑ Forward	Ⓒ Rightward	Ⓓ Backward
Straight pipe ①	400mm or more	192.5 – 202.5mm	192.5 – 202.5mm	210mm
Straight pipe ②	—	105mm or more	155mm or more	370mm or more


A

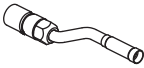

Accessory pipe A x 1 pc
(Except FDC224KXZPE1)


Heat insulating material is attached to the accessory pipe with band. When installing the heat insulating material, cut the band and retrieve it.

B

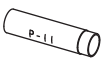



Accessory pipe B x 1 pc
(Only use for FDC250V)

- Branching pipe set can be used by using the accessory pipe B. When φ 22.22 (OD) size of the indoor unit gas pipe is used, the accessory pipe B is unnecessary.


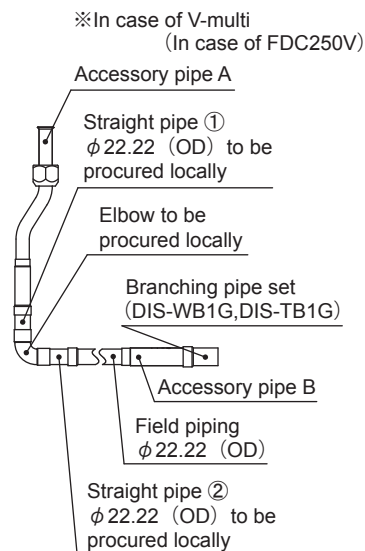


【 Connection example (A) – (D) applicable to the connecting direction.】



- The piping angle shown below is an example in case of 15mm of heat insulating material.
Adjust an angle, according to the thickness of heat insulating material.
Pass the connecting pipe in a hole after angle adjustment.

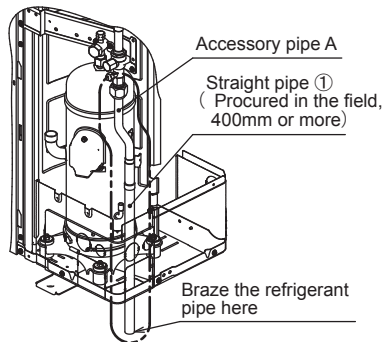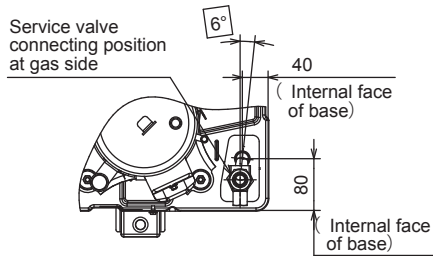



Connection example of refrigerant pipe-(A)
(Downward connection)

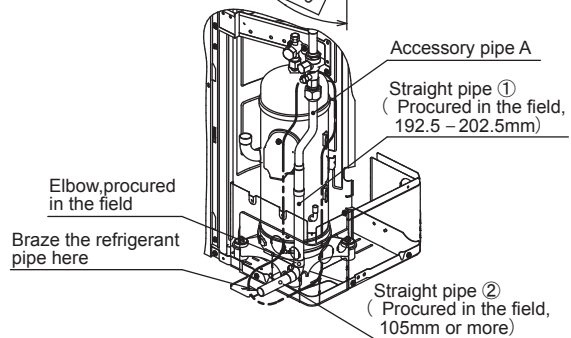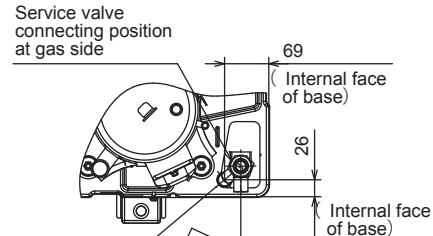

Connection example of refrigerant pipe-(B)
(Forward connection)

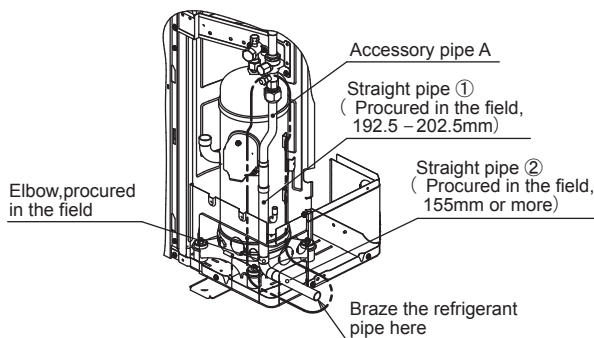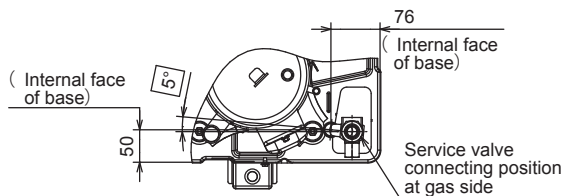

Connection example of refrigerant pipe-(C)
(Rightward connection)

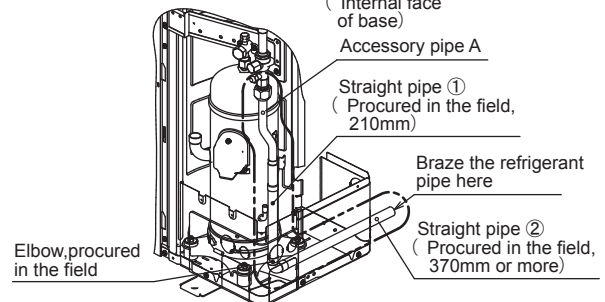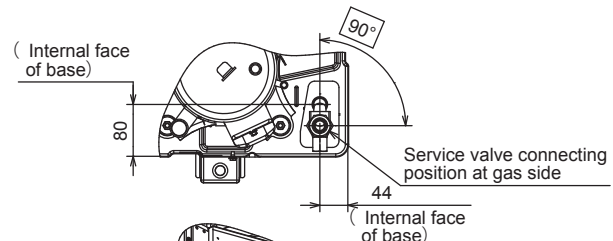

Connection example of refrigerant pipe-(D)
(Backward connection)

2.9.6 Instructions for branching pipe set (DIS-WA1, WB1, TA1, TB1)

See page 108.

2.10 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER

- 2.10.1 Remote control See page 111.
- 2.10.2 Operation control function by the wired remote control See page 114.
- 2.10.3 Operation control function by the indoor control See page 117.
- 2.10.4 Operation control function by the outdoor control

(I) Models FDC100-140VN, 100-140VS

(1) Determination of compressor speed (Frequency)

Required frequency

- (a) Cooling/dehumidifying operation Unit: rps

Model		FDC100	FDC125	FDC140
Max. required frequency	Usual operation	90	105 (92)	105 (92)
	Silent mode, outdoor air temperature $\leq 15^{\circ}\text{C}$	60	80	85
Min. required frequency		20	20	20

Note (1) Value in () are for the 3 phase models.

- (b) Heating operation Unit: rps

Model		FDC100	FDC125	FDC140
Max. required frequency	Usual operation	90	105 (120)	110 (120)
	Silent mode	60	80	85
Min. required frequency		20	20	20

Note (1) Value in () are for the 3 phase models.

- (c) If the indoor fan speed becomes “Me” or “Lo”, Max required frequency goes down accordingly depending on indoor unit model.
- (d) Max. required frequency under high outdoor air temperature in cooling mode.
Maximum required frequency is selected according to the outdoor air temperature (Tho-A).

Unit: rps

Model		FDC100	FDC125	FDC140
Max. required frequency	Outdoor air temperature is 40°C or higher	75	90	96
	Outdoor air temperature is 46°C or higher	75	75	75

- (e) Max. required frequency under outdoor air temperature in heating mode.
Maximum required frequency is selected according to the outdoor air temperature (Tho-A).

Unit: rps

Model		FDC100	FDC125	FDC140
Max. required frequency	Outdoor air temperature is 18°C or higher	60	80	85

- (f) Selection of max. required frequency by heat exchanger temperature.
- (i) Maximum required frequency is selected according to the outdoor heat exchanger temperature (Tho-R) during cooling/dehumidifying or according to the indoor heat exchanger temperature (Thi-R) during heating mode.
- (ii) When there are 3 indoor heat exchanger temperatures (Thi-R), whichever the highest applies,

Unit: rps

Model			FDC100	FDC125	FDC140
Max. required frequency	Cooling/dehumidifying	Outdoor heat exchanger temperature is 56°C or higher	90	100 (92)	100 (92)
	Heating	Indoor heat exchanger temperature is 56°C or higher	90	100	100

Note (1) Value in () are for the 3 phase models.

- (g) When any of the controls from (a) to (f) above may duplicate, whichever the smallest value among duplicated controls is taken as the maximum required frequency.
- (h) During heating, it is operated with the maximum required frequency until the indoor heat exchanger temperature becomes 40°C or higher.

(2) Compressor start control

- (a) Compressor starts upon receipt of the thermostat ON signal from the indoor unit.
- (b) However, at initial start after turning the power source breaker, it may enter the standby state for maximum 30 minutes (“PREPARATION” is displayed on the remote control) in order to prevent the oil loss in the compressor.
If the cooling/dehumidifying/heating operation is selected from the remote control when the outdoor unit is in the standby state, “PREPARATION” is displayed for 3 seconds on the remote control.

(3) Compressor soft start control

(a) Compressor protection start I

[Control condition] Normally, the compressor operation frequency is raised in this start pattern.

[Control contents] (i) Starts with the compressor’s target frequency at **A** rps.

However, when the outdoor air temperature (Tho-A) is 35°C or higher during cooling/dehumidifying or the indoor return air temperature (Thi-A) is 25°C or higher during heating, it starts at **C** rps.

(ii) At 30 seconds after the start of compressor, its target frequency changes to **B** rps and the compressor is operated for 2 - 4 minutes with its operation frequency fixed at **B** rps.

Model	Operation mode	A rps	B rps	C rps
FDC100-140	Cooling/Dehumidifying	55	55	30
	Heating	55	55	30

(b) Compressor protection start III

[Control condition] Number of compressor starts is only 1 counted after the power source breaker ON.

[Control contents] Operates by selecting one of following start patterns according to the operation mode and the outdoor air temperature (Tho-A).

(i) Low frequency operation control during cooling/dehumidifying

[Control condition] Upon establishing the conditions of compressor protection start III, the low frequency operation control is performed during cooling/dehumidifying.

[Control contents] ☞ Starts with the compressor’s target frequency at **A** rps. When the outdoor air temperature (Tho-A) is 35°C or higher, it starts at **C** rps.

◆ At 30 seconds after the compressor start, the compressor’s target frequency is changed to **B** rps and the compressor’s operation frequency is fixed for 10 minutes.

Model	Operation mode	A rps	B rps	C rps
FDC100-140	Cooling/Dehumidifying	55	55	30

(ii) Low frequency operation control during heating

[Control condition] When the conditions of compressor protection start III are established and one of following conditions ☞ is satisfied, the low number of revolutions operation control is performed during heating.

☞ At 30 minutes or more after turning the power source breaker on

[Control contents] ☞ Starts the compressor with its target frequency at **A** rps. However, when the indoor return air temperature (Thi-A) is 25°C or higher, it start at **C** rps.

◆ At 30 seconds after the start of compressor, the compressor’s target frequency is changed to **B** rps and the compressor’s operation frequency is fixed for 10 minutes.

Model	Operation mode	A rps	B rps	C rps
FDC100-140	Heating	55	55	30

(4) Outdoor fan control

(a) Outdoor fan tap and fan motor speed

Unit: min⁻¹

Model	Mode	Fan motor tap						
		① speed	② speed	③ speed	④ speed	⑤ speed	⑥ speed	⑦ speed
FDC100-140	Cooling/Dehumidifying	200	350	600	740	820	870	910 (950) ⁽¹⁾
	Heating	200	350	600	740	820	870	910 (950) ⁽¹⁾



Note (1) Value in () are for the model FDC125, 140.

(b) Fan tap control during Cooling/Defumidifying operation

Fan taps are selected depending on the outdoor heat exchanger temperature (Tho-R1, R2) and the outdoor air temperature (Tho-A).
 Note (1) It is detected by Tho-R1 or R2, whichever the higher.

	Ⓐ zone	Ⓑ zone	Ⓒ zone	Ⓓ zone
Ⓐ zone	Tap 5	Tap 5	Tap 5	Tap 4
Ⓑ zone	Tap 5	Tap 5	Tap 4 ⁽¹⁾	Tap 3
Ⓒ zone	Tap 4	Tap 4 ⁽¹⁾	Tap 3	Tap 2
Ⓓ zone	Tap 3	Tap 3	Tap 2	Tap 1

Note (1) If the “silent mode start” signal is received from the remote control, the speed changes from Tap 4 to Tap 3.

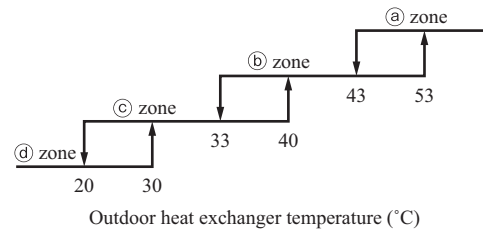
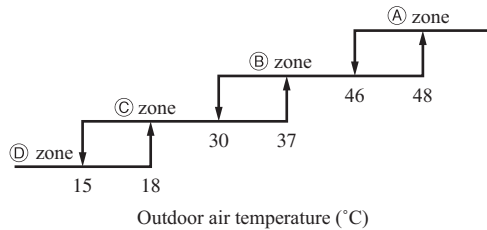


(c) Fan tap control during heating operation

Fan taps are selected depending on the outdoor heat exchanger temperature (Tho-R1, R2) and the outdoor air temperature (Tho-A).
 Note (1) It is detected by Tho-R1 or R2, whichever the lower.

	Ⓐ zone	Ⓑ zone	Ⓒ zone
Ⓐ zone	Tap 3	Tap 3	Tap 4
Ⓑ zone	Tap 3	Tap 4 ⁽¹⁾	Tap 5
Ⓒ zone	Tap 4	Tap 5	Tap 6


Note (1) If the “silent mode start” signal is received from the remote control, the speed changes from Tap 4 to Tap 3.

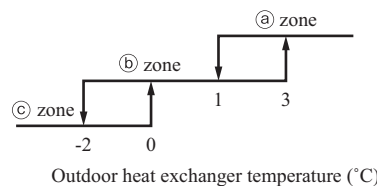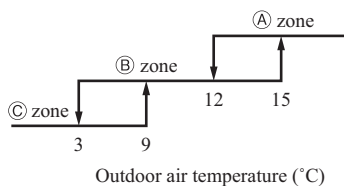

(d) Outdoor fan control at cooling low outdoor air

(i) When all the following conditions are established after the start of compressor, the following control is implemented. If the outdoor air temperature (Tho-A) is in the zone Ⓑ in the cooling/dehumidifying mode, it has elapsed 20 seconds from the start of outdoor fan and the outdoor fan is at the tap 1 speed, the outdoor fan speed is controlled according to the outdoor heat exchanger temperature (Tho-R1, R2).

Note (1) It is detected with Tho-R1 or R2, whichever the higher.

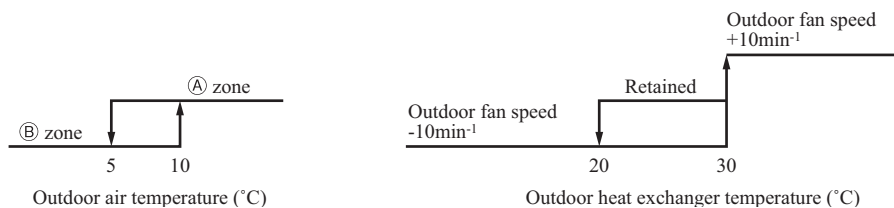

- (ii) The outdoor heat exchanger temperature is detected always and, when the number of revolutions of the outdoor fan speed has been increased or decreased, there is no change of fan speed for 20 seconds.
- (iii) Range of the outdoor fan speed under this control is as follows.
 - 1) Lower limit: 130min⁻¹
 - 2) Upper limit: 500min⁻¹
- (iv) As any of the following conditions is established, this control terminates.
 - 1) When the outdoor air temperature is in the zone Ⓐ and the outdoor heat exchanger temperature at 30°C or higher is established for 40 seconds or more continuously.
 - 2) When the outdoor fan speed is 500min⁻¹ and the outdoor heat exchanger temperature at 30°C or higher is established for 40 seconds or more continuously.
 - 3) When the outdoor heat changer temperature at 45°C or higher is established for 40 seconds or more.

(e) Outdoor fan control by the power transistor radiator fin temperature

When all the following conditions are established later than 3 minutes after the start of compressor, the following control is implemented.

- (i) Cooling/dehumidifying
 - 1) Outdoor air temperature (Tho-A) $\geq 33^{\circ}\text{C}$
 - 2) Compressor's actual frequency $\geq \mathbf{A}$ rps
 - 3) Power transistor radiator fin temperature $\geq \mathbf{C}$ $^{\circ}\text{C}$
- (ii) Heating
 - 1) Outdoor air temperature (Tho-A) $\geq 16^{\circ}\text{C}$
 - 2) Compressor's actual frequency $\geq \mathbf{B}$ rps
 - 3) Power transistor radiator fin temperature $\geq \mathbf{C}$ $^{\circ}\text{C}$
- (iii) Control contents
 - 1) Raises the outdoor fan tap by 1 tap.
 - 2) When the sampling is for 60 minutes and the value of power transistor radiator fin temperature (Tho-P) is as follows.
 - a) When the power transistor radiator fin temperature (Tho-P) $\geq \mathbf{C}$ $^{\circ}\text{C}$, the outdoor fan tap is raised by 1 speed further.
 - b) When \mathbf{C} $^{\circ}\text{C} >$ power transistor radiator fin temperature (Tho-P) $\geq \mathbf{D}$ $^{\circ}\text{C}$, present outdoor fan tap is maintained.
 - c) When the power transistor radiator fin temperature (Tho-P) $\geq \mathbf{D}$ $^{\circ}\text{C}$, the outdoor fan tap is dropped by 1 speed.
- (iv) Ending conditions

When the operation under the condition of item (iii), c) above and with the outdoor fan tap, which is determined by the item (c) is detected 2 times consecutively.

- Compressor's frequency and power transistor radiator fin temperature


Item	A	B	C	D
Model FDC100-140	85	85	72	68

(f) Caution at the outdoor fan start control (3 phase models only)

When the outdoor fan is running at 400min^{-1} before operating the compressor, it may operate with the compressor only, without starting up the outdoor fan this is normal.

(g) Snow protection fan control

If the dip switch (SW3-2) on the outdoor control PCB is turned ON, the outdoor fan is operated for 30 seconds at 4 tap speed once in every 10 minutes depending on the outdoor air temperature (detected with Tho-A) in the stop mode or anomalous stop mode.

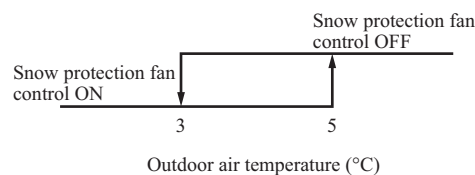




(5) Defrost operation

(a) Starting conditions

If all of the following defrost conditions A or conditions B are satisfied, the defrost operation starts.

(i) Defrost conditions A

- 1) Cumulative compressor operation time after the end of defrost operation has elapsed 37 minutes, and the cumulative compressor operation time after the start of heating operation (remote control ON) has elapsed 30 minutes.
- 2) After 5 minutes from the compressor ON
- 3) After 5 minutes from the start of outdoor fan
- 4) After satisfying all above conditions, if temperatures of the outdoor heat exchanger temperature thermistor (Tho-R1, R2) and the outdoor air temperature thermistor (Tho-A) become lower than the defrost operation temperature as shown by the right figure for 15 seconds continuously, or the suction gas saturation temperature (SST) and the outdoor air temperature (Tho-A), which are obtained from the value detected by the low pressure sensor (LPT) stay for 3 minutes within the range below the defrost operation start temperature as shown by the right figure. However, it excludes for 10 minutes after the start of compressor and the outdoor air temperature is as shown by the lower figure.

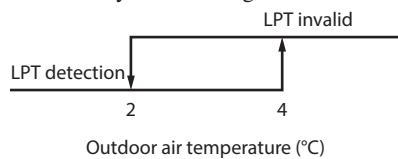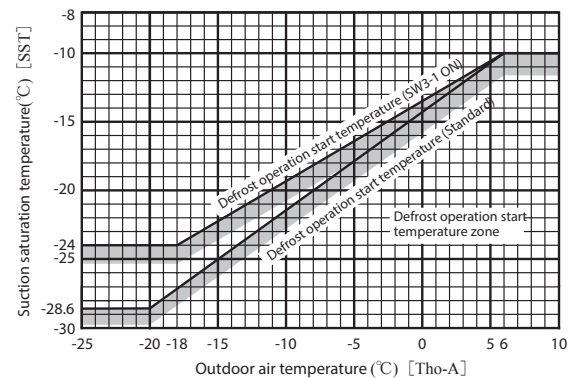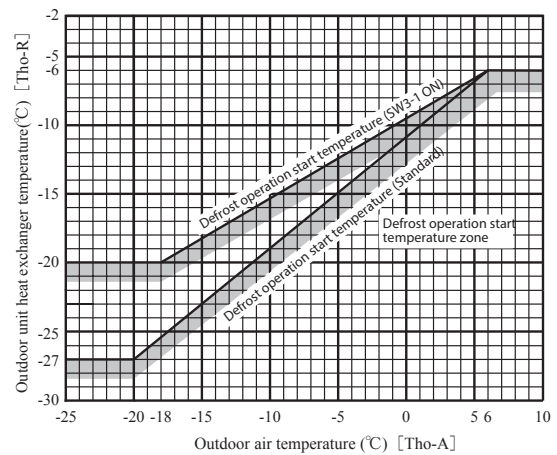

(ii) Defrost conditions B

- 1) When previous defrost ending condition is the time out of defrosting operation and it is in the heating operation after the cumulative compressor operation time after the end of defrost operation has become 30 minutes.
- 2) After 5 minutes from the start of compressor
- 3) After 5 minutes from the start of outdoor fan

(b) Ending conditions

When any of the following conditions is satisfied, the heating operation starts.

- (i) When it has elapsed 8 minutes and 20 seconds after the start of defrost operation.
- (ii) When the outdoor heat exchanger temperatures (Tho-R1, R2), whichever the lower, becomes 12°C or higher for 10 seconds continuously.

(c) Switching of defrost control with SW3-1


- (i) If SW3-1 on the outdoor control PCB is turned to ON, it becomes easier to enter the defrost operation. Use this when installing a unit at snowing regions.
- (ii) Control contents
 - 1) It allows entering the defrost operation under the defrost condition A when the cumulative heating operation time becomes 30 minutes. It is 37 minutes at SW3-1 OFF (Factory default).
 - 2) It allows entering the defrost operation under the defrost condition B when the cumulative heating operation time becomes 25 minutes. It is 30 minutes at SW3-1 OFF (Factory default).
 - 3) It allows the defrost operation with the outdoor heat exchanger temperature (Tho-R) and suction pressure saturation temperature (SST) being higher than normal.

(6) Protective control/anomalous stop control by compressor's number of revolutions

(a) Compressor discharge pipe temperature protection


(i) Protective control

As the discharge pipe temperature (detected with Tho-D) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of discharge pipe temperature.

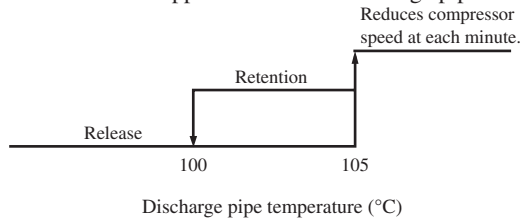

(ii) Anomalous stop control

- 1) If the discharge pipe temperature (detected with Tho-D) exceeds the setting value, the compressor stops.
- 2) When it is detected 2 times within 60 minutes or after continuous 60 minutes, including the stop of compressor, E36 is displayed on the remote control and it enters the anomalous stop mode.

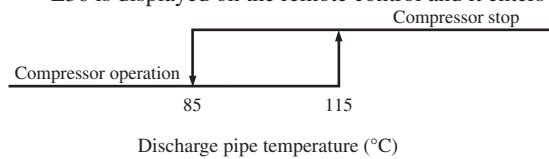


(iii) Reset of anomalous stop mode

As it drops to the reset value of 85°C or lower for 45 minutes continuously, it becomes possible to restart from the remote control.

(b) Cooling high pressure protection

(i) Protective control


- 1) When the outdoor air temperature (Tho-A) is 40°C or higher and the outdoor heat exchanger temperature (Tho-R) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of high pressure.
- 2) Control value A is updated to an optimum value automatically according to the operating conditions.

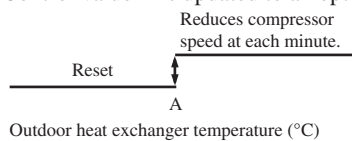

Control value A
54-60°C

(ii) Anomalous stop control

- 1) As the outdoor heat exchanger temperature (Tho-R) exceeds the setting value, the compressor stops.
- 2) If it is detected 5 times within 60 minutes or 65°C or higher continues for 60 minutes, including the stop of compressor, E35 is displayed on the remote control and it enters the anomalous stop mode.

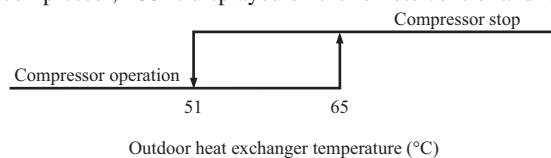


(iii) Reset of anomalous stop mode

As it reaches the reset value of 51°C or lower, it becomes possible to restart from the remote control.

(c) Heating high pressure protection

(i) Protective control

- 1) As the indoor heat exchanger temperature (Thi-R) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of high pressure.
- 2) Control value A is updated to an optimum value automatically according to the operating conditions.

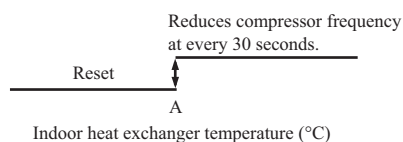

Model	Existing piping adaptation switch: SW5-1	
	OFF (Shipping)	ON
Control value A (°C)		
FDC100-140	48-54	46-52


Note (1) Adaptation to existing piping is at ON.

(ii) Anomalous stop control

Operation control function by the indoor control - See the heating overload protection, page 125.

(iii) Adaptation to existing piping, stop control

If the existing piping adaptation switch, SW5-1, is turned ON, the compressor stops to protect existing piping when the indoor heat exchanger temperature (Thi-R) exceeds the setting value.

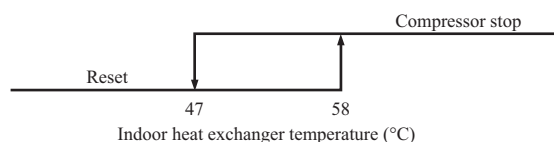

(d) Anomaly detection control by the high pressure switch (63H1)


- (i) If the pressure rises and operates the high pressure switch (opens at 4.15MPa/closes at 3.15MPa), the compressor stops.
- (ii) Under any of the following conditions, E40 is displayed and it enters the anomalous stop mode.
 - 1) When it occurs 5 times within 60 minutes that pressure rises and the compressor is stopped by 63H1.
 - 2) When 63H1 has been in the open state for 60 minutes continuously, including the stop of compressor.

(e) Low pressure control

(i) Protective control

If the value detected by the low pressure sensor (LPT) exceeds the setting value, the compressor speed (frequency) is controlled to restrain the drop of pressure.

Reduces compressor frequency at every 30 seconds.

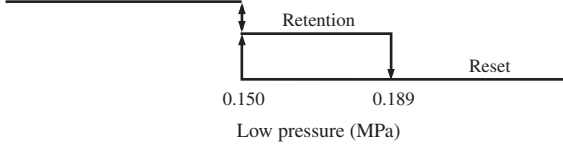


(ii) Anomalous stop control

- 1) When a value detected by the low pressure sensor (LPT) satisfies any of the following conditions, the compressor stops to run for its protection.
 - a) When the low pressure drops to 0.079MPa or under for 15 seconds continuously.
 - b) At 10 minutes after the start of compressor, the suction overheat becomes 30°C and the low pressure becomes 0.15MPa or under for 60 seconds continuously.
- 2) E49 is displayed under any of the following conditions and it enters the anomalous stop mode.
 - a) When the low pressure drops 3 times within 60 minutes and the compressor stops under any of the above conditions.
 - b) When a value detected with the low pressure sensor becomes 0.079MPa or under for 5 minutes, including the stop of compressor.
- 3) However, when the control condition of item 2), a) is established during the compressor protection start III, E49 is displayed at initial stop and it enters the anomalous stop mode.


(f) Compressor pressure ratio protection control

- (i) During heating operation, if the indoor heat exchanger temperature (Thi-R) and the low pressure sensor (LPT) exceed the setting values at 10 minutes after the start of compressor, the compressor speed (frequency) is controlled to protect the compressor.
- (ii) This control is not performed during the outdoor fan ON and for 10 minutes from the start of outdoor fan.
- (iii) This control is not performed during defrost operation and at 10 minutes after the reset of defrost operation.
- (iv) When there are 3 indoor heat exchanger temperatures (Thi-R), the highest temperature is detected.

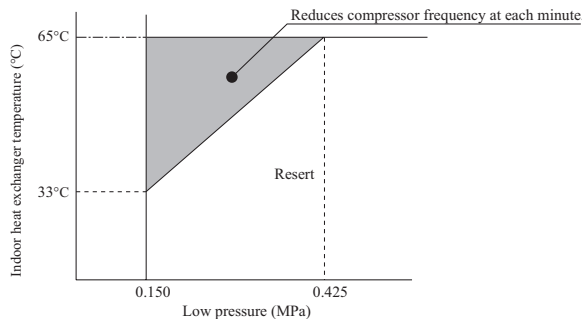


(g) Over-current protection current safe controls I, II

Detecting the outdoor inverter input (primary) current and the output (secondary) current, if the current values exceed setting values, the compressor speed (frequency) is controlled to protect the inverter.

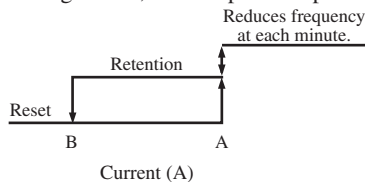

(Fig. C) The control value "A" and the reset value vary depending on the compressor speed.

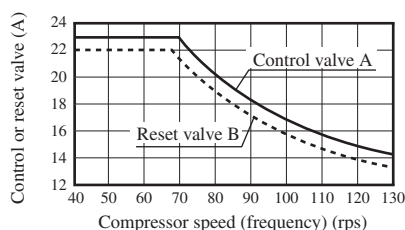


Model	Cooling		Heating		
	Control value A	Reset value B	Control value A	Reset value B	
Primary current side	FDC100	13.5 (23.0)	12.5 (22.0)	13.5 (23.0)	12.5 (22.0)
	FDC125, 140	13.5 (23.0)	12.5 (22.0)	13.5 (23.0)	12.5 (22.0)
Secondary current side	FDC100	13.0 (Fig.C)	12.0 (Fig.C)	13.0 (Fig.C)	12.0 (Fig.C)
	FDC125, 140	13.0 (Fig.C)	12.0 (Fig.C)	13.0 (Fig.C)	12.0 (Fig.C)

Note (1) Value in () are for the single phase models.

(h) Power transistor temperature protection

- (i) Protective control (single phase model only)

If the power transistor temperature (detected with TIP) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of power transistor temperature.

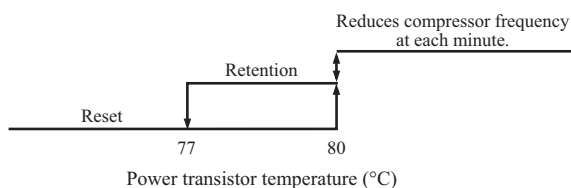**(i) Anomalous power transistor current**


- (i) Prevents over-current on the inverter. If the current value in the power transistor exceeds the setting value, the compressor stops.
- (ii) If the current value in the power transistor exceeds the specified value and the compressor stops 4 times within 30 minutes, E42 is displayed on the remote control and it enters the anomalous stop mode.

(j) Anomalous inverter PCB

If the power transistor detects any anomaly for 15 minutes, including the stop of compressor, E51 is displayed on the remote control and it enters the anomalous stop mode.

(k) Anti-frost control by the compressor frequency control

- (i) If the indoor heat exchanger temperature (detected with Thi-R) exceeds the setting value at 4 minutes after the start of compressor, the compressor speed (frequency) is controlled to initiate the anti-frost control of indoor heat exchanger.
- (ii) When there are 2 indoor heat exchanger temperatures (Thi-R), the lowest temperature is detected.

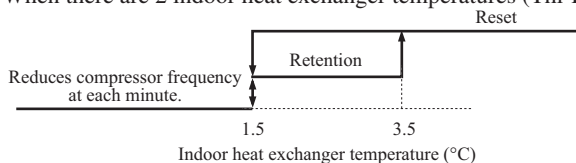

- (iii) Regarding the anti-frost control by the operation stop, refer to the operation control function by the indoor control and the cooling, dehumidifying frost prevention of page 125.

(l) Dewing prevention control

[Control condition] During cooling and dehumidifying operation, if all the following conditions are established, the compressor speed (frequency) is reduced to prevent dewing and water splash.

- (i) Cooling electronic expansion valve aperture (EEVC) is 500 pulses.
- (ii) Suction overheat is 10°C or higher.
- (iii) Compressor speed (frequency) is 60 rps or higher.

[Control contents] (i) When the suction overheat is 10°C or higher, the compressor speed (frequency) is reduced at each 1 minute.

(ii) Compressor speed (frequency) does not rise till the cooling expansion valve becomes 460 pulses.

(iii) This control takes 60 rps as its lower limit so that compressor speed is not controlled when it is less than 60 rps.

(m) Refrigerant quantity shortage protection

Under the compressor protection start III control during cooling and dehumidifying operations, the following control is performed by detecting the indoor heat exchanger temperature (Thi-R) and the indoor return air temperature (Thi-A).

[Control condition] When the state that the indoor heat exchanger temperature (Thi-R) does not become lower than the indoor return air temperature (Thi-A) by 4°C or more continues for 1 minute.

[Control contents] It judges that the flowing of refrigerant in to the indoor unit is insufficient so that the compressor is stopped and E57 is displayed on the remote control.

(n) Broken wire detection on temperature thermistor and low pressure sensor

- (i) Outdoor heat exchanger thermistor, outdoor air thermistor and low pressure sensor
 If the following is detected for 5 second continuously within 2 minutes to 2 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop.
 Note (1) During defrosting and for 3 minutes after the end of defrosting, it is not detected.
 - Outdoor heat exchanger thermistor: -50°C or lower
 - Outdoor air temperature thermistor: -45 or lower
 - Low pressure sensor: 0V or under or 4.0V or over
- (ii) Discharge pipe temperature thermistor, suction pipe temperature thermistor
 If the following is detected for 5 second continuously within 10 minutes to 10 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop.
 Note (1) During defrosting and for 3 minutes after the end of defrosting, it is not detected.
 - Discharge pipe temperature thermistor: -10°C or lower
 - Suction pipe temperature thermistor: -50 or lower

(o) Fan motor error

- (i) If the fan speed of 100min⁻¹ or under is detected for 30 second continuously under the outdoor fan control (with the operation command of fan tap at ① speed or higher), the compressor stops.
- (ii) When the fan motor speed drops to 100min⁻¹ or under 5 times within 60 minutes and the compressor stops, it enters the anomalous stop mode with E48 displayed on the remote control.

(p) Anomalous stop by the compressor start stop

- (i) When it fails to shift to the compressor DC motor’s rotor position defection operation at 5 seconds after establishing the compressor start condition, the compressor stops temporarily and restarts 3 minutes later.
- (ii) If it fails to shift to the position detection operation again at second time, it judges the anomalous compressor start and stops the compressor by the anomalous stop (E59).

(7) Silent mode

- (a) As “Silent mode start” signal is received from the remote control, it operates by dropping the outdoor fan tap and the compressor speed (frequency).
- (b) For details, refer to items (1) and (4) above.

(8) Test run

(a) It is possible to operate from the outdoor unit using the dip switch on the outdoor control PCB.

SW3-3	ON	SW3-4	OFF	Cooling test run
			ON	Heating test run
	OFF	Normal and end of test run		

Make sure to turn SW3-3 to OFF after the end of operation.

(b) Test run control

- (i) Operation is performed at the maximum compressor speed (frequency), which is determined for each model.
- (ii) Each protective control and error detection control are effective.
- (iii) If SW3-4 is switched during test run, the compressor is stoped for once by the stop control and the cooling/heating operation is switched.
- (iv) Setting and display of remote control during test run

Mode	Item	Contents of remote control setting/display
Cooling test run		Setting temperature of cooling is 5°C.
Heating test run		Setting temperature of heating (preparation) is 30°C.

(9) Pump-down control

Turning ON the pump-down switch SW1 for 2 seconds during the operation stop or anomalous stop (excluding the thermostat OFF), the pump-down operation is performed. (This is invalid when the indoor unit is operating. This is effective even when the indoor unit is stopped by the anomalous stop or the power source is turned OFF.)

(a) Control contents

- (i) Close the service valve at the liquid side. (It is left open at the gas side.)
- (ii) Compressor is started with the target speed (frequency) at 55 rps in the cooling mode.
- (iii) Red and green lamps (LED) keeps flashing continuously on the outdoor control PCB.
- (iv) Each of protection and error detection controls, excluding the low pressure control, anti-frost control and dewing prevention control, is effective.
- (v) Outdoor unit fan is controlled as usual.
- (vi) Electronic expansion valve is fully opened.

(b) Control ending conditions

Stop control is initiated depending on any of the following conditions.

- (i) Low pressure of 0.087MPa or lower is detected for 5 seconds continuously.
 - 1) Red LED: Light, Green LED: Flashing, Remote control: Displays stop.
 - 2) It is possible to restart when the low pressure is 0.087MPa or higher.
 - 3) Electronic expansion valve (cooling/heating) is kept fully open.
- (ii) Stop by the error detection control
 - 1) Red LED: Keeps flashing, Green LED: Flashing
 - 2) Restart is prohibited. To return to normal operation, reset the power source.
 - 3) Electronic expansion valve (cooling/heating) is left fully open.
- (iii) When the cumulative operation time of compressor under the pump-down control becomes 5 minutes.
 - 1) Red LED: Stays OFF, Green LED: Flashing, Remote control: Stop
 - 2) It is possible to pump-down again.
 - 3) Electronic expansion valve (cooling/heating) is left fully open.

Note (1) After the stop of compressor, close the service valve at the gas side.

Caution: Since pressing the pump-down switch cancels communications with the indoor unit, the indoor unit and the remote control display "Transmission error – E5". This is normal.

(10) Base heater ON/OFF output control (Option)**(a) Base heater ON conditions**


When all of following conditions are satisfied, the base heater is turned ON.

- (i) Outdoor air temperature (detected with Tho-A) is 3°C or lower.
- (ii) In the heating mode
- (iii) When the compressor is turned ON

(b) Base heater OFF conditions

When either one of following conditions is satisfied, the base heater is turned OFF.

- (i) Outdoor air temperature (detected with Tho-A) is 5°C or higher.
- (ii) When the compressor stop has been detected for 30 minutes continuously
- (iii) In the cooling or dehumidifying mode

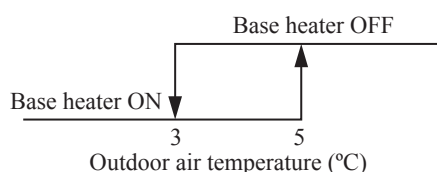

(II) Models FDC200, 250VSA

(1) Determination of compressor speed (Frequency)

Required frequency

- (a) Cooling/dehumidifying operation. Unit: rps

Model		FDC200	FDC250
Max. required frequency	Usual operation	120	120
	Outdoor air temperature $\leq 15^{\circ}\text{C}$ or indoor return air temperature $\leq 20^{\circ}\text{C}$	100	100
	Silent mode	80 (100)	70 (100)
Min. required frequency		15	20

Note(1) Value in () are for the SW7-3 OFF.

- (b) Heating operation. Unit: rps

Model		FDC200	FDC250
Max. required frequency	Usual operation	120	120
	Silent mode	80 (100)	70 (100)
Min. required frequency		15	20

Note(1) Value in () are for the SW7-3 OFF.

- (c) If the indoor fan speed becomes “Me” or “Lo”, Max required frequency goes down accordingly depending on indoor unit model.
- (d) Max. required frequency under high outdoor air temperature in cooling mode.
Maximum required frequency is selected according to the outdoor air temperature (Tho-A).

Unit: rps

Model		FDC200	FDC250
Max. required frequency	Outdoor air temperature is 40°C or higher	100	120

- (e) Max. required frequency under outdoor air temperature in heating mode.
Maximum required frequency is selected according to the outdoor air temperature (Tho-A).

Unit: rps

Model		FDC200	FDC250
Max. required frequency	Outdoor air temperature is 10°C or higher	120	120
	Outdoor air temperature is 18°C or higher	100	120



- (f) Selection of max. required frequency by heat exchanger temperature.
- (i) Maximum required frequency is selected according to the outdoor heat exchanger temperature (Tho-R) during cooling/dehumidifying or according to the indoor heat exchanger temperature (Thi-R) during heating mode.
- (ii) When there are 3 indoor heat exchanger temperatures (Thi-R), whichever the highest applies,

Unit: rps

Model			FDC200	FDC250
Max. required frequency	Cooling/dehumidifying	Outdoor heat exchanger temperature is 56°C or higher	110	120
	Heating	Indoor heat exchanger temperature is 56°C or higher	120	120

- (g) When any of the controls from (a) to (f) above may duplicate, whichever the smallest value among duplicated controls is taken as the maximum required frequency.
- (h) During heating, it is operated with the maximum required frequency until the indoor heat exchanger temperature becomes 40°C or higher.

(2) Compressor start control

- (a) Compressor starts upon receipt of the thermostat ON signal from the indoor unit.
- (b) However, at initial start after turning the power source breaker, it may enter the standby state for maximum 30 minutes (“ PREPARATION” is displayed on the remote control) in order to prevent the oil loss in the compressor.
If the cooling/dehumidifying/heating operation is selected from the remote control when the outdoor unit is in the standby state, “ PREPARATION” is displayed for 3 seconds on the remote control.

(3) Compressor soft start control**(a) Compressor protection start I**

[Control condition] Normally, the compressor operation frequency is raised in this start pattern.

[Control contents] (i) Starts with the compressor's target frequency at **A** rps.

However, when the outdoor air temperature (Tho-A) is 35°C or higher during cooling/dehumidifying or the indoor return air temperature (Thi-A) is 25°C or higher during heating, it starts at **C** rps.

(ii) At 30 seconds after the start of compressor, its target frequency changes to **B** rps and the compressor is operated for 2 - 4 minutes with its operation frequency fixed at **B** rps.

Model	Operation mode	A rps	B rps	C rps
FDC200	Cooling/Dehumidifying	45	45	25
	Heating	45	45	25
FDC250	Cooling/Dehumidifying	55	55	30
	Heating	55	55	30

(b) Compressor protection start III

[Control condition] Number of compressor starts is only 1 counted after the power source breaker ON.

[Control contents] Operates by selecting one of following start patterns according to the operation mode and the outdoor air temperature (Tho-A).

(i) Low frequency operation control during cooling/dehumidifying.

[Control condition] Upon establishing the conditions of compressor protection start III, the low frequency operation control is performed during cooling/dehumidifying.

[Control contents] 1) Starts with the compressor's target frequency at **A** rps. When the outdoor air temperature (Tho-A) is 35°C or higher, it starts at **C** rps.

2) At 30 seconds after the compressor start, the compressor's target frequency is changed to **B** rps and the compressor's operation frequency is fixed for 10 minutes.

Model	Operation mode	A rps	B rps	C rps
FDC200	Cooling/Dehumidifying	45	45	25
FDC250	Cooling/Dehumidifying	55	55	30

(ii) Low frequency operation control during heating.

[Control condition] When the conditions of compressor protection start III are established and one of following conditions. a) is satisfied, the low frequency operation control is performed during heating.

a) At 30 minutes or more after turning the power source breaker on.

[Control contents] a) If the compressor starts with 6 hours after the power source breaker turns on, and outdoor air temperature is lower than -2°C, unit starts by cooling mode for 3 minutes to prevent the liquid refrigerant from returning to compressor. (model FDC200 only)

b) Starts the compressor with its target frequency at **A** rps. However, when the indoor return air temperature (Thi-A) is 25°C or higher, it starts at **C** rps.

c) At 30 seconds after the start of compressor, the compressor's target frequency is changed to **B** rps and the compressor's operation frequency is fixed for 6-10 minutes.

Model	Operation mode	A rps	B rps	C rps
FDC200	Heating	45	30	25
FDC250	Heating	55	30	30

(4) Outdoor fan control**(a) Outdoor fan tap and fan motor speed**

Unit: min⁻¹

Model	Mode	Fan motor tap						
		① speed	② speed	③ speed	④ speed	⑤ speed	⑥ speed	⑦ speed
FDC200	Cooling/Dehumidifying	200	390	560	830	870	910	950
	Heating	200	390	560	830	870	910	950
FDC250	Cooling/Dehumidifying	200	370	600	750	850	900	950
	Heating	200	370	600	820	850	910	950

(b) Fan tap control during Cooling/Defumidifying operation

Fan taps are selected depending on the outdoor heat exchanger temperature (Tho-R1, R2) and the outdoor air temperature (Tho-A).

Note (1) It is detected by Tho-R1 or R2, whichever the higher.



	(A) zone	(B) zone	(C) zone	(D) zone
(a) zone	Tap 5(6)	Tap 5(6)	Tap 6(5/6)	Tap 4
(b) zone	Tap 5	Tap 5	Tap 4	Tap 3
(c) zone	Tap 4	Tap 4	Tap 3	Tap 2
(d) zone	Tap 3	Tap 3	Tap 2	Tap 1

Note (1) Value in () are for the model FDC200.

• Silent mode only

	(A) zone	(B) zone	(C) zone	(D) zone
(a) zone	Tap 5	Tap 5	Tap 4(5)	Tap 4
(b) zone	Tap 4	Tap 4	Tap 3	Tap 3
(c) zone	Tap 4	Tap 3	Tap 3	Tap 2
(d) zone	Tap 3	Tap 3	Tap 2	Tap 1

Note (1) Value in () is for the model FDC200.

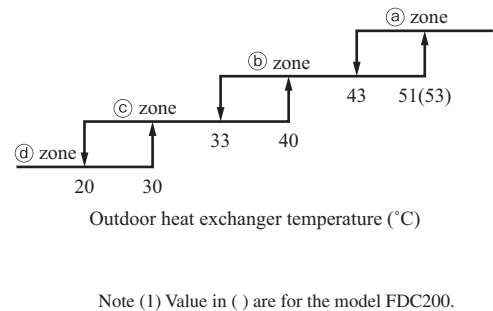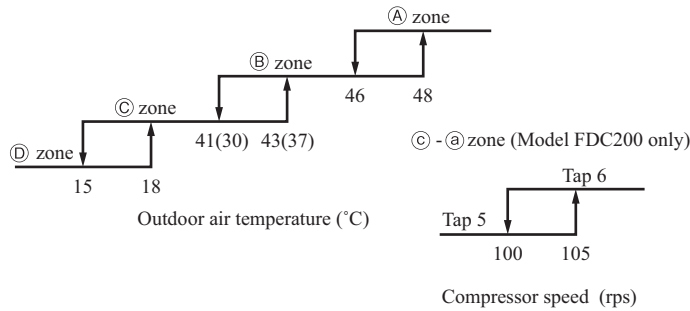

Note (1) Value in () are for the model FDC200.

(c) Fan tap control during heating operation

Fan taps are selected depending on the outdoor heat exchanger temperature (Tho-R1, R2) and the outdoor air temperature (Tho-A).

Note (1) It is detected by Tho-R1 or R2, whichever the lower.



	(A) zone	(B) zone	(C) zone
(a) zone	Tap 3	Tap 3	Tap 4
(b) zone	Tap 3	Tap 4	Tap 5
(c) zone	Tap 4	Tap 7(5)	Tap 7(6)

Note (1) Value in () are for the model FDC200.

• Silent mode only

	(A) zone	(B) zone	(C) zone
(a) zone	Tap 3	Tap 3	Tap 3
(b) zone	Tap 3	Tap 3	Tap 4
(c) zone	Tap 3(4)	Tap 5(4)	Tap 6(5)

Note (1) Value in () are for the model FDC200.

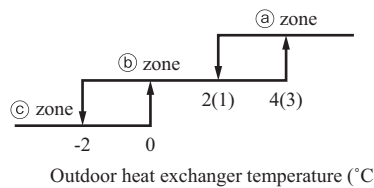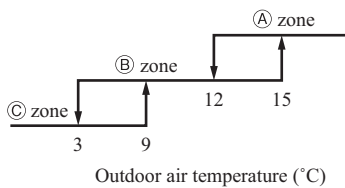


Note (1) Value in () are for the model FDC200.

(d) Outdoor fan control at cooling low outdoor air

- (i) When all the following conditions are established after the start of compressor, the following control is implemented. If the outdoor air temperature (Tho-A) is in the zone (B) in the cooling/dehumidifying mode, it has elapsed 20 seconds from the start of outdoor fan and the outdoor fan is at the tap 1 speed, the outdoor fan speed is controlled according to the outdoor heat exchanger temperature (Tho-R1, R2).

Note (1) It is detected with Tho-R1 or R2, whichever the higher.

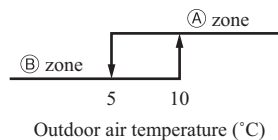


- (ii) The outdoor heat exchanger temperature is detected always and, when the number of revolutions of the outdoor fan speed has been increased or decreased, there is no change of fan speed for 20 seconds.
- (iii) Range of the outdoor fan speed under this control is as follows.
 - 1) Lower limit: 130min⁻¹
 - 2) Upper limit: 500min⁻¹
- (iv) As any of the following conditions is established, this control terminates.
 - 1) When the outdoor air temperature is in the zone (A) and the outdoor heat exchanger temperature at 30°C or higher is established for 40 seconds or more continuously.
 - 2) When the outdoor fan speed is 500min⁻¹ and the outdoor heat exchanger temperature at 30°C or higher is established for 40 seconds or more continuously.
 - 3) When the outdoor heat changer temperature at 45°C (model FDC250:50°C) or higher is established for 40 seconds or more.

(e) Caution at the outdoor fan start control

When the outdoor fan is running at 400min⁻¹ before operating the compressor, it may operate with the compressor only, without starting up the outdoor fan. This is normal.

(f) Snow protection fan control

If the dip switch (SW3-2) on the outdoor control PCB is turned ON, the outdoor fan is operated for 30 seconds at 4 tap speed once in every 10 minutes depending on the outdoor air temperature (detected with Tho-A) in the stop mode or anomalous stop mode.

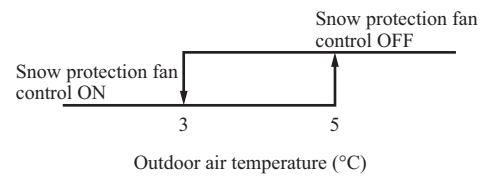




(5) Defrost operation

(a) Starting conditions

If all of the following defrost conditions A or conditions B are satisfied, the defrost operation starts.

(i) Defrost conditions A

- 1) Cumulative compressor operation time after the end of defrost operation has elapsed 37 minutes, and the cumulative compressor operation time after the start of heating operation (remote control ON) has elapsed 30 minutes.
- 2) After 5 minutes from the compressor ON
- 3) After 5 minutes from the start of outdoor fan
- 4) After satisfying all above conditions, if temperatures of the outdoor heat exchanger temperature thermistor (Tho-R1, R2) and the outdoor air temperature thermistor (Tho-A) become lower than the defrost operation start temperature as shown by the right figure for 15 seconds continuously, or the suction gas saturation temperature (SST) and the outdoor air temperature (Tho-A), which are obtained from the value detected by the low pressure sensor (PSL) stay for 3 minutes within the range below the defrost operation start temperature as shown by the right figure. However, it excludes for 10 minutes after the start of compressor and the outdoor air temperature is as shown by the lower figure.

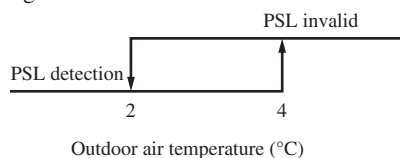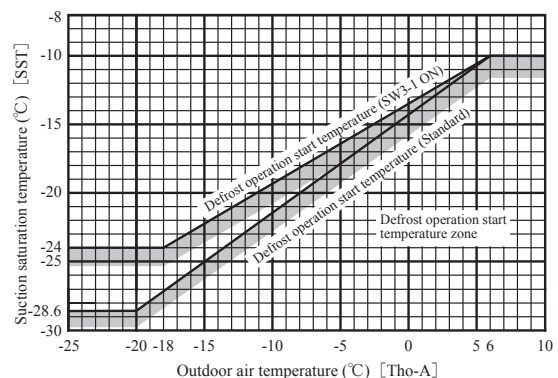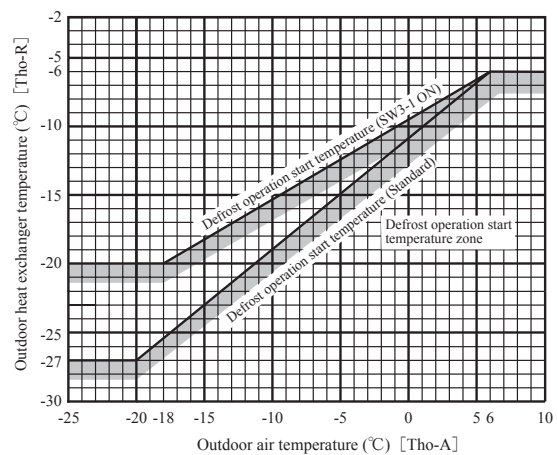

(ii) Defrost conditions B

- 1) When previous defrost end condition is the time out of defrost operation and it is in the heating operation after the cumulative compressor operation time after the end of defrost operation has become 30 minutes.
- 2) After 5 minutes from the start of compressor.
- 3) After 5 minutes from the start of outdoor fan.

(b) Ending conditions

When any of the following conditions is satisfied, the heating operation starts.

- (i) When it has elapsed 8 minutes and 20 seconds after the start of defrost operation. (After 10 minutes and 20 seconds for FDC250 model)
- (ii) When the outdoor heat exchanger temperatures (Tho-R1, R2), whichever the lower, becomes 16 (FDC250:12)°C or higher for 10 seconds continuously.

(c) Switching of defrost control with SW3-1


- (i) If SW3-1 on the outdoor control PCB is turned to ON, it becomes easier to enter the defrost operation. Use this when installing a unit at snowing regions.
- (ii) Control contents
 - 1) It allows entering the defrost operation under the defrost condition A when the cumulative heating operation time becomes 30 minutes. It is 37 minutes at SW3-1 OFF (Factory default).
 - 2) It allows entering the defrost operation under the defrost condition B when the cumulative heating operation time becomes 25 minutes. It is 30 minutes at SW3-1 OFF (Factory default).
 - 3) It allows the defrost operation with the outdoor heat exchanger temperature (Tho-R) and suction pressure saturation temperature (SST) being higher than normal.

(6) Protective control/anomalous stop control by compressor's number of revolutions

(a) Compressor discharge pipe temperature protection

(i) Protective control

As the discharge pipe temperature (detected with Tho-D) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of discharge pipe temperature.

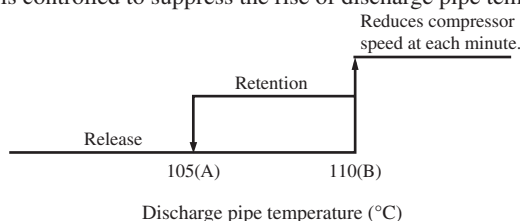


Note (1) Value in () are for the model FDC200.

Super heat	A	B
25°C or more	95	100
20°C or less	100	105

(ii) Anomalous stop control

- 1) If the discharge pipe temperature (detected with Tho-D) exceeds the setting value, the compressor stops.
- 2) When it is detected 2 times within 60 minutes or after continuous 60 minutes, including the stop of compressor, E36 is displayed on the remote control and it enters the anomalous stop mode.

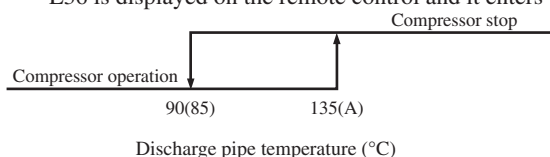

Note (1) Value in () are for the model FDC200.

Super heat	A
25°C or more	110
20°C or less	115


(iii) Reset of anomalous stop mode

As it drops to the reset value of 90 (85)°C or lower for 45 minutes continuously, it becomes possible to restart from the remote control.

(b) Cooling high pressure protection

(i) Protective control


- 1) Outdoor heat exchanger temperature (Tho-R) exceeds the setting value A.
- 2) When the outdoor air temperature (Tho-A) is 40°C or higher and the outdoor heat exchanger temperature (Tho-R) exceeds certain value (depends on compressor frequency).
- 3) Control value A is updated to an optimum value automatically according to the operating conditions.

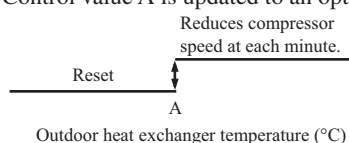

Control value A
54-60°C

(ii) Anomalous stop control

- 1) As the outdoor heat exchanger temperature (Tho-R) exceeds the setting value, the compressor stops.
- 2) If it is detected 5 times within 60 minutes or 65°C or higher continues for 60 minutes, including the stop of compressor, E35 is displayed on the remote control and it enters the anomalous stop mode.

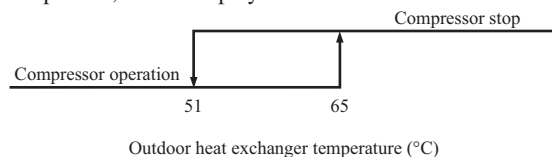


(iii) Reset of anomalous stop mode

As it reaches the reset value of 51°C or lower, it becomes possible to restart from the remote control.

(c) Heating high pressure protection


- (i) Protective control
 - 1) As the indoor heat exchanger temperature (Thi-R) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of high pressure.
 - 2) Control value A is updated to an optimum value automatically according to the operating conditions.

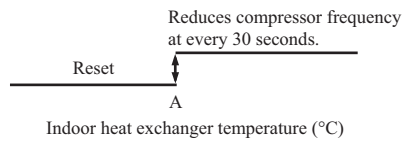

Model	Existing piping adaptation switch: SW5-1	
	OFF (Shipping)	ON
	Control value A (°C)	
FDC200	48-54	46-52
FDC250	52-58	

Note (1) Adaptation to existing piping is at ON.

- (ii) Anomalous stop control
Operation control function by the indoor unit control - See the heating overload protection, page 125.
- (iii) Adaptation to existing piping, stop control
If the existing piping adaptation switch, SW5-1, is turned ON, the compressor stops to protect existing piping when the indoor heat exchanger temperature (Thi-R) exceeds the setting value.

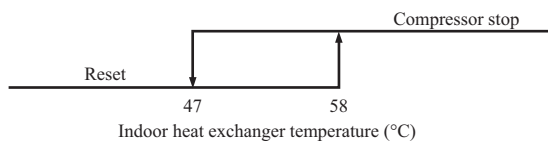


(d) Anomaly detection control by the high pressure switch (63H1)

- (i) If the pressure rises and operates the high pressure switch (opens at 4.15MPa/closes at 3.15MPa), the compressor stops.
- (ii) Under any of the following conditions, E40 is displayed and it enters the anomalous stop mode.
 - 1) When it occurs 5 times within 60 minutes that pressure rises and the compressor is stopped by 63H1.
 - 2) When 63H1 has been in the open state for 60 minutes continuously, including the stop of compressor.

(e) Low pressure control


- (i) Protective control
If the value detected by the low pressure sensor (PSL) exceeds the setting value, the compressor speed (frequency) is controlled to restrain the drop of pressure.

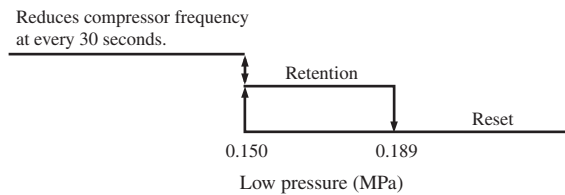

- (ii) Anomalous stop control
 - 1) When a value detected by the low pressure sensor (PSL) satisfies any of the following conditions, the compressor stops for its protection.
 - a) When the low pressure drops to 0.079MPa or under for 15 seconds continuously.
 - b) At 10 minutes after the start of compressor, the suction overheat becomes 30°C and the low pressure becomes 0.15MPa or under for 60 seconds continuously.
 - 2) E49 is displayed under any of the following conditions and it enters the anomalous stop mode.
 - a) When the low pressure drops 5 times within 60 minutes and the compressor stops under any of the above conditions.
 - b) When a value detected with the low pressure sensor becomes 0.079MPa or under for 5 minutes, including the stop of compressor.
 - 3) However, when the control condition 1). a) is established during the compressor protection start III, E49 is displayed at initial stop and it enters the anomalous stop mode.


(f) Compressor pressure ratio protection control

- (i) During heating operation, if the indoor heat exchanger temperature (Thi-R) and low pressure sensor (PSL) exceed the setting values at 10 minutes after the start of compressor, the compressor speed (frequency) is controlled to protect the compressor.
- (ii) This control is not performed during the outdoor fan ON and for 10 minutes from the start of outdoor fan.
- (iii) This control is not performed during defrosting operation and at 10 minutes after the reset of defrost operation.
- (iv) When there are 3 indoor heat exchanger temperatures (Thi-R), the highest temperature is detected.

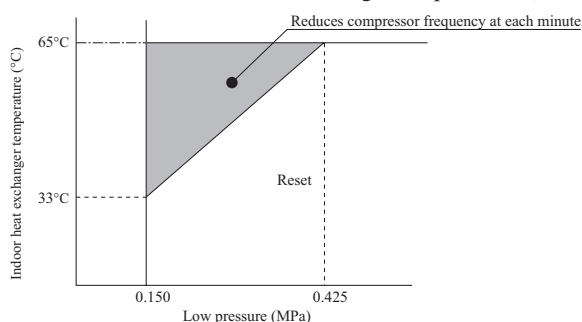

(g) Over-current protection current safe controls I, II

Detecting the outdoor inverter input (primary) current and the output (secondary) current, if the current values exceed setting values, the compressor speed (frequency) is controlled to protect the inverter.

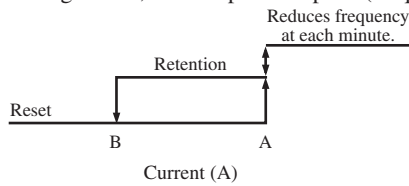


Model	Cooling		Heating		
	Control value A	Reset value B	Control value A	Reset value B	
Primary current side	FDC200	16.0	15.0	16.0	15.0
	FDC250	18.0	17.0	18.0	17.0
Secondary current side	FDC200	15.5	14.5	15.5	14.5
	FDC250	17.0	16.0	17.0	16.0

(h) Power transistor temperature protection (model FDC250 only)

(i) Protective control

If the power transistor temperature (detected with TIP) exceeds the setting value, the compressor speed (frequency) is controlled to suppress the rise of power transistor temperature.

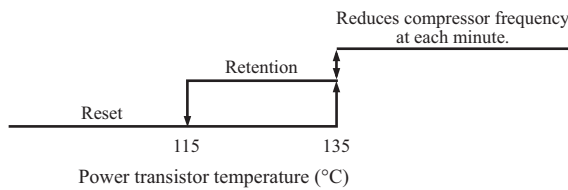

(ii) Anomalous stop control

- 1) If the power transistor temperature increases further, the protective switch in the power transistor trips and stops the compressor to protect the power transistor.
- 2) It enters the anomalous stop mode depending on one of the following conditions.
 - a) When the protective switch in the power transistor trips and stops the compressor 5 times within 60 minutes (Displays E41.)
 - b) When the protective switch in the power transistor trips and the state continues for 15 minutes, including the stop of compressor (Displays E51.)

(iii) Anomalous inverter PCB

- 1) If the power transistor detects anomaly 5 times within 60 minutes with compressor stop, E41 is displayed on the remote control and it enters the anomalous stop mode.
- 2) If the power transistor detects any anomaly for 15 minutes, including the stop of compressor, E51 is displayed on the remote control and it enters the anomalous stop mode.

(i) Anomalous power transistor current


- (i) Prevents over-current on the inverter. If the current value in the power transistor exceeds the setting value, the compressor stops.
- (ii) If the current value in the power transistor exceeds the specified value and the compressor stops 4 times within 30 minutes, E42 is displayed on the remote control and it enters the anomalous stop mode.

(j) Anomalous inverter communication

If the power transistor detects anomalies 4 times within 15 minutes, including the stop of compressor, E45 is displayed on the remote control and it enters the anomalous stop mode.

(k) Anti-frost control by the compressor frequency control

- (i) If the indoor heat exchanger temperature (detected with Thi-R) exceeds the setting value at 4 minutes after the start of compressor, the compressor speed (frequency) is controlled to initiate the anti-frost control of indoor heat exchanger.
- (ii) When there are 3 indoor heat exchanger temperatures (Thi-R), the lowest temperature is detected.

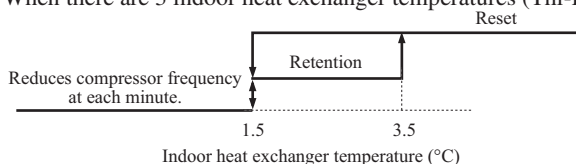

- (iii) Regarding the anti-frost control by the operation stop, refer to the operation control function by the indoor control and the cooling, dehumidifying frost prevention of page 125.

(l) Dewing prevention control

[Control condition] During cooling and dehumidifying operation, if all the following conditions are established, the compressor speed (frequency) is reduced to prevent dewing and water splash.

- (i) Cooling electronic expansion valve aperture (EEVC) is 500 pulses.
- (ii) Suction overheat is 10°C or higher.
- (iii) Compressor speed (frequency) is **A** rps or higher.

[Control contents] (i) When the suction overheat is 10°C or higher, the compressor speed (frequency) is reduced at each 1 minute.

(ii) Compressor speed (frequency) does not rise till the cooling expansion valve becomes 460 pulses.

(iii) This control takes **A** rps as its lower limit so that compressor speed is not controlled when it is less than **A** rps.

Model	A rps
FDC200	60
FDC250	60

(m) Refrigerant quantity shortage protection

Under the compressor protection start III control during cooling and dehumidifying operations, the following control is performed by detecting the indoor heat exchanger temperature (Thi-R) and the indoor return air temperature (Thi-A).

[Control condition] When the state that the indoor heat exchanger temperature (Thi-R) does not become lower than the indoor return air temperature (Thi-A) by 4°C or more continues for 1 minute.

[Control contents] It judges that the flowing of refrigerant in to the indoor unit is insufficient so that the compressor is stopped and E57 is displayed on the remote control.

(n) Broken wire detection on temperature thermistor and low pressure sensor

(i) Outdoor heat exchanger thermistor, outdoor air thermistor and low pressure sensor

If the following is detected for 5 second continuously within 2 minutes to 2 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop.

Note (1) During defrosting and for 3 minutes after the end of defrosting, it is not detected.

- Outdoor heat exchanger thermistor: -50°C or lower
- Outdoor air temperature thermistor: -45°C or lower
- Low pressure sensor: 0V or under or 4.0V or over

(ii) Discharge pipe temperature thermistor, suction pipe temperature thermistor, compressor under dome temperature thermistor

If the following is detected for 5 second continuously within 10 minutes to 10 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop.

Note (1) During defrost operation and for 3 minutes after the end of defrost operation, it is not detected.

- Discharge pipe temperature thermistor: -10°C or lower
- Suction pipe temperature thermistor: -50°C or lower
- Compressor under dome temperature thermistor : -50°C or lower

(o) Fan motor error

(i) If the fan speed of 100min⁻¹ or under is detected for 30 second continuously under the outdoor fan control (with the operation command of fan tap at ① speed or higher), the compressor stops.

(ii) When the fan motor speed drops to 100min⁻¹ or under 5 times within 60 minutes and the compressor stops, it enters the anomalous stop mode with E48 displayed on the remote control.

(p) Anomalous stop by the compressor start stop

(i) When it fails to shift to the compressor DC motor's rotor position defection operation at 5 seconds after establishing the compressor start condition, the compressor stops temporarily and restarts 3 minutes later.

(ii) If it fails to shift to the position detection operation again 20 times, it judges the anomalous compressor start and stops the compressor by the anomalous stop (E59).

(7) Silent mode

- (a) As “Silent mode start” signal is received from the remote control, it operates by dropping the outdoor fan tap and the compressor speed (frequency).
- (b) For details, refer to items (1) and (4) above.

(8) Test run

(a) It is possible to operate from the outdoor unit using the dip switch on the outdoor control PCB.

SW3-3	ON	SW3-4	OFF	Cooling test run
			ON	Heating test run
	OFF	Normal and end of test run		

Make sure to turn SW3-3 to OFF after the end of operation.

(b) Test run control

- (i) Operation is performed at the maximum compressor speed (frequency), which is determined for each model.
- (ii) Each protective control and error detection control are effective.
- (iii) If SW3-4 is switched during test run, the compressor is stopped once by the stop control and the cooling/heating operation is switched.
- (iv) Setting and display of remote control during test run

Mode \ Item	Contents of remote control setting/display
Cooling test run	Setting temperature of cooling is 5°C.
Heating test run	Setting temperature of heating (preparation) is 30°C.

(9) Pump-down control

Turning ON the pump-down switch SW1 for 2 seconds during the operation stop or anomalous stop (excluding the thermostat OFF), the pump-down operation is performed. (This is invalid when the indoor unit is operating. This is effective even when the indoor unit is stopped by the anomalous stop or the power source is turned OFF.)

(a) Control contents

- (i) Close the service valve at the liquid side. (It is left open at the gas side.)
- (ii) Compressor is started with the target speed (frequency) at FDC200:45, FDC250:55 rps in the cooling mode.
- (iii) Red and green lamps (LED) keeps flashing on the outdoor control PCB.
- (iv) Each of protection and error detection controls, excluding the low pressure control, anti-frost control and dewing prevention control, is effective.
- (v) Outdoor unit fan is controlled as usual.
- (vi) Electronic expansion valve is fully opened.

(b) Control ending conditions

Stop control is initiated depending on any of the following conditions.

- (i) Low pressure of 0.087MPa or lower is detected for 5 seconds continuously.
 - 1) Red LED: Light, Green LED: keeps flashing, Remote control: Displays stop.
 - 2) It is possible to restart when the low pressure is 0.087MPa or higher.
 - 3) Electronic expansion valve (cooling/heating) is kept fully open.
- (ii) Stop by the error detection control
 - 1) Red LED: keeps flashing, Green LED: keeps flashing
 - 2) Restart is prohibited. To return to normal operation, reset the power source.
 - 3) Electronic expansion valve (cooling/heating) is left fully open.
- (iii) When the cumulative operation time of compressor under the pump-down control becomes 5 minutes.
 - 1) Red LED: stays OFF, Green LED: keeps flashing, Remote control: Stop
 - 2) It is possible to pump-down again.
 - 3) Electronic expansion valve (cooling/heating) is left fully open.

Note (1) After the stop of compressor, close the service valve at the gas side.

Caution: Since pressing the pump-down switch cancels communications with the indoor unit, the indoor unit and the remote control display “Transmission error – E5”. This is normal.

(10) Base heater ON/OFF output control (Option)

(i) Base heater ON conditions


When all of following conditions are met, the base heater is turned ON.

- Outdoor air temperature (detected with Tho-A) is 1°C or lower.
- In the heating mode
- When the compressor is turned ON

(ii) Base heater OFF conditions

When either one of following conditions is met, the base heater is turned OFF.

- Outdoor air temperature (detected with Tho-A) is 3°C or higher.
- When the compressor stop has been detected for 30 minutes continuously
- In the cooling or dehumidifying mode

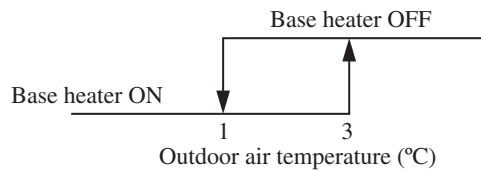

2.11 MAINTENANCE DATA

See page 150 of 1.11 chapter.

2.12 TECHNICAL INFORMATION

'16 • PAC-T-251

Model FDT100VNVG

Information to identify the model(s) to which the information relates to:		If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT100VG			
Outdoor unit model name		FDC100VN			
Function(indicate if present)				Average(mandatory)	
cooling		Yes		Warmer(if designated)	
heating		Yes		Colder(if designated)	
				Yes	
				No	
				No	
Item		symbol value unit		Item	
				symbol value class	
Design load				Seasonal efficiency and energy efficiency class	
cooling		Pdesignc 10.0 kW		cooling	
heating / Average		Pdesignh 7.9 kW		heating / Average	
heating / Warmer		Pdesignh - kW		heating / Warmer	
heating / Colder		Pdesignh - kW		heating / Colder	
				SEER 5.61 A+	
				SCOP/A 4.10 A+	
				SCOP/W - -	
				SCOP/C - -	
				unit	
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh	
heating / Average (-10°C)		Pdh 7.90 kW		heating / Average (-10°C)	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)	
				elbu 0 kW	
				elbu - kW	
				elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj	
Tj=35°C		Pdc 10.00 kW		Tj=35°C	
Tj=30°C		Pdc 7.37 kW		Tj=30°C	
Tj=25°C		Pdc 4.74 kW		Tj=25°C	
Tj=20°C		Pdc 4.30 kW		Tj=20°C	
				EERd 3.62 -	
				EERd 5.12 -	
				EERd 7.80 -	
				EERd 10.62 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C		Pdh 6.90 kW		Tj=-7°C	
Tj=2°C		Pdh 4.25 kW		Tj=2°C	
Tj=7°C		Pdh 2.80 kW		Tj=7°C	
Tj=12°C		Pdh 3.50 kW		Tj=12°C	
Tj=bivalent temperature		Pdh 7.90 kW		Tj=bivalent temperature	
Tj=operating limit		Pdh 6.25 kW		Tj=operating limit	
				COPd 3.05 -	
				COPd 3.85 -	
				COPd 5.20 -	
				COPd 6.80 -	
				COPd 2.68 -	
				COPd 2.17 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=2°C		Pdh - kW		Tj=2°C	
Tj=7°C		Pdh - kW		Tj=7°C	
Tj=12°C		Pdh - kW		Tj=12°C	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature	
Tj=operating limit		Pdh - kW		Tj=operating limit	
				COPd - -	
				COPd - -	
				COPd - -	
				COPd - -	
				COPd - -	
				COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C		Pdh - kW		Tj=-7°C	
Tj=2°C		Pdh - kW		Tj=2°C	
Tj=7°C		Pdh - kW		Tj=7°C	
Tj=12°C		Pdh - kW		Tj=12°C	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature	
Tj=operating limit		Pdh - kW		Tj=operating limit	
Tj=-15°C		Pdh - kW		Tj=-15°C	
				COPd - -	
				COPd - -	
				COPd - -	
				COPd - -	
				COPd - -	
				COPd - -	
Bivalent temperature				Operating limit temperature	
heating / Average		Tbiv -10 °C		heating / Average	
heating / Warmer		Tbiv - °C		heating / Warmer	
heating / Colder		Tbiv - °C		heating / Colder	
				Tol -20 °C	
				Tol - °C	
				Tol - °C	
Cycling interval capacity				Cycling interval efficiency	
for cooling		Pcycc - kW		for cooling	
for heating		Pcyh - kW		for heating	
				EERcyc - -	
				COPcyc - -	
Degradation coefficient				Degradation coefficient	
cooling		Cdc 0.25 -		heating	
				Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption	
off mode		Poff 15 W		cooling	
standby mode		Psb 15 W		heating / Average	
thermostat-off mode		Pto 25 W		heating / Warmer	
crankcase heater mode		Pck 25 W		heating / colder	
				Qce 625 kWh/a	
				Qhe 2699 kWh/a	
				Qhe - kWh/a	
				Qhe - kWh/a	
Capacity control(indicate one of three options)				Other items	
fixed		No		Sound power level(indoor)	
staged		No		Sound power level(outdoor)	
variable		Yes		Global warming potential	
				Rated air flow(indoor)	
				Rated air flow(outdoor)	
				Lwa 63 dB(A)	
				Lwa 70 dB(A)	
				GWP 1975 kgCO2eq.	
				- 2220 m3/h	
				- 4500 m3/h	
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative.			
		Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd.			
		7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX,			
		United Kingdom			
		PJF000Z425			

Model FDT100VSVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT100VG		Average(mandatory)		Yes	
Outdoor unit model name		FDC100VS		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes		Colder(if designated)		No	
heating		Yes					
Item symbol value unit				Item symbol value class			
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc	10.0	kW	cooling	SEER	5.61 A+
heating / Average		Pdesignh	7.9	kW	heating / Average	SCOP/A	4.10 A+
heating / Warmer		Pdesignh	-	kW	heating / Warmer	SCOP/W	- -
heating / Colder		Pdesignh	-	kW	heating / Colder	SCOP/C	- -
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh	7.90	kW	heating / Average (-10°C)	elbu	0 kW
heating / Warmer (2°C)		Pdh	-	kW	heating / Warmer (2°C)	elbu	- kW
heating / Colder (-22°C)		Pdh	-	kW	heating / Colder (-22°C)	elbu	- kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc	10.00	kW	Tj=35°C	EERd	3.62 -
Tj=30°C		Pdc	7.37	kW	Tj=30°C	EERd	5.12 -
Tj=25°C		Pdc	4.74	kW	Tj=25°C	EERd	7.80 -
Tj=20°C		Pdc	4.30	kW	Tj=20°C	EERd	10.62 -
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh	6.90	kW	Tj=-7°C	COPd	3.05 -
Tj=2°C		Pdh	4.25	kW	Tj=2°C	COPd	3.85 -
Tj=7°C		Pdh	2.80	kW	Tj=7°C	COPd	5.20 -
Tj=12°C		Pdh	3.50	kW	Tj=12°C	COPd	6.80 -
Tj=bivalent temperature		Pdh	7.90	kW	Tj=bivalent temperature	COPd	2.68 -
Tj=operating limit		Pdh	6.25	kW	Tj=operating limit	COPd	2.17 -
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh	-	kW	Tj=2°C	COPd	- -
Tj=7°C		Pdh	-	kW	Tj=7°C	COPd	- -
Tj=12°C		Pdh	-	kW	Tj=12°C	COPd	- -
Tj=bivalent temperature		Pdh	-	kW	Tj=bivalent temperature	COPd	- -
Tj=operating limit		Pdh	-	kW	Tj=operating limit	COPd	- -
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh	-	kW	Tj=-7°C	COPd	- -
Tj=2°C		Pdh	-	kW	Tj=2°C	COPd	- -
Tj=7°C		Pdh	-	kW	Tj=7°C	COPd	- -
Tj=12°C		Pdh	-	kW	Tj=12°C	COPd	- -
Tj=bivalent temperature		Pdh	-	kW	Tj=bivalent temperature	COPd	- -
Tj=operating limit		Pdh	-	kW	Tj=operating limit	COPd	- -
Tj=-15°C		Pdh	-	kW	Tj=-15°C	COPd	- -
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv	-10	°C	heating / Average	Tol	-20 °C
heating / Warmer		Tbiv	-	°C	heating / Warmer	Tol	- °C
heating / Colder		Tbiv	-	°C	heating / Colder	Tol	- °C
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcyc	-	kW	for cooling	EERcyc	- -
for heating		Pcyc	-	kW	for heating	COPcyc	- -
Degradation coefficient				Degradation coefficient			
cooling		Cdc	0.25	-	heating	Cdh	0.25 -
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff	15	W	cooling	Qce	625 kWh/a
standby mode		Psb	15	W	heating / Average	Qhe	2699 kWh/a
thermostat-off mode		Pto	25	W	heating / Warmer	Qhe	- kWh/a
crankcase heater mode		Pck	25	W	heating / colder	Qhe	- kWh/a
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)	Lwa	63	dB(A)
staged		No		Sound power level(outdoor)	Lwa	70	dB(A)
variable		Yes		Global warming potential	GWP	1975	kgCO2eq.
				Rated air flow(indoor)	-	2220	m3/h
				Rated air flow(outdoor)	-	4500	m3/h
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom					
		PJF000Z425					

Model FDT100VNPVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT50VG x 2		Average(mandatory)		Yes	
Outdoor unit model name		FDC100VN		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes		Colder(if designated)		No	
heating		Yes					
Item symbol value unit				Item symbol value class			
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc	10.0	kW	cooling	SEER	5.90 A+
heating / Average		Pdesignh	7.9	kW	heating / Average	SCOP/A	4.00 A+
heating / Warmer		Pdesignh	-	kW	heating / Warmer	SCOP/W	- -
heating / Colder		Pdesignh	-	kW	heating / Colder	SCOP/C	- -
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh	7.90	kW	heating / Average (-10°C)	elbu	0 kW
heating / Warmer (2°C)		Pdh	-	kW	heating / Warmer (2°C)	elbu	- kW
heating / Colder (-22°C)		Pdh	-	kW	heating / Colder (-22°C)	elbu	- kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc	10.00	kW	Tj=35°C	EERd	3.55 -
Tj=30°C		Pdc	7.37	kW	Tj=30°C	EERd	5.38 -
Tj=25°C		Pdc	4.64	kW	Tj=25°C	EERd	8.94 -
Tj=20°C		Pdc	4.30	kW	Tj=20°C	EERd	11.10 -
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh	6.90	kW	Tj=-7°C	COPd	2.80 -
Tj=2°C		Pdh	4.25	kW	Tj=2°C	COPd	3.72 -
Tj=7°C		Pdh	2.85	kW	Tj=7°C	COPd	5.45 -
Tj=12°C		Pdh	3.40	kW	Tj=12°C	COPd	6.60 -
Tj=bivalent temperature		Pdh	7.90	kW	Tj=bivalent temperature	COPd	2.50 -
Tj=operating limit		Pdh	6.45	kW	Tj=operating limit	COPd	2.35 -
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh	-	kW	Tj=2°C	COPd	- -
Tj=7°C		Pdh	-	kW	Tj=7°C	COPd	- -
Tj=12°C		Pdh	-	kW	Tj=12°C	COPd	- -
Tj=bivalent temperature		Pdh	-	kW	Tj=bivalent temperature	COPd	- -
Tj=operating limit		Pdh	-	kW	Tj=operating limit	COPd	- -
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh	-	kW	Tj=-7°C	COPd	- -
Tj=2°C		Pdh	-	kW	Tj=2°C	COPd	- -
Tj=7°C		Pdh	-	kW	Tj=7°C	COPd	- -
Tj=12°C		Pdh	-	kW	Tj=12°C	COPd	- -
Tj=bivalent temperature		Pdh	-	kW	Tj=bivalent temperature	COPd	- -
Tj=operating limit		Pdh	-	kW	Tj=operating limit	COPd	- -
Tj=-15°C		Pdh	-	kW	Tj=-15°C	COPd	- -
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv	-10	°C	heating / Average	Tol	-20 °C
heating / Warmer		Tbiv	-	°C	heating / Warmer	Tol	- °C
heating / Colder		Tbiv	-	°C	heating / Colder	Tol	- °C
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcyc	-	kW	for cooling	EERcyc	- -
for heating		Pcyc	-	kW	for heating	COPcyc	- -
Degradation coefficient				Degradation coefficient			
cooling		Cdc	0.25	-	heating	Cdh	0.25 -
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff	18	W	cooling	Qce	593 kWh/a
standby mode		Psb	18	W	heating / Average	Qhe	2765 kWh/a
thermostat-off mode		Pto	20	W	heating / Warmer	Qhe	- kWh/a
crankcase heater mode		Pck	25	W	heating / colder	Qhe	- kWh/a
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)	Lwa	65	dB(A)
staged		No		Sound power level(outdoor)	Lwa	70	dB(A)
variable		Yes		Global warming potential	GWP	1975	kgCO2eq.
				Rated air flow(indoor)	-	2220	m3/h
				Rated air flow(outdoor)	-	4500	m3/h
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom					
		P.JF000Z425					


Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT50VG x 2		Average(mandatory)		Yes	
Outdoor unit model name		FDC100VS		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes		Colder(if designated)		No	
heating		Yes					
Item symbol value unit				Item symbol value class			
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc	10.0	kW	cooling	SEER	5.90 A+
heating / Average		Pdesignh	7.9	kW	heating / Average	SCOP/A	4.00 A+
heating / Warmer		Pdesignh	-	kW	heating / Warmer	SCOP/W	- -
heating / Colder		Pdesignh	-	kW	heating / Colder	SCOP/C	- -
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh	7.90	kW	heating / Average (-10°C)	elbu	0 kW
heating / Warmer (2°C)		Pdh	-	kW	heating / Warmer (2°C)	elbu	- kW
heating / Colder (-22°C)		Pdh	-	kW	heating / Colder (-22°C)	elbu	- kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc	10.00	kW	Tj=35°C	EERd	3.55 -
Tj=30°C		Pdc	7.37	kW	Tj=30°C	EERd	5.38 -
Tj=25°C		Pdc	4.64	kW	Tj=25°C	EERd	8.94 -
Tj=20°C		Pdc	4.30	kW	Tj=20°C	EERd	11.10 -
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh	6.90	kW	Tj=-7°C	COPd	2.80 -
Tj=2°C		Pdh	4.25	kW	Tj=2°C	COPd	3.72 -
Tj=7°C		Pdh	2.85	kW	Tj=7°C	COPd	5.45 -
Tj=12°C		Pdh	3.40	kW	Tj=12°C	COPd	6.60 -
Tj=bivalent temperature		Pdh	7.90	kW	Tj=bivalent temperature	COPd	2.50 -
Tj=operating limit		Pdh	6.45	kW	Tj=operating limit	COPd	2.35 -
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh	-	kW	Tj=2°C	COPd	- -
Tj=7°C		Pdh	-	kW	Tj=7°C	COPd	- -
Tj=12°C		Pdh	-	kW	Tj=12°C	COPd	- -
Tj=bivalent temperature		Pdh	-	kW	Tj=bivalent temperature	COPd	- -
Tj=operating limit		Pdh	-	kW	Tj=operating limit	COPd	- -
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh	-	kW	Tj=-7°C	COPd	- -
Tj=2°C		Pdh	-	kW	Tj=2°C	COPd	- -
Tj=7°C		Pdh	-	kW	Tj=7°C	COPd	- -
Tj=12°C		Pdh	-	kW	Tj=12°C	COPd	- -
Tj=bivalent temperature		Pdh	-	kW	Tj=bivalent temperature	COPd	- -
Tj=operating limit		Pdh	-	kW	Tj=operating limit	COPd	- -
Tj=-15°C		Pdh	-	kW	Tj=-15°C	COPd	- -
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv	-10	°C	heating / Average	Tol	-20 °C
heating / Warmer		Tbiv	-	°C	heating / Warmer	Tol	- °C
heating / Colder		Tbiv	-	°C	heating / Colder	Tol	- °C
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcyc	-	kW	for cooling	EERcyc	- -
for heating		Pcyc	-	kW	for heating	COPcyc	- -
Degradation coefficient				Degradation coefficient			
cooling		Cdc	0.25	-	heating	Cdh	0.25 -
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff	18	W	cooling	Qce	593 kWh/a
standby mode		Psb	18	W	heating / Average	Qhe	2765 kWh/a
thermostat-off mode		Pto	20	W	heating / Warmer	Qhe	- kWh/a
crankcase heater mode		Pck	25	W	heating / colder	Qhe	- kWh/a
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)	Lwa	54	dB(A)
staged		No		Sound power level(outdoor)	Lwa	70	dB(A)
variable		Yes		Global warming potential	GWP	1975	kgCO2eq.
				Rated air flow(indoor)	-	1200	m3/h
				Rated air flow(outdoor)	-	4500	m3/h
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom					
		PJF000Z425					

3. STANDARD INVERTER PACKAGED AIR-CONDITIONERS

CONTENTS


3.1 SPECIFICATIONS	377
3.2 EXTERIOR DIMENSIONS	380
(1) Indoor units	380
(2) Outdoor units	380
(3) Remote control (Option parts)	382
3.3 ELECTRICAL WIRING	383
(1) Indoor units	383
(2) Outdoor units	383
3.4 NOISE LEVEL	386
3.5 TEMPERATURE AND VELOCITY DISTRIBUTION	387
3.6 PIPING SYSTEM	387
3.7 RANGE OF USAGE & LIMITATIONS	389
3.8 SELECTION CHART	392
3.8.1 Capacity tables	392
3.8.2 Correction of cooling and heating capacity in relation to air flow rate control (fan speed)	397
3.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping	397
3.8.4 Height difference between the indoor unit and outdoor unit	397
3.9 APPLICATION DATA	398
3.9.1 Installation of indoor unit	398
3.9.2 Electric wiring work installation	398
3.9.3 Installation of wired remote control (Option)	398
3.9.4 Installation of outdoor unit	398
(1) Model FDC71VNP	398
(2) Model FDC90VNP	405
(3) Model FDC100VNP	412
3.10 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER	419
3.10.1 Remote control	419
3.10.2 Operation control function by the wired remote control	419
3.10.3 Operation control function by the indoor control	419
3.10.4 Operation control function by the outdoor control	419
(I) Models FDC71, 90VNP	419
(1) Compressor speed	419
(2) Compressor protection start	419
(3) Outdoor fan control	419
(4) Defrost operation	421
(5) Cooling overload protective control	422
(6) Cooling high pressure control	422
(7) Cooling low outdoor temperature protective control	422
(8) Heating high pressure control	423
(9) Heating overload protective control	423

(10) Heating low outdoor temperature protective control	424
(11) Compressor overheat protection	424
(12) Current safe	424
(13) Current cut	425
(14) Outdoor unit failure	425
(15) Serial signal transmission error protection	425
(16) Rotor lock	425
(17) Refrigeration cycle system protection	425
(18) Silent mode	425
(19) Broken wire detection on temperature sensor	426
(II) Model FDC100VNP	427
(1) Compressor speed	427
(2) Compressor protection start	427
(3) Outdoor fan control	427
(4) Defrost operation	429
(5) Cooling overload protective control.....	430
(6) Cooling high pressure control.....	430
(7) Cooling low outdoor temperature protective control	430
(8) Heating high pressure control	431
(9) Heating overload protective control I	431
(10) Heating overload protective control II.....	431
(11) Heating low outdoor temperature protective control	432
(12) Compressor overheat control	432
(13) Current safe	432
(14) Current cut	433
(15) Outdoor unit failure.....	433
(16) Serial signal transmission error protection	433
(17) Rotor lock	433
(18) Refrigeration cycle system protection.....	433
(19) Silent mode	433
(20) Broken wire detection on temperatures sensor.....	434
(21) Base heater ON/OFF output control (Option)	434
(22) Reverse operation start for compressor protection	434
3.11 MAINTENANCE DATA	434
3.12 TECHNICAL INFORMATION	435

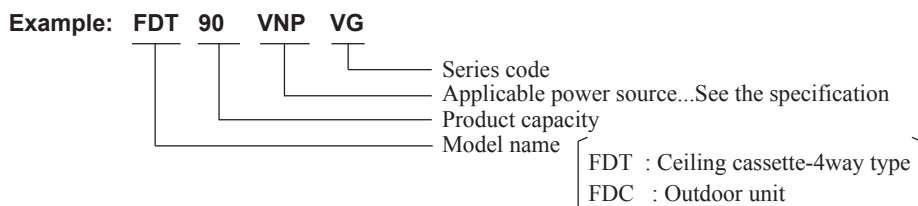


3.1 SPECIFICATIONS


Item		Model	FDT71VNPVG				
			Indoor unit		Outdoor unit		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	7.1 [1.4(Min.)– 7.1(Max.)]				
	Nominal heating capacity (range)	kW	7.1 [1.0(Min.)– 7.1(Max.)]				
	Power consumption	Cooling	kW	2.50			
		Heating		1.90			
	Max power consumption		3.27				
	Running current	Cooling	A	11.1 / 11.6			
		Heating		8.5 / 8.9			
	Inrush current, max current		5, 14.5				
	Power factor	Cooling	%	98 / 98			
		Heating		97 / 97			
	EER	Cooling		2.84			
	COP	Heating		3.74			
Sound power level	Cooling	dB(A)	62		67		
	Heating		P-Hi : 46 Hi : 35 Me : 34 Lo : 29		54		
Sound pressure level	Cooling	dB(A)	—				
	Heating		49				
Silent mode sound pressure level			—				
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		640×800(+71)×290		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5		45		
Compressor type & Q'ty			—		RMT5113MDE2 (Twin Rotary type)×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.45 (MA68)		
Refrigerant (Type, Amount, pre-charge length)		kg	R410A 1.6kg in outdoor unit (incl. the amount for the piping of : 15m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >		34 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12			36	
	Heating						
Available external static pressure		Pa	0		—		
Outside air intake			Possible				
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)				
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)		
Electric heater		W	—		—		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection, Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line: I/U φ 15.88 (5/8") Pipe φ 12.7(1/2")×0.8 O/U φ 12.7 (1/2")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.30m				
	Vertical height diff. between O.U. and I.U.	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)		
	Drain hose		Hose connectable with VP25(O.D.32)		Holes size φ 20 x 5pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850				
Recommended breaker size		A	—				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	1.5mm ² x 4 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number			IPX0		IPX4		
Standard accessories			Mounting kit, Drain hose		Drain elbow, Drain hole grommet		
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Cooling	Indoor air temperature	Outdoor air temperature		Standards		
		DB	WB	DB			WB
	27°C	19°C	35°C	24°C			
Heating	Indoor air temperature	Outdoor air temperature		ISO5151-T1			
	20°C	—	7°C			6°C	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							

PJF000Z425 

Item		Model	FDT90VNPVG				
			Indoor unit	FDT100VG	Outdoor unit	FDC90VNP	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	9.0 [1.9(Min.)- 9.0(Max.)]				
	Nominal heating capacity (range)	kW	9.0 [1.5(Min.)- 9.0(Max.)]				
	Power consumption	Cooling	kW	2.67			
		Heating		2.19			
	Max power consumption		4.19				
	Running current	Cooling	A	12.0 / 12.5			
		Heating		9.9 / 10.4			
	Inrush current, max current			5, 18			
	Power factor	Cooling	%	97 / 97			
		Heating		96 / 96			
	EER	Cooling		3.37			
	COP	Heating		4.11			
Sound power level	Cooling	dB(A)	63		69		
	Heating		P-Hi : 48 Hi : 39 Me : 37 Lo : 31		57		
Sound pressure level	Cooling	dB(A)	-		55		
	Heating		-		Cooling:52 / Heating:50		
Silent mode sound pressure level			-				
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		750 x 880(+88) x 340		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5		57		
Compressor type & Q'ty			-		RMT5118MDE2 (Twin Rotary type)×1		
Compressor motor (Starting method)		kW	-		Direct line start		
Refrigerant oil (Amount, type)		ℓ	-		0.675 (MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 2.1kg in outdoor unit (incl. the amount for the piping of : 15m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	140 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17			63	
	Heating					49.5	
Available external static pressure		Pa	0		-		
Outside air intake			Possible				
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)				
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve (for fan motor & compressor)		
Electric heater		W	-		-		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		-				
Safety equipments			Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection, Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line: I/U φ 15.88 (5/8") Pipe φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	-				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.30m				
	Vertical height diff. between O.U. and I.U.	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)		
Drain hose		Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs			
Drain pump, max lift height		mm	Built-in drain pump , 850		-		
Recommended breaker size		A	-				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	1.5mm ² x 4 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number			IPX0		IPX4		
Standard accessories			Mounting kit, Drain hose		Drain elbow, Drain hole grommet		
Option parts			-				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	-	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							

PJF000Z425 

Model		FDT100VNP1VG				
Item		Indoor unit		Outdoor unit		
		FDT100VG		FDC100VNP		
Power source		1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW		10.0 [2.8(Min.)– 11.2(Max.)]		
	Nominal heating capacity (range)	kW		11.2 [2.5(Min.)– 12.5(Max.)]		
	Power consumption	Cooling	kW		2.76	
		Heating	kW		2.84	
	Max power consumption	kW		4.60		
	Running current	Cooling	A		12.1 / 12.7	
		Heating	A		12.5 / 13.0	
	Inrush current, max current	A		5, 21		
	Power factor	Cooling	%		99	
		Heating	%		99	
	EER	Cooling			3.62	
	COP	Heating			3.94	
	Sound power level	Cooling	dB(A)		63	
Heating		dB(A)		70		
Sound pressure level	Cooling	P-Hi : 48 Hi : 39 Me : 37 Lo : 31		57		
	Heating			61		
Silent mode sound pressure level			Cooling:50 / Heating:49			
Exterior dimensions (Height x Width x Depth)	mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		845×970×370		
Exterior appearance (Munsell color)		Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg	Unit 25 Panel 5		70		
Compressor type & Q'ty		—		RMT5126MCE1 (Twin Rotary type)×1		
Compressor motor (Starting method)	kW	—		Direct line start		
Refrigerant oil (Amount, type)	ℓ	—		0.90 (MA68)		
Refrigerant (Type, amount, pre-charge length)	kg	R410A 2.55kg in outdoor unit (incl. the amount for the piping of : 15m)				
Heat exchanger		Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control		Capillary tubes + Electronic expansion valve				
Fan type & Q'ty		Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)	W	140 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m³/min		75		
	Heating	m³/min		79		
Available external static pressure	Pa	0		—		
Outside air intake		Possible		—		
Air filter, Quality / Quantity		Pocket plastic net ×1(Washable)		—		
Shock & vibration absorber		Rubber sleeve(for fan motor)		Rubber sleeve (for fan motor & compressor)		
Electric heater	W	—		—		
Operation control	Remote control	(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control	Thermostat by electronics				
	Operation display	—				
Safety equipments		Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection, Abnormal discharge temperature protection.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")×0.8 O/U φ 9.52 (3/8") Gas line: I/U φ 15.88 (5/8") Pipe φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")			
	Connecting method		Flare piping		Flare piping	
	Attached length of piping	m	—		—	
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.30m			
	Vertical height diff. between O.U. and I.U.	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)	
Drain hose		Hose connectable with VP25(O.D.32)		Holes size φ 20 x 3pcs		
Drain pump, max lift height	mm	Built-in drain pump , 850		—		
Recommended breaker size	A	—				
L.R.A. (Locked rotor ampere)	A	5.0				
Interconnecting wires	Size x Core number	1.5mm ² × 4 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number		IPX0		IPX4		
Standard accessories		Mounting kit, Drain hose		0		
Option parts		—				
Notes	(1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature		
Operation		DB	WB	DB	WB	
Cooling		27°C	19°C	35°C	24°C	
Heating		20°C	—	7°C	6°C	
		Standards				
		ISO5151-T1				
	(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
	(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
	(4) Select the breaker size according to the own national standard.					
	(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.					






3.2 EXTERIOR DIMENSIONS

- (1) Indoor units See page 24.
- (2) Outdoor units
Model FDC71VNP

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the lower right corner of the front panel.

Symbol	Content
A	Service valve connection (gas side) $\phi 12.7 (1/2")$ (Flare)
B	Service valve connection (liquid side) $\phi 6.35 (1/4")$ (Flare)
C	Pipe / cable draw-out hole
D	Drain discharge hole
E	Anchor bolt hole

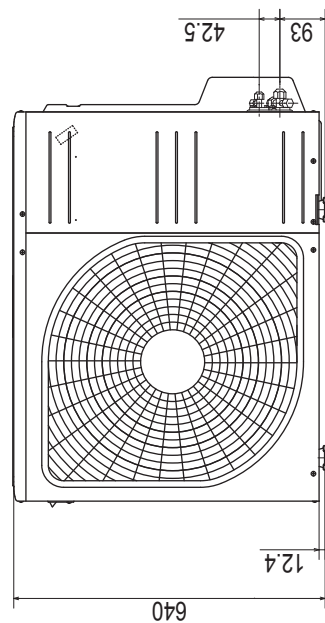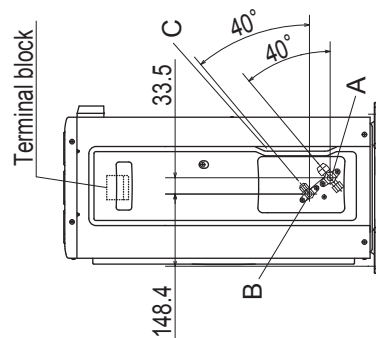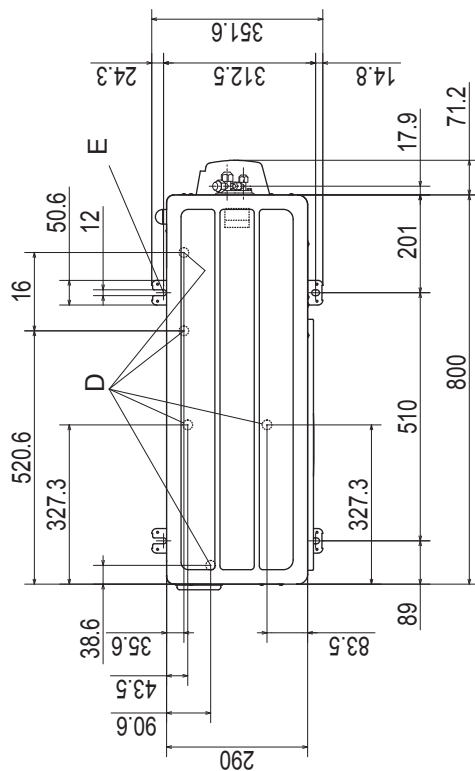

Minimum installation space


Examples of installation Dimensions	I	II	III	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

Unit:mm

PCA001Z713



Model FDC90VNP

Symbol	Content
A	Service valve connection (gas side) φ 15.88 (5/8") (Flare)
B	Service valve connection (liquid side) φ 6.35 (1/4") (Flare)
C	Pipe / cable draw-out hole
D	Drain discharge hole φ 20 x 3 places
E	Anchor bolt hole M10 x 4 places

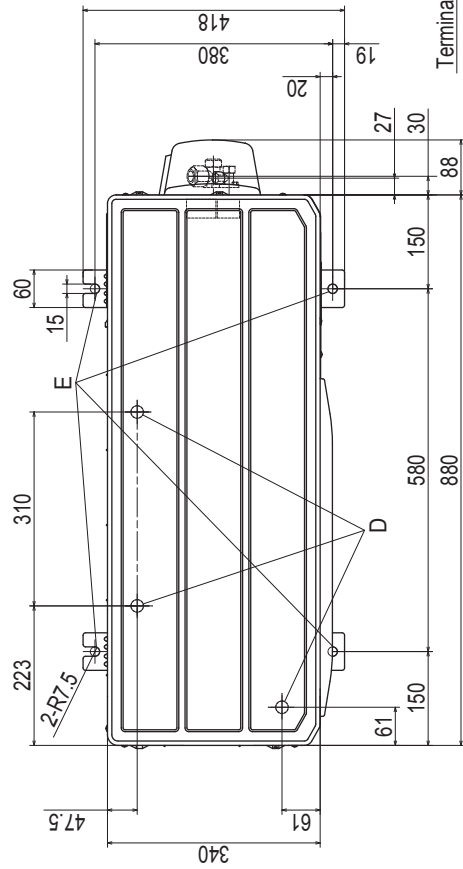

Note

- (1) It must not be surrounded by walls on four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subjected to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the unit's height.
- (6) The model name label is attached on the lower right corner of the front panel.

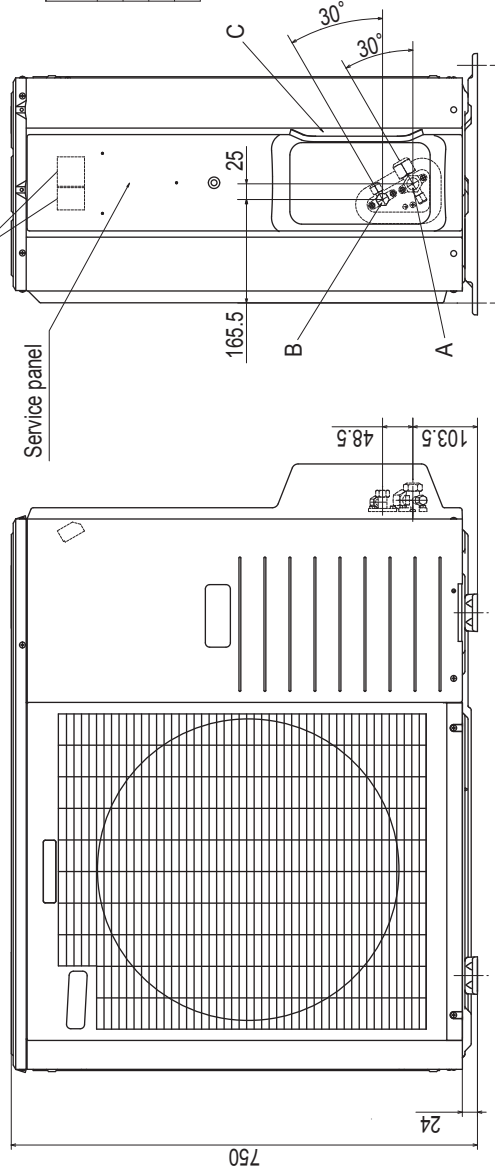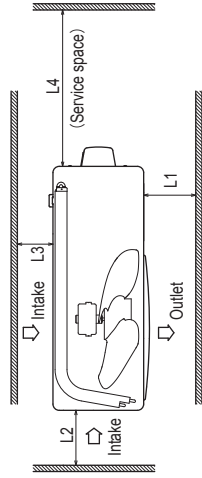

Minimum installation space

Examples of installation	I	II	III
Dimensions	Open	Open	500
L1	300	250	Open
L2	100	150	100
L3	250	250	250
L4	250	250	250

Unit:mm


PCA001Z714

Model FDC100VNP

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet face is perpendicular to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the service panel.

Symbol	Content
A	Service valve connection (gas side) $\phi 15.88 (5/8")$ (Flare)
B	Service valve connection (liquid side) $\phi 9.52 (3/8")$ (Flare)
C	Pipe/cable draw-out hole
D	Drain discharge hole $\phi 20 \times 3$ places
E	Anchor bolt hole M10 \times 4 places
F	Cable draw-out hole $\phi 30 \times 3$ places

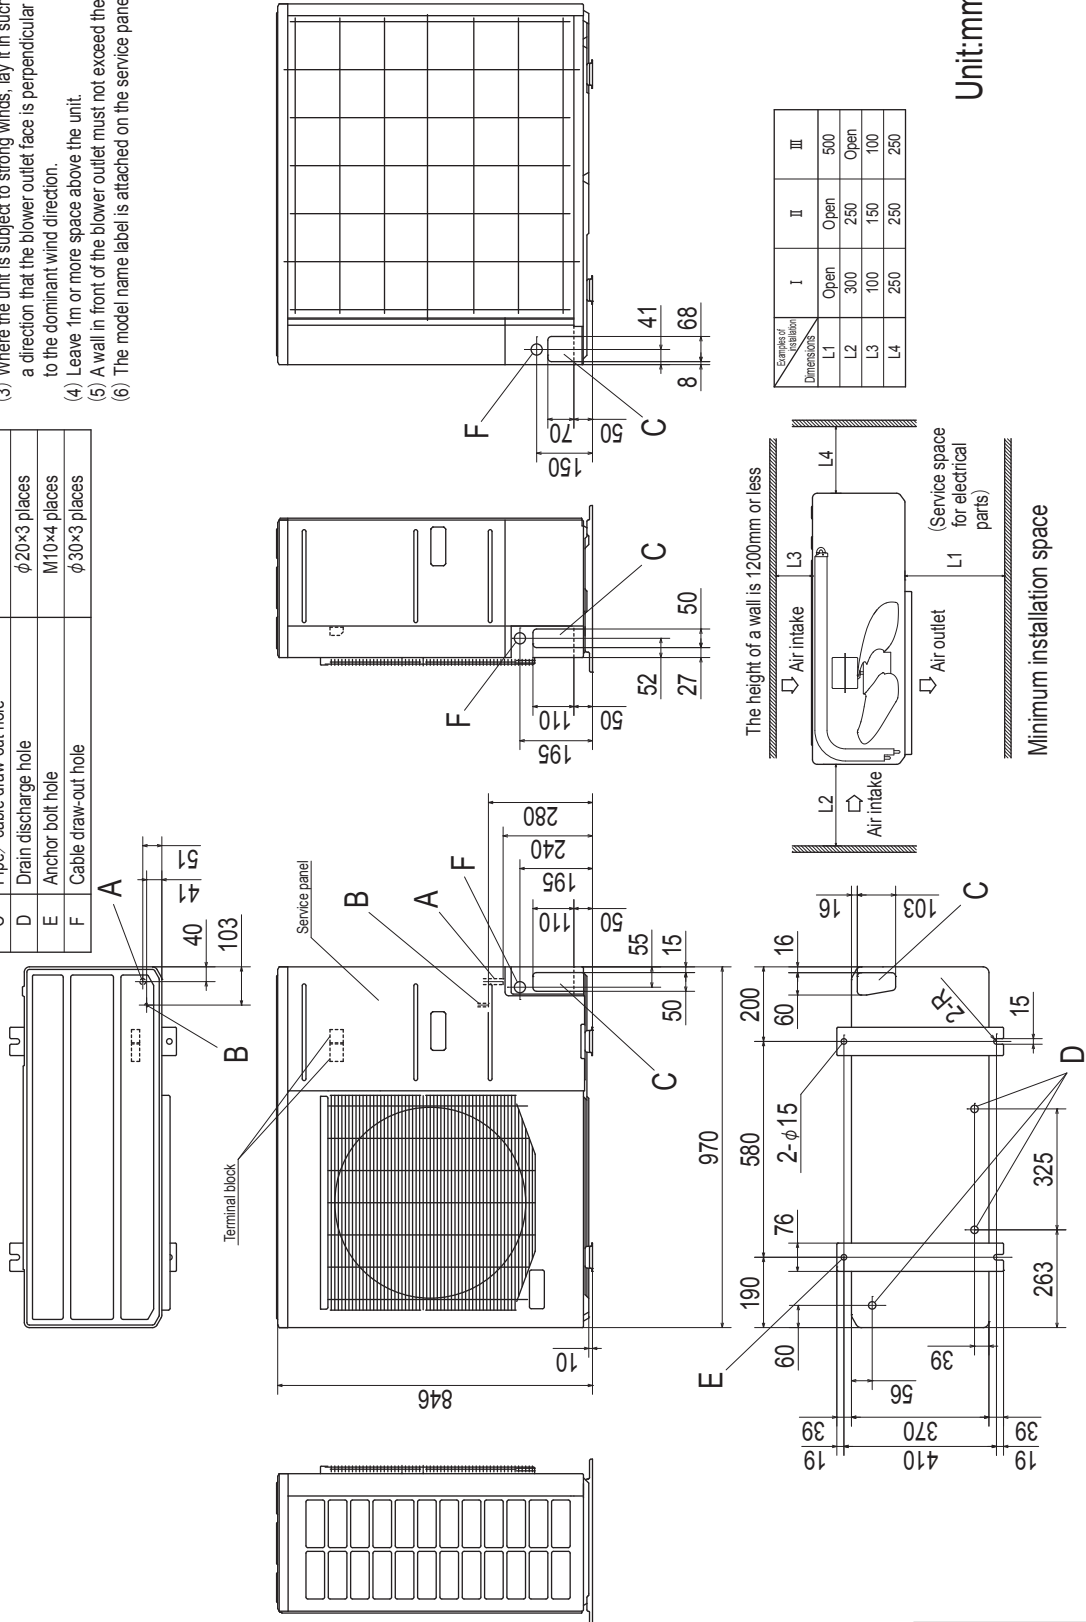


Unit:mm

PCA001Z787

3.3 ELECTRICAL WIRING

- (1) Indoor units See page 32.
 - (2) Outdoor units
- Model FDC71VNP

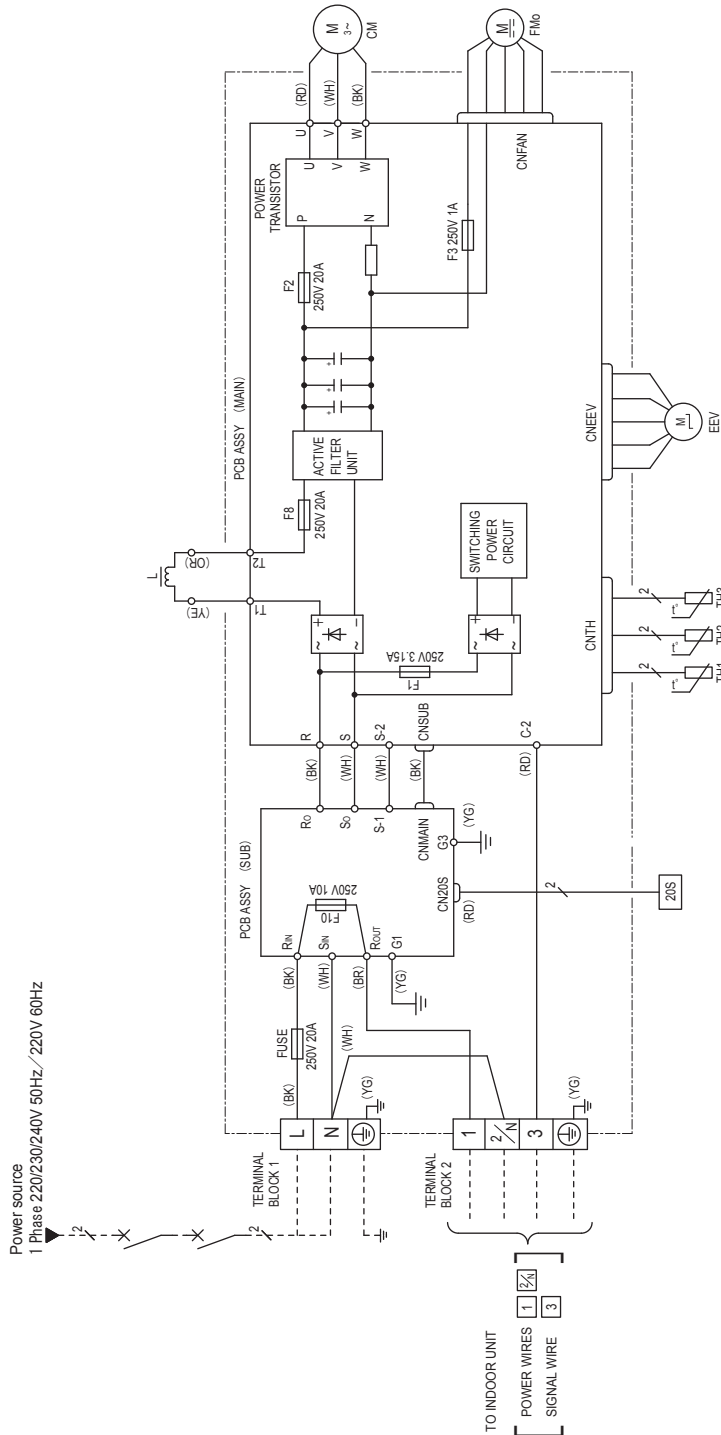

Power cable, indoor-outdoor connecting wires

Model	MAX running current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm ²)
FDC71	14.5	2.0	15	1.5mm ² x 4	1.5

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Meaning of marks


Item	Description
CM	Compressor motor
CN20S	Connector
CNTH	Heat exchanger sensor (outdoor unit)
CNEEV	Outdoor air temp sensor
CNFAN	Discharge pipe temp sensor
EEV	Solenoid coil for 4 way valve
F3 250V 1A	Electric expansion valve (coil)
FMo	Fan motor
L	Reactor
TH1	Heat exchanger sensor (outdoor unit)
TH2	Outdoor air temp sensor
TH3	Discharge pipe temp sensor
20S	Solenoid coil for 4 way valve

Color marks

Mark	Color
BK	Black
BR	Brown
OR	Orange
RD	Red
WH	White
YE	Yellow
YG	Yellow/Green

PCA001Z715

Model FDC90VNP

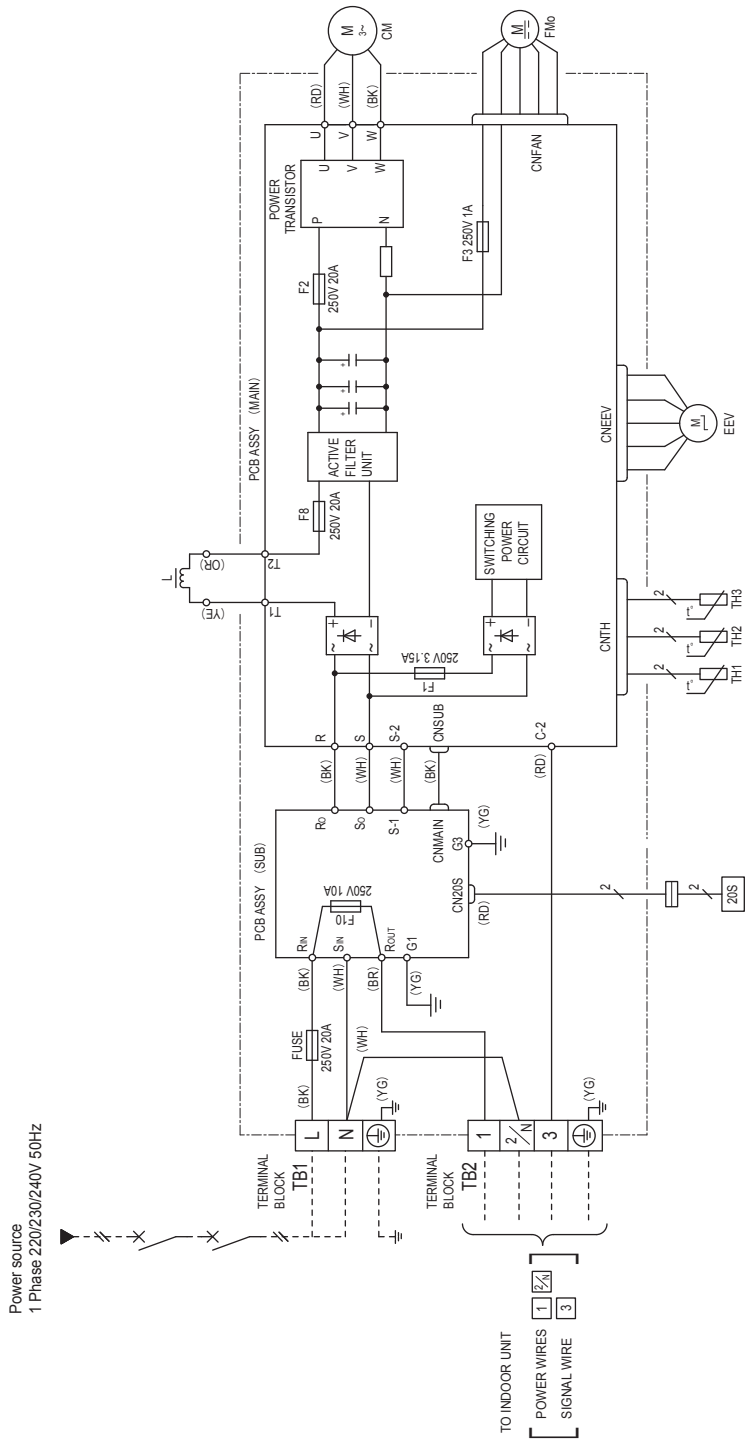

Power cable, indoor-outdoor connecting wires

Model	MAX running current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm ²)
FDC90	18	2.5	15	1.5mm ² x 4	1.5

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Meaning of marks


Item	Description
CM	Compressor motor
CN20S	Connector
CNTH	
CNEEV	
CNFAN	
EEV	Electric expansion valve (coil)
FMo	Fan motor
L	Reactor
TH1	Heat exchanger sensor (outdoor unit)
TH2	Outdoor air temp.sensor
TH3	Discharge pipe temp.sensor
Z0S	Solenoid coil for 4 way valve

Color marks

Mark	Color
BK	Black
BR	Brown
OR	Orange
RD	Red
WH	White
YE	Yellow
YG	Yellow/Green

PCA001Z716

Model FDC100VNP

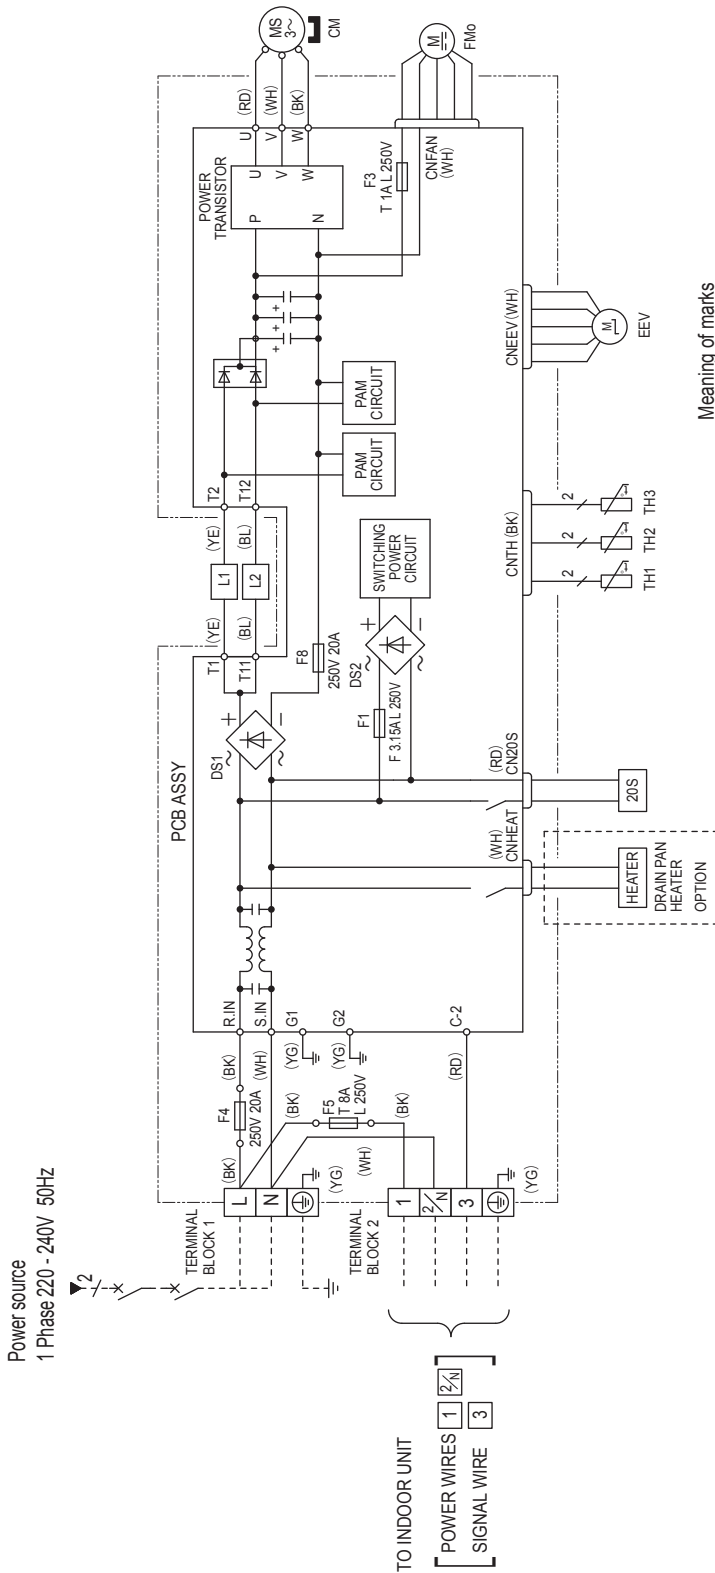

Power cable, indoor-outdoor connecting wires

MODEL NAME	MAX running current (A)	Power cable size (mm ²)	Power cable length (m)	indoor-outdoor wire size x number (mm)	Earth wire size (mm)
FDC100VNP	21	5.5	25	φ1.6 × 3	φ1.6

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Color marks

Mark	Color
BK	Black
BL	Blue
RD	Red
WH	White
YE	Yellow
YG	Yellow / Green

Meaning of marks

Item	Description
20S	Solenoid coil for 4 way valve
CN20S	Connector
CNEEV	Compressor motor
CNFAN	Diode stack
CNHEAT	Electric expansion valve (coil)
CNTH	Fan motor
CM	Reactor
DS1,2	Heat exchanger sensor
EEV	Outdoor air temp. sensor
FMO	Discharge pipe temp. sensor
L1,2	Jumper (※)
TH1	
TH2	
TH3	
J2	

Note(1) ※ By cutting J2, the operation of cooling start in heating mode is disablement.

PCA001Z788

3.4 NOISE LEVEL

Notes(1) The data are based on the following conditions.

Ambient air temperature: Indoor unit 27°CWB. Outdoor unit 35°CDB.

(2) The data in the chart are measured in an anechoic room.

(3) The noise levels measured in the field are usually higher than the data because of reflection.

(1) Indoor units See page 37.

(2) Outdoor units



Measured based on ISO-T1, JIS B 8616

Mike position: at highest noise level in position as mentined below



Distance from front side 1m

Height 1m



Model FDC71VNP

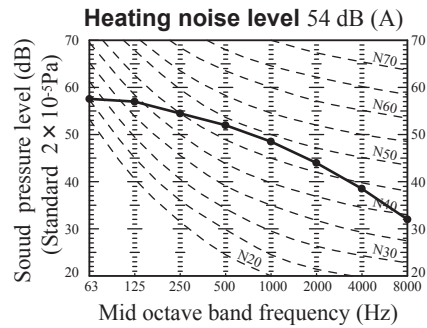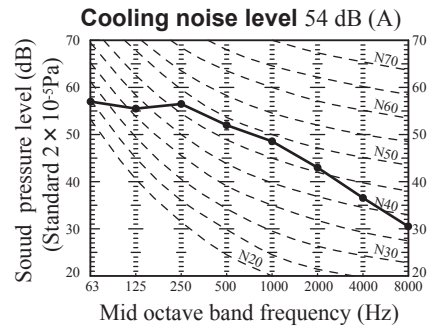

Model FDC90VNP

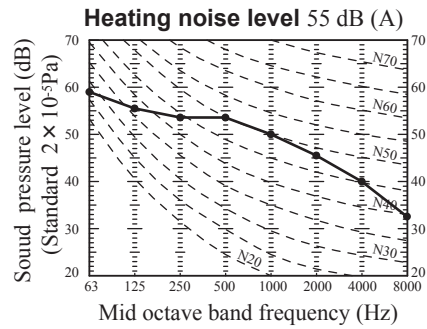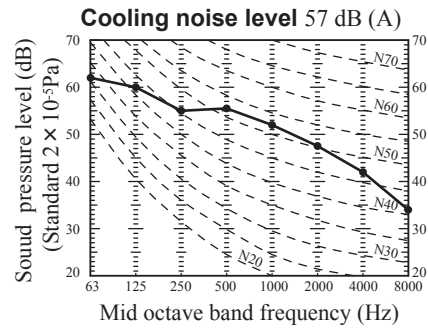

Model FDC100VNP

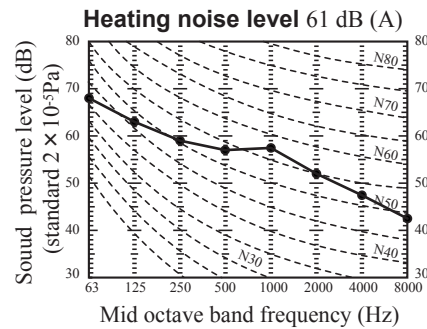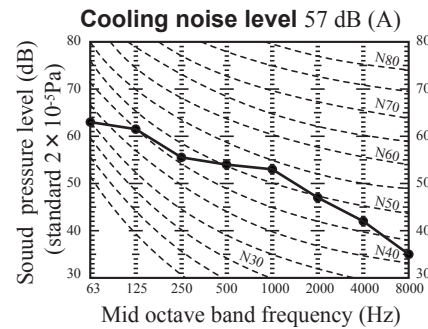


3.5 TEMPERATURE AND VELOCITY DISTRIBUTION


See page 40 of 1.5 chapter.

3.6 PIPING SYSTEM


Model FDT71

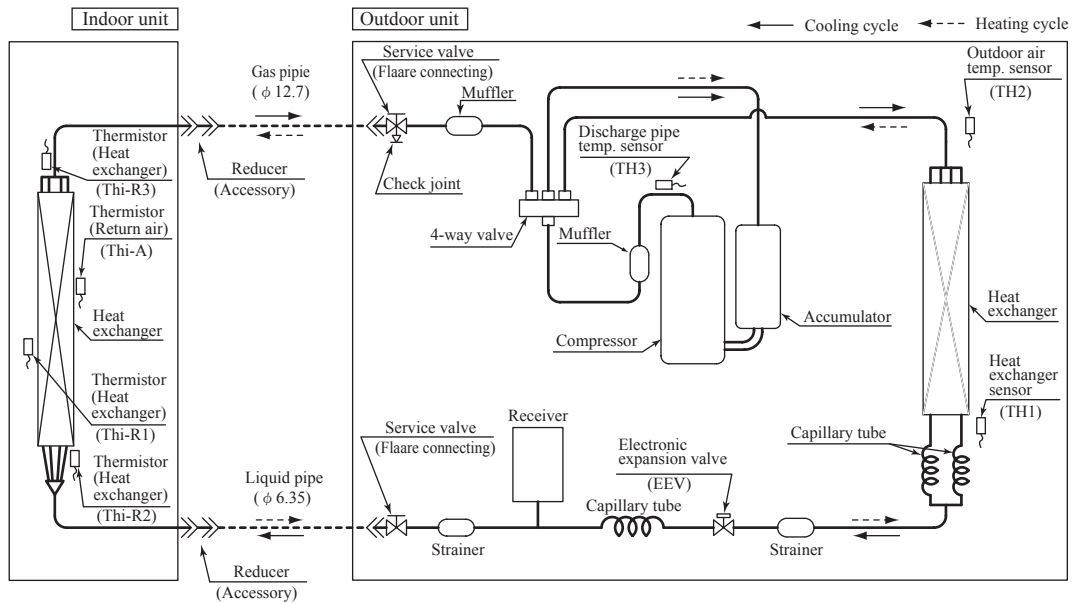

Model FDT90

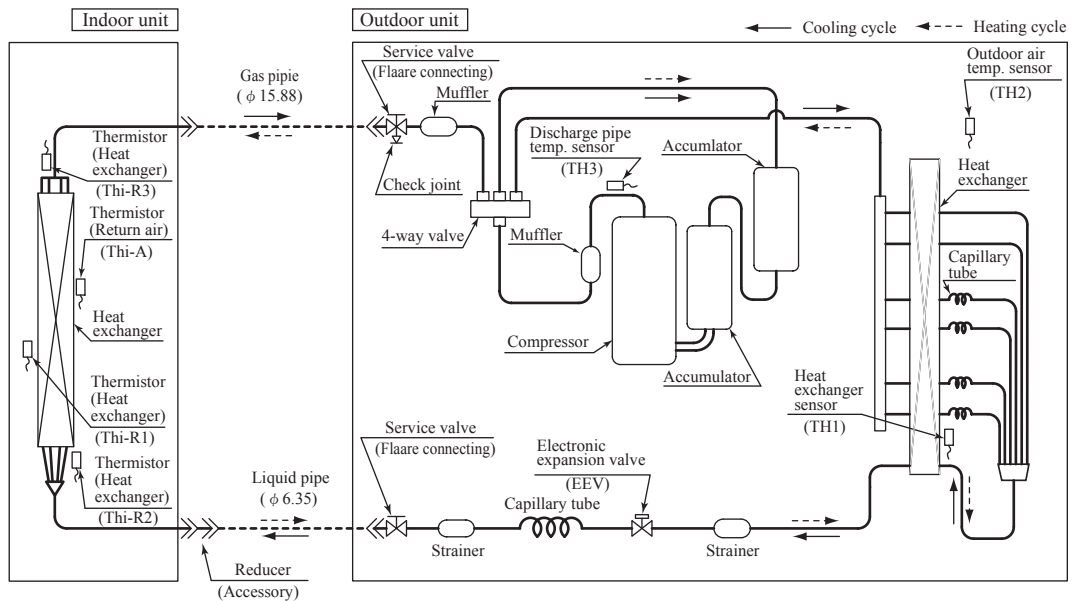

Model FDT100

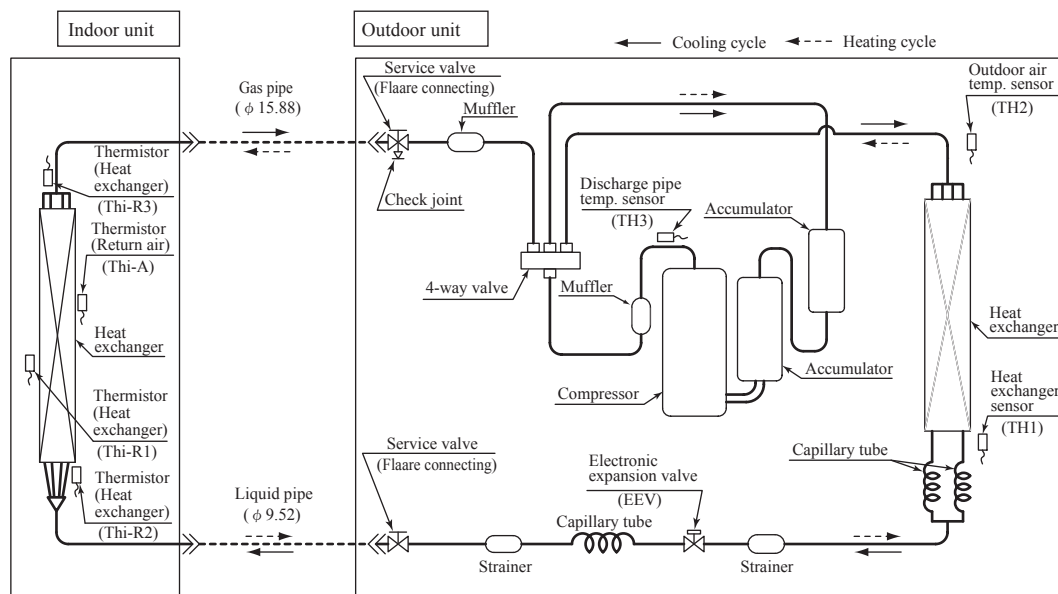

Preset point of the protective devices

Parts name	Mark	Equipped unit	All models
Thermistor (for protection overloading in heating)	Thi-R	Indoor unit	OFF 63°C , ON 56°C
Thermistor (for frost prevention)			OFF 1.0°C , ON 10°C
Thermistor (for protection high pressure in cooling)	TH1	Outdoor unit	OFF 63°C , ON 53°C
Thermistor (for detecting discharge pipe temperature)	TH3		OFF 115°C , ON 95°C

3.7. RANGE OF USAGE & LIMITATIONS

Operating temperature range		See next page.
		When used below -5°C, install a snow hood (prepared on site).
Recommendable area to install		Considering to get sufficient heating capacity, the area where the averaged lowest ambient air temperature in day time during winter is above 0°C, and it has no accumulation of snow.
Installation site		The limitations of installation space are shown in the page for exterior dimensions. Install the indoor unit at least 2.5m higher than the floor surface.
Temperature and humidity conditions surrounding the indoor unit (Note 2)		Dew point temperature : 28°C or less, relative humidity : 80% or less
Limitations on unit and piping installation		See page 391
Compressor ON-OFF cycling	Cycle time	10 minutes or more (from OFF to OFF) or (from ON to ON)
	Stop time	3 minutes or more
Power source	Voltage range	Rating \pm 10%
	Voltage drop at start-up	Min.85% of rating
	Phase-to-phase imbalance	3% or less

Note 1. Do not install the unit in places which :

- 1) Flammable gas may leak.
- 2) Carbon fiber, metal particles, powder, etc. are floating.
- 3) Cosmetic or special sprays are used frequently.
- 4) Exposed to oil splashes or steam (e.g. kitchen and machine plant).
- 5) Exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent).
- 6) Exposed to ammonia substance (e.g. organic fertilizer).
- 7) Matters affecting devices, such as sulfuric gas, chlorine gas, acid, alkali, etc. may generate or accumulate.
- 8) Chimney smoke is hanging.
- 9) Sucking the exhaust gas from heat exchanger.
- 10) Adjacent to equipment generating electromagnetic waves or high frequency waves.
- 11) There is light beams that affect the receiving device of indoor unit in case of the wireless specification.
- 12) Snow falls heavily.
- 13) At an elevation of 1000 meters or higher.
- 14) On mobile machine (e.g. vehicle, ship, etc.)
- 15) Splashed with water to indoor unit (e.g. laundry room).


Note 2. If ambient temperature and humidity exceed the above conditions, add polyurethane foam insulation on the outer plate (10mm or thicker) of indoor unit.

Note 3. Both gas and liquid pipes need to be covered with 20mm or thicker heat insulation materials at the place where relative humidity exceeds 70%.


PJF000Z317

Operating temperature range

■ Cooling

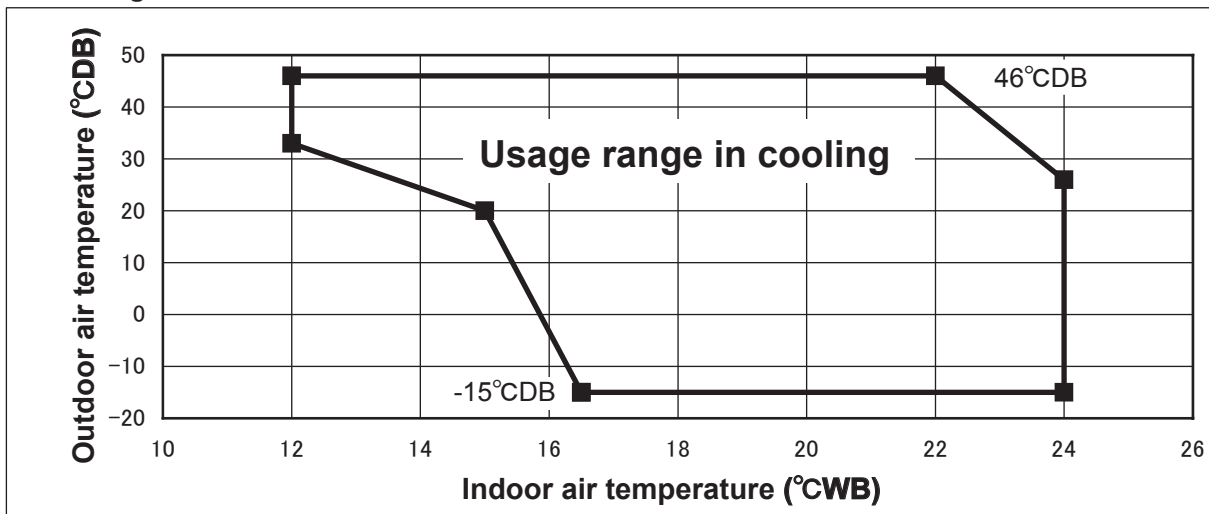

■ Heating

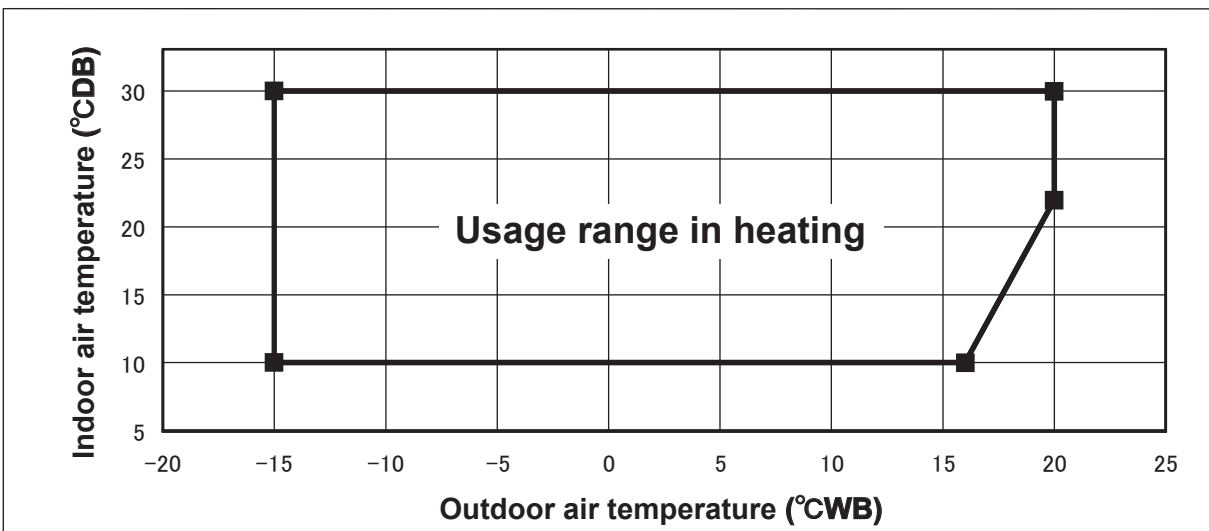

Decline in cooling and heating capacity or operation stop may occur when the outdoor unit is installed in places where natural wind can increase or decrease its design airflow rate.

PJF000Z317

“CAUTION” Cooling operation under low outdoor air temperature conditions

PAC models can be operated in cooling mode at low outdoor air temperature condition within above temperature range. However in case of severely low temperature conditions if the following precaution is not observed, it may not be operated in spite of operable temperature range mentioned above and cooling capacity may not be established under certain conditions.

[Precaution]

In case of severely low temperature condition

- 1) Install the outdoor unit at the place where strong wind cannot blow directly into the outdoor unit.
- 2) If there is no installation place where can prevent strong wind from directly blowing into the outdoor unit, mount the flex flow adapter (prepared as option part) or like such devices onto the outdoor unit in order to divert the strong wind.

[Reason]

Under the low outdoor air temperature conditions of -5°C or lower, the outdoor fan is controlled at lower or lowest speed by outdoor fan control, but if strong wind directly blow into the outdoor unit, the outdoor heat exchanger temperature will drop more.

This makes high and low pressures to drop as well. This low pressure drop makes the indoor heat exchanger temperature to drop and will activate anti-frost control at indoor heat exchanger at frequent intervals, that cooling operation may not be established for any given time.

Limitation on unit and piping installation				
Descriptions		Model for outdoor unit	Dimensional limitations	Marks appearing in the drawing
One-way pipe length		FDC71VNP FDC90VNP FDC100VNP	$\leq 30\text{m}$	L
Elevation difference between indoor and outdoor unit	When the outdoor unit is positioned higher		$\leq 20\text{m}$	H
	When the outdoor unit is positioned lower		$\leq 20\text{m}$	

The diagram illustrates the piping installation between an outdoor unit and an indoor unit. The outdoor unit is shown as a 3D rectangular box on the left, and the indoor unit is a 2D rectangular box on the right. A horizontal line represents the main piping connection between the two units. A vertical dimension line labeled 'H' indicates the elevation difference between the centerlines of the two units. A U-shaped pipe connects the two units, with a vertical dimension line labeled 'L' indicating the one-way pipe length. Arrows on the piping indicate the direction of flow.

PJF000Z317

3.8 SELECTION CHART

Correct the cooling and heating capacity in accordance with the operating conditions. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown in the capacity tables (3.8.1) × Correction factors shown in the table (3.8.2) (3.8.3) (3.8.4).

Caution: In case that the cooling operation during low outdoor air temperature below -5°C is expected, install the outdoor unit where it is not influenced by natural wind. Otherwise protection control by low pressure will be activated much more frequently and it will cause insufficient capacity or breakdown of the compressor in worst case.

3.8.1 Capacity tables

Model **FDT71VNPVG** Indoor unit **FDT71VG** Outdoor unit **FDC71VNP**
Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.71	4.62	5.34	5.23	5.65	5.54	5.78	5.66	6.04	5.92	6.30	6.17
13					5.00	4.90	5.58	5.47	5.87	5.75	5.99	5.87	6.23	6.11	6.48	6.25
15					5.30	5.19	5.83	5.71	6.09	5.97	6.20	6.06	6.43	6.30	6.66	6.29
17					5.59	5.48	6.07	5.95	6.31	6.18	6.41	6.12	6.62	6.49	6.83	6.33
19					5.73	5.61	6.13	6.01	6.34	6.21	6.48	6.14	6.76	6.53	7.04	6.38
21					5.80	5.68	6.20	6.07	6.36	6.21	6.54	6.15	6.89	6.57	7.25	6.43
23					6.23	5.86	6.63	6.41	6.81	6.35	6.96	6.28	7.26	6.66	7.56	6.50
25			6.26	6.13	6.67	6.01	7.07	6.56	7.26	6.49	7.38	6.40	7.63	6.76	7.88	6.57
27			6.72	6.39	7.11	6.17	7.51	6.70	7.71	6.63	7.91	6.56	8.31	6.94		
29			6.60	6.34	6.98	6.13	7.36	6.65	7.56	6.58	7.75	6.51	8.13	6.89		
31			6.47	6.29	6.85	6.08	7.22	6.61	7.40	6.53	7.59	6.46	7.95	6.84		
33	6.01	5.78	6.27	6.15	6.72	6.03	7.08	6.56	7.25	6.49	7.43	6.41	7.77	6.80		
35	5.89	5.73	6.15	6.02	6.59	5.98	6.94	6.51	7.10	6.44	7.26	6.36	7.59	6.75		
37	5.62	5.50	5.86	5.74	6.27	5.87	6.59	6.40	6.75	6.33	6.91	6.26	7.23	6.65		
39	5.35	5.24	5.57	5.46	5.95	5.75	6.25	6.12	6.40	6.23	6.55	6.16	6.86	6.56		
41	5.08	4.97	5.29	5.18	5.62	5.51	5.90	5.78	6.05	5.93	6.20	6.06	6.50	6.37		
43	4.99	4.89	5.18	5.07	5.47	5.36	5.73	5.62	5.88	5.77	6.04	5.92	6.35	6.22		

(kW) Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
°CDB	°CWB	16	18	20	22	24
-19.8	-20					
-17.7	-18					
-15.7	-16					
-13.5	-14	4.23	4.21	4.19	4.17	4.14
-11.5	-12	4.35	4.33	4.31	4.29	4.26
-9.5	-10	4.47	4.45	4.43	4.40	4.38
-7.5	-8	4.59	4.57	4.55	4.52	4.50
-5.5	-6	4.94	4.92	4.89	4.87	4.84
-3.0	-4	5.29	5.26	5.24	5.21	5.18
-1.0	-2	5.64	5.61	5.58	5.55	5.52
1.0	0	5.99	5.96	5.93	5.89	5.86
2.0	1	6.16	6.13	6.10	6.06	6.03
3.0	2	6.37	6.33	6.30	6.26	6.22
5.0	4	6.77	6.74	6.70	6.66	6.62
7.0	6	7.18	7.14	7.10	7.05	7.01
9.0	8	7.28	7.24	7.19	7.14	7.09
11.5	10	7.38	7.33	7.29	7.23	7.17
13.5	12	7.34	7.29	7.24	7.18	7.12
15.5	14	7.30	7.25	7.19	7.13	7.07
16.5	16	7.28	7.23	7.17	7.10	7.04

PJF000Z451

Model **FDT90VNPVG** Indoor unit **FDT100VG** Outdoor unit **FDC90VNP**
Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.35	7.81	8.93	8.57	9.21	8.50	9.59	8.45	10.34	9.05	11.09	8.90
13					8.42	7.84	8.94	8.57	9.20	8.50	9.55	8.44	10.25	9.03	10.96	8.87
15					8.48	7.86	8.96	8.58	9.19	8.49	9.52	8.43	10.17	9.00	10.83	8.84
17					8.54	7.88	8.97	8.58	9.18	8.49	9.49	8.42	10.09	8.98	10.70	8.80
19					8.51	7.87	8.96	8.58	9.19	8.49	9.48	8.42	10.06	8.97	10.63	8.79
21					8.32	7.80	8.96	8.58	9.20	8.49	9.47	8.42	10.02	8.96	10.57	8.77
23					8.52	7.87	9.04	8.61	9.21	8.50	9.47	8.42	10.00	8.96	10.52	8.76
25			8.10	7.93	8.72	7.95	9.13	8.64	9.23	8.50	9.48	8.42	9.97	8.95	10.47	8.75
27			8.38	8.22	8.92	8.02	9.22	8.66	9.24	8.51	9.27	8.36	9.31	8.78		
29			8.25	8.08	8.77	7.97	9.11	8.63	9.18	8.49	9.26	8.35	9.41	8.80		
31			8.11	7.95	8.62	7.91	9.00	8.59	9.12	8.47	9.25	8.35	9.50	8.82		
33	7.53	7.38	7.88	7.72	8.46	7.85	8.88	8.55	9.06	8.45	9.24	8.35	9.59	8.85		
35	7.41	7.26	7.74	7.59	8.31	7.80	8.77	8.52	9.00	8.43	9.23	8.35	9.68	8.87		
37	7.15	7.01	7.47	7.32	8.00	7.69	8.44	8.27	8.66	8.33	8.88	8.24	9.33	8.78		
39	6.89	6.75	7.20	7.05	7.70	7.54	8.11	7.94	8.32	8.16	8.54	8.14	8.97	8.69		
41	6.63	6.49	6.92	6.78	7.39	7.24	7.77	7.62	7.98	7.82	8.20	8.03	8.62	8.45		
43	6.36	6.24	6.65	6.52	7.08	6.94	7.44	7.29	7.65	7.49	7.85	7.69	8.26	8.10		

(kW) Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
°CDB	°CWB	16	18	20	22	24
-19.8	-20					
-17.7	-18					
-15.7	-16					
-13.5	-14	5.38	5.35	5.32	5.29	5.26
-11.5	-12	5.61	5.58	5.55	5.52	5.49
-9.5	-10	5.84	5.81	5.78	5.74	5.71
-7.5	-8	6.07	6.04	6.00	5.97	5.93
-5.5	-6	6.25	6.21	6.17	6.13	6.09
-3.0	-4	6.42	6.37	6.33	6.29	6.25
-1.0	-2	6.59	6.54	6.50	6.45	6.41
1.0	0	6.76	6.71	6.66	6.61	6.56
2.0	1	6.84	6.79	6.74	6.69	6.64
3.0	2	7.30	7.25	7.19	7.14	7.08
5.0	4	8.22	8.16	8.10	8.04	7.97
7.0	6	9.13	9.07	9.00	8.93	8.86
9.0	8	9.61	9.54	9.47	9.39	9.32
11.5	10	10.09	10.01	9.93	9.85	9.77
13.5	12	10.26	10.18	10.10	10.01	9.93
15.5	14	10.42	10.34	10.26	10.17	10.08
16.5	16	10.51	10.42	10.34	10.25	10.16

PJF000Z451

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously. These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.

(3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

Model **FDT100VNP1VG** Indoor unit FDT100VG Outdoor unit FDC100VNP

Cooling Mode

(kW) Heating Mode : HC (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					9.71	8.31	10.21	9.00	10.46	8.90	10.66	8.78	11.06	9.24	11.46	8.99
13					9.71	8.31	10.21	9.00	10.46	8.90	10.66	8.78	11.06	9.24	11.46	8.99
15					9.71	8.31	10.21	9.00	10.46	8.90	10.66	8.78	11.06	9.24	11.46	8.99
17					9.71	8.31	10.21	9.00	10.46	8.90	10.66	8.78	11.06	9.24	11.46	8.99
19					9.65	8.29	10.18	8.99	10.45	8.89	10.66	8.78	11.08	9.25	11.51	9.00
21					9.59	8.27	10.16	8.98	10.44	8.89	10.67	8.78	11.11	9.26	11.56	9.01
23					9.60	8.27	10.17	8.98	10.46	8.90	10.69	8.79	11.14	9.27	11.60	9.02
25			9.03	8.54	9.60	8.27	10.19	8.99	10.48	8.90	10.71	8.79	11.17	9.28	11.63	9.03
27			9.02	8.54	9.61	8.27	10.20	9.00	10.51	8.91	10.81	8.82	11.41	9.34		
29			8.92	8.50	9.49	8.23	10.08	8.95	10.38	8.87	10.68	8.78	11.28	9.30		
31			8.81	8.45	9.38	8.19	9.96	8.91	10.25	8.83	10.55	8.74	11.14	9.27		
33	8.24	7.80	8.61	8.37	9.26	8.15	9.83	8.87	10.13	8.79	10.42	8.70	11.01	9.23		
35	8.08	7.73	8.47	8.30	9.14	8.10	9.71	8.83	10.00	8.75	10.29	8.66	10.87	9.19		
37	7.85	7.63	8.23	8.06	8.84	7.99	9.37	8.72	9.67	8.64	9.96	8.56	10.54	9.10		
39	7.62	7.47	7.98	7.82	8.54	7.88	9.03	8.60	9.33	8.54	9.62	8.46	10.21	9.02		
41	7.39	7.25	7.74	7.58	8.24	7.77	8.70	8.49	8.99	8.43	9.29	8.36	9.89	8.93		
43	7.16	7.02	7.10	6.96	7.54	7.39	7.93	7.77	8.66	8.33	8.47	8.12	9.00	8.70		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
		-19.8	-20			
-17.7	-18					
-15.7	-16					
-13.5	-14	6.26	6.23	6.21	6.19	6.16
-11.5	-12	6.36	6.34	6.31	6.29	6.26
-9.5	-10	6.47	6.44	6.42	6.39	6.36
-7.5	-8	6.58	6.55	6.52	6.49	6.46
-5.5	-6	7.16	7.13	7.10	7.06	7.02
-3.0	-4	7.75	7.71	7.67	7.63	7.59
-1.0	-2	8.33	8.29	8.24	8.20	8.15
1.0	0	8.92	8.87	8.81	8.77	8.72
2.0	1	9.21	9.15	9.10	9.05	9.00
3.0	2	9.63	9.58	9.52	9.47	9.41
5.0	4	10.48	10.42	10.36	10.30	10.24
7.0	6	11.33	11.26	11.20	11.14	11.07
9.0	8	11.49	11.42	11.36	11.29	11.22
11.5	10	11.64	11.58	11.51	11.44	11.36
13.5	12	10.42	10.35	10.29	10.22	10.14
15.5	14	9.20	9.13	9.06	8.99	8.92
16.5	16	8.58	8.52	8.45	8.38	8.31

PJF000Z451


- Note(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.
- (3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

[References data]


Capacity variation against outdoor and indoor temperature at the maximum compressor speed capacity compensation coefficient shows the ratio to nominal capacity.

(I) Model FDC71VNP

① Cooling

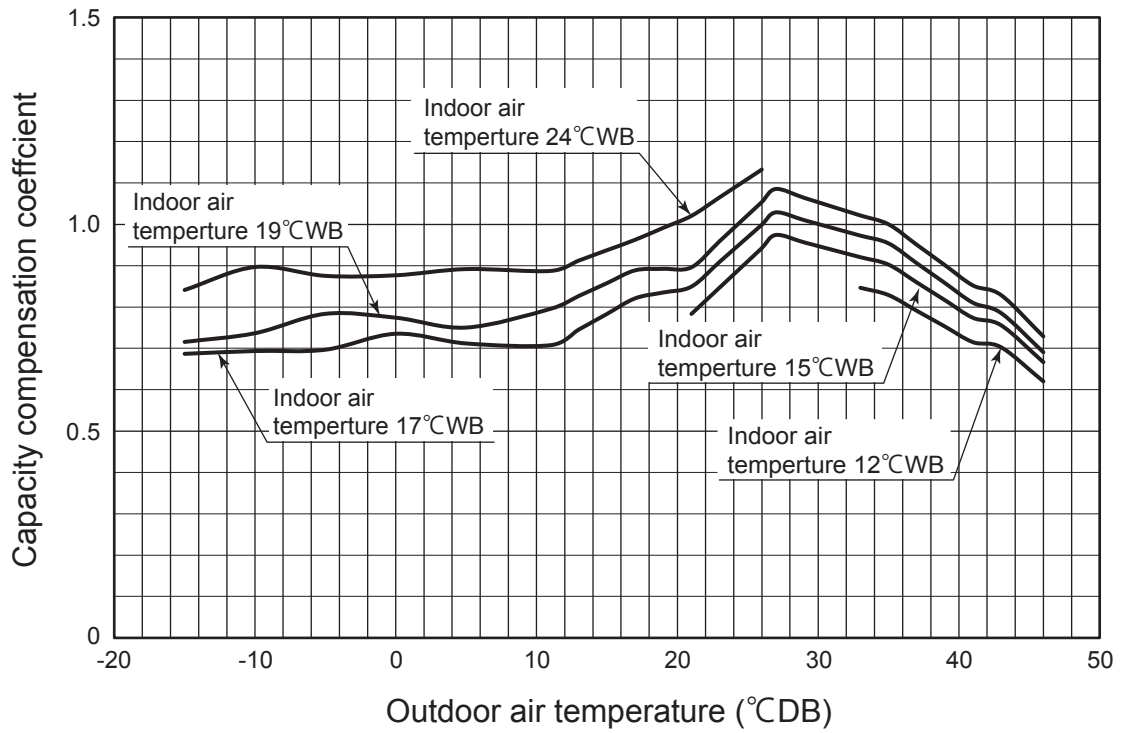


② Heating

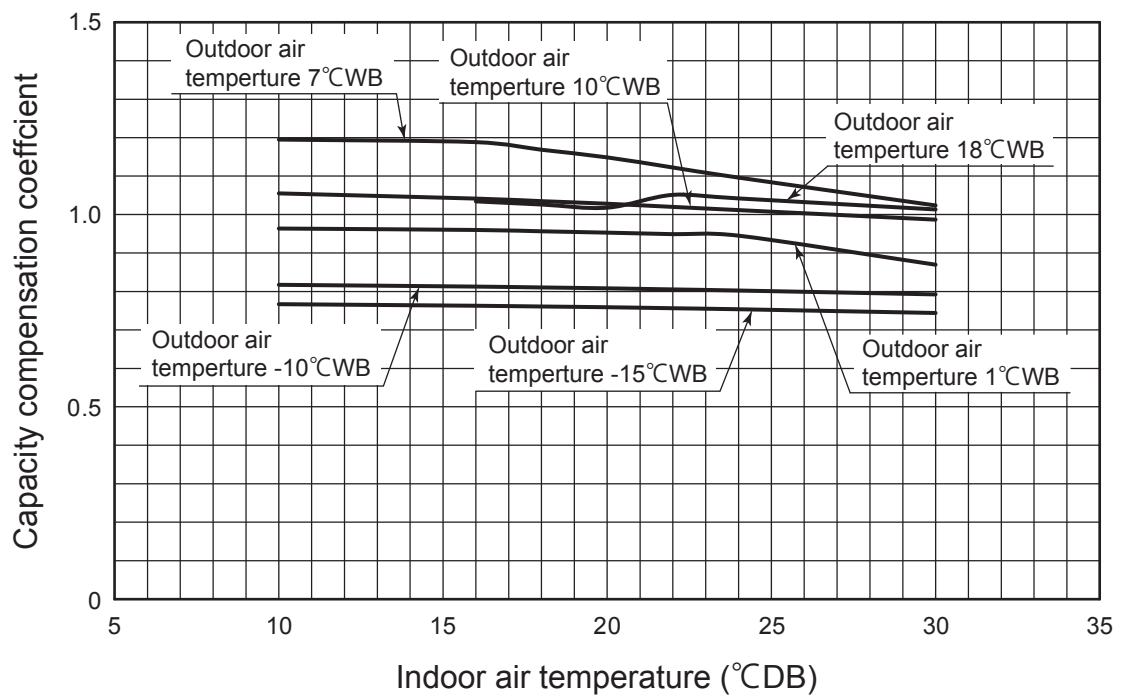


(II) Model FDC90VNP

① Cooling

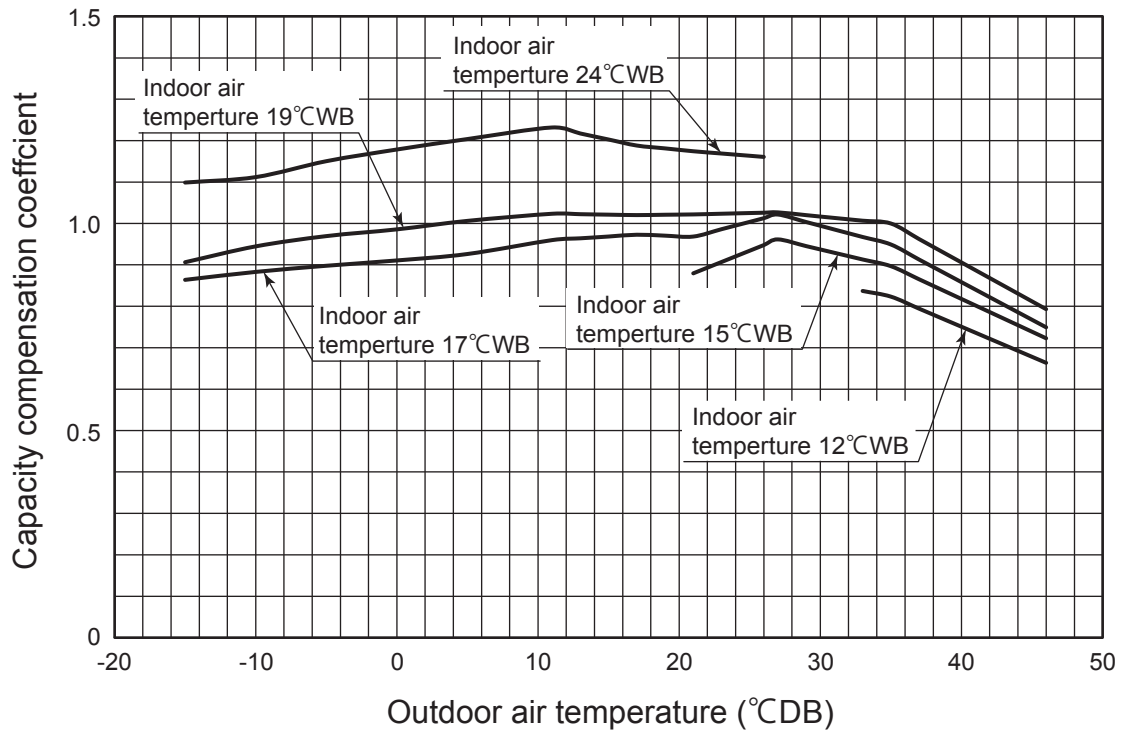


② Heating

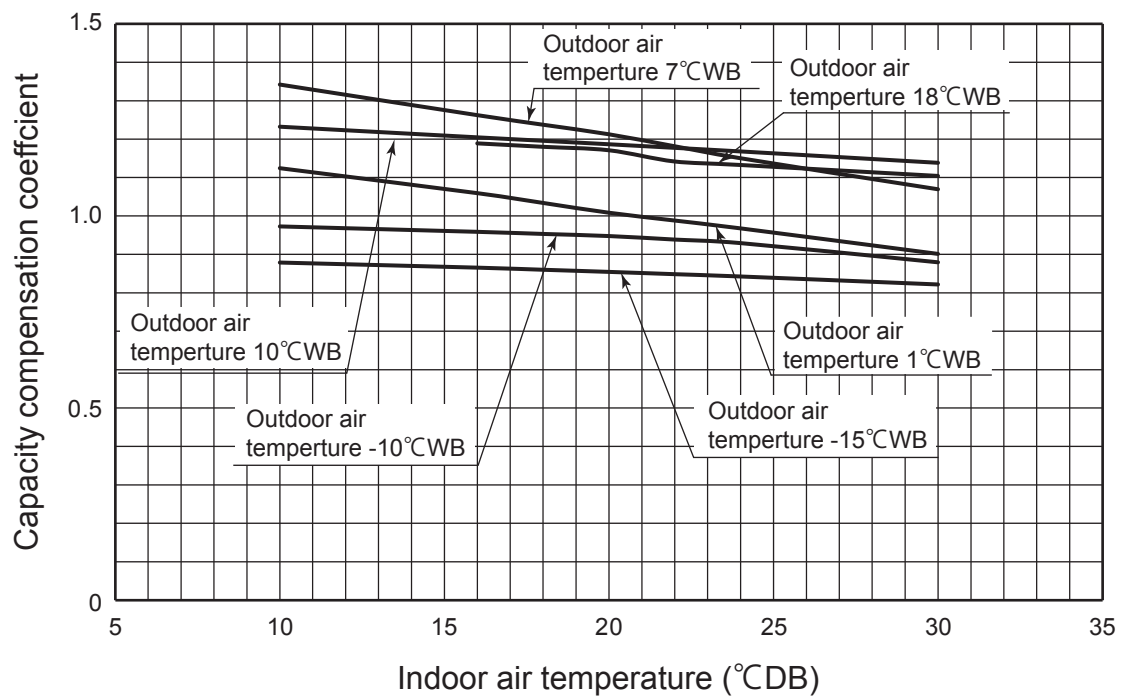


(III) Model FDC100VNP

① Cooling

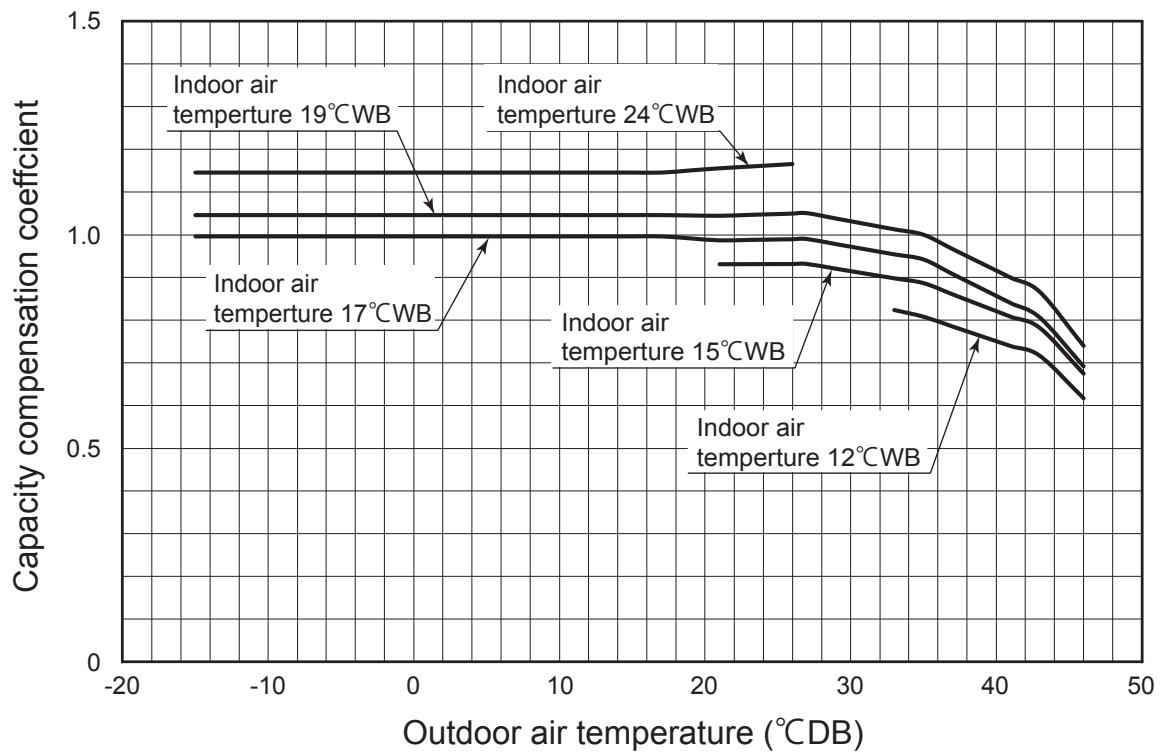

② Heating

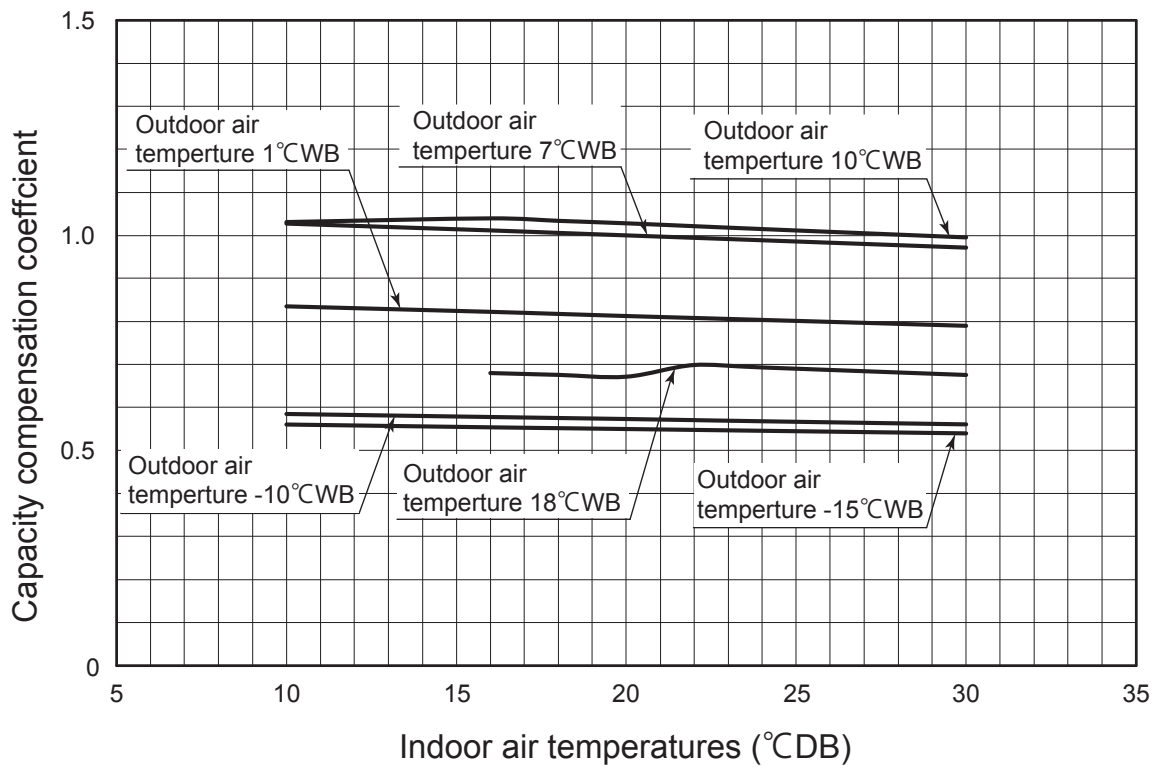

3.8.2 Correction of cooling and heating capacity in relation to air flow rate control Fan speed

Fan speed		P-Hi	Hi	Me	Lo
Coefficient	Cooling	1.00	0.95	0.93	0.90
	Heating	1.00	0.97	0.96	0.94

3.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way equivalent piping length between the indoor and outdoor units.

Equivalent piping length (m)	7.5	10	15	20	25	30
Cooling	1	0.99	0.97	0.96	0.94	0.92
Heating	1	1	1	1	1	1

3.8.4 Height difference between the indoor unit and outdoor unit

When the outdoor unit is located below indoor units in cooling mode, or when the outdoor unit is located above indoor units in heating mode, the correction coefficient mentioned in the below table should be subtracted from the value in the above table.

Height difference between the indoor unit and outdoor unit in the vertical height difference	5m	10m	15m	20m
Adjustment coefficient	0.99	0.98	0.97	0.96

Piping length limitations

Item	Model	All models
Max. one way piping length		30m
Max. vertical height difference		Outdoor unit is higher 20m Outdoor unit is lower 20m

Note (1) Values in the table indicate the one way piping length between the indoor and outdoor units.

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model FDT100VNP1VG with the air flow “P-Hi”, the piping length of 15m, the outdoor unit located 5m lower than the indoor unit, indoor wet-bulb temperature at 19.0°C and outdoor dry-bulb temperature 35°C is

$$\text{Net cooling capacity} = 10.0 \times 1.00 \times 0.97 \times 0.99 \approx 9.6 \text{ kW}$$

↑

Net cooling total capacity of FDT100VNP1VG (Outdoor temp. : 35°CDB Indoor temp. : 19°CWB) shown in table 3.8.1

↑

Air flow : P-Hi shown in table 3.8.2

↑

Piping length : 15m (Gas pipe size is φ 15.88) shown in table 3.8.3

↑

Height difference : 5m (Outdoor unit : below) shown in table 3.8.4

3.9 APPLICATION DATA

- 3.9.1 Installation of indoor unit See page 65.
- 3.9.2 Electric wiring work installation See page 71.
- 3.9.3 Installation of wired remote control (Option) See page 75.

3.9.4 Installation of outdoor unit (1) Model FDC71VNP

PSC012D053

R410A REFRIGERANT USED

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 65.
- When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels. **⚠ WARNING** and **⚠ CAUTION**.
- **⚠ WARNING**: Wrong installation would cause serious consequences such as injuries or death.
- **⚠ CAUTION**: Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.
- For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, gloves, etc., and then perform the installation works.
- Please pay attention not to fall down the tools, etc. when installing the unit at the high position.
- If unusual noise can be heard during operation, consult the dealer.
- The meanings of "Marks" used here are shown as follows:
 - ⊘ Never do it under any circumstances.
 - ⚠ Always do it according to the instruction.

⚠ WARNING
<p>If the refrigerant comes into contact with naked flames, poisonous gas is produced.</p> <ul style="list-style-type: none"> • Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts for R22 or R407C can cause the unit failure and serious accidents due to burst of the refrigerant circuit. • Tighten the flare nut by torque wrench with specified method. If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period. • Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant. • The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. • Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. • Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. • This appliance must be connected to main power source by means of a circuit breaker or switch (fuse:20A) with a contact separation of at least 3mm. • Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.
<ul style="list-style-type: none"> • Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except by the qualified installer. • Install the system in full accordance with the installation manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. • Be sure to use only for household and residence. This appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction. • When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149). If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accident. • Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. • Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ventilate the working area well in the event of refrigerant leakage during installation.
<ul style="list-style-type: none"> • Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury. • Do not processing, splice the power cord, or share a socket with other power plugs. This may cause fire or electric shock due to deflecting contact, deflecting insulation and over-current etc.
<p>Incorrect installation may result in overheating and fire.</p> <ul style="list-style-type: none"> • Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat production or fire. • Be sure to fix up the service panels. Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water. • Be sure to switch off the power source in the event of installation, inspection or servicing. If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. • Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. • Only use prescribed option parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. • Be sure to wear protective goggles and gloves while at work. Earth leakage breaker must be installed. • Earth leakage breaker is not installed, it can cause electric shocks. • Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with appliance. <p>• Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.</p>

CAUTION	
	<p>• Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.</p>
	<p>• Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.</p> <p>• Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.</p> <p>• Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.</p>
	<p>• Do not install the unit in the locations listed below.</p> <ul style="list-style-type: none"> Locations where carbon fiber, metal powder or any powder is floating. Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. Vehicles and ships. Locations where cosmetic or special sprays are often used. Locations with direct exposure of oil mist and steam such as kitchen and machine plant. Locations where any machines which generate high frequency harmonics are used. Locations with salty atmospheres such as coastlines. Locations with heavy snow (if installed, be sure to provide base flame and snow hood mentioned in the manual). Locations where the unit is exposed to chimney smoke. Locations at high altitude (more than 1 000m high). Locations with ammoniac atmospheres. (e.g. organic fertilizer) Locations with calcium chloride (e.g. snow melting agent). Locations where heat radiation from other heat source can affect the unit. Locations without good air circulation. Locations with any obstacles which can prevent inlet and outlet air of the unit. Locations where short circuit of air can occur (in case of multiple units installation). Locations where strong air blows against the air outlet of outdoor unit. Locations where something located above the unit could fall. <p>It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.</p>
	<p>• When perform the air-conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air-conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc.</p> <p>• Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.</p> <p>• Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation. Using an old and damage base flame can cause the unit falling down and cause personal injury.</p> <p>• Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.</p> <p>• Do not touch any buttons with wet hands. It can cause electric shocks.</p> <p>• Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.</p> <p>• Do not touch the suction or aluminum fin on the outdoor unit. This may cause injury.</p> <p>• Do not put anything on the outdoor unit and operating unit. This may cause damage the objects or injury due to falling to the object.</p> <p>• Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.</p> <p>• Do not clean up the unit with water.</p>

Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake.
- The processed dimension of the flange part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure.
- Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing or servicing this unit.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected to the system, will impair proper system operation)

Check before installation work	
• Model name and power source	
• Refrigerant piping length	
• Piping, wiring and miscellaneous small parts	
• Indoor unit installation manual	

Accessories for outdoor unit	
① Grommet (Heat pump type only)	4
② Drain elbow (Heat pump type only)	1
③ Reducer set ø9.52→ø6.35	1
④ Reducer set ø15.88→ø12.7	1

Option parts		Qty
Ⓐ Sealing plate		1
Ⓑ Sleeve		1
Ⓒ Inclination plate		1
Ⓓ Putty		1
Ⓔ Drain hose (extension hose)		1
Ⓕ Piping cover (for insulation of connection piping)		1

Necessary tools for the installation work		Qty
1 Plus headed driver		1
2 Knife		1
3 Saw		1
4 Tape measure		1
5 Hammer		1
6 Spanner wrench		1
7 Torque wrench [14.0—82.0N·m (1.4—8.2kgf·m)]		1
8 Hole core drill (65mm in diameter)		1

Necessary tools for the installation work	
9 Wrench key (Hexagon) [4m/m]	
10 Vacuum pump	
11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)	
12 Gauge manifold (Designed specifically for R410A)	
13 Charge hose (Designed specifically for R410A)	
14 Flaring tool set (Designed specifically for R410A)	
15 Gas leak detector (Designed specifically for R410A)	
16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)	


1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

⚠ CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.

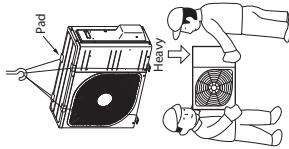

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

3) Selection of installation location for the outdoor unit

Be sure to select a suitable installation place in consideration of following conditions.



- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- If a operation is conducted when the outdoor air temperature is -5°C lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
- A place where strong wind will not blow against the outlet air blow of the unit.
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required.
 - The bottom plate of unit and intake, outlet may be blocked by snow.

- 1 Install the unit on the base so that the bottom is higher than snow cover surface, and draining water is secured.

- 3 Install the unit under eaves or provide the roof on site.

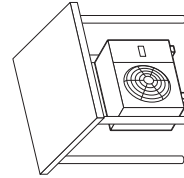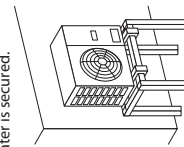




Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (accessories). [Refer to Drain piping work.]
- Attached heater on a base plate on site, if there is possibility to freeze drain water. In case that the product has a corrective drainage system, the drainage paths should have suitable threatment against freezing but be sure not to melt the material of drainage paths with heat.

- (2) If the unit can be affected by strong wind, following measures are required.

Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.


- 1 Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen, to the direction of wind.
- 2 Install the outlet air blow side of the unit in a position perpendicular to the direction of wind.
- 3 The unit should be installed on the stable and level foundation. If the foundation is not level, the down the unit with wires.



5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controllers, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.


The height of a wall is 1200mm or less.

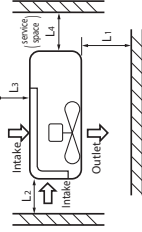


Size	(mm)			
	I	II	III	IV
Example installation	Open	280	280	180
L1	Open	75	Open	Open
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

6) Installation

- ① Anchor bolt fixed position

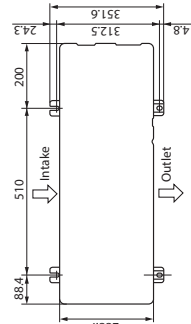

- ② Notabli for installation

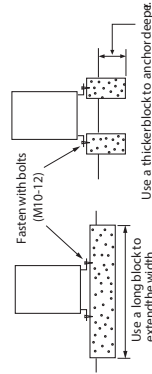

- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)

Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation,

when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Dimensional restrictions	Marks appearing in the drawing on the right
Indoor unit	30m or less	L
Elevation difference between indoor and outdoor units	23m or less 20m or less	L H
	When the outdoor unit is positioned higher	H
	When the outdoor unit is positioned lower	H

CAUTION ● The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see "5. UTILIZATION OF EXISTING PIPING."

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Gas pipe	Liquid pipe
Outdoor unit connected	ø12.7 Flare	ø6.35 Flare
Refrigerant piping (branch pipe)	ø12.7	ø6.35
Indoor unit connected	FDT, FDBN, FDU, FDUIM, FDF, SRK	ø15.88 ø15.88
		ø6.35


When pipe is brazing.

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

If the refrigerant is existing in the pipe at brazing, poisonous gas is produced.

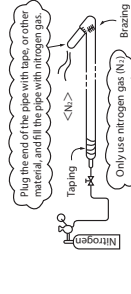

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

NOTE ● Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter (mm)	ø6.35	ø12.7
Minimum pipe wall thickness (mm)	0.8	0.8
Pipe material*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe (CS 23,040.15, JCS 77.150.30)

[Usage of reducer set]

● Except SRK Liquid side joint (ø9.52) [SRK Liquid side joint (ø6.35)]

● Except SRK Reducer (L=15mm) (ø5.52-ø6.35) [SRK Reducer is not used]

● Flare nut

● Reducer (L=124mm) (ø15.88-ø12.7)

● Reducer set (ø15.88)

● Gas side joint (ø15.88)

● Flared pipe end : A(mm)

● Copper pipe protrusion for flaring : B(mm)

● In the case of a rigid (clutch) type

● With an R410A tool

● With a conventional tool

● 0 - 0.5

● 1.0 - 1.5

● ø6.35

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

4) On-site piping work

IMPORTANT Take care so that installed pipes may not touch components within a unit. If touching with an internal component will generate abnormal sounds and/or vibrations.

- Except SRK Regarding the change in the size of liquid/gas pipe:

Use the reducer at indoor unit side. Reducer set is available in the outdoor unit as an accessory.

- SRK Regarding the change in the size of gas pipe:

Use the reducer at indoor unit side. Reducer set is available in the outdoor unit as an accessory.

How to remove the side cover

Please remove the screw of a side cover and remove to the front.



- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and brazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

CAUTION

Do not apply force beyond proper fastening torque in tightening the flare nut.

Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
ø6.35	14 - 18	45 - 60	150
ø9.52	34 - 42	30 - 45	200
ø12.7	49 - 61	30 - 45	250
ø15.88	68 - 82	15 - 20	300

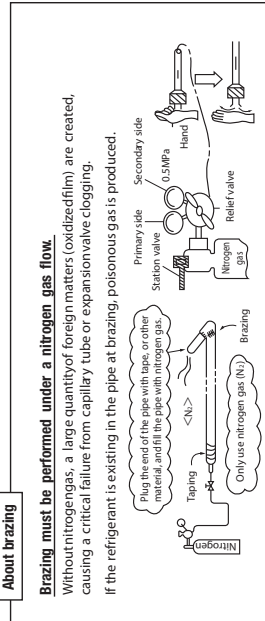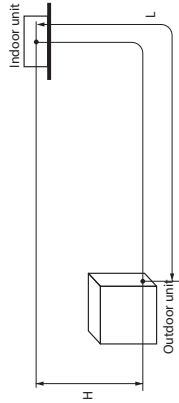

Pipe diameter (mm)	ø6.35	ø12.7
Minimum pipe wall thickness (mm)	0.8	0.8
Pipe material*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe (CS 23,040.15, JCS 77.150.30)

[Usage of reducer set]

● Except SRK Liquid side joint (ø9.52) [SRK Liquid side joint (ø6.35)]

● Except SRK Reducer (L=15mm) (ø5.52-ø6.35) [SRK Reducer is not used]

● Flare nut

● Reducer (L=124mm) (ø15.88-ø12.7)

● Reducer set (ø15.88)

● Gas side joint (ø15.88)

● Flared pipe end : A(mm)

● Copper pipe protrusion for flaring : B(mm)

● In the case of a rigid (clutch) type

● With an R410A tool

● With a conventional tool

● 0 - 0.5

● 1.0 - 1.5

● ø6.35

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7

● ø12.7


● ø12.7

● ø12.7

Use a torque wrench. If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

Do not hold the valve cap area with a spanner!


The screw of the side cover is tightened securely.

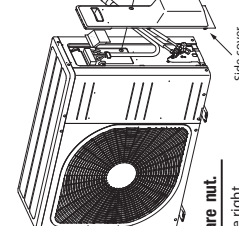

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

6) Evacuation

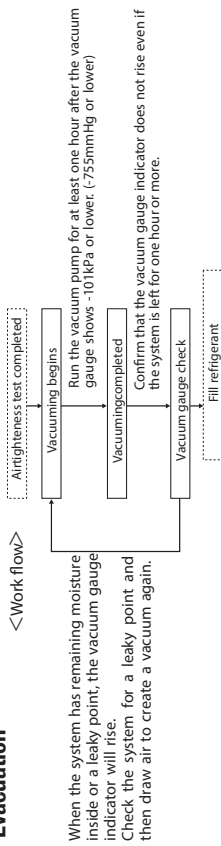

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

- (1) Calculate a required refrigerant charge volume from the following table.

Indoor unit	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe ø6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
FDT, FDEN	0.02	1.6	15
FDU, FDUIM, SRK	0.02	1.6	8

- This unit contains factory charged refrigerant covering 15m/8m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m/8m refrigerant piping. When refrigerant piping exceeds 15m/8m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m/8m.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, please see "5. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required


$$\text{Additional charge volume (kg)} = \{ \text{Main length (m)} - \text{Factory charged volume} \} \times 0.02 \text{ (kg/m)}$$

*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

- (2) For an installation measuring 1.5m/8m or shorter in pipe length, please charge the refrigerant volume charged for shipment at the factory, when you recharge refrigerant after servicing etc.

8) Heating and condensation prevention


- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

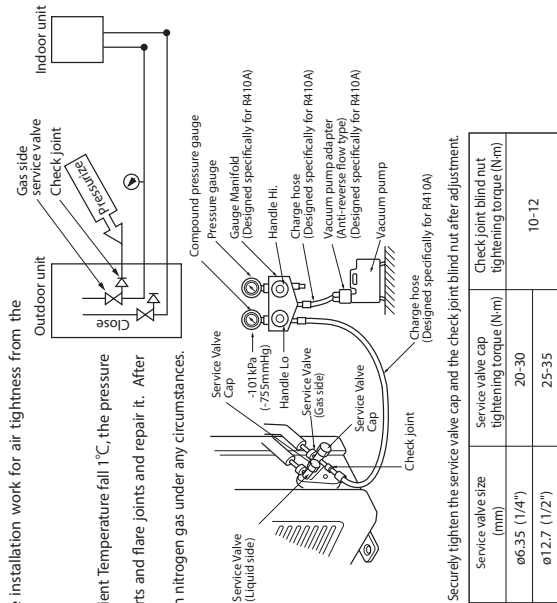

(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

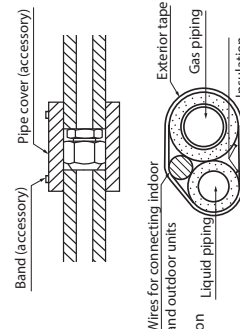


Wires for connecting indoor and outdoor units

Liquid piping

3. DRAIN PIPING WORK


- Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)

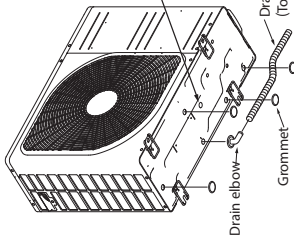

CAUTION

Do not put a grommet on this hole. This is a supplementary drain hole to discharge drain water, when a large quantity of it is gathered.

○ When condensed water needs to be led to a drain, etc., install the unit on a flat base or concrete blocks.
Then, please secure space for the drain elbow and the drain hose.



4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51).
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41).
- Use polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It dose not improve power factor, while it can cause an abnormal overheat accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.

CAUTION

In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks.


Use cables for interconnection wiring to avoid loosening of the wires. CENELEC code for cables Required field cables.

- H05RN4G1.5 (Example) or 245IEC57
- H Harmonized cable type
- 05 300/500 volts
- R Natural-and/or synth. rubber wire insulation
- N Polychloroprene rubber conductors insulation
- R Stranded core
- 4or5 Number of conductors
- G One conductor of the cable is the earth conductor (yellow/green)
- 1.5 Section of copper wire (mm²)

Main fuse specification

Specification	Part No.
250V/20A	SSA654A136A

Power cable, indoor-outdoor connecting wires

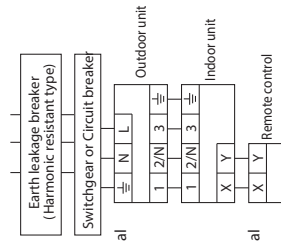


- Always perform grounding system installation work with the power cord unplugged.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

CAUTION

Phase	Earth leakage breaker	Switchgear or Circuit Breaker		Power source (minimum)	Interconnecting and grounding wires (minimum)
		Switch breaker	Over current protector rated capacity		
Single-phase	20A, 30mA, 0.1 sec or less	30A	20A	2.0mm ²	1.5mm ² x4

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

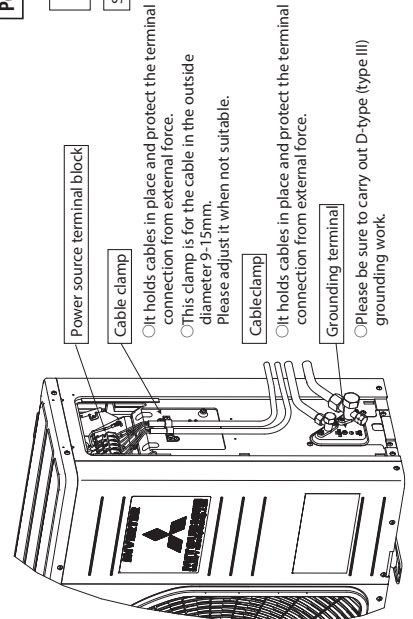

Power source terminal block

Cable clamp

○ It holds cables in place and protect the connection from external force.

○ This clamp is for the cable in the outside diameter 9-15mm. Please adjust it when not suitable.

Cable clamp

○ It holds cables in place and protect the connection from external force.


Grounding terminal

○ Please be sure to carry out D-type (type II) grounding work.

Remote control

5. UTILIZATION OF EXISTING PIPING

Check whether an existing pipe system is reusable or not by using the following flow chart.

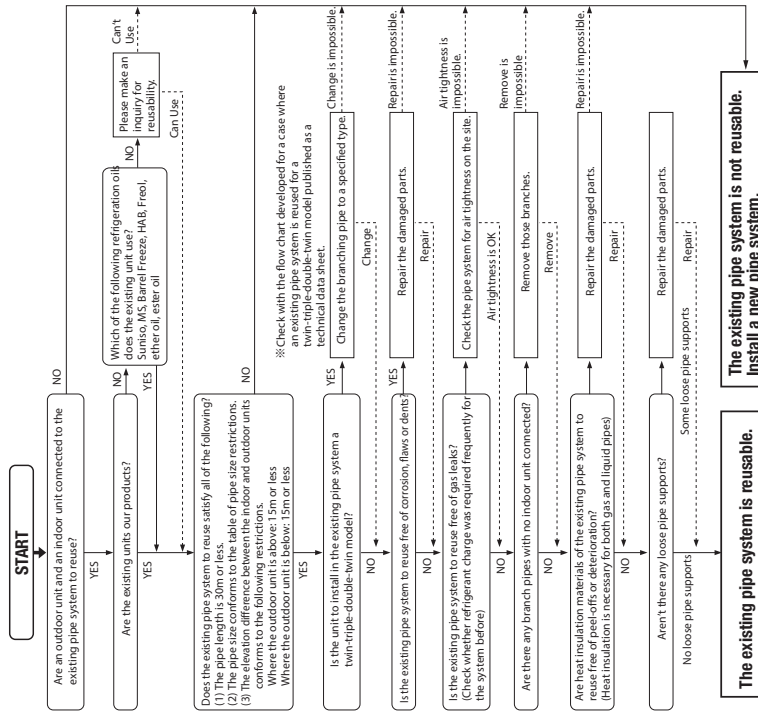

<Table of pipe size restrictions>

◎Standard pipe size ○Usable △Restricted to shorter pipe length limits

Indoor unit	Additional charge volume per meter of pipe		0.025kg/m		0.06kg/m	
	Liquid pipe	Gas pipe	ø6.35	ø12.7	ø9.52	ø15.88
FDT, FDEN FDU, FDUM, SRK	Usability	◎	◎	○	△	△
	Maximum one-way pipe length	30	24	10	10	5
PDF	Usability	◎	◎	○	△	△
	Maximum one-way pipe length	23	18	8	8	3

- Please consult with our distributor in the area, if you need to recover refrigerant and change it again.
- Any combinations of pipe sizes not listed in the table are not usable.

Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) × Additional charge volume per meter of pipe shown in the table (kg/m)

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example When FDT is installed in a 10m long existing pipe system (liquid ø9.52, gas ø12.7), the quantity of refrigerant to charge additionally should be (10m-5m) x 0.06kg/m = 0.3 kg.

WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit. (in the order of (1), (2), (3) and (4))

- Run the unit for 30 minutes for a cooling operation.
- Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
- Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.

- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit. Process a flare to the dimensions specified for R410A.

<Where the existing unit cannot be run for a cooling operation.>

- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, please contact our distributor in the area.

INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. Explain to the customer how to use the unit and how to take care of the unit following the instruction manual.

After installation

- Power cables and connecting wires are securely fixed to the terminal block.
- The power source voltage is correct as the rating.
- The drain hose is fixed securely.
- Service valve is fully open.
- No gas leaks from the joints of the service valve and joint.
- The pipe joints for indoor and outdoor pipes have been insulated.
- The reverse flow check cap is attached.
- The cover of the pipe cover (A) faces downward to prevent rain from entering.
- Gaps are properly sealed between the pipe covers (A) (B) and the wall surface / pipes.
- The screw of the side cover is tightened securely.

(2) Model FDC90VNP

PSC012D054

R410A REFRIGERANT USED



- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 65.
- When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces.

SAFETY PRECAUTIONS





- Read the "SAFETY PRECAUTIONS" carefully first of all and strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **WARNING** and **CAUTION**.
- **WARNING:** Wrong installation would cause serious consequences such as injuries or death.
- **CAUTION:** Wrong installation might cause serious consequences depending on circumstances.
- Both mentions the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.

 Never do it under any circumstances.  Always do it according to the instruction.

WARNING

<p> Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except by the qualified installer.</p> <p>• Install the system in full accordance with the installation manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire.</p> <p>• Be sure to use only for household and residence. If this appliance is installed in interior environment such as machine shop and etc., it can cause malfunction.</p> <p>• When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149). If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accident.</p> <p>• Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury.</p> <p>• Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.</p> <p>• Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.</p> <p>• Ventilate the working area well in the event of refrigerant leakage during installation.</p>	<p>Installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced.</p> <p>• Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.</p> <p>• Tighten the flare nut by torque wrench with specified method. If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period.</p> <p>• Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant.</p> <p>• The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.</p> <p>• Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.</p> <p>• Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire.</p> <p>• This appliance must be connected to main power source by means of a circuit breaker or switch (Iuse:20A) with a contact separation of at least 3mm.</p>	<p>• Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. Incorrect installation may result in overheating and fire.</p> <p>• Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.</p> <p>• Be sure to fix up the service panels. Loose connections or cable mountings can cause anomalous heat production or fire.</p> <p>• Be sure to switch off the power source in the event of installation, Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.</p> <p>If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.</p> <p>• Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.</p> <p>• Only use prescribed option parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.</p> <p>• Be sure to wear protective goggles and gloves while at work. If the earth leakage breaker is not installed, it can cause electric shocks.</p> <p>• Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with appliance.</p>
<p> Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to treat it. This may cause fire or heating.</p> <p>• Do not run the unit with removed panels or protections. Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.</p> <p>• Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.</p>		

CAUTION

	<ul style="list-style-type: none"> • Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.
	<ul style="list-style-type: none"> • Use the circuit breaker for all pole correct capacity. Circuit breaker should be the one that disconnect all poles under over current. Using the incorrect circuit breaker, it can cause the unit malfunction and fire. • Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in OFF state in accordance with EN60204-1. • After maintenance, all wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured. • Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place.
	<ul style="list-style-type: none"> • Do not install the unit in the locations listed below. <ul style="list-style-type: none"> • Locations where carbon fiber, metal powder or any powder is floating. • Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. • Vehicles and ships. • Locations where cosmetic or special sprays are often used. • Locations with direct exposure of oil mist and steam such as kitchen and machine plant. • Locations where any machines which generate high frequency harmonics are used. • Locations with salty atmospheres such as coastlines. • Locations with heavy snow (If installed, be sure to provide base flame and snow hood mentioned in the manual). • Locations where the unit is exposed to chimney smoke. • Locations at high altitude (more than 1000m high). • Locations with ammoniac atmospheres. (e.g. organic fertilizer) • Locations with calcium chloride (e.g. snow melting agent). • Locations where heat radiation from other heat source can affect the unit. • Locations without good air circulation. • Locations with any obstacles which can prevent inlet and outlet air of the unit. • Locations where short circuit of air can occur (in case of multiple units installation). • Locations where strong air blows against the air outlet of outdoor unit. • Locations where something located above the unit could fall. It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.
	<ul style="list-style-type: none"> • Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins. • Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up. • Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables. • Do not install the outdoor unit in the locations listed below. <ul style="list-style-type: none"> • Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood. • Locations where outlet air of the outdoor unit blows directly to an animal or plants. The outlet air can affect adversely to the plant etc. • Locations where vibration can be amplified and transmitted due to insufficient strength of structure. • Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room). • Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 5m). • Locations where drainage cannot run off safely. • Do not install the unit near the location where leakage of combustible gases can occur. If leaked gases accumulate around the unit, it can cause fire. • Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled. Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire. • Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics. Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.

Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- The processed dimension of the flared part of a refrigerant pipe and a flare nuts parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

Check before installation work

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

Accessories for outdoor unit	Q'ty
① Grommet (Heat pump type only)	4
② Drain elbow (Heat pump type only)	1
③ Reducer set ø9.52—ø6.35	1
④ Reducer set ø15.88—ø12.7	1

Option parts	Q'ty
Ⓐ Sealing plate	1
Ⓑ Sleeve	1
Ⓒ Inclination plate	1
Ⓓ Putty	1
Ⓔ Drain hose (extension hose)	1
Ⓕ Piping cover (for insulation of connection piping)	1

Necessary tools for the installation work	
1 Plus headed driver	9 Wrench key (Hexagon) [4m/m]
2 Knife	10 Vacuum pump
3 Saw	11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)
4 Tape measure	12 Gauge manifold (Designed specifically for R410A)
5 Hammer	13 Charge hose (Designed specifically for R410A)
6 Spanner wrench	14 Flaring tool set (Designed specifically for R410A)
7 Torque wrench [14.0—82.0Nm (1.4—8.2kgf·m)]	15 Gas leak detector (Designed specifically for R410A)
8 Hole core drill (65mm in diameter)	16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)


1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.

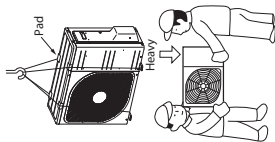

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavy. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

3) Selection of installation location for the outdoor unit

Be sure to select a suitable installation place in consideration of following conditions.

- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- If a operation is conducted when the outdoor air temperature is -5°C lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
- A place where strong wind will not blow against the outlet air blow of the unit.
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).



4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required.
 - The bottom plate of unit and intake, outlet may be blocked by snow.

1 Install the unit on the base so that the bottom is higher than snow cover surface, and draining water is secured.

2 Provide a snow hood to the outdoor unit on site.

3 Install the unit under eaves or provide the roof on site.


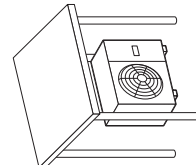
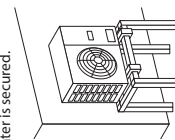


Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (accessories). (Refer to Drain piping work.)
 - Attached heater on a base plate on site, if there is possibility to freeze drain water.
- In case that the product has a corrective drainage system, the drainage paths should have suitable treatment against freezing but be sure not to melt the material or drainage paths with heat.

- (2) If the unit can be affected by strong wind, following measures are required.
 - Strong wind can cause damage of fan (fan motor) or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.


1. Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen.
 2. Install the outlet air blow side of the unit in a position perpendicular to the direction of wind.



5) Installation space

- Walls surrounding the unit in the four sides, are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controllers, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.


The height of a wall is 1200mm or less.

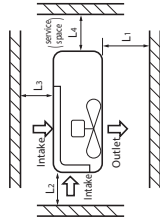


Size	I	II	III	IV
Open	280	280	280	180
L1	100	75	Open	Open
L2	100	80	80	80
L3	250	Open	250	Open
L4				

6) Installation

- ① Anchor bolt fixed position

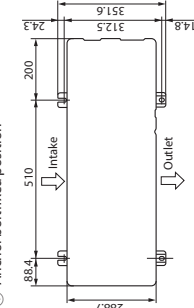

- ② Not tabular installation

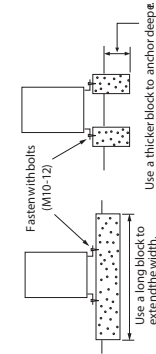

- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the followings in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Dimensional restrictions	Marks appearing in the drawing on the right
Indoor unit	FDT, FDEN, FDU, FDUM, SRK	L
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher When the outdoor unit is positioned lower	L H

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. When an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see "5. UTILIZATION OF EXISTING PIPING."

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Gas pipe	Liquid pipe
Outdoor unit connected	ø12.7 Flare	ø6.35 Flare
Refrigerant piping (branch pipe)	ø12.7	ø6.35
Indoor unit connected	FDT, FDEN, FDU, FDUM, FDF SRK	ø9.52 ø6.35

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

NOTE ● Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter (mm)	ø6.35	ø12.7
Minimum pipe wall thickness (mm)	0.8	0.8
Pipe material*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe (CS 23.040.15, JCS 77.150.30)

[Usage of reducer set]

(Except SRK) Liquid side joint (ø9.52)

(SRK) Liquid side joint (ø6.35)

(Except SRK) Reducer (L=115mm)(ø9.52-ø6.35)

(SRK) Reducer is not used

① Flare nut

② Reducer (L=124mm)(ø15.88-ø12.7)

③ Flare nut

④ Reducer (L=15.88-ø12.7)

⑤ Flare nut

⑥ Reducer (L=15.88-ø12.7)

⑦ Flare nut

⑧ Reducer (L=15.88-ø12.7)

⑨ Flare nut

⑩ Reducer (L=15.88-ø12.7)

⑪ Flare nut

⑫ Reducer (L=15.88-ø12.7)

⑬ Flare nut

⑭ Reducer (L=15.88-ø12.7)

⑮ Flare nut

⑯ Reducer (L=15.88-ø12.7)

⑰ Flare nut

⑱ Reducer (L=15.88-ø12.7)

⑲ Flare nut

⑳ Reducer (L=15.88-ø12.7)

㉑ Flare nut

㉒ Reducer (L=15.88-ø12.7)

㉓ Flare nut

㉔ Reducer (L=15.88-ø12.7)

㉕ Flare nut

㉖ Reducer (L=15.88-ø12.7)

㉗ Flare nut

㉘ Reducer (L=15.88-ø12.7)

㉙ Flare nut

㉚ Reducer (L=15.88-ø12.7)

㉛ Flare nut


㉜ Reducer (L=15.88-ø12.7)

㉝ Flare nut

㉞ Reducer (L=15.88-ø12.7)

㉟ Flare nut

㊱ Reducer (L=15.88-ø12.7)

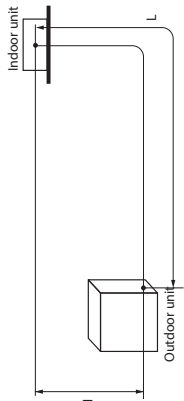



When pipe is brazing.

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

If the refrigerant is existing in the pipe at brazing, poisonous gas is produced.

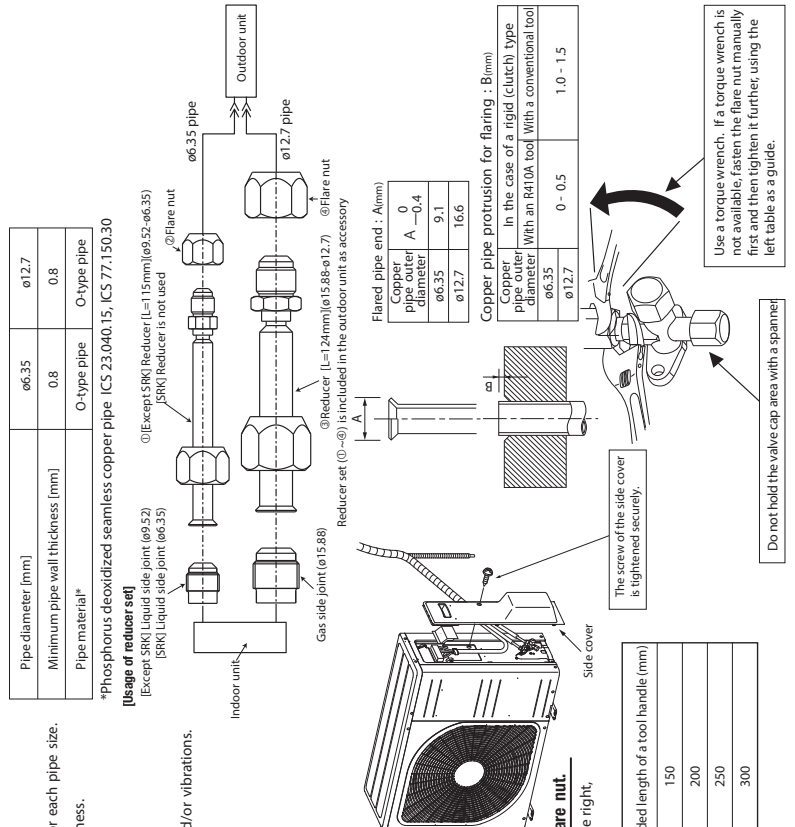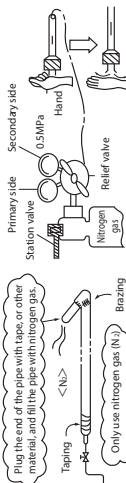

Flared pipe end : A(mm)

Copper pipe outer diameter	A
ø6.35	0
ø12.7	-0.4
ø16.6	9.1

Copper pipe protrusion for flaring : B(mm)

Copper pipe outer diameter	B
ø6.35	0 - 0.5
ø12.7	1.0 - 1.5

Use a torque wrench. If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

Do not hold the valve cap area with a spanner!

How to remove the side cover

- Please remove the screw of a side cover and remove to the front.
- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical.(R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

Do not apply force beyond proper fastening torque in tightening the flare nut.

Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.


Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
ø6.35	14 - 18	45 - 60	150
ø9.52	34 - 42	30 - 45	200
ø12.7	49 - 61	30 - 45	250
ø15.88	68 - 82	15 - 20	300

CAUTION

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

6) Evacuation

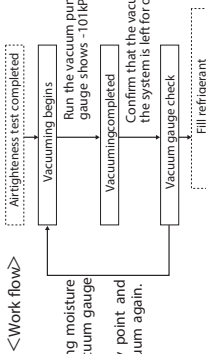

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.

Confirm that the vacuum gauge indicator does not rise even if the system is left for one hour or more.

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Indoor unit	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe ø6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
FDT, FDEN FDU, FDUM, SRK	0.02	1.6	15
FD	0.02	1.6	8


- This unit contains factory charged refrigerant covering 15m/8m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m/8m refrigerant piping. When refrigerant piping exceeds 15m/8m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m/8m.
 - If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, please see "5. UTILIZATION OF EXISTING PIPING."
- Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (kg)} = (\text{Main length (m)} - \text{Factory charged volume}) \times 0.02 \text{ (kg/m)}$$

- *When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.
- For an installation measuring 15m/8m or shorter in pipe length, please charge the refrigerant volume charged for shipment at the factory, when you recharge refrigerant after servicing etc.

8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - **Both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.**

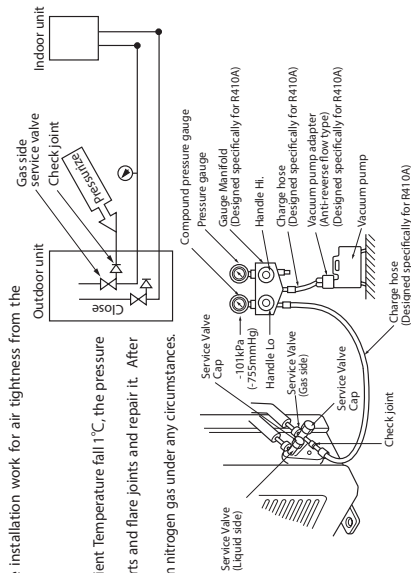


Securely tighten the service valve cap and the check joint blind nut after adjustment.

Service valve size (mm)	Service valve cap tightening torque (N·m)	Check joint blind nut tightening torque (N·m)
ø6.35 (1/4")	20-30	25-35
ø12.7 (1/2")		10-12

(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gassy upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.


NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

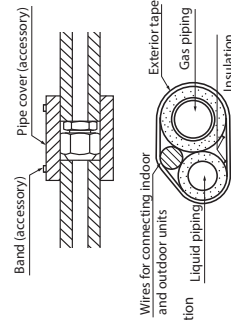

Wires for connecting indoor and outdoor units

3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)

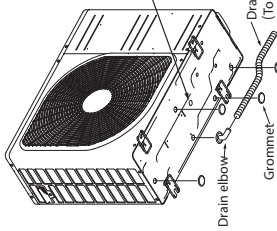

CAUTION

Do not put a grommet on this hole. This is a supplementary drain hole to discharge drain water, when a large quantity of it is gathered.



○ When condensed water needs to be led to a drain, etc., install the unit on a flat base or concrete blocks.
Then, please secure space for the drain elbow and the drain hose.

4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51)
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41)
- Use polychloroprene sheathed flexible cord (code designation 60245 IEC 57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensative capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheat accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.

CAUTION

In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks.

Use cables for interconnection wiring to avoid loosening of the wires.
CENELEC code for cables Required field cables.

H05RN4G1.5 (Example) or 245IEC57
H Harmonized cable type
05 300/500 volts
R Natural-and/or synth. rubber wire insulation
N Polychloroprene rubber conductors insulation
R Stranded core
4or5 Number of conductors
G One conductor of the cable is the earth conductor (yellow/green)
1.5 Section of copper wire (mm ²)

Main fuse specification	Part No.
Specification	SSA564A138A
250V 20A	

- Always perform grounding system installation work with the power cord unplugged.
- Connect a pair-bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.



Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

CAUTION

Phase	Earth leakage breaker	Switchgear or Circuit Breaker	Power source (minimum)	Interconnecting and grounding wires (minimum)
Single-phase	20A, 30mA, 0.1sec or less	Switch breaker Over current protector rated capacity	20A	1.5mm×4

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.


Power cable, indoor-outdoor connecting wires

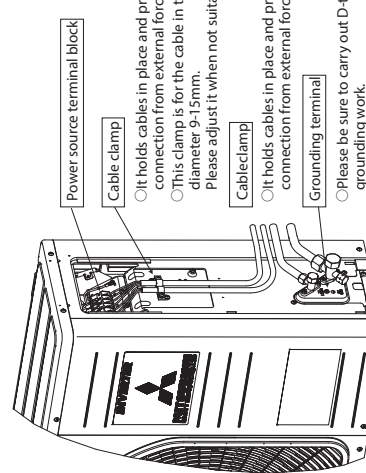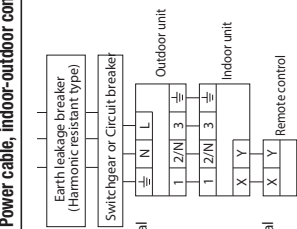

- It holds cables in place and protect the terminal connection from external force.
- This clamp is for the cable in the outside diameter 9-15mm. Please adjust it when not suitable.
- It holds cables in place and protect the terminal connection from external force.
- Please be sure to carry out D-type (type III) grounding work.

5. UTILIZATION OF EXISTING PIPING

Check whether an existing pipe system is reusable or not by using the following flow chart.

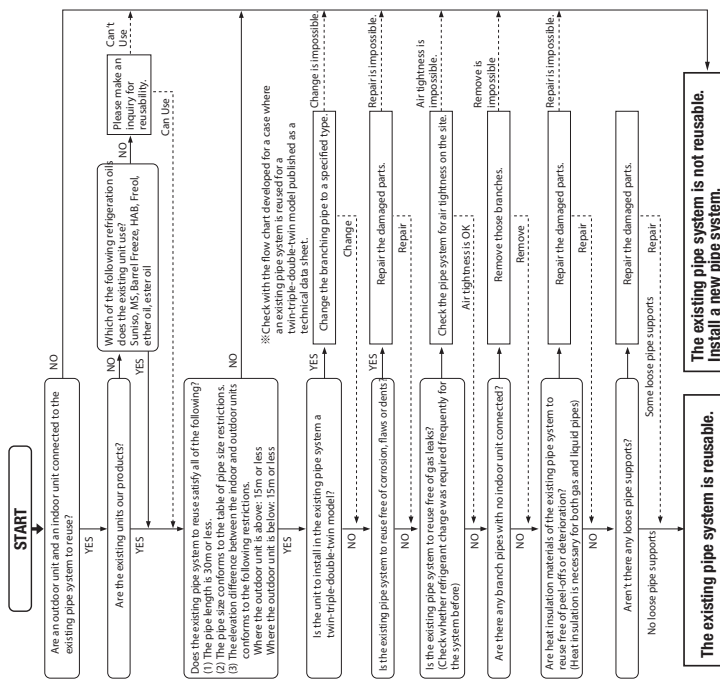

<Table of pipe size restrictions>

◎ Standard pipe size ○ Usable △ Restricted to shorter pipe length limits

Indoor unit	Additional charge volume per meter of pipe		0.025kg/m	0.06kg/m
	Pipe size	Liquid pipe		
FDT, FDSN FDU, PDU/M, SMK	◎	○	06.35	09.52
	◎	○	12.7	15.88
FDF	◎	○	30	24
	◎	○	15	12
FDF	◎	○	23	18
	◎	○	8	6

- Please consult with our distributor in the area, if you need to recover refrigerant and charge it again.
- Any combinations of pipe sizes not listed in the table are not usable.

Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) X Additional charge volume per meter of pipe shown in the table (kg/m)

- ※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example When FDT is installed in a 10m long existing pipe system (liquid ϕ9.52, gas ϕ12.7), the quantity of refrigerant to charge additionally should be (10m-5m) x 0.06kg/m = 0.3 kg.

⚠ WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))

- Run the unit for 30 minutes for a cooling operation.
- Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
- Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
 - For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
 - Process a flare to the dimensions specified for R410A.

<Where the existing unit cannot be run for a cooling operation.>

- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, please contact our distributor in the area.

INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. Explain to the customer how to use the unit and how to take care of the unit following the instruction manual.

After installation

- Power cables and connecting wires are securely fixed to the terminal block.
- The power source voltage is correct as the rating.
- The drain hose is fixed securely.
- Service valve is fully open.
- No gas leaks from the joints of the service valve and joint.
- The pipe joints for indoor and outdoor pipes have been insulated.
- The reverse flow check cap is attached.
- The cover of the pipe cover (A) faces downward to prevent rain from entering.
- Gaps are properly sealed between the pipe covers (A) (B) and the wall surface / pipes.
- The screw of the side cover is tightened securely.

PSC012D055

R410A REFRIGERANT USED

(3) Model FDC100VNP

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 65.
- While install the unit, be sure to check the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage etc.) and installation spaces.

SAFETY PRECAUTIONS

- Before installation, read the "SAFETY PRECAUTIONS" carefully and strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **WARNING** and **CAUTION**.
 - **WARNING**: Wrong installation would cause serious consequences such as injuries or death.
 - **CAUTION**: Wrong installation might cause serious consequences depending on circumstances.
- Both mention the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completing installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.

Never do it under any circumstances.
 Always do it according to the instruction.

<p>!</p> <p>WARNING</p> <p>connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant.</p> <ul style="list-style-type: none"> • The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. • Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. • Be sure to shut off the power before starting electrical work. • Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. • Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. • Unconformable cables can cause electric leak, anomalous heat production or fire. • This appliance must be connected to main power source by means of a circuit breaker or switch (fuse: 30A) with a contact separation of at least 3mm. • Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. • Incorrect installation may result in overheating and fire. • Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. • Be sure to fix up the service panels. • Loose connections or cable mountings can cause anomalous heat production or fire. • Be sure to switch off the power source in the event of installation, inspection or servicing. • If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. • Stop the compressor before removing the pipe after shutting the service valve on pump down work. 	<p>If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.</p> <ul style="list-style-type: none"> • Only use prescribed option parts. The installation must be carried out by the qualified installer. • If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. • Be sure to wear protective goggles and gloves while at work. • Earth leakage breaker must be installed. • If the earth leakage breaker is not installed, it can cause electric shocks. • Do not perform any change of protective device itself or its setup condition. • The forced operation by short-circuiting protective device or pressure switch and temperature controller or the use of non specified component can cause fire or burst. • After completed installation, check that no refrigerant leaks from the system. • If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced. • Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support. • An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit. • Do not perform brazing work in the airtight room • It can cause lack of oxygen. • Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much. • Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen. • Consult the dealer or an expert regarding removal of the unit. • Incorrect installation can cause water leaks, electric shocks or fire.
<p>!</p> <p>installation must be carried out by the qualified installer.</p> <p>If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except the by qualified installer.</p> <ul style="list-style-type: none"> • Install the system in full accordance with the installation manual. • Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. • When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149). • If the density of refrigerant exceeds the limit, consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accident. • Use the original accessories and the specified components for installation. • If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. • Install the unit in a location with good support. • Unsuitable installation locations can cause the unit to fall resulting in material damage and personal injury. • Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. • Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ventilate the working area well in the event of refrigerant leakage during installation. • If the refrigerant comes into contact with naked flames, poisonous gas is produced. • Use the prescribed pipes, flare nuts and tools for R410A. • Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. • Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. • If the compressor is operated in state of opening service valves before completing 	<p>• Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair.</p> <p>If you repair or modify the unit, it can cause water leaks, electric shocks or fire. </p>
<p>!</p> <p>Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.</p> <p>If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.</p> <ul style="list-style-type: none"> • Do not process or splice the power cord, or share the socket with other power plugs. • This may cause fire or electric shock due to delecting contact, delecting insulation and over-current etc. 	<p>• Do not bundle or wind or process the power cord. Do not deform the power cord by treading it.</p> <p>This may cause fire or heating.</p> <ul style="list-style-type: none"> • Do not run the unit with removed panels or protections. <p>Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.</p>

CAUTION

T	<ul style="list-style-type: none"> • Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because if gas leaks, it could cause explosion or ignition. 	<ul style="list-style-type: none"> • Use the circuit breaker for all pole correct capacity. Circuit breaker should be able to disconnect all poles under over current. Using the incorrect circuit breaker, it can cause the unit malfunction and fire. • Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in OFF state in accordance with EN60204-1. • After maintenance, all wiring, wiring ties and the like, should be returned to their original state and secured route, and the necessary clearance from all metal parts should be secured. • Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place. 	<ul style="list-style-type: none"> • Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins. • Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up. • Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.
⊘	<ul style="list-style-type: none"> • Do not install the unit in the locations listed below. <ul style="list-style-type: none"> • Locations where carbon fiber, metal powder or any powder is floating. • Locations where any substances that can affect the unit, such as sulphide gas, chloride gas, acid and alkaline can occur. • Vehicles and ships. • Locations where cosmetic or special sprays are often used. • Locations with direct exposure of oil mist and steam such as kitchen and machine plant. • Locations where any machines which generate high frequency harmonics are used. • Locations with salty atmospheres such as coastlines. • Locations with heavy snow (if installed, be sure to provide base flame and snow hood mentioned in the manual). • Locations where the unit is exposed to chimney smoke. • Locations at high altitude (more than 1000m high). • Locations with ammoniac atmospheres (e.g. organic fertilizer). • Locations with calcium chloride (e.g. snow melting agent). • Locations where heat radiation from other heat source can affect the unit. • Locations without good air circulation. • Locations with any obstacles which can prevent inlet and outlet air of the unit. • Locations where short circuit or air can occur (in case of multiple units' installation). • Locations where strong air blows against the air outlet of outdoor unit. • Locations where something located above the unit could fall. • It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire. • Do not install the outdoor unit in the locations listed below. <ul style="list-style-type: none"> • Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood. • Locations where outlet air of the outdoor unit blows directly to an animal or plants. 	<ul style="list-style-type: none"> • Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled. Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire. • Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics. Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming. • Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean. • Do not use the base flame for outdoor unit which is corroded or damaged 	<ul style="list-style-type: none"> • Pay attention not to damage the drain pan by weld spatter when welding work is done near the indoor unit. If weld spatter entered into the indoor unit during welding work, it can cause pin-hole in drain pan and result in water leakage. To prevent such damage, keep the indoor unit in its packing or cover it. • Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. • Perform installation work properly according to this installation manual. Improper installation can cause abnormal vibrations or increased noise generation.

Locally procured parts		Qty
(A) Sealing plate		1
(B) Sleeve		1
(C) Inclination plate		1
(D) Putty		1
(E) Drain hose (extension hose)		1
(F) Piping cover (for insulation of connection piping)		1
(G) Drain elbow		1
(H) Grommet		2

Check before installation work	
• Model name and power source	
• Refrigerant piping length	
• Piping, wiring and miscellaneous small parts	
• Indoor unit installation manual	

Accessories for outdoor unit		Qty
① Edging		1

Necessary tools for the installation work	
1 Plus headed driver	9 Wrench key (Hexagon) [4m/m]
2 Knife	10 Vacuum pump
3 Saw	11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)
4 Tape measure	12 Gauge manifold (Designed specifically for R410A)
5 Hammer	13 Charge hose (Designed specifically for R410A)
6 Spammer wrench	14 Flaring tool set (Designed specifically for R410A)
7 Torque wrench [14.0 – 82.0N·m (1.4 – 8.2kgf·m)]	15 Gas leak detector (Designed specifically for R410A)
8 Hole core drill (65mm in diameter)	16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)

Note as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

Head the following the heating operation


- In the case when this unit has stopped for a long time, heating operation may start and operate in cooling mode by 7 minutes, after that, heating operation is started. This operation keep oil quality in compressor by preventing liquid refrigerant come into compressor. If that is the case, do not suspect a unit failure. (In this case, remote control displays "DEFROST" or "In operation for defrosting".)

1. HAULAGE AND INSTALLATION (Take particular care in carrying or moving the unit, and always perform such an operation with two or more persons.)

CAUTION When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.


1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.



2) Portage

- The right hand side of the unit, as viewed from the front (Fan side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

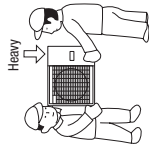

3) Selecting the installation location

Be sure to select a suitable installation place in consideration of following conditions.


- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any TV set or radio receiver interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- If a operation is conducted when the outdoor air temperature is -5 or lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
- A place where strong wind will not blow against the outlet air blow of the unit.
- A place where stringent regulation of electric noises is not applicable.

Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- If the unit is installed in the area where the snow will accumulate, following measures are required. The bottom plate of unit and intake, outlet may be blocked by snow.

- Install the unit on the base so that the bottom is higher than snow cover surface.
- Provide a snow hood to the outdoor unit on site. Regarding outline of a snow hood, refer to our technical manual.
- Install the unit under eaves or provide the roof on site.




Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (optional parts). [Refer to Drain piping work.]

- Attach heater on a base plate on site, if there is possibility to freeze drain water. In case that the product has a corrective drainage system, the drainage paths should have suitable measure against freezing but be sure not to melt the material of drainage paths with heat.

- If the unit can be affected by strong wind, following measures are required. Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.

- Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen.
- Install the outlet air blow side of the unit in a position perpendicular to the direction of wind.
- The unit should be installed on the stable and level foundation. If the foundation is not level, tie down the unit with wires.




5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controllers, provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.


Example installation Size	I	II	III
L1	Open	Open	500
L2	300	250	Open
L3	100	150	100
L4	250	250	250

The height of a wall is 1200mm or less.

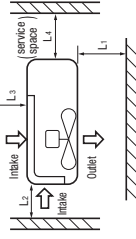


6) Installation

- Anchor bolt fixed position

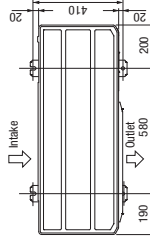

- Notes for installation

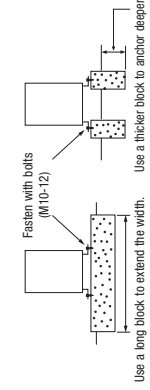

- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5mm or less.) Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Dimensional restrictions	Marks appearing in the drawing on the right
Main pipe length	30m or less	L
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher,	H
	When the outdoor unit is positioned lower,	H

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, see "5. UTILIZATION OF EXISTING PIPING."

⚠ CAUTION

2) Determination of pipe size

Determine refrigerant pipe size according to the following guidelines based on the indoor unit specifications.

	Gas pipe	Liquid pipe
Outdoor unit connected	ø15.8 Flare	ø9.52 Flare
Refrigerant piping (branch pipe L)	ø15.8	ø9.52
Indoor unit connected	ø15.8	ø9.52

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

Pipe diameter [mm]	ø9.52	ø15.88
Minimum pipe wall thickness [mm]	0.8	1.0
Pipe material*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe (CS 23,040.15, ICS 77.150.30)

- NOTE Select pipes having a wall thickness larger than the specified minimum pipe thickness.

4) On-site piping work

⚠ IMPORTANT

Take care so that installed pipes may not touch components within a unit. If pipes touch internal components, abnormal sounds and/or vibrations. First remove the five screws (X mark) of the service panel and push it down into the direction of the arrow mark and then remove it by pulling it toward you.

How to remove the side cover




- The pipe can be laid in any of the following directions: side right, front, rear and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and blezed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut into it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten the flare joint securely with a double spanner.

⚠ CAUTION

Do not apply force beyond proper fastening torque in tightening the flare nut.



Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
ø9.52 (3/8")	34-42	30-45	200
ø15.88 (5/8")	68-82	15-20	300

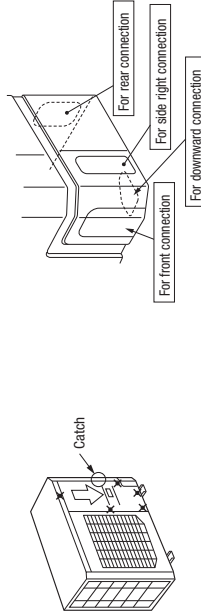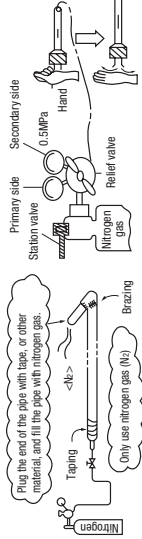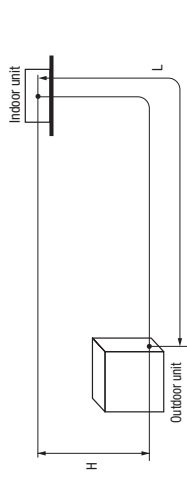

Edging
(For knock-out hole protection)


Copper pipe protrusion for flaring : B Copper pipe outer diameter	With an R410A tool	With a conventional tool
ø9.52	0-0.5	1.0-1.5
ø15.88		

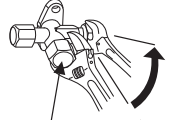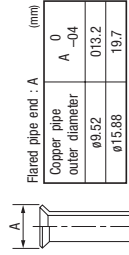


Use a torque wrench. If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a)~d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air tightness test again.
- ② In conducting an air tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

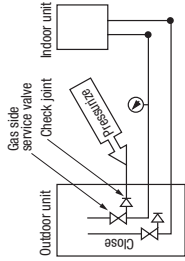

6) Evacuation

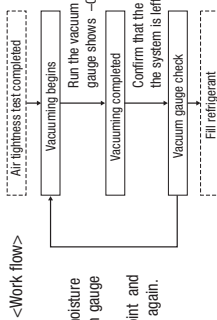

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, use dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

- (1) Calculate a required refrigerant charge volume from the following table.

Additional charge volume (g) per meter of refrigerant piping (liquid pipe ø9.52)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
60	2.55	15

- This unit contains factory charged refrigerant covering 15m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m refrigerant piping. When refrigerant piping exceeds 15m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m.
- If an existing pipe system is used, required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "5. UTILIZATION OF EXISTING PIPING."


Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (g)} = \{ \text{Main length (m)} - \text{Factory charged volume 15 (m)} \} \times 60 \text{ (g/m)}$$

- * When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.
- For an installation measuring 15m or shorter in pipe length, charge the refrigerant volume charged for shipment at the factory, when you recharge refrigerant after servicing etc.

8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - **Both gas and liquid pipes need to be dressed with 20mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.**

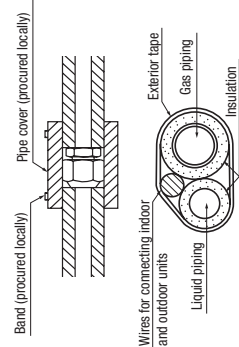


(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and discharge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gassy upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the service panel.


Service valve size (mm)	Service valve cap tightening torque (N · m)	Check joint blind nut tightening torque (N · m)
ø9.52 (3/8")	20~30	10~12
ø15.88 (5/8")	30~40	

Securely tighten the service valve cap and the check joint blind nut after adjustment.

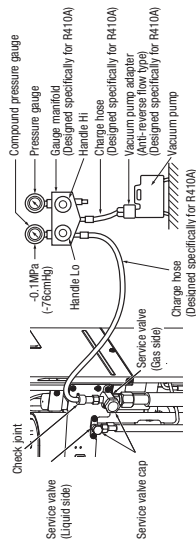


3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)
- Do not use drain elbow and grommet made of plastic for drain piping when base heater for outdoor unit is used. Plastic grommet and elbow will be damaged and burnt in worst case.
- Prepare another drain tray made of metallic material for collecting drain when base heater is used.

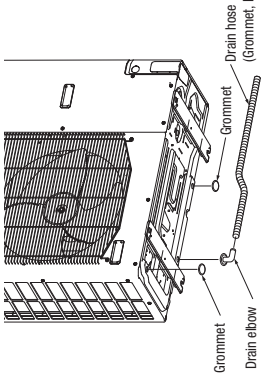

- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as a locally procured part) or concrete blocks. Then, secure space for the drain elbow and the drain hose.

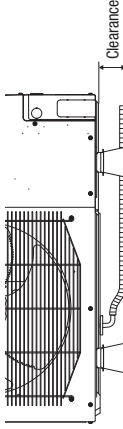

4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country.

- Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten the cables so that those may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Never use a shield cable.
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Do not use any power cable lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51)
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41)
- Use polychloroprene sheathed flexible cord (code designation 60245 IEC57) for power cables of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary.
- A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheating accident)
- For power cables, use conduits.


In case of faulty wiring connection, indoor unit does not operate. Then, run lamp turns on and timer lamp blinks.

Use cables for interconnection wiring to avoid loosening of the wires. CENELEC code for cables Required field cables.


H05RN4RG1.5	(Example) (or 245IEC57)
H	Harmonized cable type
05	300/500 volts
R	Natural-and/or synth. rubber wire insulation
N	Polychloroprene rubber conductors insulation
R	Stranded core
4p/5	Number of conductors
G	One conductor of the cable is the earth conductor (yellow/green)
1.5	Section of copper wire (mm ²)

Specification	Part No.
250V 20A	SSA564A136A

Power cable, indoor - outdoor connecting wire circuit diagram

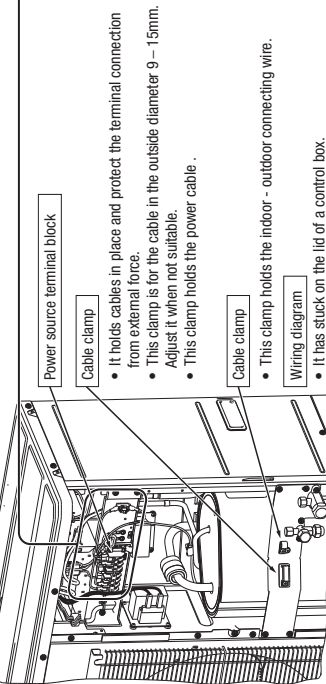

- Cable clamp
 - It holds cables in place and protect the terminal connection from external force.
 - This clamp is for the cable in the outside diameter 9 - 15mm. Adjust it when not suitable.
 - This clamp holds the power cable.
- Cable clamp
 - This clamp holds the indoor - outdoor connecting wire.
- Wiring diagram
 - It has stuck on the lid of a control box.

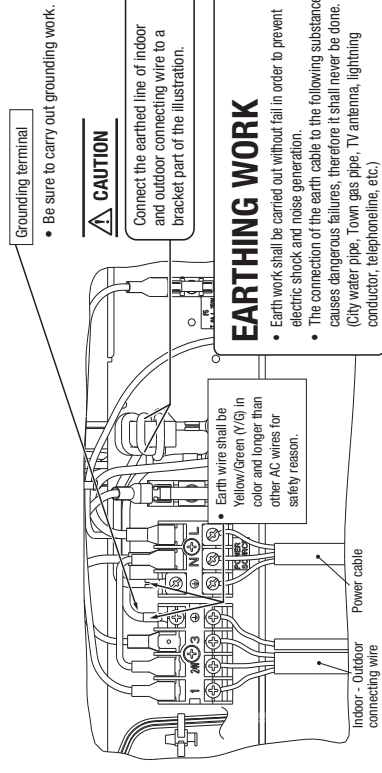

CAUTION
Connect the earthed line of indoor and outdoor connecting wire to a bracket part of the illustration.

EARTHING WORK

- Earth work shall be carried out without fail in order to prevent electric shock and noise generation.
- The connection of the earth cable to the following substance causes dangerous failures, therefore it shall never be done. (City water pipe, town gas pipe, TV antenna, lightning conductor, telephone line, etc.)

3.10 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER

- 3.10.1 Remote control See page 111.
- 3.10.2 Operation control function by the wired remote control See page 114.
- 3.10.3 Operation control function by the indoor control See page 117.
- 3.10.4 Operation control function by the outdoor control

(1) Models FDC71, 90VNP

(1) Compressor speed

Unit: rps

Item \ Model	Cooling		Heating	
	FDC71	FDC90	FDC71	FDC90
Upper limit	120 (80)	120 (74)	120 (90)	120 (70)
Lower limit	12		12	

Note (1) Valuc in () are for the silent mode.

(2) Compressor protection start

(a) Compressor protection start I

(i) Operating condition

When the compressor is turned ON from the state of OFF.

(ii) Detail of operation

During the protection start I control, the upper limit of compressor speed is restricted to the speeds as shown in the following table.

Unit: rps

		Time after establishment of operating conditions (Including acceleration time)					End of control
		Less than 3 min	Less than 5 min	Less than 7 min	Less than 9 min	9 min or more	
FDC71	Cooling	120	120	120	120	End of control	
	Heating ⁽¹⁾	TH2 ≥ 10°C	120	120	120		120
		TH2 < 10°C	48	56	56		75
FDC90	Cooling	120	120	120	120		
	Heating ⁽¹⁾	TH2 ≥ 10°C	55	55	75		95
		TH2 < 10°C	55	55	75		95

Note (1) Judgment by the outdoor air temperature sensor (TH2) is made only at the start of control during heating operation.

(b) Compressor protection start II

(i) Operating condition

When the outdoor air temperature sensor (TH2) has detected lower than 10°C after starting the compressor during heating operation.

(ii) Detail of operation

During the protection start II control, the upper limit of compressor speed is restricted to the speeds as shown in the following table.

Unit: rps

		Time after compressor ON (Including acceleration time)					End of control
		Less than 1 min	Less than 5 min	Less than 7 min	Less than 9 min	9 min or more	
FDC71		40	32	90	110	End of control	
FDC90	TH2 ≥ -5°C	40	32	90	110		
	TH2 < -5°C	40	45	90	110		

(3) Outdoor fan control

(a) Outdoor fan speed and fan motor speed

Unit: min⁻¹

Fan speed	1st speed	2nd speed	3rd speed	4th speed	5th speed	6th speed	7th speed	8th speed
FDC71	150	225	485	520	570	685	800	850
FDC90	150	300	500	650	740	835	890	950

(b) Outdoor fan control at start (Cooling operation only)

When the outdoor air temperature (TH2) is lower than 22°C at the start of compressor, the outdoor fan is operated at a fixed speed.

- (i) When the outdoor air temperature is higher than 11°C, the compressor runs at 2nd speed for 30 seconds after the compressor ON.
- (ii) When the outdoor air temperature is lower than 11°C, the compressor runs at 1st speed for 30 seconds after the compressor ON.

(c) Relationship between compressor speed and outdoor fan speed.

Outdoor fan speed is controlled according to the operation mode (Heating/cooling) and the compressor speed.

Unit: rps

Fan speed		1st speed	2nd speed	3rd speed	4th speed	5th speed	6th speed	7th speed	8th speed
FDC71	Cooling	–	–	–	0-22	22-30	30-58	58-80	80-
	Heating	–	–	–	0-30	30-38	38-78	78-90	90-
FDC90	Cooling	–	–	0-30	30-46	46-64	64-70	70-75	75-
	Heating	–	–	0-30	30-46	46-70	70-90	90-	–

(d) Outdoor fan control at low outdoor temperature

(i) Cooling

1) Operating conditions

When the outdoor air temperature (TH2) is 22°C or lower continues for 30 seconds while the compressor speed is other than 0 rps.

2) Detail of operation

After the outdoor fan operates at A speed for 60 seconds; the corresponding outdoor heat exchanger temperature shall implement the following controls.

● Value of A

	Outdoor fan
Outdoor temperature > 10°C	12th speed
Outdoor temperature ≤ 10°C	9th speed

a) Outdoor heat exchanger temperature ≤ 21°C

After the outdoor fan speed drops (down) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is lower than 21°C, gradually reduce the outdoor fan speed by 1 speed. (Lower limit 9th speed)

b) 21°C < Outdoor heat exchanger temperature ≤ 38°C

After the outdoor fan speed maintains for 20 seconds; if the outdoor heat exchanger temperature is 21°C-38°C, maintain outdoor fan speed again.

c) Outdoor heat exchanger temperature > 38°C

After the outdoor fan speed rises (up) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is higher than 38°C, gradually increase outdoor fan speed by 1 speed. (Upper limit 15th speed)

3) Reset conditions

When either of the following conditions is satisfied.

a) The outdoor air temperature (TH2) is 25°C or higher and fan speed is 15th speed.

b) The compressor speed is 0 rps.

4) Outdoor fan speed and fan motor speed

Unit: min⁻¹

Fan speed	9th speed	10th speed	11th speed	12th speed	13th speed	14th speed	15th speed
FDC71	150	175	200	225	305	385	485
FDC90	200	225	250	275	300	400	500

(ii) Heating

1) Operating condition

When the outdoor air temperature (TH2) is 4°C or lower continues for 30 seconds while the compressor speed is other than 0 rps.

2) Detail of operation

The outdoor fan is stepped up by 2 speed step at each 20 seconds. (Upper limit 8th speed)

3) Reset conditions

When either of the following conditions is satisfied.

a) The outdoor air temperature (TH2) is 6°C or higher.

b) The compressor speed is 0 rps.

(e) Outdoor fan control at overload

(i) Cooling

1) Operating condition

When the outdoor air temperature (TH2) is 41°C or higher continues for 30 seconds while the compressor command speed is other than 0 rps.

2) Detail of operation

The outdoor fan is stepped up by 3 speed. (Upper limit 8th speed)

3) Reset conditions

When either of the following conditions is satisfied.

a) The outdoor air temperature (TH2) is 40°C or lower.

b) The compressor speed is 0 rps.

(ii) Heating

1) Operating conditions

When the outdoor air temperature (TH2) is 13°C or higher continues for 30 seconds while the compressor speed is other than 0 rps.

2) Detail of operation

After the outdoor fan operates at -3 speed for 60 seconds; the corresponding outdoor heat exchanger temperature shall implement the following controls.

a) Outdoor heat exchanger temperature $\leq 10^\circ\text{C}$

After the outdoor fan speed rises (up) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is lower than 10°C, gradually increase the outdoor fan speed by 1 speed.

b) $10^\circ\text{C} < \text{Outdoor heat exchanger temperature} \leq 13^\circ\text{C}$

After the outdoor fan speed maintains for 20 seconds; if the outdoor heat exchanger temperature is 10°C~13°C, maintain outdoor fan speed again.

c) Outdoor heat exchanger temperature $> 13^\circ\text{C}$

After the outdoor fan speed drops (down) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is higher than 38°C, gradually reduce outdoor fan speed by 1 speed. (Lower limit 2nd speed)

3) Reset conditions

When either of the following conditions is satisfied.

a) The outdoor air temperature (TH2) is 11°C or lower.

b) The compressor speed is 0 rps.

(f) Outdoor fan motor protection

If the outdoor fan motor has operated at 75 min⁻¹ or lower for more than 30 seconds, the compressor and fan motor are stopped.

(4) Defrost operation

(a) Starting conditions (Defrost operation can be started only when all of the following conditions are satisfied.)

(i) After start of heating operation.

When it elapsed 35 minutes. (Accumulated compressor operation time)

(ii) After end of defrost operation.


When it elapsed 35 minutes. (Accumulated compressor operation time)

(iii) Outdoor heat exchanger sensor (TH1) temperature.

When the temperature has been below -5°C for 3 minutes continuously.

(iv) The difference between the outdoor air sensor temperature and the outdoor heat exchanger sensor temperature (TH2-TH1)


- The outdoor air temperature $\geq -2^\circ\text{C} : 7^\circ\text{C}$ or higher
- $-15^\circ\text{C} < \text{The outdoor air temperature} < -2^\circ\text{C} : 4/15 \times \text{The outdoor air temperature} + 7^\circ\text{C}$ or higher
- The outdoor air temperature $\leq -15^\circ\text{C} : -5^\circ\text{C}$ or higher

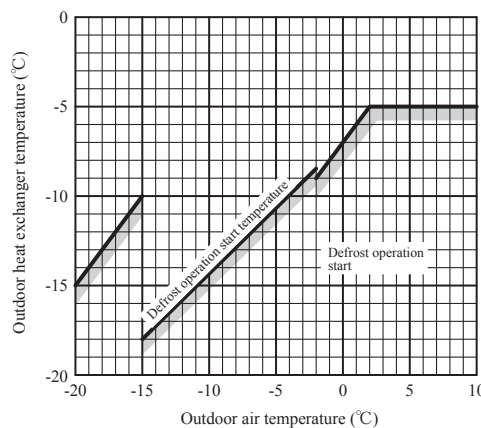

(v) During continuous compressor operation.

In addition, when the speed command from the indoor control of the indoor unit during heating operation has counted 0 rps 10 times or more and all conditions of (i), (ii) above and the outdoor air temperature is 3°C or less and the temperature for outdoor heat exchanger sensor (TH1) is -5°C or less: 62 rps or more, -4°C or less: less than 62 rps are satisfied, defrost operation is started.

- (b) Ending conditions (Operation returns to the heating cycle when either one of the following is satisfied.)
 - (i) Outdoor heat exchanger sensor (TH1) temperature: 20°C or higher.
 - (ii) Continued operation time of defrost operation → For more than 18 minutes.

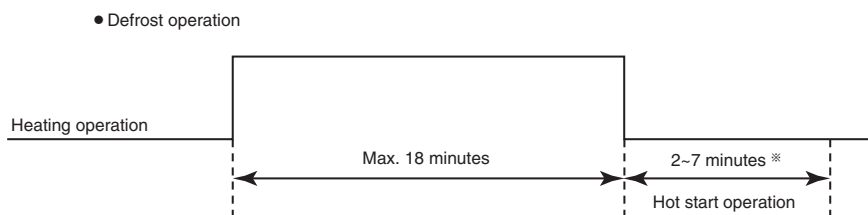


※Depends on an operation condition, the time can be longer than 7 minutes.

(5) Cooling overload protective control

(a) Operating conditions

When the outdoor air temperature (TH2) has become continuously for 30 seconds at 41°C or more, or 47°C or more with the compressor running, the lower limit speed of compressor is brought up.

Item	Model	
	FDC71, 90VNP	
Outdoor air temperature	41°C or more	47°C or more
Lower limit speed	30 rps	40 rps

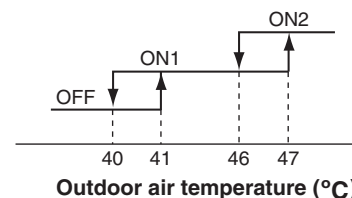

(b) Detail of operation

The lower limit of compressor speed is set to 30 or 40 rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 30 or 40 rps. However, when the thermostat OFF, the speed is reduced to 0 rps.

(c) Reset conditions

- When either of the following condition is satisfied.
- 1) The outdoor air temperature is lower than 40°C.
- 2) The compressor speed is 0 rps.

(6) Cooling high pressure control

(a) Purpose


Prevents anomalous high pressure operation during cooling.

(b) Detector

Outdoor heat exchanger sensor (TH1)

(c) Detail of operation:

(Example) Fuzzy

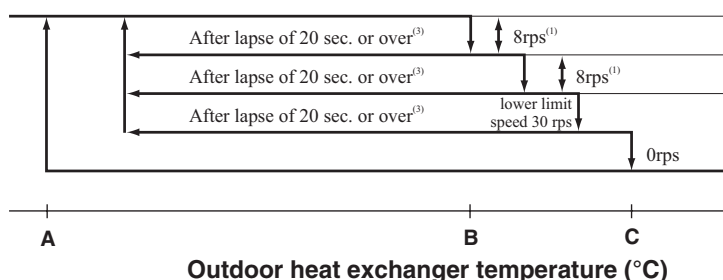

Outdoor air temperature(TH2)	A	B	C
TH2 ≥ 32°C	53	58	63
TH2 < 32°C	51	53	56

- Notes (1) When the outdoor heat exchanger temperature is in the range of B-C°C, the compressor speed is reduced by 8 rps at each 20 seconds.
- (2) When the temperature is C °C or higher, the compressor is stopped.
- (3) When the outdoor heat exchanger temperature is in the range of A-B°C, if the compressor speed is been maintained and the operation has continued for more than 20 seconds at the same speed, it returns to the normal cooling operation.

(7) Cooling low outdoor temperature protective control


(a) Operating conditions

When the outdoor air temperature (TH2) is C°C or lower continues for 20 seconds while the compressor speed is other than 0 rps.

(b) Detail of operation

- (i) The lower limit of the compressor speed is set to 45 (35) rps and even if the speed becomes lower than 45 (35) rps, the speed is kept to 45 (35) rps. However, when the thermostat OFF, the speed is reduced to 0 rps.
- (ii) The upper limit of the compressor speed is set to 60 <75> (75) rps and even if the calculated result becomes higher than that after fuzzy calculation, the speed is kept to 60 <75> (75) rps.

Notes (1) Values in () are for outdoor air temperature is C or D
 (2) Values in < > are for the model FDC90

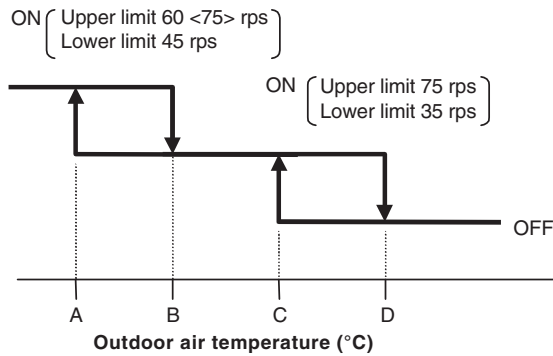

● Values of A, B, C, D
 Model FDC71VNP

	Outdoor air temperature (°C)			
	A	B	C	D
First time	9	11	22	25
After the second time	16	19	25	28

Model FDC90VNP

Outdoor air temperature (°C)			
A	B	C	D
9	11	22	25

(iii) Reset conditions

When either of the following condition is satisfied.

- 1) The outdoor air temperature (TH2) is D °C or higher.
- 2) The compressor speed is 0 rps.

(8) Heating high pressure control

(a) Starting condition

When the indoor heat exchanger temperature (Thi-R1, R2) has risen to a specified temperature while the compressor is turned on.

- (b) Compressor speed is controlled according to the zones of indoor heat exchanger temperature as shown by the following table.

	Thi-R < P1	P1 ≤ Thi-R < P2	P2 ≤ Thi-R < P3	P3 ≤ Thi-R
Protection control speed (NP)	Normal	Retention	NP-4rps	NP-8rps
Sampling time (s)	Normal	10	10	10

Model FDC71VNP Unit: °C

NP \ Thi-R	P1	P2	P3
10 ≤ NP < 50	45	52	54.5
50 ≤ NP < 115	45	52	57
115 ≤ NP < 120	45 - 43	52 - 50	57 - 55
120 ≤ NP	43	50	55

Model FDC90VNP Unit: °C

NP \ Thi-R	P1	P2	P3
10 ≤ NP < 90	45	52	57
90 ≤ NP < 120	45 - 43	52 - 45	57 - 48
120 ≤ NP	43	45	48

(9) Heating overload protective control

(a) Operating conditions

When the outdoor air temperature (TH2) is 13°C or higher continues for 30 seconds than 0 rps.while the compressor speed is other than 0 rps.


(b) Detail of operation

- (i) Taking the upper limit of compressor speed range at 90(75)rps, if the output speed obtained with the fuzzy calculation exceeds the upper limit, the upper limit value is maintained.
- (ii) The lower limit of compressor speed is set to 30(40)rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 30(40)rps. However, when the thermostat OFF, the speed is reduced to 0 rps.

Note (1) Values in () are for outdoor air temperature at 17°C.

(c) Reset conditions

The outdoor air temperature (TH2) is lower than 11°C.

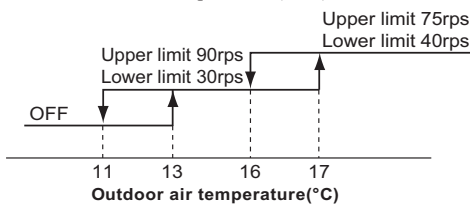


(10) Heating low outdoor temperature protective control

(a) Operating conditions

When the outdoor air temperature (TH2) is 4°C or lower continues for 30 seconds while the compressor speed is other than 0 rps.

(b) Detail of operation

The lower limit compressor speed is change as shown in the figure below.

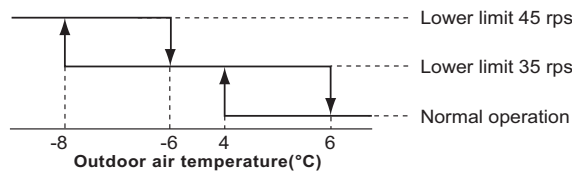

(c) Reset conditions

When either of the following condition is satisfied.

- (i) The outdoor air temperature (TH2) is higher than 6°C.
- (ii) The compressor speed is 0 rps.
- (iii) Compressor protection start II is activate.

(11) Compressor overheat protection


(a) Purpose

It is designed to prevent deterioration of oil, burnout of motor coil and other trouble resulting from the compressor overheat.

(b) Detail of operation

- (i) Speeds are controlled with temperature detected by the sensor mounted on the discharge pipe.

(Example) Fuzzy

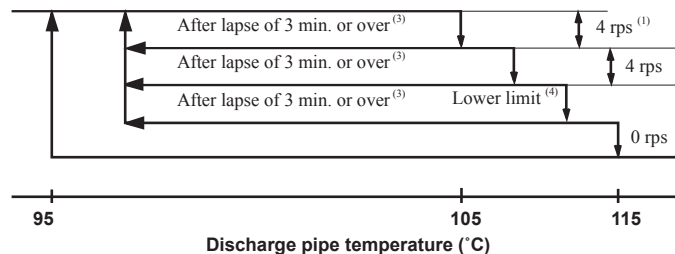

- Notes
- (1) When the discharge pipe temperature is in the range of 105-115°C, the speed is reduced by 4 rps.
 - (2) When the discharge pipe temperature is raised and continues operation for 20 seconds without changing, then the speed is reduced again by 4 rps.
 - (3) If the discharge pipe temperature is in the range of 95-105°C even when the compressor speed is maintained for 3 minutes when the temperature is in the range of 95-105°C, the speed is raised by 1 rps and kept at that speed for 3 minutes. This process is repeated until the command speed is reached.
 - (4) Lower limit speed

	Cooling	Heating
Lower limit speed	25 rps	32 rps

- (ii) If the temperature of 115°C is detected by the sensor on the discharge pipe, then the compressor will stop immediately. When the discharge pipe temperature drops and the time delay of 3 minutes is over, the unit starts again within 1 hour but there is no start at the third time.

(12) Current safe**(a) Purpose**

Current is controlled not to exceed the upper limit of the setting operation current.

(b) Detail of operation

- (i) Input current to the converter is monitored with the current sensor fixed on the printed circuit board of the outdoor unit and, if the operation current value reaches the limiting current value, the compressor speed is reduced.
- (ii) If the mechanism is actuated when the compressor speed is less than 30 rps, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(13) Current cut**(a) Purpose**

Inverter is protected from overcurrent.

(b) Detail of operation

Output current from the inverter is monitored with a shunt resistor and, if the current exceeds the setting value, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(14) Outdoor unit failure

This is a function for determining when there is trouble with the outdoor unit during air-conditioning.

The compressor is stopped if any one of the following in item (a), (b) is satisfied. Once the unit is stopped by this function, it is not restarted.

- (a) When the input current is measured at 1 A or less for 3 continuous minutes or more.
- (b) If the outdoor unit sends a 0 rps signal to the indoor unit 3 times or more within 20 minutes of the power being turned on.

(15) Serial signal transmission error protection**(a) Purpose**

Prevents malfunction resulting from error on the indoor ↔ outdoor signals.

(b) Detail of operation

- (i) If the compressor is operating and a serial signal cannot be received from the indoor control with outdoor control having serial signals continues for 7 minute and 35 seconds, the compressor is stopped.
- (ii) After the compressor has been stopped, it will be restarted after the compressor start delay if a serial signal can be received again from the indoor control.

(16) Rotor lock

If the motor for the compressor does not turn after it has been started, it is determined that a compressor lock has occurred and the compressor is stopped.

(17) Refrigeration cycle system protection**(a) Starting conditions**

- (i) When 5 (Heating: 9) minutes have elapsed after the compressor ON or the completion of the defrost control.
- (ii) Other than the defrost control.
- (iii) When, after satisfying the conditions of (i) and (ii) above, the compressor speed, indoor air temperature (Thi-A) and indoor heat exchanger temperature (Thi-R) have satisfied the conditions in the following table for 5 minutes:

Operation mode	Compressor speed (N)	Indoor air temperature (Thi-A)	Indoor air temperature (Thi-A)/ Indoor heat exchanger temperature (Thi-R)
Cooling	$40 \leq N$	$10 \leq \text{Thi-A} \leq 40$	$\text{Thi-A} - 4 < \text{Thi-R}$
Heating	$40 \leq N$	$0 \leq \text{Thi-A} \leq 40$	$\text{Thi-R} < \text{Thi-A} + 4$

(b) Contents of control

- (i) When the conditions of (a) above are satisfied, the compressor stops.
- (ii) Error stop occurs when the compressor has stopped 3 times within 60 minutes.

(c) Reset condition

When the compressor has been turned OFF

(18) Silent mode

As "Silent mode start" signal is received from the remote control, it operates by dropping the outdoor fan tap.

Model	Item	Outdoor fan tap (Upper limit)
FDC71VNP		Cooling: 7th speed, Heating: 7th speed
FDC90VNP		Cooling: 7th speed, Heating: 5th speed

(19) Broken wire detection on temperature sensor

- (a) Outdoor unit heat exchanger sensor, outdoor air sensor.

If the following is detected for 5 second continuously within 2 minutes to 2 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop. Or with in 20 seconds after power ON.

Note (1) During defrosting and for 3 minutes after the end of defrosting, it is not detected.

- Outdoor unit heat exchanger sensor: -55°C or lower.
- Outdoor air temperature sensor: -55 or lower.

- (b) Discharge pipe temperature sensor.

If the following is detected for 5 second continuously within 10 minutes to 10 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop.

Note (1) During defrosting and for 3 minutes after the end of defrosting, it is not detected.

- Discharge pipe temperature sensor: -25°C or lower.

(II) Model FDC100VNP**(1) Compressor speed**

Unit: rps

	Cooling	Heating
Upper limit	90	90
Lower limit	15	15

(2) Compressor protection start**(a) Operating conditions**

When the compressor is turned ON from the state of OFF.

(b) Detail of operation:

During the protection start control, the upper limit of compressor speed is restricted to the speeds as shown in the following table.

Unit: rps

		Time after establishment of operating conditions (Including acceleration time)					
		Less than 1 min and 45 sec	Less than 3 min	Less than 5 min	Less than 9 min	9 min or more	
Cooling		90	90	90	90	End of control	
Heating	TH2 < 0°C	THi-A ≥ 25°C	30	30	55		90
		THi-A < 25°C	55	55	55		90
	TH2 ≥ 0°C		90	90	90		90

(3) Outdoor fan control**(a) Outdoor fan speed and fan motor speed**Unit: min⁻¹

Fan tap	1st speed	2nd speed	3rd speed	4th speed	5th speed	6th speed	7th speed	8th speed
Fan speed	150	300	550	650	740	820	870	950

(b) Outdoor fan control at start (Cooling operation only)

When the outdoor air temperature (TH2) is lower than 22°C at the start of compressor, the outdoor fan is operated at a fixed speed.

- (i) When the outdoor air temperature is higher than 11°C, the compressor runs at 2nd speed for 30 seconds after the compressor ON.
- (ii) When the outdoor air temperature is lower than 11°C, the compressor runs at 1st speed for 30 seconds after the compressor ON.

(c) Relationship between compressor speed and outdoor fan speed

Outdoor fan speed is controlled according to the operation mode (Heating/cooling) and the compressor speed.

Unit: rps

	1st speed	2nd speed	3rd speed	4th speed	5th speed	6th speed	7th speed	8th speed
Cooling	–	–	0-21	21-32	32-44	44-49	49-70	70-
Heating	–	–	0-21	21-30	30-48	48-60	60-67	67-

(d) Outdoor fan control at low outdoor temperature

(i) Cooling

1) Operating conditions

When the outdoor air temperature (TH2) is 22°C or lower continues for 30 seconds while the compressor speed is other than 0 rps.

2) Detail of operation

After the outdoor fan operates at A speed for 60 seconds; the corresponding outdoor heat exchanger temperature shall implement the following controls.

- Value of A

	Outdoor fan
Outdoor air temperature > 10°C	2nd speed
Outdoor air temperature ≤ 10°C	1st speed

- a) Outdoor heat exchanger temperature ≤ 22°C
After the outdoor fan speed drops (down) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is lower than 22°C, gradually reduce the outdoor fan speed by 1 speed. (Lower limit 1st speed)
- b) 22°C < Outdoor heat exchanger temperature ≤ 40°C
After the outdoor fan speed maintains for 20 seconds; if the outdoor heat exchanger temperature is 22°C-40°C, maintain outdoor fan speed again.
- c) Outdoor heat exchanger temperature > 40°C
After the outdoor fan speed rises (up) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is higher than 40°C, gradually increase outdoor fan speed by 1 speed. (Upper limit 3rd speed)

3) Reset conditions

When either of the following conditions is satisfied.

- a) The outdoor air temperature (TH2) is 24°C or higher and fan speed is 3rd speed.
 - b) The compressor speed is 0 rps.
- 4) Outdoor unit fan speed and fan motor speed.

(ii) Heating

1) Operating conditions

When the outdoor air temperature (TH2) is 3°C or lower continues for 30 seconds while the compressor speed is other than 0 rps.

2) Detail of operation

The outdoor fan is stepped up by 2 speed step at each 20 seconds. (Upper limit 8th speed)

3) Reset conditions

When either of the following conditions is satisfied.

- a) The outdoor air temperature (TH2) is 5°C or higher.
- b) The compressor speed is 0 rps.

(e) Outdoor fan control at overload

(i) Cooling

1) Operating conditions

When the outdoor air temperature (TH2) is 41°C or higher continues for 30 seconds while the compressor speed is other than 0 rps.

2) Detail of operation

The outdoor fan is stepped up by 3 speed. (Upper limit 8th speed)

3) Reset conditions

When either of the following conditions is satisfied.

- a) The outdoor air temperature (TH2) is 40°C or lower.
- b) The compressor speed is 0 rps.

(ii) Heating

1) Operating conditions

When the outdoor air temperature (TH2) is 13°C or higher continues for 30 seconds while the compressor speed is other than 0 rps.

2) Detail of operation

The outdoor fan stepped down to 3 speed.(Lower limit 2nd speed)

3) Reset conditions

When either of the following conditions is satisfied.


- a) The outdoor air temperature (TH2) is 11°C or lower.
- b) The compressor speed is 0 rps.

(f) Outdoor fan motor protection

If the outdoor fan motor has operated at 75 min⁻¹ or lower for more than 30 seconds, the compressor and fan motor are stopped.


(4) Defrost operation

- (a) Starting conditions (Defrost operation can be started only when all of the following conditions are satisfied.)
- (i) After start of heating operation
When it elapsed 35 minutes. (Accumulated compressor operation time)
 - (ii) After end of defrost operation
When it elapsed 35 minutes. (Accumulated compressor operation time)
 - (iii) Outdoor heat exchanger sensor (TH1) temperature
When the temperature has been below -5°C for 3 minutes continuously.
 - (iv) The difference between the outdoor air sensor temperature (TH2) and the outdoor heat exchanger sensor temperature (TH1)
 - The outdoor air temperature $\geq -2^{\circ}\text{C} : 7^{\circ}\text{C}$ or higher
 - $-15^{\circ}\text{C} < \text{The outdoor air temperature} < -2^{\circ}\text{C} : 4/15 \times \text{The outdoor air temperature} + 7^{\circ}\text{C}$ or higher
 - The outdoor air temperature $\leq -15^{\circ}\text{C} : -5^{\circ}\text{C}$ or higher

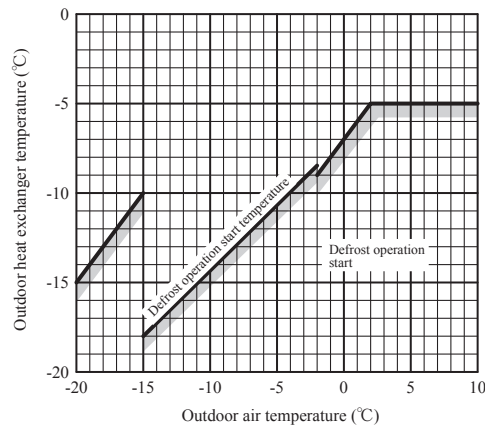

- (v) During continuous compressor operation
In addition, when the speed command from the indoor control of the indoor unit during heating operation has counted 0 rps 10 times or more and all conditions of (i), (ii) above and the outdoor air temperature is 3°C or less and the temperature for outdoor heat exchanger sensor (TH1) is -5°C or less: 62 rps or more, -4°C or less: less than 62 rps are satisfied, defrost operation is started.

- (b) Ending condition (Operation returns to the heating cycle when either one of the following is satisfied.)
- (i) Outdoor heat exchanger sensor (TH1) temperature: 13°C or higher.
 - (ii) Continued operation time of defrost operation → For more than 18 minutes.

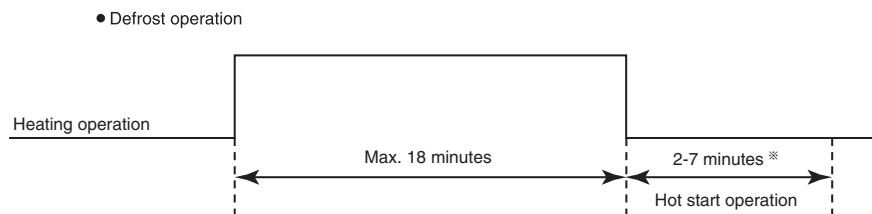


※Depends on an operation condition, the time can be longer than 7 minutes.

(5) Cooling overload protective control

(a) Operating conditions

When the outdoor air temperature (TH2) has become continuously for 30 seconds at 36°C or more, or 47°C or more with the compressor running, the lower limit speed of compressor is brought up.

Item	Model	
	FDC100VNP	
Outdoor air temperature	36°C or more	47°C or more
Lower limit speed	20 rps	25 rps

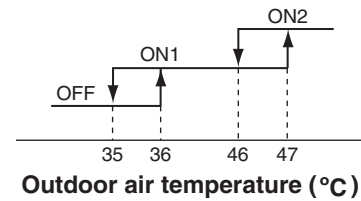

(b) Detail of operation

The lower limit of compressor speed is set to 20 or 25 rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 20 or 25 rps. However, when the thermostat OFF, the speed is reduced to 0 rps.

(c) Reset condition

When either of the following condition is satisfied.

- 1) The outdoor air temperature is lower than 35°C.
- 2) The compressor speed is 0 rps.

(6) Cooling high pressure control

(a) Purpose


Prevents anomalous high pressure operation during cooling.

(b) Detector

Outdoor heat exchanger sensor (TH1)

(c) Detail of operation

(Example) Fuzzy

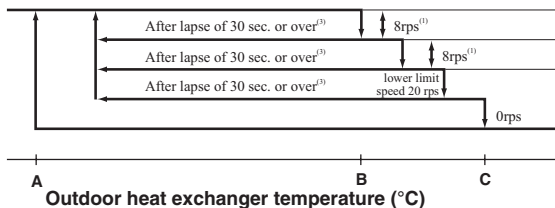

Outdoor air temperature(TH2)	A	B	C
TH2 ≥ 32°C	53	58	60
TH2 < 31°C	51	53	56

Notes (1) When the outdoor heat exchanger temperature is in the range of B - C °C, the compressor speed is reduced by 8 rps at each 20 seconds.

(2) When the temperature is C °C or higher, the compressor is stopped.

(3) When the outdoor heat exchanger temperature is in the range of A - B °C, if the compressor speed is been maintained and the operation has continued for more than 30 seconds at the same speed, it returns to the normal cooling operation.

(7) Cooling low outdoor temperature protective control


(a) Operating condition

When the outdoor air temperature (TH2) is C°C or lower continues for 20 seconds while the compressor speed is other than 0 rps.

(b) Detail of operation

- (i) The lower limit of the compressor speed is set to 40 (A) rps and even if the speed becomes lower than 40 (A) rps, the speed is kept to 40 (A) rps. However, when the thermo OFF, the speed is reduced to 0 rps.
- (ii) The upper limit of the compressor speed is set to 50 (65) rps and even if the calculated result becomes higher than that after fuzzy calculation, the speed is kept to 50 (65) rps.

Note (1) Values in () are for outdoor air temperature is C or D

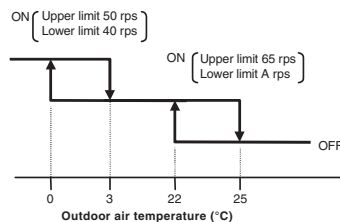

● Value of A

	A
Outdoor air temperature ≥ 26°C	Release
Outdoor air temperature < 24°C	25

(iii) Reset condition

When either of the following condition is satisfied.

- 1) The outdoor air temperature (TH2) is 25 °C or higher.
- 2) The compressor speed is 0 rps.

(8) Heating high pressure control

(a) Starting condition

When the indoor heat exchanger temperature (Thi-R1, R2) has risen to a specified temperature while the compressor is turned on.

(b) Compressor speed is controlled according to the zones of indoor heat exchanger temperature as shown by the following table.

	Thi-R < P1	P1 ≤ Thi-R < P2	P2 ≤ Thi-R < P3	P3 ≤ Thi-R
Protection control speed (NP)	Normal	Retention	NP-4rps	NP-8rps
Sampling time (s)	Normal	20	20	20

Unit: °C

NP	Thi-R	P1	P2	P3
10 ≤ NP < 90		45	52	57
90 ≤ NP < 120		45 - 43	52 - 45	57 - 48
120 ≤ NP		43	45	48

(9) Heating overload protective control I

(a) Operating conditions

When the outdoor air temperature (TH2) is 13°C or higher continues for 30 seconds while the compressor speed is other than 0 rps.


(b) Detail of operation

- (i) Taking the upper limit of compressor speed range at 65(35)rps, if the output speed obtained with the fuzzy calculation exceeds the upper limit, the upper limit value is maintained.
- (ii) The lower limit of compressor speed is set to 25(30)rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 25(30)rps. However, when the thermostat OFF, the speed is reduced to 0 rps

Note (1) Values in () are for outdoor air temperature at 17°C.

(c) Reset condition

The outdoor air temperature (TH2) is lower than 11°C.

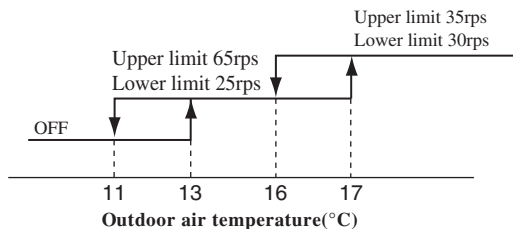


(10) Heating overload protective control II

(a) Starting condition

When the indoor heat exchanger temperature (Thi-R) has risen to a specified temperature while the compressor is turned on.

(b) Detail of operation

The lower limit of compressor command speed is set to 20rps.

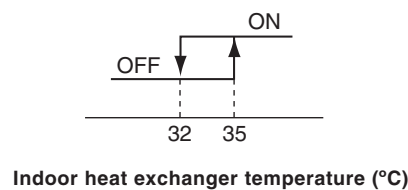


(11) Heating low outdoor temperature protective control

(a) Operating conditions

When the outdoor air temperature (TH2) is 4°C or lower continues for 30 seconds while the compressor speed is other than 0 rps.

(b) Detail of operation

The lower limit compressor speed is change as shown in the figure below.

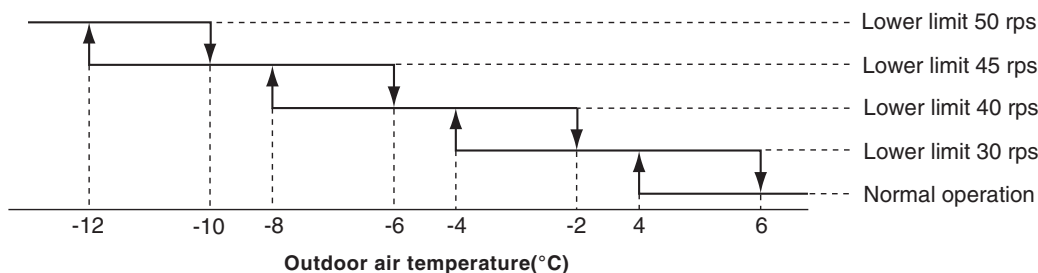

(c) Reset condition

When either of the following condition is satisfied.

- (i) The outdoor air temperature (TH2) is higher than 6°C
- (ii) The compressor speed is 0 rps.

(12) Compressor overheat protection


(a) Purpose

It is designed to prevent deterioration of oil, burnout of motor coil and other trouble resulting from the compressor over-heat.

(b) Detail of operation

- (i) Speeds are controlled with temperature detected by the sensor mounted on the discharge pipe.

(Example) Fuzzy

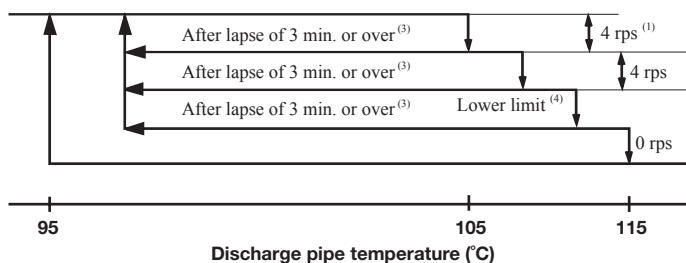

- Notes (1) When the discharge pipe temperature is in the range of 105-115°C, the speed is reduced by 4 rps.
- (2) When the discharge pipe temperature is raised and continues operation for 20 seconds without changing, then the speed is reduced again by 4 rps.
- (3) If the discharge pipe temperature is in the range of 95-105°C even when the compressor speed is maintained for 3 minutes when the temperature is in the range of 95-105°C, the speed is raised by 1 rps and kept at that speed for 3 minutes. This process is repeated until the command speed is reached.
- (4) Lower limit speed

	Cooling	Heating
Lower limit speed	20 rps	25 rps

- (ii) If the temperature of 115°C is detected by the sensor on the discharge pipe, then the compressor will stop immediately. When the discharge pipe temperature drops and the time delay of 3 minutes is over, the unit starts again within 1 hour but there is no start at the third time.

(13) Current safe

(a) Purpose

Current is controlled not to exceed the upper limit of the setting operation current.

(b) Detail of operation

- (i) Input current to the converter is monitored with the current sensor fixed on the printed circuit board of the outdoor unit and, if the operation current value reaches the limiting current value, the compressor speed is reduced.
- (ii) If the mechanism is actuated when the compressor speed is less than 20 rps, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(14) Current cut

(a) Purpose

Inverter is protected from overcurrent.

(b) Detail of operation

Output current from the inverter is monitored with a shunt resistor and, if the current exceeds the setting value, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(15) Outdoor unit failure

This is a function for determining when there is trouble with the outdoor unit during air-conditioning.

The compressor is stopped if any one of the following in item (a), (b) is satisfied. Once the unit is stopped by this function, it is not restarted.

- (a) When the input current is measured at 1 A or less for 3 continuous minutes or more.
- (b) If the outdoor unit sends a 0 rps signal to the indoor unit 3 times or more within 20 minutes of the power being turned on.

(16) Serial signal transmission error protection

(a) Purpose

Prevents malfunction resulting from error on the indoor ↔ outdoor signals.

(b) Detail of operation

- (i) If the compressor is operating and a serial signal cannot be received from the indoor control with outdoor control having serial signals continues for 7 minute and 35 seconds, the compressor is stopped.
- (ii) After the compressor has been stopped, it will be restarted after the compressor start delay if a serial signal can be received again from the indoor control.

(17) Rotor lock

If the motor for the compressor does not turn after it has been started, it is determined that a compressor lock has occurred and the compressor is stopped.

(18) Refrigeration cycle system protection

(a) Starting conditions

- (i) When S minutes have elapsed after the compressor ON or the completion of the defrost control
- (ii) Other than the defrost control
- (iii) When, after meeting the conditions of (i) and (ii) above, the compressor speed, indoor air temperature (Thi-A) and indoor heat exchanger temperature (Thi-R) have met the conditions in the following table for 5 minutes:

Operation mode	S (min)	Compressor speed (N)	Indoor air temperature (Thi-A)	Indoor air temperature (Thi-A)/ Indoor heat exchanger temperature (Thi-R)
Cooling	5	$30 \leq N$	$10 \leq \text{Thi-A} \leq 40$	$\text{Thi-A} - 4 < \text{Thi-R}$
Heating	5	$30 \leq N$	$0 \leq \text{Thi-A} \leq 40$	$\text{Thi-A} + 6 > \text{Thi-R}$

(b) Contents of control

- (i) When the conditions of (a) above are met, the compressor stops.
- (ii) Error stop occurs when the compressor has stopped 3 times within 60 minutes.

(c) Resetting condition

When the compressor has been turned OFF.

(19) Silent mode

As “Silent mode start” signal is received from the remote control, it operates by dropping the outdoor fan tap.

	Outdoor fan tap (Upper limit)
Cooling	3rd speed
Heating	3rd speed

(20) Broken wire detection on temperature sensor**(a) Outdoor heat exchanger sensor, outdoor air sensor**

If the following is detected for 5 second continuously within 2 minutes to 2 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop. Or with in 20 seconds after power ON.

Note (1) During defrosting and for 3 minutes after the end of defrosting, it is not detected.

- Outdoor heat exchanger sensor: -55°C or lower
- Outdoor air temperature sensor: -55 or lower

(b) Discharge pipe temperature sensor

If the following is detected for 5 second continuously within 10 minutes to 10 minutes and 20 seconds after the compressor ON, the compressor stops. After a delay of 3 minutes, it restarts but, if the same is detected repeatedly 3 times within 40 minutes, the compressor stops with the anomalous stop.

Note (1) During defrosting and for 3 minutes after the end of defrosting, it is not detected.

- Discharge pipe temperature sensor: -25°C or lower

(21) Base heater ON/OFF output control (Option)**(a) Base heater ON conditions**


When all of following conditions are met, the base heater is turned ON.

- Outdoor air temperature (detected with Tho-A) is 3°C or lower.
- In the heating mode
- When the compressor is turned ON

(b) Base heater OFF conditions

When either one of following conditions is met, the base heater is turned OFF.

- Outdoor air temperature (detected with Tho-A) is 5°C or higher.
- When the compressor stop has been detected for 30 minutes continuously
- In the cooling or dehumidifying mode

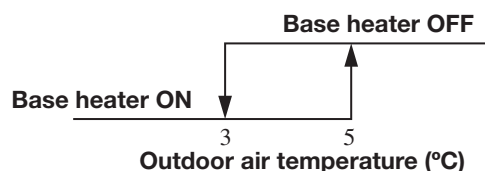**(22) Reverse operation start for compressor protection****(a) Purpose**

It is designed to prevent compressor failure at heating mode.

(b) Detail of operation

When the outdoor air temperature (TH2) is 10°C or lower and compressor is not operated for long time, the unit start cooling mode up to 7 minutes at heating mode.

(c) Method for disabling this operation.

When outdoor unit is installed higher than indoor unit, you can disable this control by cutting jumper (J2) of PCB of outdoor unit.

Notes(1) Unit may failure if you disable this control without above installation condition.

3.11 MAINTENANCE DATA

See page 150 of 1.1 chapter

3.12 TECHNICAL INFORMATION

Model FDT71VNPVG

Information to identify the model(s) to which the information relates to:		If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.	
Indoor unit model name	FDT71VG		
Outdoor unit model name	FDC71VNP		
Function(indicate if present)		Average(mandatory)	
cooling	Yes	Warmer(if designated)	No
heating	Yes	Colder(if designated)	No
Item	symbol	value	unit
Design load			
cooling	Pdesignc	7.1	kW
heating / Average	Pdesignh	5.7	kW
heating / Warmer	Pdesignh	-	kW
heating / Colder	Pdesignh	-	kW
Declared capacity at outdoor temperature Tdesignh		Back up heating capacity at outdoor temperature Tdesignh	
heating / Average (-10°C)	Pdh	5.70	kW
heating / Warmer (2°C)	Pdh	-	kW
heating / Colder (-22°C)	Pdh	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj		Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj	
Tj=35°C	Pdc	7.10	kW
Tj=30°C	Pdc	5.20	kW
Tj=25°C	Pdc	3.40	kW
Tj=20°C	Pdc	1.50	kW
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	5.00	kW
Tj=2°C	Pdh	3.00	kW
Tj=7°C	Pdh	2.00	kW
Tj=12°C	Pdh	1.30	kW
Tj=bivalent temperature	Pdh	5.70	kW
Tj=operating limit	Pdh	5.10	kW
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	-	kW
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Tj=-15°C	Pdh	-	kW
Bivalent temperature		Operating limit temperature	
heating / Average	Tbiv	-10	°C
heating / Warmer	Tbiv	-	°C
heating / Colder	Tbiv	-	°C
heating / Average		heating / Average	
heating / Warmer		heating / Warmer	
heating / Colder		heating / Colder	
Cycling interval capacity		Cycling interval efficiency	
for cooling	Pcycc	-	kW
for heating	Pcyh	-	kW
for cooling		for cooling	
for heating		for heating	
Degradation coefficient		Degradation coefficient	
cooling	Cdc	0.25	-
cooling		cooling	
Electric power input in power modes other than 'active mode'		Annual electricity consumption	
off mode	Poff	10	W
standby mode	Psb	10	W
thermostat-off mode	Pto	13	W
crankcase heater mode	Pck	0	W
cooling		cooling	
heating / Average		heating / Average	
heating / Warmer		heating / Warmer	
heating / colder		heating / colder	
Capacity control(indicate one of three options)		Other items	
fixed	No	Lwa	62 dB(A)
staged	No	Lwa	67 dB(A)
variable	Yes	GWp	1975 kgCO2eq.
		Rated air flow(indoor)	
		Rated air flow(outdoor)	
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative.		
	Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom		
PJF000Z425			

Model FDT90VNPVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT100VG		Average(mandatory)		Yes	
Outdoor unit model name		FDC90VNP		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)		No	
cooling		Yes					
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	9.0	kW	cooling	SEER	6.78	A++
heating / Average	Pdesignh	8.1	kW	heating / Average	SCOP/A	4.12	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	8.10	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	9.00	kW	Tj=35°C	EERd	3.37	-
Tj=30°C	Pdc	6.60	kW	Tj=30°C	EERd	5.10	-
Tj=25°C	Pdc	4.30	kW	Tj=25°C	EERd	8.20	-
Tj=20°C	Pdc	2.20	kW	Tj=20°C	EERd	12.50	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	7.10	kW	Tj=-7°C	COPd	2.85	-
Tj=2°C	Pdh	4.30	kW	Tj=2°C	COPd	4.00	-
Tj=7°C	Pdh	2.70	kW	Tj=7°C	COPd	5.35	-
Tj=12°C	Pdh	1.36	kW	Tj=12°C	COPd	5.00	-
Tj=bivalent temperature	Pdh	8.10	kW	Tj=bivalent temperature	COPd	2.50	-
Tj=operating limit	Pdh	7.10	kW	Tj=operating limit	COPd	2.20	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-15	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcycc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyh	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	9	W	cooling	Qce	465	kWh/a
standby mode	Psb	9	W	heating / Average	Qhe	2756	kWh/a
thermostat-off mode	Pto	25	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode	Pck	0	W	heating / colder	Qhe	-	kWh/a
Capacity control(indicate one of three options)				Other items			
fixed	No			Sound power level(indoor)	Lwa	63	dB(A)
staged	No			Sound power level(outdoor)	Lwa	69	dB(A)
variable	Yes			Global warming potential	GWP	1975	kgCO2eq.
				Rated air flow(indoor)	-	2220	m3/h
				Rated air flow(outdoor)	-	3780	m3/h
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom					
		PJF000Z425					

Model FDT100VNP1VG

Information to identify the model(s) to which the information relates to:		If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name	FDT100VG				
Outdoor unit model name	FDC100VNP				
Function(indicate if present)		Average(mandatory)		Yes	
cooling	Yes		Warmer(if designated)		No
heating	Yes		Colder(if designated)		No
Item	symbol	value	unit	Item	symbol value class
Design load			Seasonal efficiency and energy efficiency class		
cooling	Pdesignc	10.0	kW	cooling	SEER 6.78 A++
heating / Average	Pdesignh	8.1	kW	heating / Average	SCOP/A 4.53 A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W - -
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C - -
Declared capacity at outdoor temperature Tdesignh			Back up heating capacity at outdoor temperature Tdesignh		
heating / Average (-10°C)	Pdh	8.10	kW	heating / Average (-10°C)	elbu 0 kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu - kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu - kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj			Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj		
Tj=35°C	Pdc	10.00	kW	Tj=35°C	EERd 3.62 -
Tj=30°C	Pdc	7.37	kW	Tj=30°C	EERd 5.30 -
Tj=25°C	Pdc	4.80	kW	Tj=25°C	EERd 8.07 -
Tj=20°C	Pdc	3.50	kW	Tj=20°C	EERd 12.07 -
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj			Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj		
Tj=-7°C	Pdh	7.10	kW	Tj=-7°C	COPd 2.96 -
Tj=2°C	Pdh	4.24	kW	Tj=2°C	COPd 4.46 -
Tj=7°C	Pdh	2.80	kW	Tj=7°C	COPd 5.83 -
Tj=12°C	Pdh	2.85	kW	Tj=12°C	COPd 6.95 -
Tj=bivalent temperature	Pdh	8.10	kW	Tj=bivalent temperature	COPd 2.66 -
Tj=operating limit	Pdh	7.15	kW	Tj=operating limit	COPd 2.50 -
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj		
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd - -
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd - -
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd - -
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd - -
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd - -
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj			Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj		
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd - -
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd - -
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd - -
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd - -
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd - -
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd - -
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd - -
Bivalent temperature		Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol -15 °C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol - °C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol - °C
Cycling interval capacity		Cycling interval efficiency			
for cooling	Pcycc	-	kW	for cooling	EERcyc - -
for heating	Pcyh	-	kW	for heating	COPcyc - -
Degradation coefficient		Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh 0.25 -
Electric power input in power modes other than 'active mode'		Annual electricity consumption			
off mode	Poff	9	W	cooling	Qce 517 kWh/a
standby mode	Psb	9	W	heating / Average	Qhe 2505 kWh/a
thermostat-off mode	Pto	25	W	heating / Warmer	Qhe - kWh/a
crankcase heater mode	Pck	0	W	heating / colder	Qhe - kWh/a
Capacity control(indicate one of three options)		Other items			
fixed	No		Sound power level(indoor)	Lwa 63 dB(A)	
staged	No		Sound power level(outdoor)	Lwa 70 dB(A)	
variable	Yes		Global warming potential	GWP 1975 kgCO2eq.	
		Rated air flow(indoor)		-	2220 m3/h
		Rated air flow(outdoor)		-	4500 m3/h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 7 Roundwood Avenue, Stockley Park, Uxbridge, Middlesex, UB11 1AX, United Kingdom				
PJF000Z425					

4. V MULTI SYSTEM

TABLE OF CONTENTS

4.1 HYPER INVERTER PACKAGED AIR-CONDITIONERS	438
4.2 MICRO INVERTER PACKAGED AIR-CONDITIONERS	455



4.1 HYPER INVERTER PACKAGED AIR-CONDITIONERS

CONTENTS

4.1.1 GENERAL INFORMATION	439
(1) How to read the model name.....	439
(2) Table of models	439
(3) Table of system combinations	439
4.1.2 SPECIFICATIONS	440
(1) Indoor units	440
(2) Outdoor units	444
(3) Operation chart	451
4.1.3 EXTERIOR DIMENSIONS	454
4.1.4 ELECTRICAL WIRING	454
4.1.5 NOISE LEVEL	454
4.1.6 TEMPERATURE AND VELOCITY DISTRIBUTION	454
4.1.7 PIPING SYSTEM	454
4.1.8 RANGE OF USAGE & LIMITATIONS	454
4.1.9 SELECTION CHART	454
4.1.10 APPLICATION DATA	454
4.1.11 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER	454
4.1.12 MAINTENANCE DATA	454

4.1.1 GENERAL INFORMATION

(1) How to read the model name

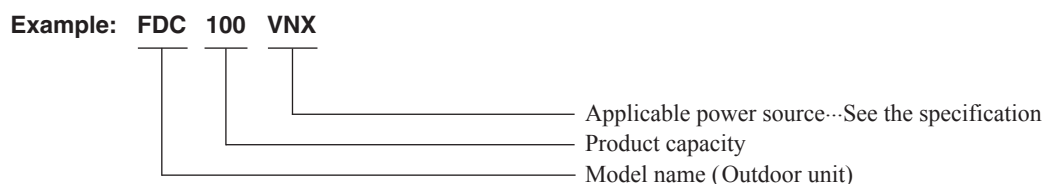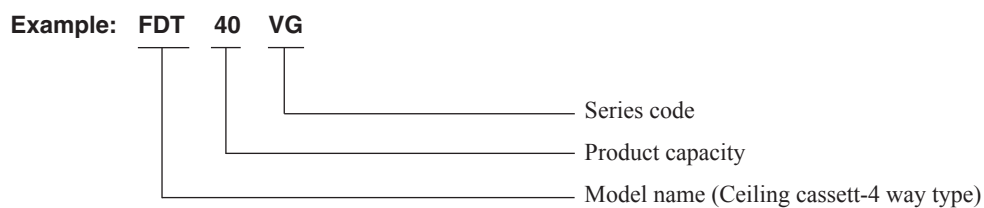

(2) Table of models

Model \ Capacity	40	50	60	71
Ceiling cassette-4 way type (FDT)	○	○	○	○
Outdoor unit to be combined (FDC)	FDC71VNX	FDC100VNX FDC100VSX	FDC125VNX FDC125VSX	FDC140VNX FDC140VSX

(3) Table of system combinations

Outdoor unit	Type	Indoor unit assembly capacity	Branch pipe set (Option)
FDC71VNX	Twin	40+40	DIS-WA1
FDC100VNX FDC100VSX		50+50	
FDC125VNX FDC125VSX		60+60 50+71	
FDC140VNX FDC140VSX	Twin	71+71	DIS-TA1 or DIS-WA1×2set
	Triple	50+50+50	

- Notes(1) Always use the branch piping set (option) at branches in the refrigerant piping.
 (2) If wireless specifications are used, use 1 wireless indoor unit in combination with wired indoor units.
 (3) The combinations except the above table forbids.

4.1.2 SPECIFICATIONS

(1) Indoor units

Item		Model		FDT40VG		
Power source		1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity	kW	4.0			
	Nominal heating capacity	kW	4.5			
	Sound power level	Cooling	dB(A)	53		
		Heating				
	Sound pressure level	Cooling	dB(A)	P-Hi : 36 Hi : 33 Me : 30 Lo : 27		
Heating						
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950			
Exterior appearance (Munsell color)		Plaster white (6.8Y8.9/0.2) near equivalent				
Net weight		kg	Unit 19 Panel 5			
Heat exchanger		Louver fin & inner grooved tubing				
Fan type & Q'ty		Turbo fan ×1				
Fan motor (Starting method)		W	50 < Direct line start >			
Air flow		Cooling	m ³ /min	P-Hi : 19 Hi : 16 Me : 13 Lo : 10		
		Heating				
Available external static pressure		Pa	0			
Outside air intake		Possible				
Air filter, Quality / Quantity		Pocket plastic net ×1(Washable)				
Shock & vibration absorber		Rubber sleeve(for fan motor)				
Electric heater		W	—			
Operation control	Remote control	(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2				
	Room temperature control	Thermostat by electronics				
	Operation display	—				
Safety equipments		Internal thermostat for fan motor. Frost protection thermostat.				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø6.35 (1/4") Gas line: ø12.7 (1/2")			
	Connecting method	Flare piping				
	Attached length of piping	m	—			
	Insulation for piping	Necessary (both Liquid & Gas lines)				
Drain hose		Hose connectable VP25(O.D.32)				
Drain pump, max lift height		mm	Built-in drain pump, 850			
IP number		IPX0				
Standard accessories		Mounting kit, Drain hose				
Option parts		—				
Notes (1) The data are measured at the following conditions.						
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model	FDT50VG	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz	
Operation data	Nominal cooling capacity	kW	5.0	
	Nominal heating capacity	kW	5.4	
	Sound power level	Cooling	dB(A)	54
		Heating		
	Sound pressure level	Cooling	P-Hi : 38 Hi : 33 Me : 30 Lo : 27	
Heating				
Silent mode sound pressure level			—	
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 x 840 x 840 Panel 35 x 950 x 950	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	
Net weight		kg	Unit 19 Panel 5	
Heat exchanger			Louver fin & inner grooved tubing	
Fan type & Q'ty			Turbo fan x1	
Fan motor (Starting method)		W	50 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 20 Hi : 16 Me : 13 Lo : 10	
	Heating			
Available external static pressure		Pa	0	
Outside air intake			Possible	
Air filter, Quality / Quantity			Pocket plastic net x1(Washable)	
Shock & vibration absorber			Rubber sleeve(for fan motor)	
Electric heater		W	—	
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2	
	Room temperature control		Thermostat by electronics	
	Operation display		—	
Safety equipments			Internal thermostat for fan motor. Frost protection thermostat.	
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø6.35 (1/4")	
			Gas line: ø12.7 (1/2")	
	Connecting method		Flare piping	
	Attached length of piping	m	—	
	Insulation for piping		Necessary (both Liquid & Gas lines)	
Drain hose		Hose connectable VP25(O.D.32)		
Drain pump, max lift height		mm	Built-in drain pump, 850	
IP number			IPX0	
Standard accessories			Mounting kit, Drain hose	
Option parts			—	

Notes (1) The data are measured at the following conditions.

Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
Cooling		27°C	19°C	35°C	24°C	ISO5151-T1
Heating		20°C	—	7°C	6°C	

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model	FDT60VG	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz	
Operation data	Nominal cooling capacity	kW	5.6	
	Nominal heating capacity	kW	6.7	
	Sound power level	Cooling	dB(A)	60
		Heating		
	Sound pressure level	Cooling	P-Hi : 44 Hi : 34 Me : 32 Lo : 28	
Heating				
Silent mode sound pressure level			—	
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 x 840 x 840 Panel 35 x 950 x 950	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	
Net weight		kg	Unit 21 Panel 5	
Heat exchanger			Louver fin & inner grooved tubing	
Fan type & Q'ty			Turbo fan x1	
Fan motor (Starting method)		W	50 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 26 Hi : 17 Me : 14 Lo : 11	
	Heating			
Available external static pressure		Pa	0	
Outside air intake			Possible	
Air filter, Quality / Quantity			Pocket plastic net x1(Washable)	
Shock & vibration absorber			Rubber sleeve(for fan motor)	
Electric heater		W	—	
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2	
	Room temperature control		Thermostat by electronics	
	Operation display		—	
Safety equipments			Internal thermostat for fan motor. Frost protection thermostat.	
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø6.35 (1/4")	
			Gas line: ø12.7 (1/2")	
	Connecting method		Flare piping	
	Attached length of piping	m	—	
	Insulation for piping		Necessary (both Liquid & Gas lines)	
Drain hose		Hose connectable VP25(O.D.32)		
Drain pump, max lift height		mm	Built-in drain pump, 850	
IP number			IPX0	
Standard accessories			Mounting kit, Drain hose	
Option parts			—	

Notes (1) The data are measured at the following conditions.

Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
Cooling	DB	27°C	19°C	35°C	24°C	ISO5151-T1
	WB	—	—	—	—	
Heating	DB	20°C	—	7°C	6°C	ISO5151-T1
	WB	—	—	—	—	

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model		FDT71VG		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)		kW	7.1		
	Nominal heating capacity (range)		kW	8.0		
	Sound power level	Cooling	dB(A)	62		
		Heating				
	Sound pressure level	Cooling		P-Hi : 46 Hi : 35 Me : 34 Lo : 29		
Heating						
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)			mm	Unit 236 x 840 x 840 Panel 35 x 950 x 950		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent			
Net weight			kg	Unit 21 Panel 5		
Heat exchanger			Louver fin & inner grooved tubing			
Fan type & Q'ty			Turbo fan x1			
Fan motor (Starting method)			W	50 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12			
	Heating					
Available external static pressure			Pa	0		
Outside air intake			Possible			
Air filter, Quality / Quantity			Pocket plastic net x1(Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)			
Electric heater			W	—		
Operation control	Remote control		(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Internal thermostat for fan motor. Frost protection thermostat.			
Installation data	Refrigerant piping size (O.D.)		mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")		
	Connecting method		Flare piping			
	Attached length of piping		m	—		
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Drain hose		Hose connectable VP25(O.D.32)			
Drain pump, max lift height			mm	Built-in drain pump, 850		
IP number			IPX0			
Standard accessories			Mounting kit, Drain hose			
Option parts			—			

Notes (1) The data are measured at the following conditions.

Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
Cooling	DB	27°C	19°C	35°C	24°C	ISO5151-T1
	WB	—	—	—	—	
Heating	DB	20°C	—	7°C	6°C	ISO5151-T1
	WB	—	—	—	—	


(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.


(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

(2) Outdoor units

Item		Model		FDC71VNX		
Power source				1 Phase 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	7.1 [3.2(Min.)-8.0(Max.)]			
	Nominal heating capacity (range)	kW	8.0 [3.6(Min.)-9.0(Max.)]			
	Sound power level	Cooling	dB(A)	66		
		Heating		51		
	Sound pressure level	Cooling		48		
		Heating		—		
Silent mode sound pressure level				—		
Exterior dimensions (Height x Width x Depth)		mm	750×880(+88)×340			
Exterior appearance (Munsell color)				Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	60			
Compressor type & Q'ty				RMT5118MDE2×1		
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		ℓ	0.675 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 2.95kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger				M shape fin & inner grooved tubing		
Refrigerant control				Electronic expansion valve		
Fan type & Q'ty				Propeller fan ×1		
Fan motor (Starting method)		W	86 < Direct line start >			
Air flow	Cooling	m³/min	60			
	Heating		50			
Shock & vibration absorber				Rubber sleeve(for compressor)		
Electric heater		W	20(Crank case heater)			
Safety equipments				Overload protection for fan motor. Abnormal discharge temperature protection.		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")			
	Connecting method			Flare piping		
	Attached length of piping	m	—			
	Insulation for piping			Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)	
Drain hose				Holes size ø20 x 3pcs		
IP number				IP24		
Standard accessories				—		
Option parts				—		
Notes		(1) The data are measured at the following conditions.		The pipe length is 7.5m.		
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						




Item		Model	FDC100VNX			
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.)-11.2(Max.)]			
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.)-12.5(Max.)]			
	Sound power level	Cooling	dB(A)	70		
		Heating		48		
	Sound pressure level	Cooling		50		
Heating		—				
Silent mode sound pressure level			—			
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	105			
Compressor type & Q'ty			RMT5134MDE2×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			M shape fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×2			
Fan motor (Starting method)		W	86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	100			
	Heating					
Shock & vibration absorber			Rubber sleeve(for compressor)			
Electric heater		W	20(Crank case heater)			
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.100m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Holes size ø20 x 3pcs			
IP number			IP24			
Standard accessories			Edging			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	—	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						



Item		Model	FDC100VSX			
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.)-11.2(Max.)]			
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.)-16.0(Max.)]			
	Sound power level	Cooling	dB(A)	70		
		Heating				
	Sound pressure level	Cooling		48		
Heating		50				
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	105			
Compressor type & Q'ty			RMT5134MDE3×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			M shape fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×2			
Fan motor (Starting method)		W	86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	100			
	Heating					
Shock & vibration absorber			Rubber sleeve(for compressor)			
Electric heater		W	20(Crank case heater)			
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.100m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Holes size ø20 x 3pcs			
IP number			IP24			
Standard accessories			Edging			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
	Heating	20°C	—	7°C	6°C	
ISO5151-T1						
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						

Item		Model	FDC125VNX			
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.)-14.0(Max.)]			
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.)-17.0(Max.)]			
	Sound power level	Cooling	dB(A)	70		
		Heating		48		
	Sound pressure level	Cooling		50		
Heating		—				
Silent mode sound pressure level			—			
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	105			
Compressor type & Q'ty			RMT5134MDE2×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			M shape fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×2			
Fan motor (Starting method)		W	86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	100			
	Heating					
Shock & vibration absorber			Rubber sleeve(for compressor)			
Electric heater		W	20(Crank case heater)			
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.100m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Holes size ø20 x 3pcs			
IP number			IP24			
Standard accessories			Edging			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	—	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model	FDC125VSX			
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.)-14.0(Max.)]			
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.)-18.0(Max.)]			
	Sound power level	Cooling	dB(A)	70		
		Heating				
	Sound pressure level	Cooling		48		
Heating		50				
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	105			
Compressor type & Q'ty			RMT5134MDE3×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			M shape fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×2			
Fan motor (Starting method)		W	86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	100			
	Heating					
Shock & vibration absorber			Rubber sleeve(for compressor)			
Electric heater		W	20(Crank case heater)			
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.100m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Holes size ø20 x 3pcs			
IP number			IP24			
Standard accessories			Edging			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
	Heating	20°C	—	7°C	6°C	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						



Item		Model	FDC140VNX			
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.)-16.0(Max.)]			
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.)-18.0(Max.)]			
	Sound power level	Cooling	dB(A)	72		
		Heating				
	Sound pressure level	Cooling		49		
Heating		52				
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	105			
Compressor type & Q'ty			RMT5134MDE2×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			M shape fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×2			
Fan motor (Starting method)		W	86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	100			
	Heating					
Shock & vibration absorber			Rubber sleeve(for compressor)			
Electric heater		W	20(Crank case heater)			
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.100m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Holes size ø20 x 3pcs			
IP number			IP24			
Standard accessories			Edging			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	—	7°C	6°C	ISO5151-T1	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model	FDC140VSX																									
Power source			3 Phase 380-415V 50Hz / 380V 60Hz																									
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.)-16.0(Max.)]																									
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.)-20.0(Max.)]																									
	Sound power level	Cooling	dB(A)	72																								
		Heating																										
	Sound pressure level	Cooling		49																								
Heating		52																										
Silent mode sound pressure level			—																									
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370																									
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent																									
Net weight		kg	105																									
Compressor type & Q'ty			RMT5134MDE3×1																									
Compressor motor (Starting method)		kW	Direct line start																									
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)																									
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5kg in outdoor unit (incl. the amount for the piping of : 30m)																									
Heat exchanger			M shape fin & inner grooved tubing																									
Refrigerant control			Electronic expansion valve																									
Fan type & Q'ty			Propeller fan ×2																									
Fan motor (Starting method)		W	86 x 2 < Direct line start >																									
Air flow	Cooling	m ³ /min	100																									
	Heating																											
Shock & vibration absorber			Rubber sleeve(for compressor)																									
Electric heater		W	20(Crank case heater)																									
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.																									
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")																									
	Connecting method		Flare piping																									
	Attached length of piping	m	—																									
	Insulation for piping		Necessary (both Liquid & Gas lines)																									
	Refrigerant line (one way) length	m	Max.100m																									
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)																									
Drain hose			Holes size ø20 x 3pcs																									
IP number			IP24																									
Standard accessories			Edging																									
Option parts			—																									
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.																										
	<table border="1"> <thead> <tr> <th rowspan="2">Operation</th> <th rowspan="2">Item</th> <th colspan="2">Indoor air temperature</th> <th colspan="2">Outdoor air temperature</th> <th rowspan="2">Standards</th> </tr> <tr> <th>DB</th> <th>WB</th> <th>DB</th> <th>WB</th> </tr> </thead> <tbody> <tr> <td>Cooling</td> <td></td> <td>27°C</td> <td>19°C</td> <td>35°C</td> <td>24°C</td> <td rowspan="2">ISO5151-T1</td> </tr> <tr> <td>Heating</td> <td></td> <td>20°C</td> <td>—</td> <td>7°C</td> <td>6°C</td> </tr> </tbody> </table>	Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	DB	WB	DB	WB	Cooling		27°C	19°C	35°C	24°C	ISO5151-T1	Heating		20°C	—	7°C	6°C			
Operation	Item			Indoor air temperature		Outdoor air temperature			Standards																			
		DB	WB	DB	WB																							
Cooling		27°C	19°C	35°C	24°C	ISO5151-T1																						
Heating		20°C	—	7°C	6°C																							
(2) This air-conditioner is manufactured and tested in conformity with the ISO.																												
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.																												
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.																												

(3) Operation chart

The V Multi is a system that allows for different models and capacities of indoor units to be connected so the individual operating characteristics of the indoor and outdoor are provided. Use the procedure shown in Item (c) to calculate the combined operating characteristics.

(a) Operating characteristic of outdoor unit

(220-240V 50Hz/220V 60Hz)

Model		FDC71VNX	FDC100VNX	FDC125VNX	FDC140VNX
Cooling power consumption	kW	1.95	2.33	3.11	4.02
Heating power consumption		1.85	2.41	3.26	4.03
Cooling running current	A	8.5/8.9	10.3/10.8	13.7/14.3	17.6/18.4
Heating running current		8.1/8.5	10.6/11.1	14.3/15.0	17.6/18.4
Inrush current <Max. running current>	A	5 <17>	5 <24>	5 <26>	

(380-415V 50Hz/380V 60Hz)

Model		FDC100VSX	FDC125VSX	FDC140VSX
Cooling power consumption	kW	2.33	3.11	4.02
Heating power consumption		2.41	3.26	4.03
Cooling running current	A	5.9/6.2	7.9/8.3	10.1/10.7
Heating running current		6.1/6.4	8.2/8.7	10.1/10.7
Inrush current <Max. running current>	A	5 <15>		

Note(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard.
ISO5151-T1 "UNITARY AIR-CONDITIONERS"

(b) Operating characteristic of indoor unit

(220-240V 50Hz/220V 60Hz)

Model		FDT40VG	FDT50VG	FDT60VG	FDT71VG
Cooling power consumption	kW	0.03-0.03/0.03	0.04-0.04/0.04	0.07-0.07/0.07	0.08-0.08/0.08
Heating power consumption		0.03-0.03/0.03	0.04-0.04/0.04	0.07-0.07/0.07	0.08-0.08/0.08
Cooling running current	A	0.27-0.25/0.27	0.36-0.33/0.36	0.62-0.57/0.62	0.70-0.64/0.70
Heating running current		0.27-0.25/0.27	0.36-0.33/0.36	0.62-0.57/0.62	0.70-0.64/0.70

Notes(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard.
ISO5151-T1 "UNITARY AIR-CONDITIONERS"

(2) The values shown in the above table are common to both cooling and heating operations.

4.1.3 EXTERIOR DIMENSIONS

- (1) Indoor unitsSee page 24
- (2) Outdoor unitsSee page 26
- (3) Remote control (Option parts)See page 29

4.1.4 ELECTRICAL WIRING

- (1) Indoor unitsSee page 32
- (2) Outdoor unitsSee page 33

4.1.5 NOISE LEVEL

- (1) Indoor unitsSee page 37
- (2) Outdoor unitsSee page 38

4.1.6 TEMPERATURE AND VELOCITY DISTRIBUTIONSee page 40

4.1.7 PIPING SYSTEMSee page 43

4.1.8 RANGE OF USAGE & LIMITATIONSSee page 46

4.1.9 SELECTION CHARTSee page 50

4.1.10 APPLICATION DATA

- (1) Installation of indoor unitSee page 65
- (2) Electric wiring work installationSee page 71
- (3) Installation of wired remote control (Option)See page 75
- (4) Installation of outdoor unit
 - (a) Model FDC71VNXSee page 92
 - (b) Models FDC100-140VNX,100-140VSXSee page 100
- (5) Instructions for branching pipe set (DIS-WA1,WB1,TA1,TB1)See page 108

4.1.11 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTERSee page 111

4.1.12 MAINTENANCE DATASee page 150



4.2 MICRO INVERTER PACKAGED AIR-CONDITIONERS

CONTENTS

4.2.1 GENERAL INFORMATION	455
(1) How to read the model name	455
(2) Table of models	456
(3) Table of system combinations	456
4.2.2 SPECIFICATIONS	457
(1) Indoor units	457
(2) Outdoor units	462
(3) Operation chart	470
4.2.3 EXTERIOR DIMENSIONS	473
4.2.4 ELECTRICAL WIRING	473
4.2.5 NOISE LEVEL	473
4.2.6 TEMPERATURE AND VELOCITY DISTRIBUTION	473
4.2.7 PIPING SYSTEM	473
4.2.8 RANGE OF USAGE & LIMITATIONS	473
4.2.9 SELECTION CHART	473
4.2.10 APPLICATION DATE	473
4.2.11 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER	473
4.2.12 MAINTENANCE DATA	473

4.2.1 GENERAL INFORMATION

(1) How to read the model name

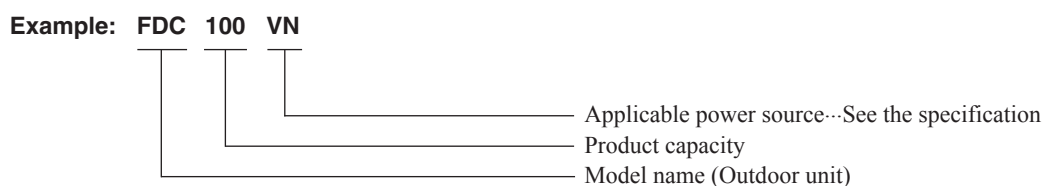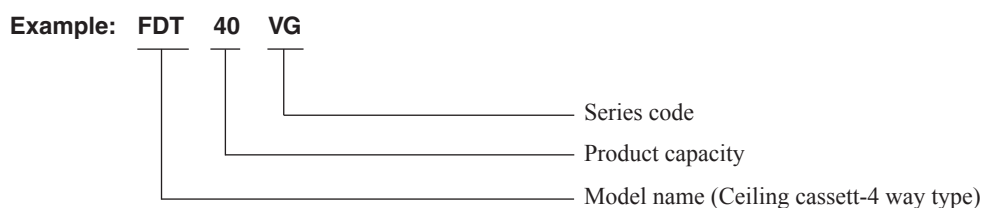

(2) Table of models

Model \ Capacity	50	60	71	100	125
	Ceiling cassett-4 way type (FDT)	○	○	○	○
Outdoor unit to be combined (FDC)	FDC100VN FDC100VS	FDC125VN FDC125VS	FDC140VN FDC140VS	FDC200VSA	FDC250VSA

(3) Table of system combinations

Outdoor unit	Type	Indoor unit assembly capacity	Branch pipe set (Option)
FDC100VN FDC100VS	Twin	50+50	DIS-WA1
		FDC125VN FDC125VS	
FDC140VN FDC140VS	Twin	71+71	
	Triple	50+50+50	DIS-TA1 or DIS-WA1 × 2set
FDC200VSA	Twin	100+100	DIS-WB1
		71+125	
	Triple	71+71+71	DIS-TB1 or DIS-WA1 × 1set DIS-WB1 × 1set
	Double twin	50+50+50+50	DIS-WA1 × 2set DIS-WB1 × 1set
FDC250VSA	Twin	125+125	DIS-WB1
	Triple	60+60+125	DIS-TB1 or DIS-WA1 × 1set DIS-WB1 × 1set
		71+71+100	
	Double twin	60+60+60+60	DIS-WA1 × 2set DIS-WB1 × 1set

Notes(1) Always use the branch piping set (option) at branches in the refrigerant piping.

(2) If wireless specifications are used, use 1 wireless indoor unit in combination with wired indoor units.

(3) The combinations except the above table forbids.

Item		Model		FDT60VG	
Power source				1 Phase 220-240V 50Hz / 220V 60Hz	
Operation data	Sound power level	Cooling	dB(A)	60	
		Heating			
	Sound pressure level	Cooling		P-Hi : 44 Hi : 34 Me : 32 Lo : 28	
		Heating			
Silent mode sound pressure level				—	
Exterior dimensions (Height × Width × Depth)		mm		Unit 236 × 840 × 840 Panel 35 × 950 × 950	
Exterior appearance (Munsell color)				Plaster white (6.8Y8.9/0.2) near equivalent	
Net weight		kg		Unit 21 Panel 5	
Heat exchanger				Louver fin & inner grooved tubing	
Fan type & Q'ty				Turbo fan ×1	
Fan motor (Starting method)		W		50 < Direct line start >	
Air flow		Cooling	m ³ /min	P-Hi : 26 Hi : 17 Me : 14 Lo : 11	
		Heating			
Available external static pressure		Pa		0	
Outside air intake				Possible	
Air filter, Quality / Quantity				Pocket plastic net ×1 (Washable)	
Shock & vibration absorber				Rubber sleeve (for fan motor)	
Electric heater		W		—	
Operation control	Remote control			(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2	
	Room temperature control			Thermostat by electronics	
	Operation display			—	
Safety equipments				Internal thermostat for fan motor. Frost protection thermostat.	
Installation data	Refrigerant piping size (O.D.)	mm		Liquid line: ø6.35 (1/4") Gas line: ø12.7 (1/2")	
	Connecting method			Flare piping	
	Attached length of piping	m		—	
	Insulation for piping			Necessary (both Liquid & Gas lines)	
Drain hose				Hose connectable VP25 (O.D.32)	
Drain pump, max lift height		mm		Built-in drain pump, 850	
IP number				IPX0	
Standard accessories				Mounting kit, Drain hose	
Option parts				—	
Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature	
Operation		DB	WB	DB	WB
	Cooling	27°C	19°C	35°C	24°C
	Heating	20°C	—	7°C	6°C
				Standards	
				ISO5151-T1	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.					

Item		Model		FDT71VG		
Power source				1 Phase 220-240V 50Hz / 220V 60Hz		
Operation data	Sound power level	Cooling	dB(A)	62		
		Heating				
	Sound pressure level	Cooling		P-Hi : 46 Hi : 35 Me : 34 Lo : 29		
		Heating				
Silent mode sound pressure level				—		
Exterior dimensions (Height × Width × Depth)		mm		Unit 236 × 840 × 840 Panel 35 × 950 × 950		
Exterior appearance (Munsell color)				Plaster white (6.8Y8.9/0.2) near equivalent		
Net weight		kg		Unit 21 Panel 5		
Heat exchanger				Louver fin & inner grooved tubing		
Fan type & Q'ty				Turbo fan ×1		
Fan motor (Starting method)		W		50 < Direct line start >		
Air flow		Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12		
		Heating				
Available external static pressure		Pa		0		
Outside air intake				Possible		
Air filter, Quality / Quantity				Pocket plastic net ×1 (Washable)		
Shock & vibration absorber				Rubber sleeve (for fan motor)		
Electric heater		W		—		
Operation control	Remote control			(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2		
	Room temperature control			Thermostat by electronics		
	Operation display			—		
Safety equipments				Internal thermostat for fan motor. Frost protection thermostat.		
Installation data	Refrigerant piping size (O.D.)	mm		Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")		
	Connecting method			Flare piping		
	Attached length of piping	m		—		
	Insulation for piping			Necessary (both Liquid & Gas lines)		
Drain hose				Hose connectable VP25 (O.D.28)		
Drain pump, max lift height		mm		Built-in drain pump, 850		
IP number				IPX0		
Standard accessories				Mounting kit, Drain hose		
Option parts				—		
Notes	(1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature		
	Operation	DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
	Heating	20°C	—	7°C	6°C	
						Standards
						ISO5151-T1
	(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
	(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
	(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.					

Item		Model		FDT100VG	
Power source				1 Phase 220-240V 50Hz / 220V 60Hz	
Operation data	Sound power level	Cooling	dB(A)	63	
		Heating			
	Sound pressure level	Cooling		P-Hi : 48 Hi : 39 Me : 37 Lo : 31	
		Heating			
Silent mode sound pressure level				—	
Exterior dimensions (Height × Width × Depth)		mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950	
Exterior appearance (Munsell color)				Plaster white (6.8Y8.9/0.2) near equivalent	
Net weight		kg		Unit 25 Panel 5	
Heat exchanger				Louver fin & inner grooved tubing	
Fan type & Q'ty				Turbo fan ×1	
Fan motor (Starting method)		W		140 < Direct line start >	
Air flow		Cooling	m ³ /min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17	
		Heating			
Available external static pressure		Pa		0	
Outside air intake				Possible	
Air filter, Quality / Quantity				Pocket plastic net ×1 (Washable)	
Shock & vibration absorber				Rubber sleeve (for fan motor)	
Electric heater		W		—	
Operation control	Remote control			(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2	
	Room temperature control			Thermostat by electronics	
	Operation display			—	
Safety equipments				Internal thermostat for fan motor. Frost protection thermostat.	
Installation data	Refrigerant piping size (O.D.)	mm		Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")	
	Connecting method			Flare piping	
	Attached length of piping	m		—	
	Insulation for piping			Necessary (both Liquid & Gas lines)	
Drain hose				Hose connectable VP25 (O.D.32)	
Drain pump, max lift height		mm		Built-in drain pump, 850	
IP number				IPX0	
Standard accessories				Mounting kit, Drain hose	
Option parts				—	
Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature	
Operation		DB	WB	DB	WB
	Cooling	27°C	19°C	35°C	24°C
	Heating	20°C	—	7°C	6°C
Standards ISO5151-T1					
(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.					

Item		Model		FDT125VG	
Power source				1 Phase 220-240V 50Hz / 220V 60Hz	
Operation data	Sound power level	Cooling	dB(A)	64	
		Heating			
	Sound pressure level	Cooling		P-Hi : 49 Hi : 41 Me : 39 Lo : 32	
		Heating			
Silent mode sound pressure level				—	
Exterior dimensions (Height × Width × Depth)		mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950	
Exterior appearance (Munsell color)				Plaster white (6.8Y8.9/0.2) near equivalent	
Net weight		kg		Unit 25 Panel 5	
Heat exchanger				Louver fin & inner grooved tubing	
Fan type & Q'ty				Turbo fan ×1	
Fan motor (Starting method)		W		140 < Direct line start >	
Air flow		Cooling	m ³ /min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18	
		Heating			
Available external static pressure		Pa		0	
Outside air intake				Possible	
Air filter, Quality / Quantity				Pocket plastic net ×1 (Washable)	
Shock & vibration absorber				Rubber sleeve (for fan motor)	
Electric heater		W		—	
Operation control	Remote control			(option) wired : RC-EX3 , RC-E5 , RCH-E3 wireless : RCN-T-5AW-E2	
	Room temperature control			Thermostat by electronics	
	Operation display			—	
Safety equipments				Internal thermostat for fan motor. Frost protection thermostat.	
Installation data	Refrigerant piping size (O.D.)	mm		Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")	
	Connecting method			Flare piping	
	Attached length of piping	m		—	
	Insulation for piping			Necessary (both Liquid & Gas lines)	
Drain hose				Hose connectable VP25 (O.D.32)	
Drain pump, max lift height		mm		Built-in drain pump, 850	
IP number				IPX0	
Standard accessories				Mounting kit, Drain hose	
Option parts				—	
Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature	
Operation		DB	WB	DB	WB
	Cooling	27°C	19°C	35°C	24°C
	Heating	20°C	—	7°C	6°C
Standards ISO5151-T1					
(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.					


(2) Outdoor units

Item		Model	FDC100VN																					
Power source			1 Phase 220-240V 50Hz / 220V 60Hz																					
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.)-11.2(Max.)]																					
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.)-12.5(Max.)]																					
	Sound power level	Cooling	dB(A)	70																				
		Heating																						
	Sound pressure level	Cooling	49																					
Heating																								
Silent mode sound pressure level			—																					
Exterior dimensions (Height × Width × Depth)		mm	845×970×370																					
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent																					
Net weight		kg	81																					
Compressor type & Q'ty			RMT5126MDE2×1																					
Compressor motor (Starting method)		kW	Direct line start																					
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)																					
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)																					
Heat exchanger			Straight fin & inner grooved tubing																					
Refrigerant control			Electronic expansion valve																					
Fan type & Q'ty			Propeller fan ×1																					
Fan motor (Starting method)		W	86 < Direct line start >																					
Air flow	Cooling	m ³ /min	75																					
	Heating		73																					
Shock & vibration absorber			Rubber sleeve (for compressor)																					
Electric heater		W	20 (Crank case heater)																					
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.																					
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")																					
	Connecting method		Flare piping																					
	Attached length of piping	m	—																					
	Insulation for piping		Necessary (both Liquid & Gas lines)																					
	Refrigerant line (one way) length	m	Max.50m																					
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)																					
Drain hose			Holes size ø20 × 3pcs																					
IP number			IP24																					
Standard accessories			Edging																					
Option parts			—																					
Notes		(1) The data are measured at the following conditions.	The pipe length is 7.5m.																					
		<table border="1"> <thead> <tr> <th rowspan="2">Operation</th> <th colspan="2">Indoor air temperature</th> <th colspan="2">Outdoor air temperature</th> <th rowspan="2">Standards</th> </tr> <tr> <th>DB</th> <th>WB</th> <th>DB</th> <th>WB</th> </tr> </thead> <tbody> <tr> <td>Cooling</td> <td>27°C</td> <td>19°C</td> <td>35°C</td> <td>24°C</td> <td rowspan="2">ISO5151-T1</td> </tr> <tr> <td>Heating</td> <td>20°C</td> <td>—</td> <td>7°C</td> <td>6°C</td> </tr> </tbody> </table>		Operation	Indoor air temperature		Outdoor air temperature		Standards	DB	WB	DB	WB	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	Heating	20°C	—	7°C	6°C
Operation	Indoor air temperature		Outdoor air temperature		Standards																			
	DB	WB	DB	WB																				
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1																			
Heating	20°C	—	7°C	6°C																				
		(2) This air-conditioner is manufactured and tested in conformity with the ISO.																						
		(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.																						
		(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.																						

Item		Model	FDC100VS																					
Power source			3 Phase 380-415V 50Hz / 380V 60Hz																					
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.)-11.2(Max.)]																					
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.)-12.5(Max.)]																					
	Sound power level	Cooling	dB(A)	70																				
		Heating																						
	Sound pressure level	Cooling	49																					
Heating																								
Silent mode sound pressure level			—																					
Exterior dimensions (Height × Width × Depth)		mm	845×970×370																					
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent																					
Net weight		kg	83																					
Compressor type & Q'ty			RMT5126MDE3×1																					
Compressor motor (Starting method)		kW	Direct line start																					
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)																					
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)																					
Heat exchanger			Straight fin & inner grooved tubing																					
Refrigerant control			Electronic expansion valve																					
Fan type & Q'ty			Propeller fan ×1																					
Fan motor (Starting method)		W	86 < Direct line start >																					
Air flow	Cooling Heating	m ³ /min	75																					
			73																					
Shock & vibration absorber			Rubber sleeve (for compressor)																					
Electric heater		W	20 (Crank case heater)																					
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.																					
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")																					
	Connecting method		Flare piping																					
	Attached length of piping	m	—																					
	Insulation for piping		Necessary (both Liquid & Gas lines)																					
	Refrigerant line (one way) length	m	Max.50m																					
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)																					
Drain hose			Holes size ø20 × 3pcs																					
IP number			IP24																					
Standard accessories			Edging																					
Option parts			—																					
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.																						
		<table border="1"> <thead> <tr> <th rowspan="2">Operation</th> <th colspan="2">Indoor air temperature</th> <th colspan="2">Outdoor air temperature</th> <th rowspan="2">Standards</th> </tr> <tr> <th>DB</th> <th>WB</th> <th>DB</th> <th>WB</th> </tr> </thead> <tbody> <tr> <td>Cooling</td> <td>27°C</td> <td>19°C</td> <td>35°C</td> <td>24°C</td> <td rowspan="2">ISO5151-T1</td> </tr> <tr> <td>Heating</td> <td>20°C</td> <td>—</td> <td>7°C</td> <td>6°C</td> </tr> </tbody> </table>		Operation	Indoor air temperature		Outdoor air temperature		Standards	DB	WB	DB	WB	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	Heating	20°C	—	7°C	6°C
Operation	Indoor air temperature		Outdoor air temperature		Standards																			
	DB	WB	DB	WB																				
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1																			
Heating	20°C	—	7°C	6°C																				
		(2) This air-conditioner is manufactured and tested in conformity with the ISO.																						
		(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.																						
		(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.																						

Item		Model	FDC125VN			
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.)-14.0(Max.)]			
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.)-16.0(Max.)]			
	Sound power level	Cooling	dB(A)	72		
		Heating		50		
	Sound pressure level	Cooling		51		
Heating		—				
Silent mode sound pressure level		—				
Exterior dimensions (Height × Width × Depth)		mm	845×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	81			
Compressor type & Q'ty			RMT5126MDE2×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			Straight fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×1			
Fan motor (Starting method)		W	86 < Direct line start >			
Air flow	Cooling Heating	m ³ /min	75			
			73			
Shock & vibration absorber			Rubber sleeve (for compressor)			
Electric heater		W	20 (Crank case heater)			
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Holes size ø20 × 3pcs			
IP number			IP24			
Standard accessories			Edging			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
	Heating	20°C	—	7°C	6°C	
ISO5151-T1						
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model	FDC125VS			
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.)-14.0(Max.)]			
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.)-16.0(Max.)]			
	Sound power level	Cooling	dB(A)	72		
		Heating		50		
	Sound pressure level	Cooling		51		
Heating		—				
Silent mode sound pressure level			—			
Exterior dimensions (Height × Width × Depth)		mm	845×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	83			
Compressor type & Q'ty			RMT5126MDE3×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)			
Heat exchanger			Straight fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×1			
Fan motor (Starting method)		W	86 < Direct line start >			
Air flow	Cooling Heating	m ³ /min	75			
			73			
Shock & vibration absorber			Rubber sleeve (for compressor)			
Electric heater		W	20 (Crank case heater)			
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8")			
			Gas line: ø15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping		—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length		Max.50m			
Vertical height diff. between O.U. and I.U.		m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)		
Drain hose			Holes size ø20 × 3pcs			
IP number			IP24			
Standard accessories			Edging			
Option parts			—			
Notes (1) The data are measured at the following conditions.			The pipe length is 7.5m.			
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
Cooling	DB	WB	DB	WB	ISO5151-T1	
	27°C	19°C	35°C	24°C		
Heating	20°C	—	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions. (4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						




Item		Model	FDC140VN	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz	
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.)-14.5(Max.)]	
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.)-16.5(Max.)]	
	Sound power level	Cooling	dB(A)	73
		Heating		
	Sound pressure level	Cooling	51	
Heating				
Silent mode sound pressure level			—	
Exterior dimensions (Height × Width × Depth)		mm	845×970×370	
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	81	
Compressor type & Q'ty			RMT5126MDE2×1	
Compressor motor (Starting method)		kW	Direct line start	
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)	
Heat exchanger			Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Fan type & Q'ty			Propeller fan ×1	
Fan motor (Starting method)		W	86 < Direct line start >	
Air flow	Cooling Heating	m ³ /min	75	
			73	
Shock & vibration absorber			Rubber sleeve (for compressor)	
Electric heater		W	20 (Crank case heater)	
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.	
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")	
	Connecting method		Flare piping	
	Attached length of piping	m	—	
	Insulation for piping		Necessary (both Liquid & Gas lines)	
	Refrigerant line (one way) length	m	Max.50m	
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	
Drain hose			Holes size ø20 × 3pcs	
IP number			IP24	
Standard accessories			Edging	
Option parts			—	
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.		
	Item	Indoor air temperature	Outdoor air temperature	
Operation	Cooling	DB	DB	
		WB	WB	
Heating	Cooling	27°C	35°C	
		19°C	24°C	
Heating	Heating	20°C	7°C	
		—	6°C	
		Standards		
		ISO5151-T1		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.				
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.				
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.				

Item		Model	FDC140VS																					
Power source			3 Phase 380-415V 50Hz / 380V 60Hz																					
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.)-14.5(Max.)]																					
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.)-16.5(Max.)]																					
	Sound power level	Cooling	dB(A)	73																				
		Heating																						
	Sound pressure level	Cooling	51																					
Heating																								
Silent mode sound pressure level			—																					
Exterior dimensions (Height × Width × Depth)		mm	845×970×370																					
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent																					
Net weight		kg	83																					
Compressor type & Q'ty			RMT5126MDE3×1																					
Compressor motor (Starting method)		kW	Direct line start																					
Refrigerant oil (Amount, type)		ℓ	0.9 (M-MA68)																					
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)																					
Heat exchanger			Straight fin & inner grooved tubing																					
Refrigerant control			Electronic expansion valve																					
Fan type & Q'ty			Propeller fan ×1																					
Fan motor (Starting method)		W	86 < Direct line start >																					
Air flow	Cooling Heating	m ³ /min	75																					
			73																					
Shock & vibration absorber			Rubber sleeve (for compressor)																					
Electric heater		W	20 (Crank case heater)																					
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.																					
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")																					
	Connecting method		Flare piping																					
	Attached length of piping	m	—																					
	Insulation for piping		Necessary (both Liquid & Gas lines)																					
	Refrigerant line (one way) length	m	Max.50m																					
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)																					
Drain hose			Holes size ø20 × 3pcs																					
IP number			IP24																					
Standard accessories			Edging																					
Option parts			—																					
Notes		(1) The data are measured at the following conditions.	The pipe length is 7.5m.																					
		<table border="1"> <thead> <tr> <th rowspan="2">Operation</th> <th colspan="2">Indoor air temperature</th> <th colspan="2">Outdoor air temperature</th> <th rowspan="2">Standards</th> </tr> <tr> <th>DB</th> <th>WB</th> <th>DB</th> <th>WB</th> </tr> </thead> <tbody> <tr> <td>Cooling</td> <td>27°C</td> <td>19°C</td> <td>35°C</td> <td>24°C</td> <td rowspan="2">ISO5151-T1</td> </tr> <tr> <td>Heating</td> <td>20°C</td> <td>—</td> <td>7°C</td> <td>6°C</td> </tr> </tbody> </table>		Operation	Indoor air temperature		Outdoor air temperature		Standards	DB	WB	DB	WB	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	Heating	20°C	—	7°C	6°C
Operation	Indoor air temperature		Outdoor air temperature		Standards																			
	DB	WB	DB	WB																				
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1																			
Heating	20°C	—	7°C	6°C																				
		(2) This air-conditioner is manufactured and tested in conformity with the ISO.																						
		(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.																						
		(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.																						

Item		Model	FDC200VSA			
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	19.0 [5.2(Min.)-22.4(Max.)]			
	Nominal heating capacity (range)	kW	22.4 [3.3(Min.)-25.0(Max.)]			
	Sound power level	Cooling	dB(A)	72		
		Heating		74		
	Sound pressure level	Cooling		58		
Heating		59				
Silent mode sound pressure level		52				
Exterior dimensions (Height × Width × Depth)		mm	1,300×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	115			
Compressor type & Q'ty			RMT5134MDE3×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		ℓ	0.9 (compressor) + 0.6 (unit) (M-MA32R)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 5.6kg (Pre-charged up to the piping length of 30m)			
Heat exchanger			M shape fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×2			
Fan motor (Starting method)		W	86x2 < Direct line start >			
Air flow	Cooling	m ³ /min	135			
	Heating					
Shock & vibration absorber			Rubber sleeve (for compressor)			
Electric heater		W	20 (Crank case heater)			
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: 1/2ø22.22 (7/8")			
	Connecting method		Liquid line : Flare / Gas : Brazing			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.70m (Liquid piping : ø12.7, Gas piping ø25.4 or ø28.58), Max.40m (Liquid piping : ø9.52, Max.35m (Gas piping : ø22.22),			
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Holes size ø20 × 3pcs			
IP number			IP24			
Standard accessories			Connecting pipe, Edging			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation	DB	WB	DB	WB	ISO5151-T1	
Cooling	27°C	19°C	35°C	24°C		
Heating	20°C	—	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						

Item		Model	FDC250VSA																					
Power source			3 Phase 380-415V 50Hz / 380V 60Hz																					
Operation data	Nominal cooling capacity (range)	kW	24.0 [6.9(Min.)-28.0(Max.)]																					
	Nominal heating capacity (range)	kW	27.0 [5.5(Min.)-31.5(Max.)]																					
	Sound power level	Cooling	dB(A)	73																				
		Heating		75																				
	Sound pressure level	Cooling		59																				
		Heating		62																				
Silent mode sound pressure level		54																						
Exterior dimensions (Height × Width × Depth)		mm		1,505×970×370																				
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent																					
Net weight		kg	143																					
Compressor type & Q'ty			GTC5150NC40KF×1																					
Compressor motor (Starting method)		kW	Direct line start																					
Refrigerant oil (Amount, type)		ℓ	1.45 (M-MA32R)																					
Refrigerant (Type, amount, pre-charge length)		kg	R410A 7.2kg (Pre-charged up to the piping length of 30m)																					
Heat exchanger			M shape & inner grooved tubing																					
Refrigerant control			Electronic expansion valve																					
Fan type & Q'ty			Propeller fan ×2																					
Fan motor (Starting method)		W	86x2 < Direct line start >																					
Air flow	Cooling	m ³ /min	143																					
	Heating		151																					
Shock & vibration absorber			Rubber sleeve (for compressor)																					
Electric heater		W	20 (Crank case heater)																					
Safety equipments			Overload protection for fan motor. Abnormal discharge temperature protection.																					
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø12.7 (1/2") Gas line: ø22.22 (7/8")																					
	Connecting method		Liquid line : Flare / Gas : Brazing																					
	Attached length of piping	m	—																					
	Insulation for piping		Necessary (both Liquid & Gas lines)																					
	Refrigerant line (one way) length	m	Max.70m																					
	Vertical height diff. between O.U. and I.U.	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)																					
Drain hose			Holes size ø20 × 3pcs																					
IP number			IP24																					
Standard accessories			Connecting pipe, Edging																					
Option parts			—																					
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.																						
		<table border="1"> <thead> <tr> <th rowspan="2">Operation</th> <th colspan="2">Indoor air temperature</th> <th colspan="2">Outdoor air temperature</th> <th rowspan="2">Standards</th> </tr> <tr> <th>DB</th> <th>WB</th> <th>DB</th> <th>WB</th> </tr> </thead> <tbody> <tr> <td>Cooling</td> <td>27°C</td> <td>19°C</td> <td>35°C</td> <td>24°C</td> <td rowspan="2">ISO5151-T1</td> </tr> <tr> <td>Heating</td> <td>20°C</td> <td>—</td> <td>7°C</td> <td>6°C</td> </tr> </tbody> </table>		Operation	Indoor air temperature		Outdoor air temperature		Standards	DB	WB	DB	WB	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	Heating	20°C	—	7°C	6°C
Operation	Indoor air temperature		Outdoor air temperature		Standards																			
	DB	WB	DB	WB																				
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1																			
Heating	20°C	—	7°C	6°C																				
		(2) This air-conditioner is manufactured and tested in conformity with the ISO.																						
		(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.																						
		(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.																						



(3) Operation chart

The V Multi is a system that allows for different models and capacities of indoor units to be connected so the individual operating characteristics of the indoor and outdoor are provided. Use the procedure shown in Item (c) to calculate the combined operating characteristics.

(a) Operating characteristic of outdoor unit

(220-240V 50Hz/220V 60Hz)

Model		FDC100VN	FDC125VN	FDC140VN
Cooling power consumption	kW	2.62/2.62	3.91/3.91	4.51/4.51
Heating power consumption		2.60/2.60	3.63/3.63	4.40/4.40
Cooling running current	A	11.7/12.3	17.3/18.2	20.4/21.4
Heating running current		11.6/12.2	16.2/16.9	19.5/20.4
Inrush current (L.R.A) <Max. running current>	A	5 <24>		

(380-415V 50Hz/380V 60Hz)

Model		FDC100VS	FDC125VS	FDC140VS
Cooling power consumption	kW	2.62/2.62	3.91/3.91	4.51/4.51
Heating power consumption		2.60/2.60	3.63/3.63	4.40/4.40
Cooling running current	A	3.8/4.0	5.5/5.9	6.5/6.9
Heating running current		3.8/4.0	5.1/5.5	6.3/7.0
Inrush current (L.R.A) <Max. running current>	A	5 <15>		

(380-415V 50Hz/380V 60Hz)

Model		FDC200VSA	FDC250VSA
Cooling power consumption	kW	7.05/7.05	8.22/8.16
Heating power consumption		7.02/7.02	7.42/7.38
Cooling running current	A	10.2/10.5	11.8/12.3
Heating running current		10.0/10.5	10.8/11.2
Inrush current (L.R.A) <Max. running current>	A	5 <20>	5 <21>

Note(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard.
ISO-T1 "UNITARY AIR-CONDITIONERS"

(b) Operating characteristic of indoor unit

(220-240V 50Hz/220V 60Hz)

Model		FDT50VG	FDT60VG	FDT71VG	FDT100VG	FDT125VG
Cooling power consumption	kW	0.04-0.04/0.04	0.07-0.07/0.07	0.08-0.08/0.08	0.13-0.13/0.13	0.14-0.14/0.14
Heating power consumption		0.04-0.04/0.04	0.07-0.07/0.07	0.08-0.08/0.08	0.13-0.13/0.13	0.14-0.14/0.14
Cooling running current	A	0.36-0.33/0.36	0.62-0.57/0.62	0.70-0.64/0.70	1.05-0.96/1.05	1.12-1.02/1.12
Heating running current		0.36-0.33/0.36	0.62-0.57/0.62	0.70-0.64/0.70	1.05-0.96/1.05	1.12-1.02/1.12

Notes(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard.
ISO-T1 "UNITARY AIR-CONDITIONERS"

(2) The values shown in the above table are common to both cooling and heating operations.

4.2.3 EXTERIOR DIMENSIONS

- (1) Indoor units See page 297
- (2) Outdoor units See page 297
- (3) Remote control (Option parts) See page 299

4.2.4 ELECTRICAL WIRING

- (1) Indoor units See page 300
- (2) Outdoor units See page 300

4.2.5 NOISE LEVEL

- (1) Indoor units See page 304
- (2) Outdoor units See page 304

4.2.6 TEMPERATURE AND VELOCITY DISTRIBUTION See page 306

4.2.7 PIPING SYSTEM See page 306

4.2.8 RANGE OF USAGE & LIMITATIONS See page 312

4.2.9 SELECTION CHART See page 316

4.2.10 APPLICATION DATE

- (1) Installation of indoor unit See page 331
- (2) Electric wiring work installation See page 331
- (3) Installation of wired remote control (Option) See page 331
- (4) Installation of outdoor unit
 - (a) Models FDC100-140VN,100-140VS See page 331
 - (b) Models FDC200,250VSA See page 339
 - (c) Method for connecting the accessory pipe
 - (Models FDC200,250VSA) See page 347
- (5) Instructions for branching pipe set (DIS-WA1,WB1,TA1,TB1) See page 350

4.2.11 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER See page 351

4.2.12 MAINTENANCE DATA See page 370

5. OPTION PARTS

CONTENTS

5.1 WIRELESS KIT (RCN-T-5AW-E2)	475
5.2 Motion sensor kit (LB-T-5W-E)	483
5.3 SIMPLE WIRED REMOTE CONTROL (RCH-E3)	487
5.4 BASE HEATER KIT (CW-H-E1)	493

5.1 WIRELESS KIT (RCN-T-5AW-E2)

Notes:

Following function of FDT indoor unit series are not able to be set with this wireless remote control (RCN-E2).

1. Flap control system
2. 4-fan speed setting (P-Hi/Hi/Me/Lo) → 3-fan speed setting (Hi/Me/Lo)

PJF012D035













Safety precautions

- Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.
- ⚠ **WARNING** Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.
- ⚠ **CAUTION** Failure to follow these instructions properly may cause injury or property damage. It could have serious consequences depending on the circumstances.
- The following pictograms are used in the text.

	Never do.		Always follow the instructions given.
---	-----------	---	---------------------------------------

- Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

⚠ **WARNING**

- | | |
|---|---|
|  | <ul style="list-style-type: none"> • Consult your dealer or a professional contractor to install the unit.
Improper installation made on your own may cause electric shocks, fire or dropping of the unit. |
|  | <ul style="list-style-type: none"> • Installation work should be performed properly according to this installation manual.
Improper installation work may result in electric shocks, fire or break-down. |
|  | <ul style="list-style-type: none"> • Be sure to use accessories and specified parts for installation work.
Use of unspecified parts may result in drop, fire or electric shocks. |
|  | <ul style="list-style-type: none"> • Install the unit properly to a place with sufficient strength to hold the weight.
If the place is not strong enough, the unit may drop and cause injury. |
|  | <ul style="list-style-type: none"> • Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.
Power source with insufficient and improper work can cause electric shock and fire. |
|  | <ul style="list-style-type: none"> • Shut OFF the main power source before starting electrical work.
Otherwise, it could result in electric shocks, break-down or malfunction. |
|  | <ul style="list-style-type: none"> • Do not modify the unit.
It could cause electric shocks, fire, or break-down. |
|  | <ul style="list-style-type: none"> • Be sure to turn OFF the power circuit breaker before repairing/inspecting the unit.
Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury. |
|  | <ul style="list-style-type: none"> • Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.
If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion. |
|  | <ul style="list-style-type: none"> • Do not install the unit where water vapor is generated excessively or condensation occurs.
It could cause electric shocks, fire, or break-down. |
|  | <ul style="list-style-type: none"> • Do not use the unit in a place where it gets wet, such as laundry room.
It could cause electric shocks, fire, or break-down. |
|  | <ul style="list-style-type: none"> • Do not operate the unit with wet hands.
It could cause electric shocks. |

⚠ WARNING

- Do not wash the unit with water.**
 It could cause electric shocks, fire, or break-down.
- Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.**
 Improper connections or fixing could cause heat generation, fire, etc.
- When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.**
 It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc. The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.
- Do not leave the remote control with its PCB case removed.**
 If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

⚠ CAUTION

- DO NOT install the wireless kit at the following places in order to avoid malfunction.**
 It could cause break-down or deformation of remote control.

(1) Places exposed to direct sunlight	(8) Places where the receiver is influenced by the fluorescent lamp (especially inverter type) or sunlight.
(2) Places near heat devices	(9) Places where the receiver is affected by infrared rays of any other communication devices.
(3) High humidity places	(10) Places where some object may obstruct the communication with the remote controller
(4) Hot surface or cold surface enough to generate condensation	
(5) Places exposed to oil mist or steam directly	
(6) Uneven surface	
(7) Places affected by the direct airflow of the AC unit.	

① Accessories

Please make sure that you have all of the following accessories.

① Receiver		1	→	① Wireless remote control		1
② Parts set (A)		1		② Remote control holder		1
③ Installation manual		1		③ Screw for holder		2
				④ AAA dry cell battery (LR03)		2
				⑤ User's manual		1

② Preparation before installation

Setting on site


PCB on the receiver has the following switches to set the function.
 Default setting is shown with mark.

SW1	Prevents interference during plural setting	<input type="checkbox"/> ON : Normal	<input type="checkbox"/> OFF : Customized
SW2	Receiver master/slave setting	<input type="checkbox"/> ON : Master	<input type="checkbox"/> OFF : Slave
SW3	Buzzer	<input type="checkbox"/> ON : Valid	<input type="checkbox"/> OFF : Invalid
SW4	Auto restart	<input type="checkbox"/> ON : Valid	<input type="checkbox"/> OFF : Invalid


② Preparation before installation (continued)

To change setting

1. Remove the cover by unscrewing two screws from the back of receiver.
2. Change the setting by the switch on PCB.

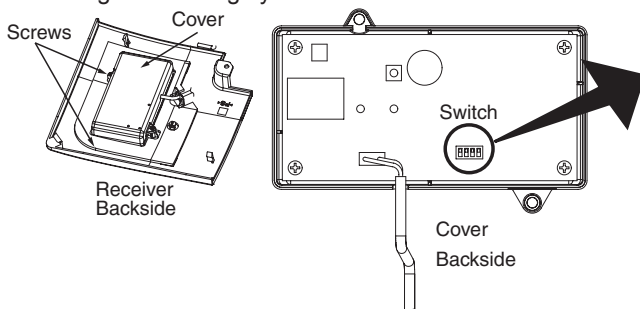

Master/Slave setting when using plural remote controllers

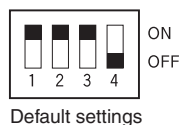

Up to two receiver or wired remote control can be installed in one indoor unit group. When two receiver or wired remote control are used, it is necessary to change SW on the PCB to set it as slave.

3. When SW1 is turned to OFF position, change the wireless remote control setting. For the method of changing the setting, refer to **Setting to avoid mixed communication** of

④ Wireless remote control


*The receivable area of the signal refer to **⑤ Receiver**.

③ How to install the receiver

The receiver can be installed by replacing with a corner panel on the applicable decorative panel.

Preparation before installation


- ① Attach the decorative panel onto the air-conditioner according to the installation manual for the panel.
- ② Remove the air return grille.
- ③ Remove a corner panel located on the refrigerant pipes side.
- ④ Remove three screws and detach the cover (indicated as shadowed area) from the control box of the air-conditioner.

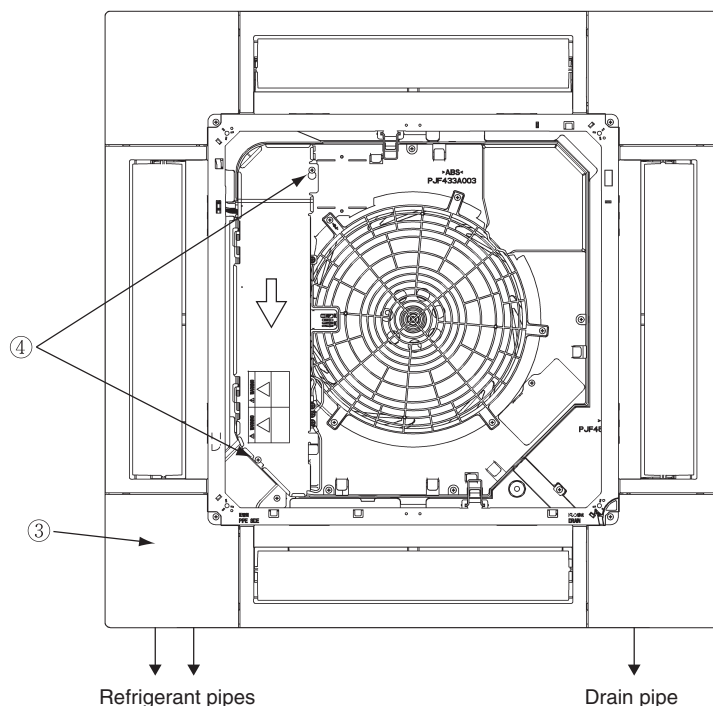

③ How to install the receiver(continued)

Installation of the receiver

- ① Loosen the bolts which fix the panel and make a gap between the panel and the indoor unit
- ② Put the wiring of the receiver through the opening.
- ③ Put the wiring on the notch on the control box so as not to be pinched by the control box and lid as shown below.
- ④ Connect the wiring to the terminal block provided in the control box. (No polarity)
- ⑤ Attach the receiver to the panel according to the panel installation manual.
- ⑥ Fix the wiring with the clamp so that the wiring do not contact the edge of control box's metal sheet.
- ⑦ Reattach the control box lid with 3 screws removed.

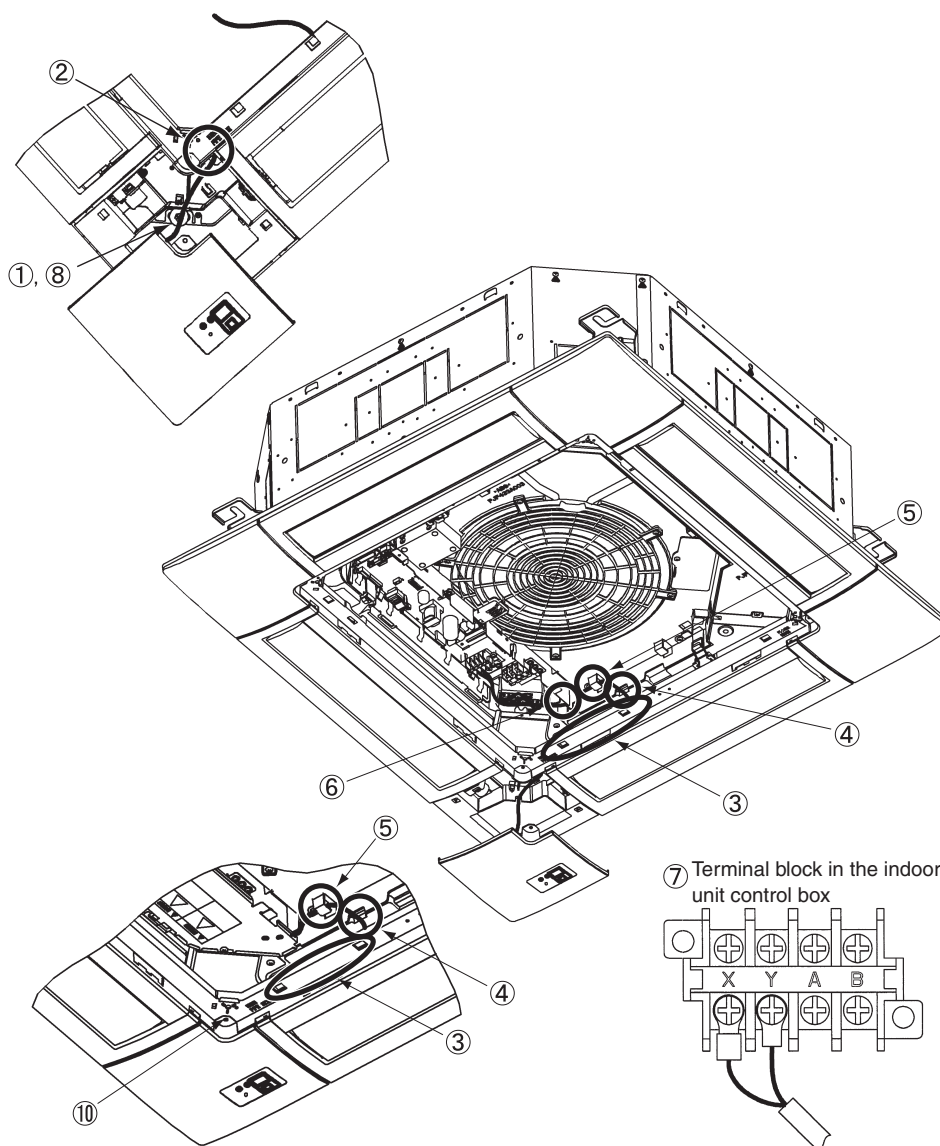


④ Wireless remote control

Installation tips for the remote control holder

Fix the remote control holder using the screws supplied with this product.


* Precautions for installing the holder

- Adjust the position so that it is upright.
- Ensure that the screw heads are not protruding.
- DO NOT attach the holder on plaster wall

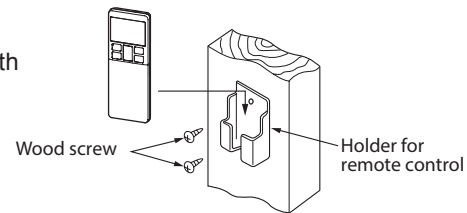

How to insert batteries

1. Detach the back lid.
2. Insert the batteries. (two AAA batteries)
3. Reattach the back lid.

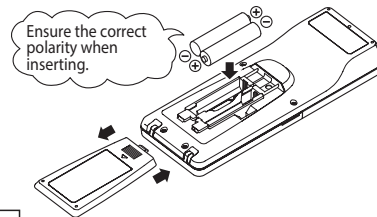

Setting to avoid mixed communication

1. Detach the back lid, and remove the batteries.
2. Cut off the switching wire in the battery compartment using nippers.
3. Insert the batteries, and attach the back lid.



Changing the remote control setting


How to change the Auto Run setting

The Auto Run mode is not available on the building air-conditioning and gas heat pump series (excluding the cooling/heating free multi system).

When using the remote control to operate those models, set the remote control to disable the Auto Run mode.

To disable the Auto Run mode, press the **ACL** switch while holding down the **MODE** button, or insert batteries while holding down the **MODE** button.

* Note: Once the batteries are removed, the setting is reset to the factory default. When the batteries are removed, repeat the steps described above.

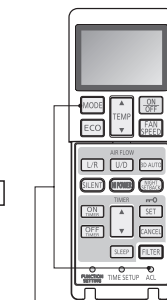


Auto Run setting

Indoor function settings

1. How to set indoor functions
 - ① Press the ON/OFF button to stop the unit.
 - ② Press the desired one of the buttons shown item 2. while holding down the FUNCTION SETTING switch.
 - ③ Use the selection buttons, ▲ and ▼, to change the setting.
 - ④ Press the SET button.

The buzzer on the remote control signal receiver beeps twice, and the LED lamp flashes four times at two-second intervals.

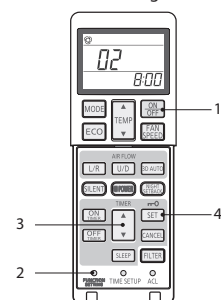

④ Wireless remote control (continued)

2. Setting details

The following functions can be set.

Button	Number indicator	Function setting
FAN SPEED	00	Fan speed setting : Standard
	01	Fan speed setting : Setting 1 *
	02	Fan speed setting : Setting 2 *
MODE	00	Room heating temperature adjustment : Disable
	01	Room heating temperature adjustment : +1°C
	02	Room heating temperature adjustment : +2°C
	03	Room heating temperature adjustment : +3°C
FILTER	00	Filter sign display : OFF
	01	Filter sign display : 180 hours
	02	Filter sign display : 600 hours
	03	Filter sign display : 1000 hours
	04	Filter sign display : Operation stop after 1000 hours have elapsed
U/P	00	Anti draft setting : Disable
	01	Anti draft setting : Enable
SILENT	00	Infrared sensor setting (Motion sensor setting) : Disable
	01	Infrared sensor setting (Motion sensor setting) : Enable
HI POWER	00	Infrared sensor control (Motion sensor control) : Disable
	01	Infrared sensor control (Motion sensor control) : Power control only
	02	Infrared sensor control (Motion sensor control) : Auto OFF only
	03	Infrared sensor control (Motion sensor control) : Power control and Auto OFF
ON TIMER	00	Cooling fan residual-period running : Disable
	01	Cooling fan residual-period running : 0.5 hours
	02	Cooling fan residual-period running : 2 hours
	03	Cooling fan residual-period running : 6 hours
OFF TIMER	00	Heating fan residual-period running : Disable
	01	Heating fan residual-period running : 0.5 hours
	02	Heating fan residual-period running : 2 hours
	03	Heating fan residual-period running : 6 hours
NIGHT SETBACK	00	Remote control signal receiver LED : Brightness High
	01	Remote control signal receiver LED : Brightness Low
	02	Remote control signal receiver LED : OFF

* Refer to technical data.

5 Receiver

1 Control plural indoor units with one remote control

Up to 16 indoor units can be connected.


1. Connect the XY terminal with 2-core wire. As for the size, refer to the following note.
2. For Packaged air-conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate.

Restrictions on the thickness and length of wire (Maximum total extension 600m.)

Standard	Within	0.3 mm ² × 100m
	Within	0.5 mm ² × 200m
	Within	0.75mm ² × 300m
	Within	1.25mm ² × 400m
	Within	2.0 mm ² × 600m

For the shop series

For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate.

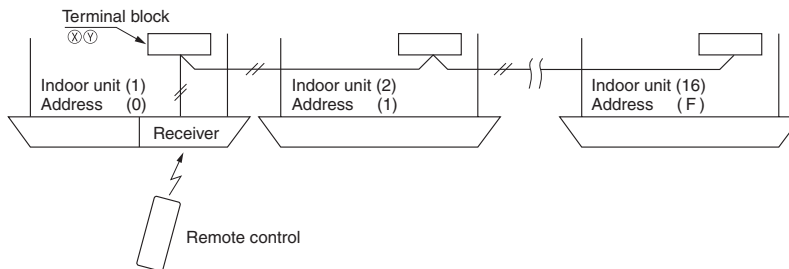


For the building air-conditioning and gas heat pump series

Set the indoor unit and outdoor unit numbers by manually specifying the addresses.

Use the rotary SW1 and SW2 provided on the indoor unit PCB (printed circuit board) to set the indoor unit numbers so that they are not duplicated.

Master/Slave setting when using plural remote control


Up to two receivers can be installed in one indoor unit group.

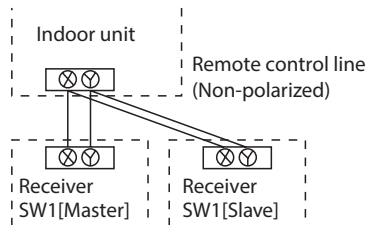

Switch	Setting	Function
SW2	ON	Master
	OFF	Slave


Wireless remote control's operable area

1. Standard reachable area of the signal
[condition] Illuminance at the receiver: 300lux
(when no lighting is installed within 1m of the receiver in an ordinary office.)

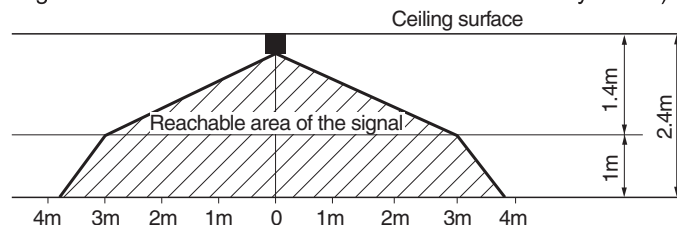

⑤ Receiver (continued)

2. Correlation between illuminance at the receiver and reachable area of the signal in a plain view. The drawing in the right shows the correlation between the reachable area of the signal and illuminance at the receiver when the remote control is operated at 1.0m high under the condition of ceiling height of 2.4m. When the illuminance becomes double, the area is narrowed down to two thirds.

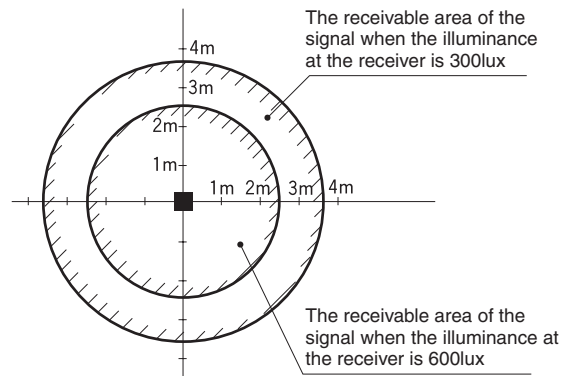


3. Installation tips when several receivers are installed close Minimum distance between the indoor units which can avoid cross communication is 5m under the condition of 300lux of illuminance at the receiver. (When no lighting is installed within 1m of the receiver in an ordinary office)

Backup switch

A Backup switch is provided on the receiver. Even when the operation from the wireless remote control is not possible (due to flat batteries, controller lost, or controller failure), still it possible to operate as temporary means. Press the switch directly when operating it.

1. The air-conditioner starts the operation with the condition of Auto mode, 23°C of set point, High fan speed and horizontal louver position.
2. The air-conditioner stops the operation when the switch is pressed when in operation.

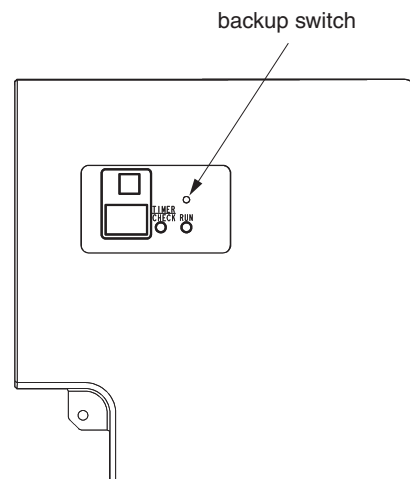

Cooling test run operation

- After safety confirmation, turn on the power.
- Transmit a cooling operation command with the wireless remote control unit, while the backup switch on the receiver is depressed.
- If the backup switch on the receiver is pressed during a test run, it will end the test run.
- If you cannot operate the unit properly during a test run, please check wiring by consulting with inspection guides.

How to read the 2-digit display



On the receiver of a wireless kit, a two-digit (7-segment) display is provided.

1. An indication will be displayed for one hour after power on.
2. An indication will be displayed for 3.5 seconds after transmitting a "STOP" command from the wireless remote control or the operation of the backup switch to stop the unit.
3. An indication appearing in (1) or (2) above will go off as soon as the unit starts operation.
4. When there are no error records to indicate, addresses of all the connected units are displayed.
5. When there are some error records remaining, the error records are displayed.
6. Error records can be cleared by transmitting a "STOP" command from the wireless remote control, while the backup button is pressed.

5.2 Motion sensor kit (LB-T-5W-E)



PJF012D036

WARNING

- Connect the wiring to the PWB in the control box on the indoor unit and hold the wiring securely so as not to apply unexpected stress on the PWB.
Loose connection or hold will cause abnormal heat generation or fire. 
- Make sure the power supply is turned off when electric wiring work.
Otherwise, electric shock, malfunction and improper running may occur. 

CAUTION

- DO NOT install the motion sensor kit at the following places in order to avoid malfunction.


<ul style="list-style-type: none"> (1) Places exposed to direct sunlight (2) Places near heat devices (3) High humidity places (4) Hot surface or cold surface enough to generate condensation (5) Places exposed to oil mist or steam directly (6) Places affected by the direct airflow of the Indoor unit. 	<ul style="list-style-type: none"> (7) Places where the motion sensor is influenced by the fluorescent lamp or sunlight (8) Places where the motion sensor is affected by infrared rays of any other communication devices  (9) Places where some object may obstruct the motion sensor
---	---
- DO NOT leave the motion sensor without the cover.
In case the cover needs to be detached, protect the motion sensor with a packaging or bag.
In order to keep it away from water and dust. 

Attention

- Instruct the customer how to operate it correctly referring to the instruction manual.
- For the installation method of the air conditioner itself, refer to the installation manual enclosed in the package.

① Accessories


Please make sure that you have the motion sensor.

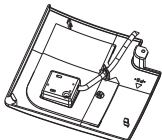Motion sensor		1
---------------	---	---

② Installing the motion sensor

It is possible to install the motion sensor by replacing with a corner lid on the panel.


Aim of the detectable scope

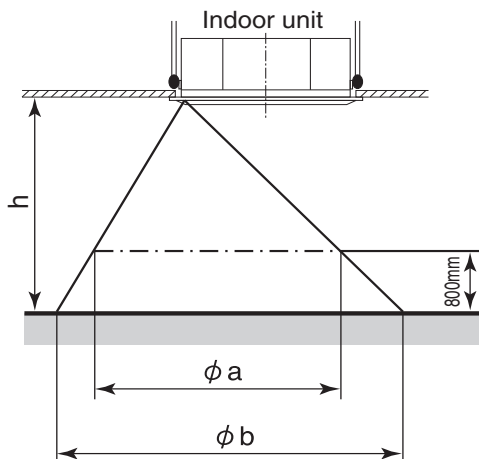

Hight of the ceiling	h [m]	2.7	3.5	4.0
Detectable scope①	ϕa [m]	about 4.5	about 6.4	about 7.6
Detectable scope②	ϕb [m]	about 6.4	about 8.3	about 9.5





Preparation before installation

- ① Install the panel onto the indoor unit according to the installation manual for the panel.
- ② Remove the inlet grille.
- ③ Remove the corner lid (A) located on the panel.
- ④ Loosen 2 screws for the control lid. (It is unnecessary to remove the screws.)
- ⑤ Slide the control lid, and open and remove it.

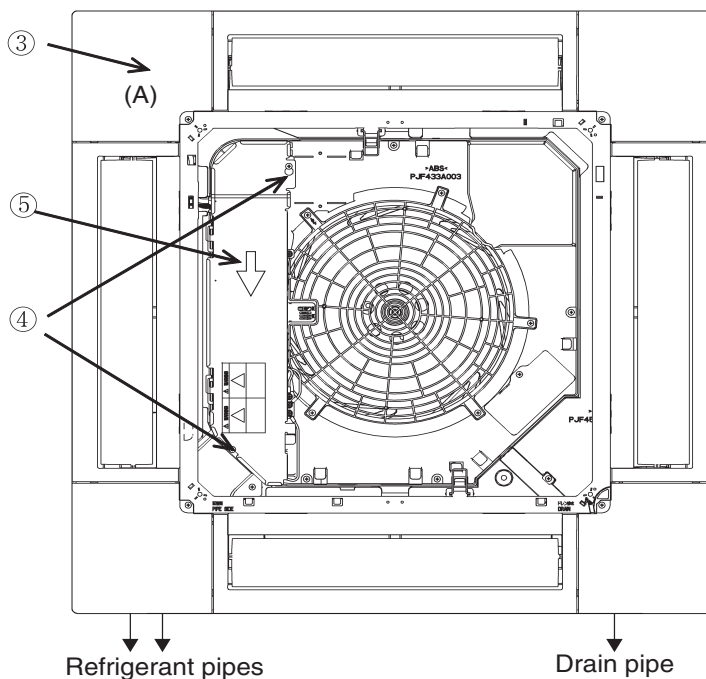

Installation of the motion sensor

- ① Loosen the bolts which fix the panel, and make a gap between the panel and the indoor unit.
- ② Pass the wiring of the motion sensor through the opening of the panel.
- ③ Hang the wiring on the hook which is on the panel's inside.
- ④ Pass the wiring through the opening of the control box.
- ⑤ Connect the connector to CNL(3P,Black) on PWB in the control box.
- ⑥ Tighten the bolts which fix the panel.
- ⑦ Install the motion sensor on the panel.
- ⑧ Fix the motion sensor by the screw.
- ⑨ Reinstall the control lid, and tighten 2 screws.

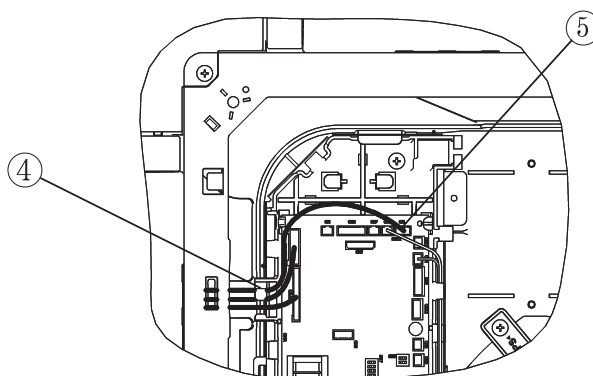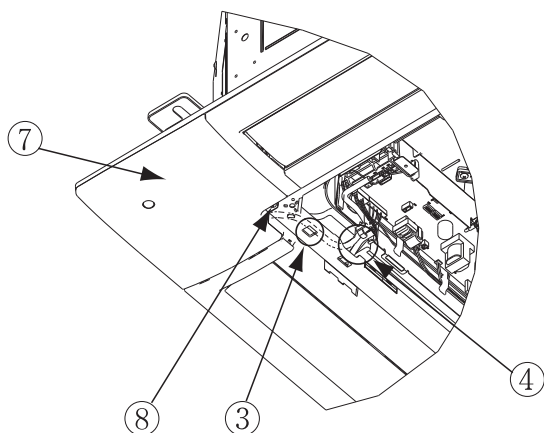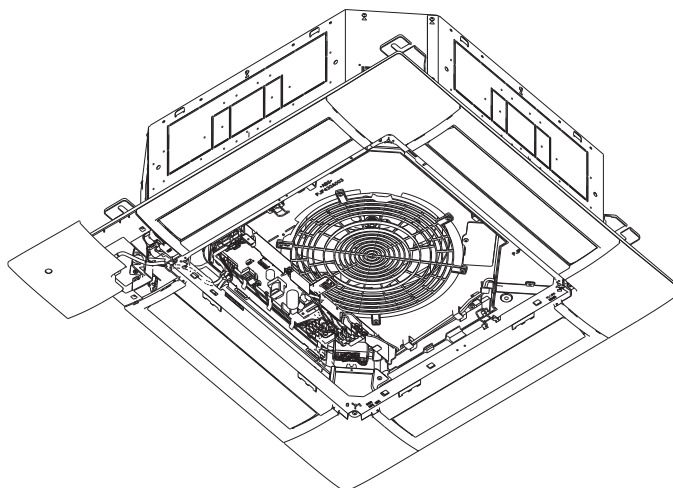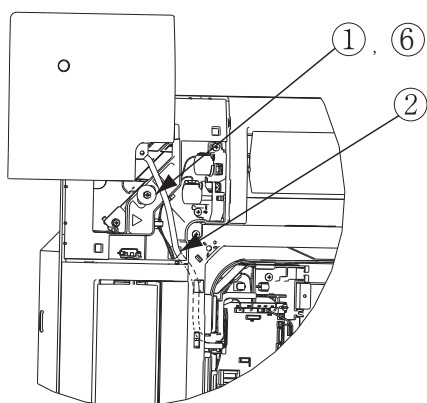

③ Setting the motion sensor

The motion sensor will not function if it is only installed.

Set the function of the motion sensor by the wired or wireless remote control.

Refer to the manual instruction of each remote control for the setting procedure.

Note: It is not possible to set by the following remote control models or older.

Wired: RC-EX3, RC-EX1A, RC-E5, RCH-E3


Wireless: RCN-E1R

5.3 SIMPLE WIRED REMOTE CONTROL (RCH-E3)

Notes:

Following functions of FDT indoor unit series are not able to be set with this simple wired remote control (RCH-E3).
 1. 4-fan speed setting (PHi/Hi/Me/Lo) 3-fan speed setting (Hi/Me/Lo)

Names and functions of sections

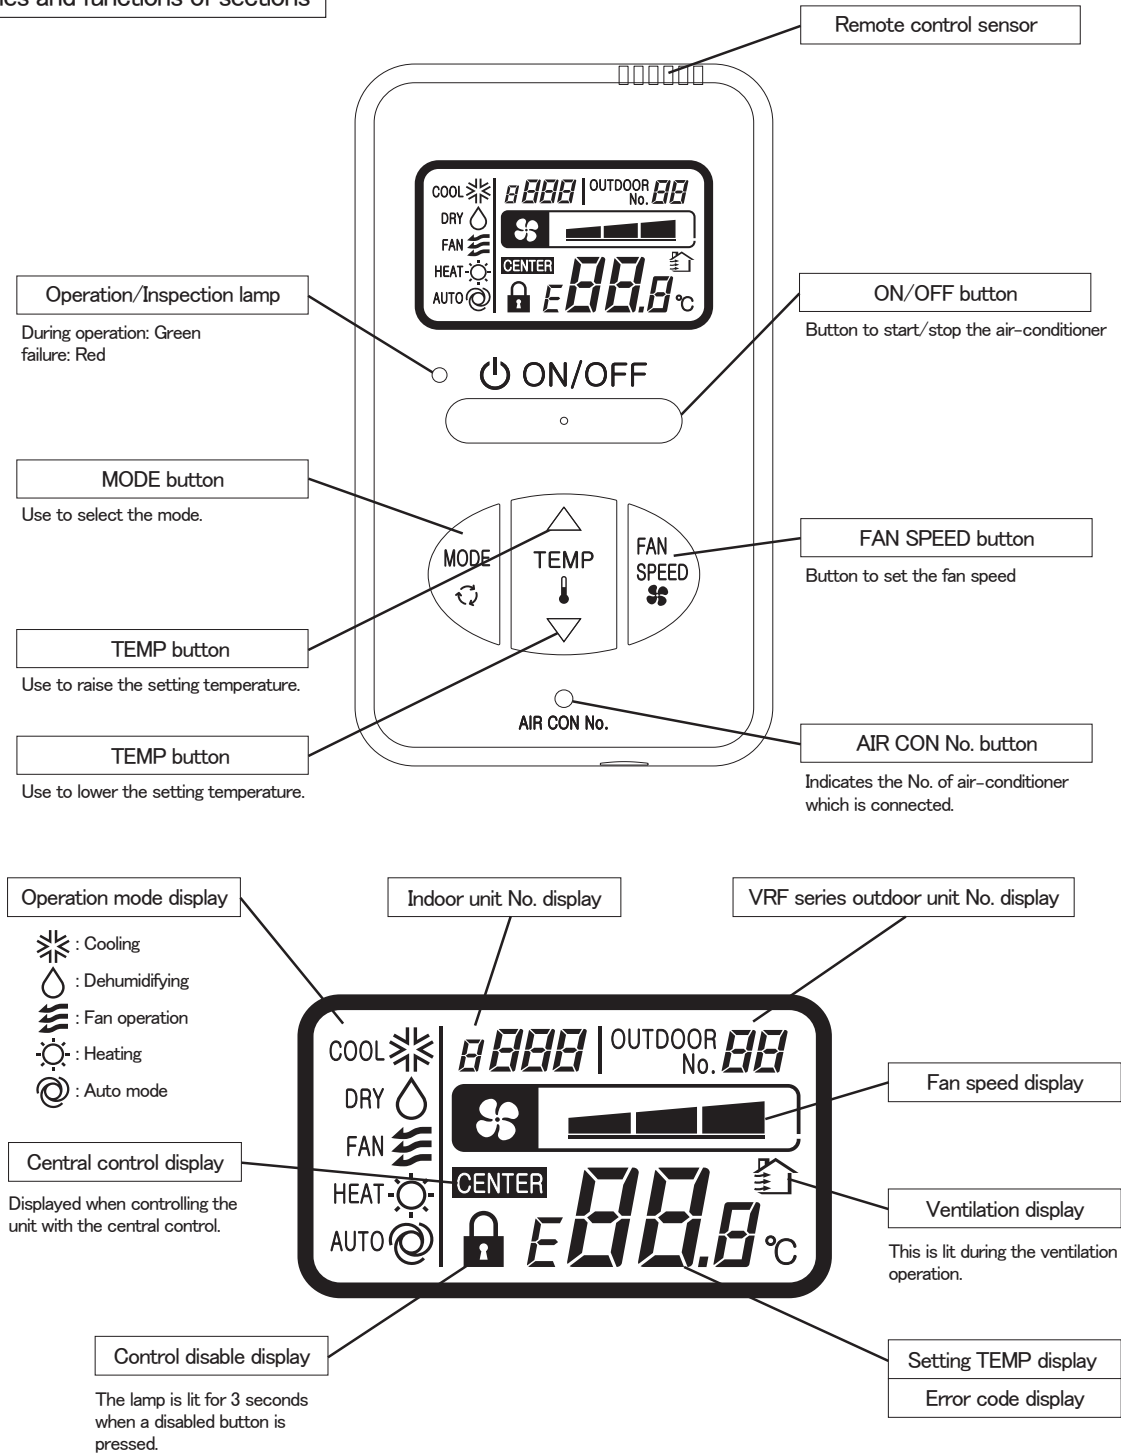


Installation of remote control

DO NOT install the remote control at the following places in order to avoid malfunction.

- (1) Places exposed to direct sunlight
- (2) Places near heat devices
- (3) High humidity places
- (4) Hot surface or cold surface enough to generate condensation
- (5) Places exposed to oil mist or steam directly
- (6) Uneven surface


PJZ000Z272

Remote control installation dimensions

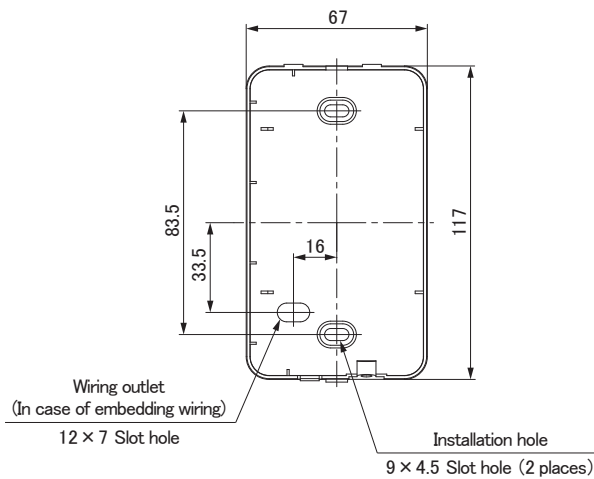


Note: Installation screw for remote control
M4 Screw (2 pieces)


In case of embedding wiring

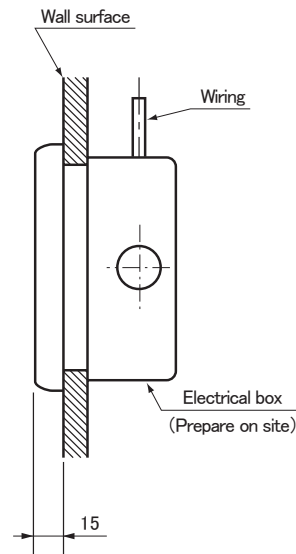

In case of exposing wiring

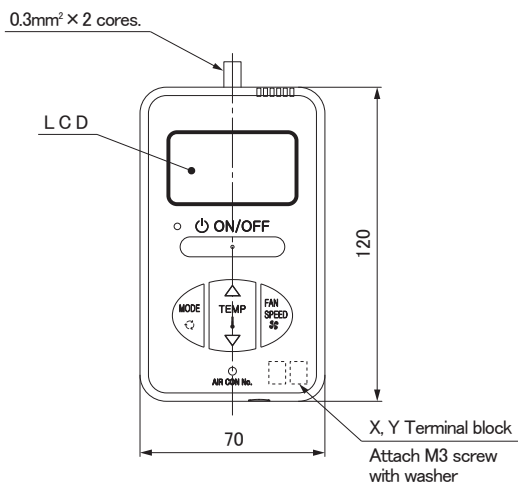


The remote control wiring can be extracted from the upper center. After the thin part in the upper side of the remote control upper case is scraped with a nipper or knife, remove burr with a file.

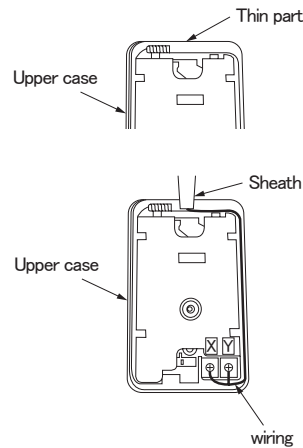

The peeling length of each wiring is as follows:

X wiring : 160mm
Y wiring : 150mm



Wiring specifications

- (1) Wiring of remote control should use 0.3mm² × 2 core wires or cables. (on-site configuration)
- (2) Maximum prolongation of remote control wiring is 600m.
If the prolongation is over 100m, change to the size below.
But, the wiring in the remote control case should be 0.3mm² (recommended) to 0.5mm².
Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section.
Be careful about contact failure.

Unit:mm

Length	Wiring thickness
100 to 200m	0.5mm ² × 2 cores
Under 300m	0.75mm ² × 2 cores
Under 400m	1.25mm ² × 2 cores
Under 600m	2.0mm ² × 2 cores

Adapted to **RoHS** directive

Simple Remote Control Installation Manual

PJZ012D069

Read together with indoor unit's installation manual.

WARNING

- **Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.**
Loose connection or hold will cause abnormal heat generation or fire.
- **Make sure the power source is turned off when electric wiring work.**
Otherwise, electric shock, malfunction and improper running may occur.

CAUTION





- **DO NOT install the remote control at the following places in order to avoid malfunction.**
 - (1) Places exposed to direct sunlight
 - (2) Places near heat devices
 - (3) High humidity places
 - (4) Hot surface or cold surface enough to generate condensation
 - (5) Places exposed to oil mist or steam directly
 - (6) Uneven surface
- **DO NOT leave the remote control without the upper case.**
In case the upper case needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust.

Accessories	Remote control, wood screw (φ 3.5 × 16) 2 pieces
Prepare on site	Remote control cord (2 cores) (Refer to [2. Installation and wiring of remote control]) [In case of embedding cord] Electrical box, M4 screw (2 pieces) [In case of exposing cord] Cord clamp (if needed)

1. Installation procedure

In case of embedding cord





- (1) **Make certain to remove** the screw on the bottom surface of the remote control.
- (2) Remove the upper case of the remote control.
Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote control and slightly twist it, and the case is removed.
- (3) Pre-bury the electrical box and remote control cord.
- (4) Prepare two M4 screws (recommended length: 12 – 16mm), and install the lower case to the electrical box.
Do not use a screw whose screw head is larger than the height of the wall around the screw hole.

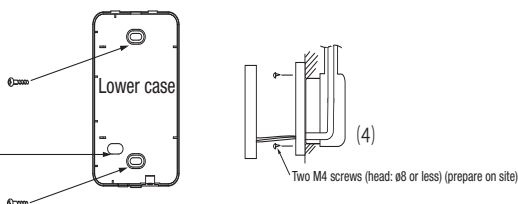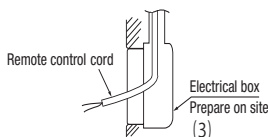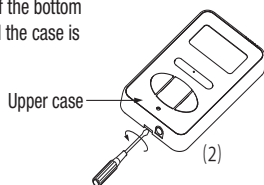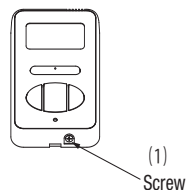


- (5) Connect the remote control cord to the terminal block.
Connect the terminals (X and Y) of the remote control and the terminals (X and Y) of the indoor unit. (No polarity of X and Y)
- (6) Mount the upper case for restoring to its former state so as not to crimp the remote control cord, and secure with the removed screw.

In case of exposing cord

- (1) **Make certain to remove** a screw on the bottom surface of the remote control.
- (2) Remove the upper case of the remote control.
Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote control and slightly twist it, and the case is removed.
- (3) The remote control cord can be extracted from the upper center.
After the thin part in the upper side of the remote control upper case is scraped with a nipper or knife, remove burr with a file.
- (4) The lower case of the remote control is mounted to a flat wall with two accessory wood screws.

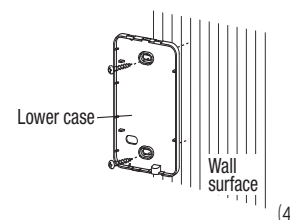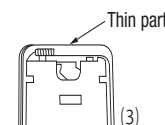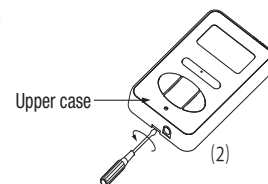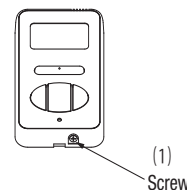

- (5) Connect the remote control cord to the terminal block.
Connect the terminals (X and Y) of the remote control and the terminals (X and Y) of the indoor unit. (No polarity of X and Y)
The wiring route is as shown in the right.

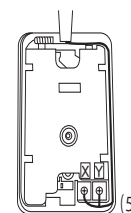


The wiring in the remote control case should be 0.3 mm² (recommended) to 0.5 mm² at maximum.

Further, peel off the sheath.

The peeling length of each wiring is as follows:

X wiring : 160mm
Y wiring : 150mm




- (6) Mount the upper case for restoring to its former state so as not to crimp the remote control cord, and secure with the removed screw.
- (7) In the case of exposing installation, secure the remote control cord to the wall surface with a cord clamp so as not to loosen the remote control cord.

2. Installation and wiring of remote control


- (1) Wiring of remote control should use 0.3mm² × 2 core wires or cables. (on-site configuration)
- (2) Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, the wiring in the remote control case should be 0.3mm² (recommended) to 0.5mm².
Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
 - 100 - 200m ······ 0.5mm² × 2 cores
 - Under 300m ······ 0.75mm² × 2 cores
 - Under 400m ······ 1.25mm² × 2 cores
 - Under 600m ······ 2.0mm² × 2 cores

3. Master/ slave setting when more than one remote control are used

- (1) Up to two remote controls can be connected to one unit (or one group) of indoor unit.

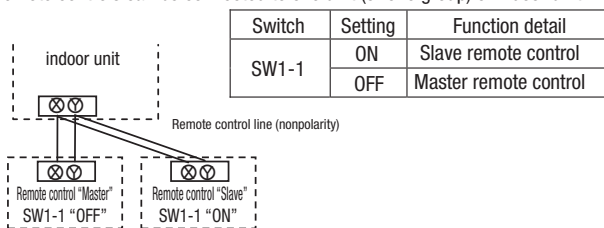


- (2) Set the switch SW1-1 of the slave remote control is "Slave" (ON). The factory default is set as "Master" (OFF).
 (Note) • The remote control thermistor enabled setting can be set only to the master remote control.
 • Install the master remote control at the position to detect room temperature.
 • The air-conditioner operation follows the last operation of the remote control in case of the master / slave setting.

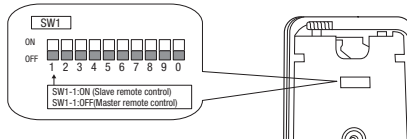

4. The indication when power source is supplied

- (1) At the time of turning the power source on, after the light is on for the first 2 seconds, the display becomes as shown below.
 The number displayed on the upper side of LCD in the remote control is the software number, and this is not an error code.

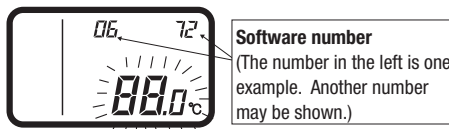

- (2) Then, "88.0 °C" blinks on the remote control until the communication between the remote control and the indoor unit is established.
 (3) In the case of connecting one remote control with one unit (or one group) of indoor unit, make certain to set the master remote control (factory default).
 If the slave remote control is set, a communication cannot be established.
 (4) If a state where the communication between the remote control and the indoor unit cannot be established continues about for 30 minutes, "E" is displayed. Confirm the wiring of the indoor unit and the outdoor unit and master/slave setting of the remote control.



5. Confirmation method for return air temperature

Return air temperature can be confirmed by the remote control operation.

- (1) Press **AIR CON No.** button for over 5 seconds.
 "88" blinks on the temperature setting indicator.
 ("88" blinks for approximately 2 seconds while data are read.)



Then, the return air temperature is displayed.
 (Example) return air temperature: "27 °C" (blinking)

(Note) For the return air temperature, in the normal case, the return air temperature of the indoor unit is displayed; however, in the case that the remote control thermistor is effective, detected temperature by the remote control thermistor is displayed.

- (2) Press **ON/OFF** button.
 End.

[In the case that the remote thermistor is ineffective and plural indoor units are connected to one remote control]

- (1) Press **AIR CON No.** button for over 5 seconds.
 indoor unit No. indicator: "U 000" (blinking)
 (Among the connected indoor units, the lowest number is displayed.)



- (2) Press **TEMP Δ** or **TEMP ∇** button.
 Select the indoor unit No.

- (3) Press **MODE** button.
 Decider the indoor unit No.
 (Example) indoor unit No. indicator: "U 000"

"88" blinks on the temperature setting indicator. (blinking for approximately 2 to 10 seconds while data are read) Then, the return air temperature is displayed. When **AIR CON No.** is pressed, return to the indoor unit selection display (example, "U 000").


- (4) Press **ON/OFF** button.
 End.

6. Function setting

Each function of the remote control and the indoor unit is automatically set to the initial setting, which is the standard use, on the occasion of connecting the remote control with the indoor unit. In the case of the standard use, the setting change is unnecessary. However, if you would like to change the initial setting "○", change the setting for only the item of the function number. **Record the setting contents and stored them.**

(1) Function setting item by switch on PCB

Switch No.	Setting	Setting detail	Initial setting
SW1-1	ON	Slave remote control	
	OFF	Master remote control	○
SW1-2	ON	Remote control thermistor enabled	
	OFF	Remote control thermistor disabled	○
SW1-3	ON	"MODE" button prohibited	
	OFF	"MODE" button enabled	○
SW1-4	ON	"ON/OFF" button prohibited	
	OFF	"ON/OFF" button enabled	○
Switch No.	Setting	Setting detail	Initial setting
SW1-5	ON	"TEMP" button prohibited	
	OFF	"TEMP" button enabled	○
SW1-6	ON	"FAN SPEED" button prohibited	※ Note 1
	OFF	"FAN SPEED" button enabled	※ Note 1
SW1-7	ON	Auto restart function enabled	
	OFF	Auto restart function disabled	○
SW1-8, 9, 0	ON	Not used	
	OFF	Not used	

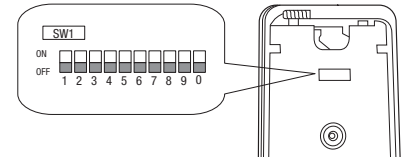

- As for the slave remote control, function setting is impossible other than SW1-1.
- In the indoor unit with only one fan speed, "FAN SPEED" button cannot be enabled.

(2) Function setting item by button operation

Classification	Function No.	Function	Setting No.	Setting	Initial setting	Remarks
Remote control function	01	Indoor unit fan speed	01	Fan speed: three steps	※ Note 1	The fan speed is three steps, ■ ■ ■ - ■ ■ ■ - ■ ■ ■ .
			02	Fan speed: two steps (Hi-Lo)	※ Note 1	The fan speed is two steps, ■ ■ ■ - ■ ■ ■ .
			03	Fan speed: two steps (Hi-Me)		The fan speed is two steps, ■ ■ ■ - ■ ■ ■ .
			04	Fan: one step	※ Note 1	The fan speed is fixed to one step.
	03	Remote control thermistor at the time of cooling	01	Remote control thermistor: no offset	○	
			02	Remote control thermistor: +3.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +3.0°C.
			03	Remote control thermistor: +2.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +2.0°C.
			04	Remote control thermistor: +1.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +1.0°C.
			05	Remote control thermistor: -1.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -1.0°C.
			06	Remote control thermistor: -2.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -2.0°C.
			07	Remote control thermistor: -3.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -3.0°C.
	04	Remote control thermistor at the time of heating	01	Remote control thermistor: no offset	○	
			02	Remote control thermistor: +3.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +3.0°C.
			03	Remote control thermistor: +2.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +2.0°C.
			04	Remote control thermistor: +1.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +1.0°C.
			05	Remote control thermistor: -1.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -1.0°C.
06			Remote control thermistor: -2.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -2.0°C.	
07			Remote control thermistor: -3.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -3.0°C.	
05	Ventilation setting	01	No ventilator connection	○		
		02	Ventilator links air-conditioner		In case of Single split series, by connecting ventilation device to CnT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), the operation of ventilation device is linked with the operation of indoor unit.	
06	"Auto" operation setting	01	"Auto" operation enabled	※ Note 1		
		02	"Auto" operation disabled	※ Note 1	"Auto" operation disabled	
07	Operation permission/prohibition	01	Disabled	○		
		02	Enabled		Operation permission/prohibition controller is enabled.	
08	External input	01	Level input	○		
		02	Pulse input			
09	Fan speed setting	01	Standard	Note2		
		02	High speed 1	Note2		
		03	High speed 2	Note2		
10	Fan remaining operation at the time of cooling	01	No remaining operation	○	After cooling stopped, no fan remaining operation	
		02	0.5 hours		After cooling stopped, fan remaining operation for 0.5 hours	
		03	1 hour		After cooling stopped, fan remaining operation for 1 hour	
		04	6 hours		After cooling stopped, fan remaining operation for 6 hours	
11	Fan remaining operation at the time of heating	01	No remaining operation	○	After heating stopped or after heating thermostat OFF, no fan remaining operation	
		02	0.5 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 0.5 hours	
		03	2 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 2 hours	
		04	6 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 6 hours	
12	Setting temperature offset at the time of heating	01	No offset	○		
		02	Setting temperature offset + 3.0 °C		The setting temperature at the time of heating is offset by +3.0 °C.	
		03	Setting temperature offset + 2.0 °C		The setting temperature at the time of heating is offset by +2.0 °C.	
		04	Setting temperature offset + 1.0 °C		The setting temperature at the time of heating is offset by +1.0 °C.	
13	Heating fan controller	01	Low fan speed	※ Note 1	At the time of heating thermostat OFF, operate with low fan speed.	
		02	Setting fan speed		At the time of heating thermostat OFF, operate with the setting fan speed.	
		03	Intermittent operation	※ Note 1	At the time of heating thermostat OFF, intermittently operate.	
		04	Fan off		At the time of heating thermostat OFF, a fan will be stopped. When the remote control thermistor is enabled, automatically set to "Fan off". Do not set at the time of the indoor unit thermistor.	
14	Return air temperature offset	01	No offset	○		
		02	Return air temperature offset +2.0 °C		Offset the return air temperature of the indoor unit by +2.0 °C.	
		03	Return air temperature offset +1.5 °C		Offset the return air temperature of the indoor unit by +1.5 °C.	
		04	Return air temperature offset +1.0 °C		Offset the return air temperature of the indoor unit by +1.0 °C.	
		05	Return air temperature offset -1.0 °C		Offset the return air temperature of the indoor unit by -1.0 °C.	
		06	Return air temperature offset -1.5 °C		Offset the return air temperature of the indoor unit by -1.5 °C.	
		07	Return air temperature offset -2.0 °C		Offset the return air temperature of the indoor unit by -2.0 °C.	

Note 1: The symbol "※" in the initial setting varies depending upon the indoor unit and the outdoor unit to be connected, and this is automatically determined as follows:

Switch No. / Function No.	Function	Setting	Product model
SW1-6	"FAN SPEED" button	"FAN SPEED" button prohibited	Product model whose indoor fan speed is only one step
		"FAN SPEED" button enabled	Product model whose indoor fan speed is two steps or three steps
Remote control function 01	Indoor unit fan speed	Fan speed: three steps	Product model whose indoor unit fan speed is three steps
		Fan speed: two steps (Hi-Lo)	Product model whose indoor unit fan speed is two steps
		Fan speed: two steps (Hi-Me)	Product model whose indoor unit fan speed is only one step
Remote control function 06	"Auto" operation setting	"Auto" operation enabled	Product model where "Auto" mode is selectable
		"Auto" operation disabled	Product model without "Auto" mode
Indoor unit function 13	Heating fan control	Low fan speed	Product model except FDUS
		Intermittent operation	FDUS

Note 2: Fan speed of "High speed" setting

Fan speed setting	Indoor unit fan speed setting		
	■ ■ ■ - ■ ■ ■ - ■ ■ ■	■ ■ ■ - ■ ■ ■	■ ■ ■ - ■ ■ ■
Standard	Hi — Mid — Lo	Hi — Lo	Hi — Mid
High speed 1 • 2	UHi — Hi — Mid	UHi — Mid	UHi — Hi

Initial setting of some indoor unit is "High speed".


Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit.

But only master indoor unit is received the setting change of indoor unit function "07 Operation permission/prohibition" and "08 External input".

7. How to set functions by button operation

- (1) Stop air-conditioning, and simultaneously press [AIR CON No.] and [MODE] buttons at the same time for over three seconds.

The function number "01" blinks in the upper right.

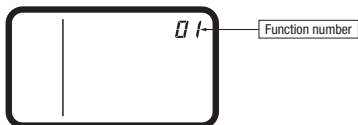


- (2) Press [TEMP▲] or [TEMP▼] button.
Select the function number.

- (3) Press [MODE] button.
Decide the function number.

- (4) [In the case of selecting the remote control function (01-06)]

- ① The current setting number of the selected function number blinks
(Example)
Function number: "01" (lighting)
Setting number: "01" (blinking)

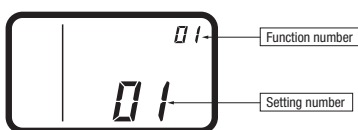


- ② Press [TEMP▲] or [TEMP▼] button.
Select the setting number.

- ③ Press [MODE] button.
The setting is completed.

Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted.

(Example)

Function number: "01" (lighting for 3 to 20 seconds)
Setting number: "01" (lighting for 3 to 20 seconds)

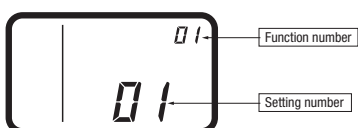


Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

- (5) Press [ON/OFF] button.
The setting is completed.

- Even if [ON/OFF] button is pressed during setting, the setting is ended. However, any details where the setting has not been completed will be ineffective.
- The setting contents are stored in the controller, and even if the power failure occur, this will not be lost.

[Confirmation method for current setting]

According to the operation, the "setting number" displayed first after selecting "function number" and pressing [MODE] button is the currently set content. (However, in the case of selecting "U ALL" (all units), the setting number of the lowest number among the indoor units is displayed.)

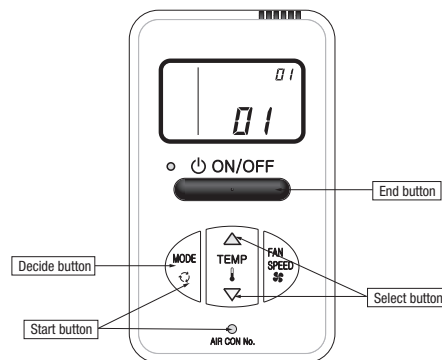

[In the case of selecting the indoor unit function (07-14)]


- ① "88" blinks on the temperature setting indicators.
(blinking for approximately 2 to 10 seconds while data are read)

↓

After that, the current setting number of the selected function number blinks.

(Example)

Function number: "07" (lighting)
Setting number: "01" (blinking)

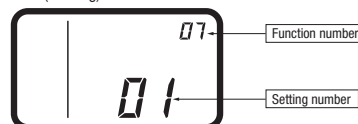


Proceed to ②.

[Note]

- a. In the case of connecting one remote control to plural indoor units, the display will be as follows:

Indoor unit No. display: "U 000" (blinking)
(Display the lowest number among the connected indoor units.)

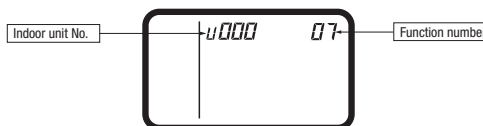

- b. Press [TEMP▲] or [TEMP▼] button.
Select the indoor unit No. to be set.

If "U ALL" is selected, the same setting can be set to all units.

- c. Press [MODE] button.

Decide the indoor unit No.

"88" blinks on the temperature setting indicators. (blinking for 2 to 10 seconds while data are read)

When [AIR CON No.] button is pressed, go back to the indoor unit selection display (for example, "U 000" blinking).

- ② Press [TEMP▲] or [TEMP▼] button.
Select the setting number


- ③ Press [MODE] button.

The setting is completed.

Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted.

(Example)

Indoor unit No.: "U 000" (lighting for 3 to 20 seconds)
Function number: "07" (lighting for 3 to 20 seconds)
Setting number: "01" (lighting for 3 to 20 seconds)

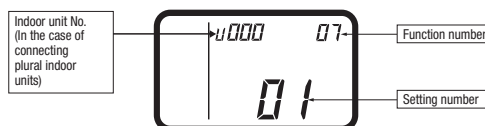

Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

5.4 BASE HEATER KIT (CW-H-E1)

PCZ012D007B

⚠ WARNING

- Follow the instruction and installation manual for outdoor unit when installing the heater.
- This heater must be installed by authorized personnel.
- Turn off the power source when the kit is installed.
- Failure to follow the above will result in serious accident like electrical shock or fire.

⚠ CAUTION

- Follow the law or regulation of the country where it is installed.
- Do not alter the heater.
- Lay down the heater so that the edge of the sheet metal does not damage the heater.
- Bending radius must be bigger than 25mm.
- Do not use the heater near flammable substances.
- Be sure to check the electrical insulation before use.
- Be sure to check the drain is not trapped by the heater.
- Do not leave refrigerant oil on the base.


AREAS TO BE APPLIED

This kit is to be used in an area where the lowest temperature drops below zero.

⚠ Caution: In case the heater is not applied on the unit which is installed in an area mentioned above, it may be regarded as installation failure and warranty may not be given.

Components

- Heater : 1pc
- Bracket A : 4pcs
- Bracket B : 1pcs
- Bracket C : 1pcs
- Tapping screw (OD5) : 4pcs
- Tapping screw (OD4) : 4pcs
- Plastic band with clip ① : 2pcs
- Plastic band : 5pcs

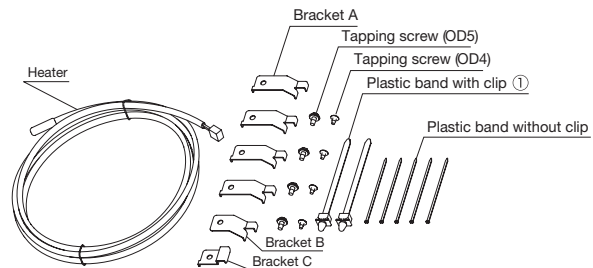


Applicable model

This heater kit is applicable for 3 different models.

<Model A>


Single fan with plastic fan guard model

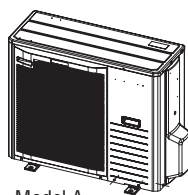

Model A

<Model B>


Single fan model (Without FDC 100VNP)
(Refer to page 7-8 for FDC 100VNP <Model D>)

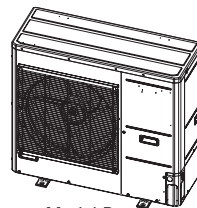

Model B

<Model C>

Double fan model

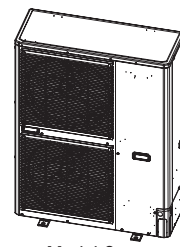


Model C


Installation procedure

Step 1


1. Remove the top panel of the outdoor unit

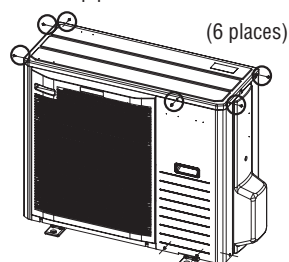

Model A

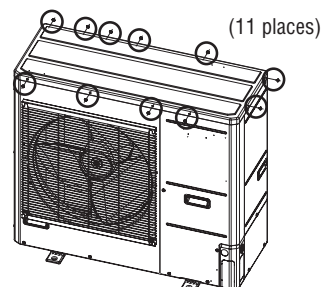


Model B

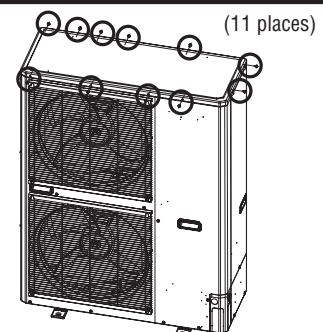


Model C

Step 2 2. Remove the service panel

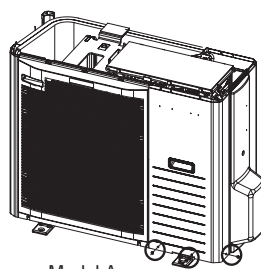


Model A

(3 places)

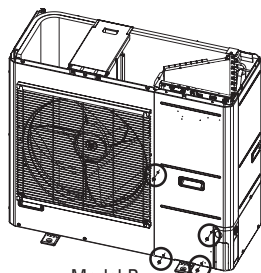

Model B

(4 places)

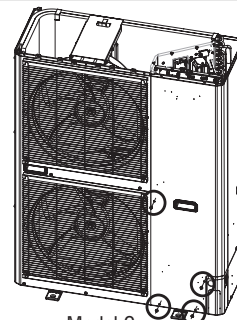


Model C

(4 places)


Step 3 3. Remove the front panel

Pull the panel straightforward so that the panel doesn't touch the fan blade.

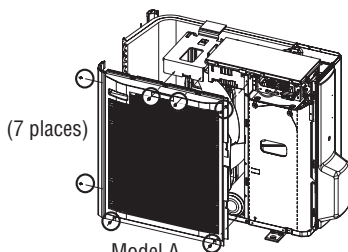


(7 places)

Model A

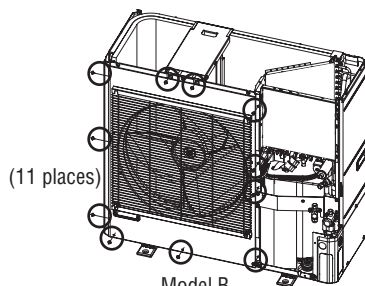

(11 places)

Model B

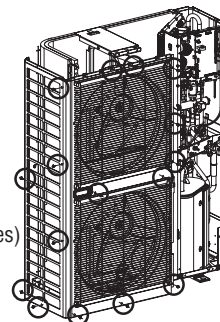


(16 places)


Model C

Step 4 4. Remove the fan blade if necessary. <Note>


Do not rotate the axis of fan motor when removing the fan blade. It may cause malfunction of the fan motor.

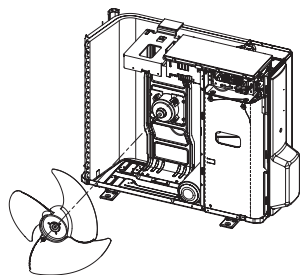

Model A

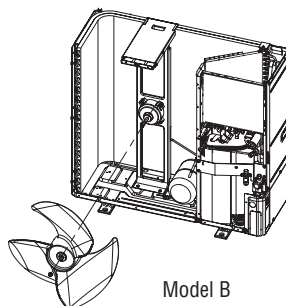


Model B

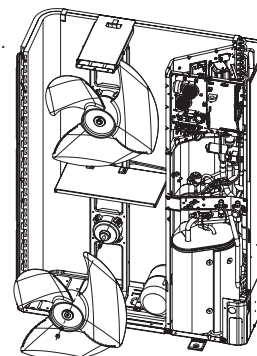

Model C


Step 5 5. Lay down the drain pan heater on the base.

For model A, put the cables rear the fan motor bracket.

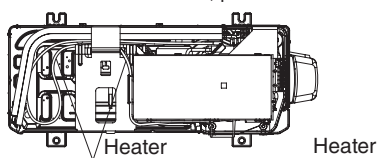


Heater

Heater

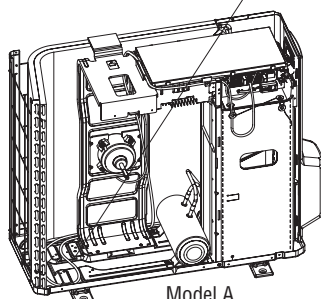


Model A

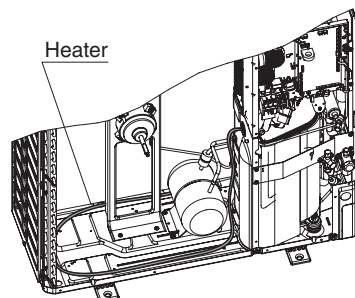

Heater


Model B, C

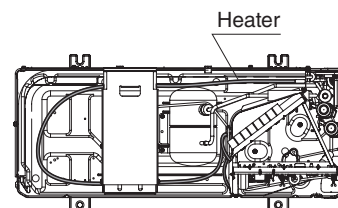

Heater


Step 6

6. Put the heater underneath the heat exchanger and align the end of heater with the end plate of heat exchanger.

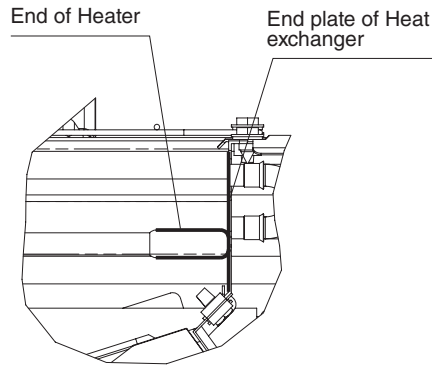


Step 7


7. Fix the heater with brackets.

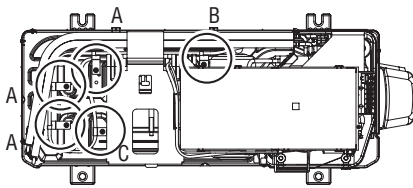

For model A, use 3 pcs of bracket A, 1pc of bracket B and C. Fix bracket A and C with the attached screw (OD4), and fix bracket B with the removed screw which is fastened at the same place.

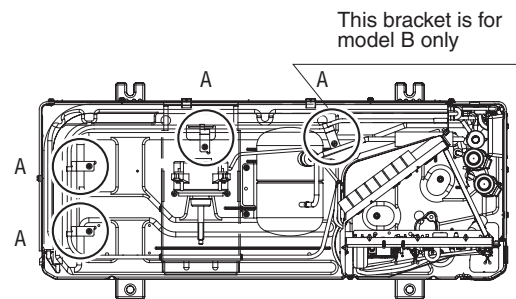


For model B and C, fix bracket A with the attached screw (OD5).

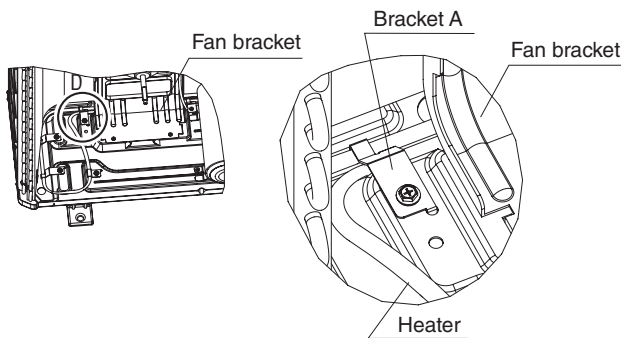

Model A

Detail view D

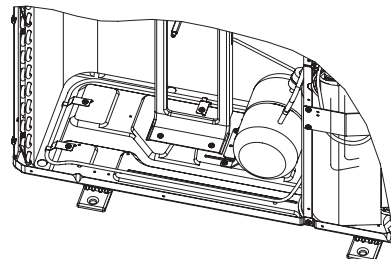


Model B, C

<Note for model A>

- 1) Put the end of heating part just after the bracket C
- 2) Fix the incoming and out going cable with one bracket A on the left of fan bracket as figure shows.

<Note>

- 1) Fix the heater so that the bracket doesn't pinch the heater as figure shows.
- 2) Place the heater so as to touch the base completely.
- 3) In bending position, twist the heater to make it easier to bend, and get back to be able to fix it with bracket.
- 4) Be careful not to be injured by aluminum fin when fixing the heater with screw.

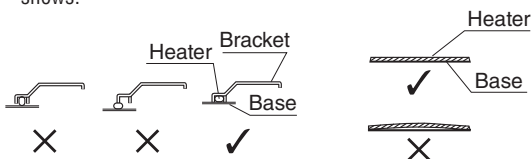


Step 8

8. Insert the plastic band with clip on the designated place (2 places), and fix the heater. (Model B,C only)


<Note>

1) Do not fasten the heating part with the plastic band.
There is a marking on the end of heating part.



2) When the heater is laid down correctly, the end of heating part comes to the corner of the base.

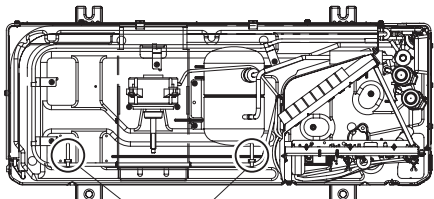

Plastic band without clip ①

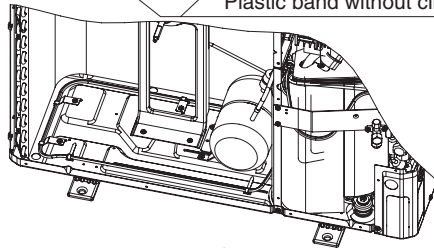

Model B, C

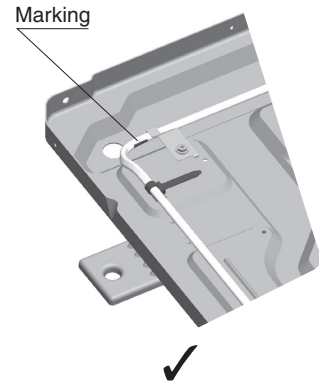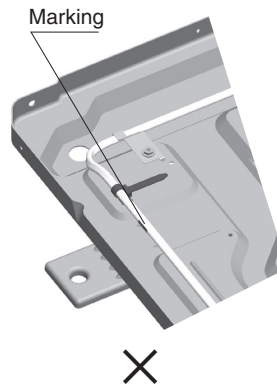







Step 9

9. Lay down the wiring on the same route of fan motor wiring, and fix the wire with attached plastic band at the same place where the fan motor wiring is banded.

Model A

Model B

Model C

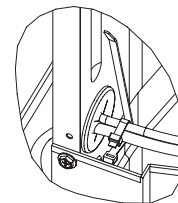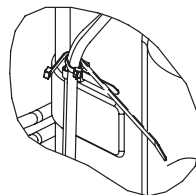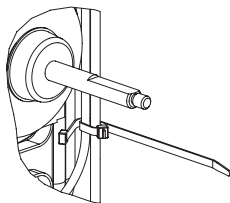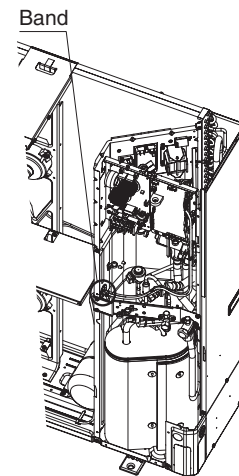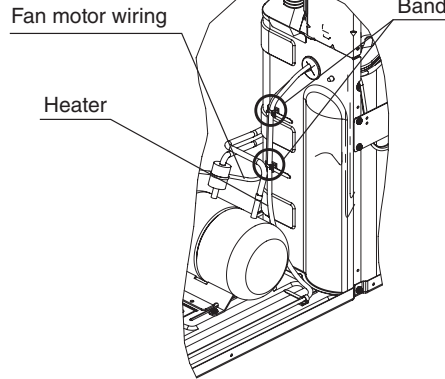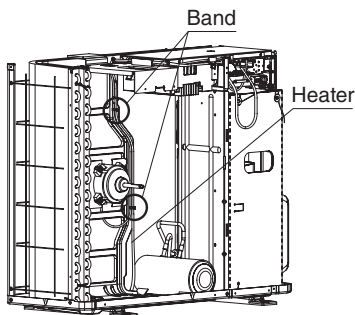

<Note>

Fan motor wiring is banded on the bracket so that it doesn't loosen.


Do not loose the band for the motor wiring to band the heater wire together but use the attached plastic band.

Step 10

10. Insert the connector to the port (Model A:CNN, Model B,C:CNF) on the PCB, and fix the wire with bands. Excess part of the wire should be dropped naturally.

<Note>

Be sure to cut the excess part of plastic band. It may cause abnormal noise when hit by fan blade or misassembling of panels. Do not bundle excess part of the wire. It may damage the heater.

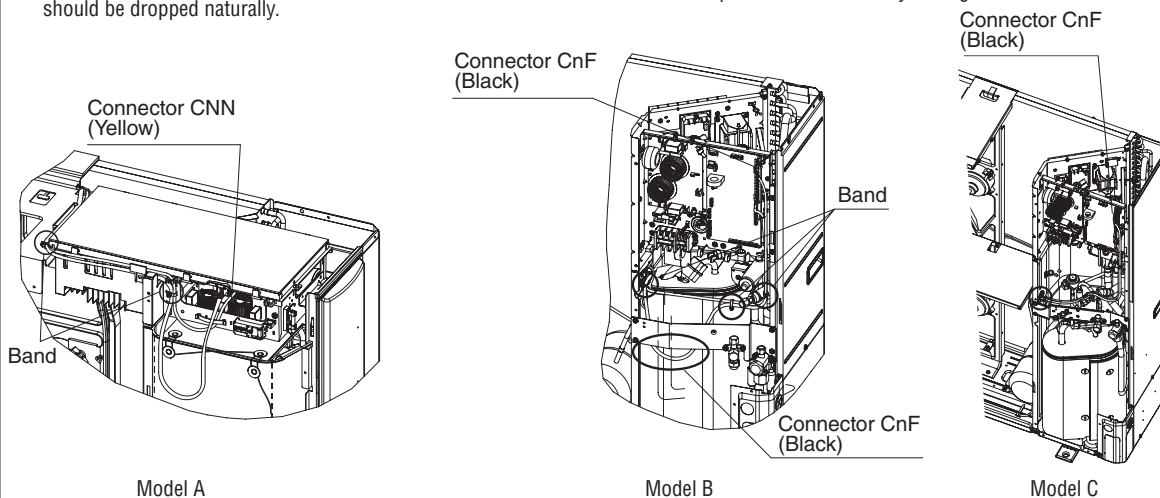


Step 11

11. Reassemble the fan blade.

Take care to align the D-cut of motor shaft and the fan blade. ▽ mark on the center of the fan shows the position of D-cut.

<Note>

1. Tightening torque of the nut is 4.0-4.9 N·m.
2. Do not rotate the axis of fan motor when tightening the nut. It may cause malfunction of the fan motor.

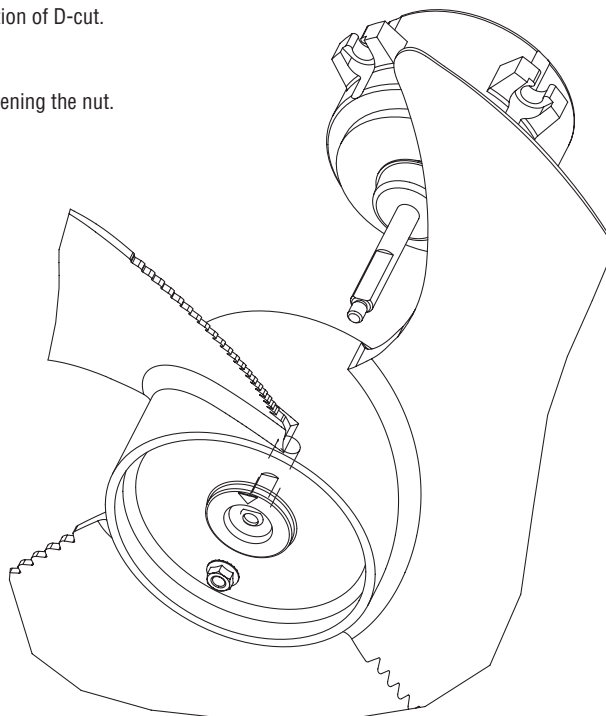


<Note>

- This heater should have bending radius of at least 25mm including non-heating part. Do not bundle the excess part of the wire. It may cause disconnection of the heater or insufficient capacity.
- Be sure to prevent the heater from touching any refrigerant piping. Especially, pay close attention not to make it touch with pipes which are close to the wiring route such as suction pipe, check valve and check joint.


Step 12

12. Reassemble the panels.


[Model A]

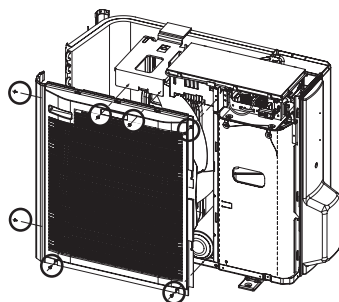

Front panel

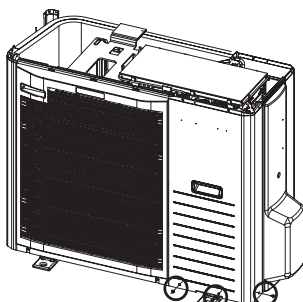


Service panel

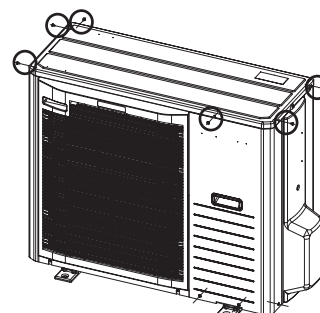


Top panel


[Model B]

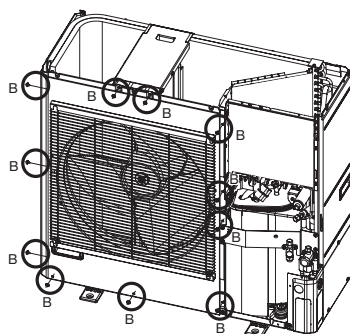

Front panel

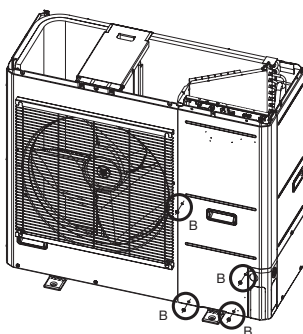


Service panel

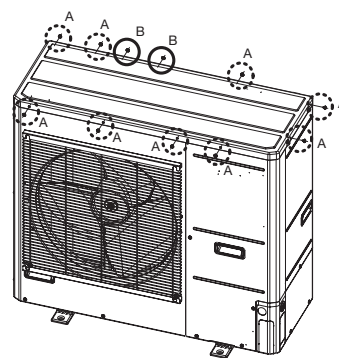


Top panel


[Model C]

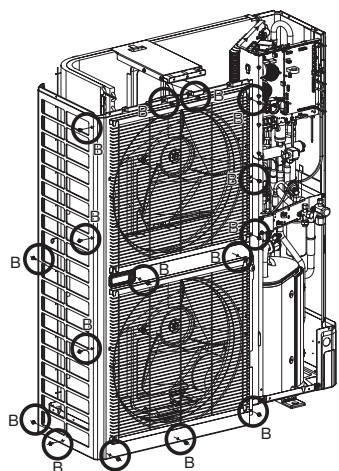

Front panel

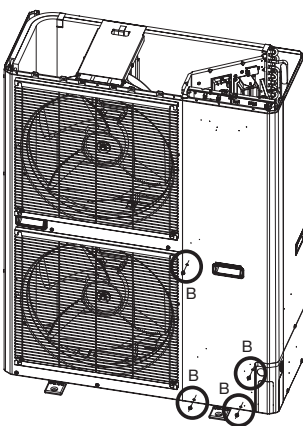

Service panel

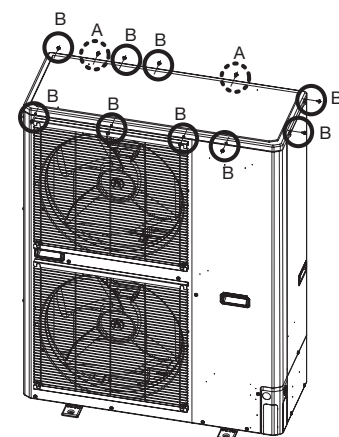

Top panel

<Note>

1) When reassembling the service panel, take care not to damage the front panel with the edge.

2) Top panel of model B and model C is fixed with two different screws.

Be sure to use correct screw as figure shows.




A



B


Applicable model

Model name : FDC100VNP
 <Model D>
 Single fan model

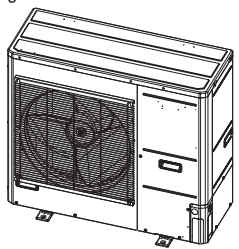

Components

- Heater : 1pc
- Bracket A : 4pcs
- Bracket B : 1pcs (※1)
- Bracket C : 1pcs (※1)
- Tapping screw (OD5) : 4pcs
- Tapping screw (OD4) : 4pcs
- Plastic band with clip ① : 2pcs
- Plastic band with clip ② : 2pcs (※2)
- Plastic band : 5pcs

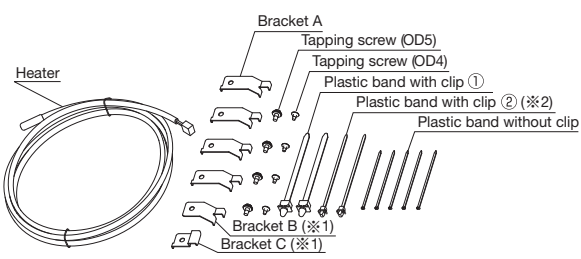


※1 This part is not used for FDC 100VNP
 ※2 These parts are equipped with FDC 100VNP as accessory part

Installation procedure

Step 1


1. Remove the top panel of the outdoor unit (11 pcs of tapping screws).

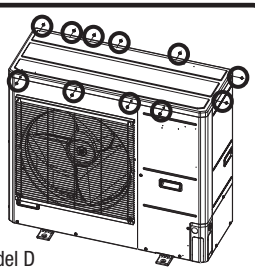

Model D

Step 2


2. Remove the service panel (4 pcs of tapping screws).

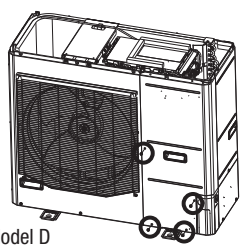

Model D

Step 3

3. Remove the front panel (11 pcs of tapping screws). Pull the panel straightforward so that the panel doesn't touch the fan blade.

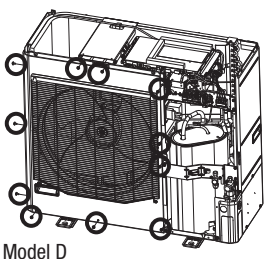


Model D

Step 4

4. Remove the fan blade if necessary.


<Note>
 Do not rotate the axis of fan motor when removing the fan blade. It may cause malfunction of the fan motor.

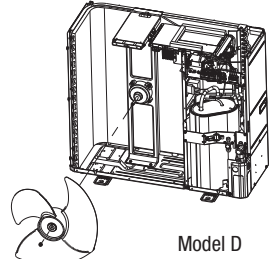

Model D

Step 5


5. Lay down the drain pan heater on the base.

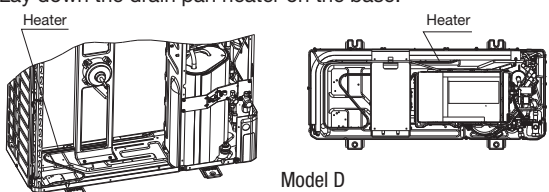

Model D

Step 6

6. Put the heater underneath the heat exchanger and align the end of heater with the end plate of heat exchanger.

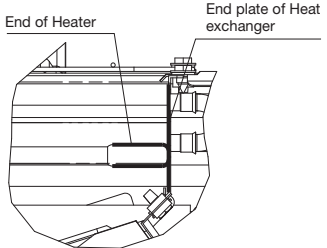


Step 7

7. Fix the heater with 4 brackets.

<Note>

- 1) Fix the heater so that the bracket doesn't pinch the heater as figure shows.
- 2) Place the heater so as to touch the base completely.
- 3) In bending position, twist the heater to make it easier to bend, and get back to be able to fix it with bracket.
- 4) Be careful not to be injured by aluminum fin when fixing the heater with screw.

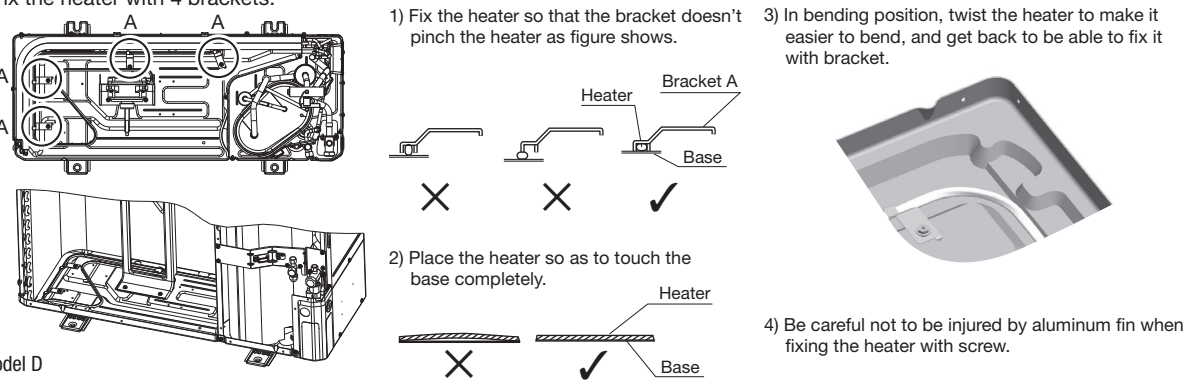


Step 8

8. Insert the plastic band with clip on the designated place (3 places), and fix the heater.



<Note>

1) Do not fasten the heating part with the plastic band. There is a marking on the end of heating part.

2) When the heater is laid down correctly, the end of heating part comes to the corner of the base.

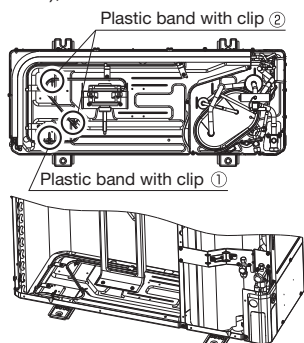


Model D

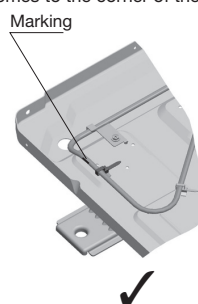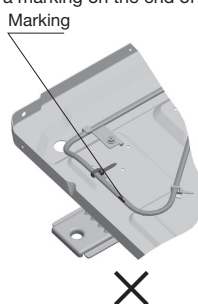

Step 9


9. Lay down the wiring on the same route of fan motor wiring.

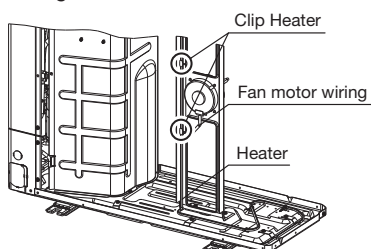

Model D

Step 10

10. Insert the connector to the port CnF (White).

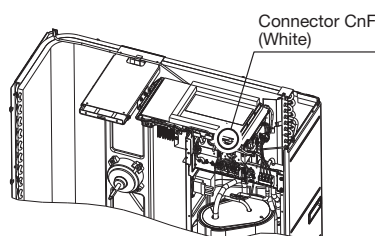

Model D


Step 11

11. Reassemble the fan blade.

Take care to align the D-cut of motor shaft and the fan blade. ▽ mark on the center of the fan shows the position of D-cut.

<Note>

1. Tightening torque of the nut is 4.0-4.9 N·m.
2. Do not rotate the axis of fan motor when tightening the nut. It may cause malfunction of the fan motor.

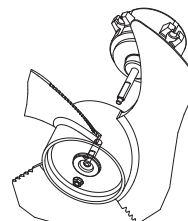


Step 12

12. Reassemble the panels.

1) Front panel


Use screw B for all places.

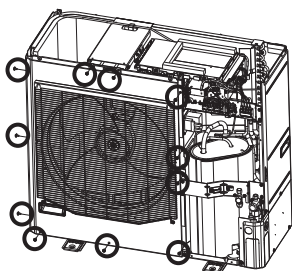


Model D

2) Service panel

Use screw B for all places.

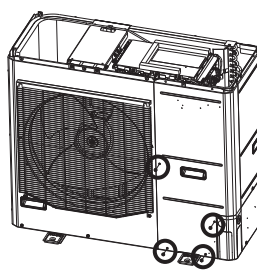

3) Top panel

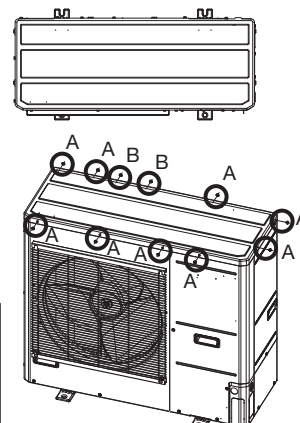

<Note>

- 1) When reassembling the service panel, take care not to damage the front panel with the edge.
- 2) There are two different length of screws. Be sure to use correct screw.
Long screw A: used for Top panel other than fixing fan bracket.
Short screw B: other place than A.



<Note>

- This heater should have bending radius of at least 25mm including non-heating part. Do not bundle the excess part of the wire. It may cause disconnection of the heater or insufficient capacity.
- Be sure to prevent the heater from touching any refrigerant piping. Especially, pay close attention not to make it touch with pipes which are close to the wiring route such as suction pipe, check valve and check joint.

INVERTER PACKAGED AIR-CONDITIONERS



MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

16-5 Konan 2-chome, Minato-ku, Tokyo, 108-8215, Japan
<http://www.mhi-mth.co.jp/en/>

Because of our policy of continuous improvement, we reserve the right to make changes in all specifications without notice.

© Copyright MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.